


♠
kate spade
NEW YORK

WIRELESS HEADPHONES USER GUIDE

PRODUCT OVERVIEW

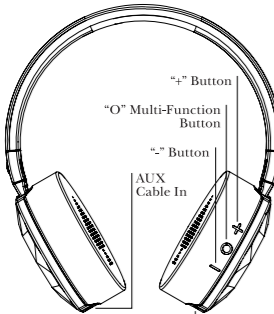

1. Volume up (short press)
2. Next Track (long press)

2. Volume up (short press)
2. Next Track (long press)

1. Power On, Enter Pairing Mode (very long press)
2. Pause / Play / Answer Call (short press)
3. Reject Call (very long press)

TURN ON AND BLUETOOTH® PAIRING

1. Activate Bluetooth® on the phone or device you are pairing with (see your device's instruction manual for information on activating its Bluetooth® settings).
2. Press and hold the "O" Multi-Function button for 5 seconds on your Headphones. The Headphones will turn on, and then automatically enter pairing mode.
3. Go to your phone or device's Bluetooth® settings and select "**Kate Headphone**" from the list.
4. If asked for passcode enter "0000"

Your Headphones will remember the last 8 devices it has paired with.

NOTE: If your Headphones do not have an active Bluetooth® connection and is left on, it will shut itself off after 30 minutes. To restart your Headphones you will need to press and hold the "O" Multi-Function button for 5 seconds.

CHARGING YOUR HEADPHONES

- Before using your Headphones for the first time, charge the unit 7 to 9 hours.
- To charge your Headphones, plug the included USB-to-Micro USB cable into a wall power adapter (not included) or into a powered USB port on a computer. Plug the Micro-USB connector end of the cable into the Headphone charging port.

RECONNECTING A PREVIOUSLY PAIRED DEVICE

1. Disconnect from any other device by pressing and holding the volume dial. A tone sounds and the LED blinks quickly.
2. If the LED keeps blinking, your Headphones can't automatically find the device you want paired. Go to your device and make sure the Bluetooth is still ON, and then select "**Kate Headphone**"

PLAY MUSIC

1. Start playing music on your paired device. Music plays through your Headphones.
2. On your Headphone, push "+" or "-" button to increase or decrease volume.
3. NOTE: A tone sounds when maximum volume setting is achieved.
4. Press the "O" Multi-Function button to pause playback. Press again to resume playback.

CONNECT WITH AUDIO CABLE

1. Connect a 3.5mm audio cable (not included) from your Headphone AUX jack to your audio device (like an MP3 player).
2. Press and hold the Volume Dial to disconnect from Bluetooth.

USE AS A SPEAKERPHONE

Answer/make hands-free phone calls through Headphones.

You can listen through your Headphones and speak through your Headphone's integrated microphone during phone calls.

If you make a call while paired: The audio and microphone automatically default to your Headphone.

- Use your phone to make the call
- Press the "O" Multi-Function button to end the call

If you receive a call while paired: Your phone rings through your Headphones.

To listen and speak through your Headphone:

- Press the "O" Multi-Function button to answer the call
- Press the "O" Multi-Function button to end the call
- Press and hold the "O" Multi-Function button to reject the call

To listen and speak through your phone (depending on your phone), use your phone to answer the call, or use your phone settings to switch to your phone during a call.

WARNINGS, CAUTIONS & LEGAL INFORMATION

To reduce the risk of fire or electric shock, do not expose the speaker to rain or moisture while charging. The speaker should not be exposed to dripping or splashing, and objects filled with liquids, such as vases, should not be placed on or near it while being charged or charging other devices. As with any electronic products, use care not to spill liquids into any part of the product. Liquids can cause a failure and/or a fire hazard. The power supply must be used indoors only. Make no modifications to the product or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance, and will void the warranty. Do not place any flame sources, such as lit candles, on or near the speaker. The speaker contains small parts that may be a choking hazard and is not suitable for children under age 3. Do not continue charging the battery if it does not reach full charge within the specified charging time. Overcharging may cause the battery to become hot, rupture, or ignite. If you see any heat deformation or leakage, properly dispose of the battery. Do not attempt to charge the battery in temperatures outside the range of 32°-104°F (0°-40°C). If the battery begins to leak, do not allow the liquid to come in contact with your skin or eyes. If contact has been made, wash the affected area with plenty of water and seek medical attention immediately. Do not expose the product or battery to excessive heat, including direct sunlight or fire and storage or use inside cars in hot weather, where it can be exposed to temperatures in excess of 115°F (60°C). Doing so may cause the battery and power supply to generate heat, rupture, or ignite. Using the product in this manner also may result in a loss of performance and a shortened life expectancy. Extended exposure to direct sunlight may damage the external appearance and material qualities. Do not step on, throw, or drop batteries or the power supply or device, or expose them to a strong shock. Do not pierce, crush, dent, or deform the batteries or power supply in any way. If either becomes deformed, properly dispose of it. Do not short-circuit batteries. Do not attempt to service the equipment yourself. Opening or removing covers may expose you to dangerous voltages or other hazards and will void the manufacturer's warranty. To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles. Your equipment into an outlet on a circuit different from that to which the receiver is connected. — Consult the dealer or an experienced radio/TV technician for help. CAUTION: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC RADIATION EXPOSURE STATEMENT: This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:—Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. — Consult the dealer or an experienced radio/TV technician for help. CAUTION: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with Industry Canada license-exempt RSS

INCICIO ONE YEAR LIMITED WARRANTY

This product is guaranteed against defects in materials and craftsmanship for one year. For full details, please visit: www.incipio.com/warranty

INCICIO STATEMENT

©2016 Incipio, LLC. All rights reserved. Incipio is a trademark or registered trademark of Incipio, LLC. All other trademarks are property of their respective owners.

www.katespade.com

♠
kate spade
NEW YORK

Manufactured by Incipio, LLC.

For customer support please contact us at:
Incipio, LLC.
6001 Oak Canyon
Irvine, CA 92618

Toll Free In USA:
+1.800.733.0088

Direct:
+1.949.250.4929


Email:
support@incipio.com

www.incipio.com

Manufactured for:
Kate Spade & Company
2 Park Avenue, New York, NY 10016

kate spade new york and the kate spade new york design mark are registered trademarks of Kate Spade, LLC.


www.katespade.com

 PKG5360R01916

♠
kate spade
NEW YORK

GUIDE D'UTILISATEUR DU CASQUE SANS FIL

VUE D'ENSEMBLE DU PRODUIT

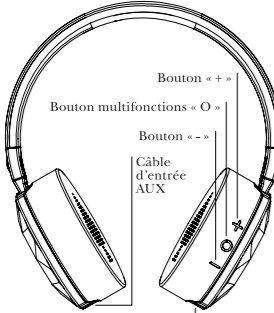

Bouton + +
1. Augmenter le volume (appuyer brièvement)
2. Refuser l'appel (appuyer longtemps)

Bouton - -
1. Augmenter le volume (appuyer brièvement)
2. Piste suivante (appuyer longtemps)

Bouton multifonctions = O -
1. Allumage, passage en mode jumelage (appuyer très longtemps)
2. Pause / lecture / prise d'appels (appuyer brièvement)
3. Refuser l'appel (appuyer très longtemps)

ALLUMAGE ET JUMELAGE PAR BLUETOOTH®

1. Activez le Bluetooth® sur le téléphone ou l'appareil avec lequel vous effectuez le jumelage (consultez le manuel d'instruction de votre appareil pour des informations sur l'activation de ses paramètres Bluetooth®).
2. Appuyez sur le bouton multifonctions = O - de votre casque et maintenez-le enfoncé pendant 5 secondes. Le casque s'allumera puis passera automatiquement en mode jumelage.
3. Rendez-vous dans les paramètres Bluetooth® de votre appareil et sélectionnez le casque Kate (= **Kate Headphone** -).
4. Si on vous demande un code, tapez = 0000 =

Votre casque se rappellera les 8 derniers appareils jumelés.

REMARQUE : si votre casque n'a pas de connexion Bluetooth® active et est laissé allumé, il s'éteindra au bout de 30 minutes. Pour rallumer votre casque, vous devez appuyer sur le bouton multifonctions = O - et le maintenir appuyé pendant 5 secondes.

CHARGEMENT DE VOTRE CASQUE

- Avant d'utiliser votre casque pour la première fois, chargez l'unité pendant 7 à 9 heures.
- Pour charger votre casque, branchez le câble USB-vers-micro-USB fourni dans un adaptateur électrique mural (non fourni) ou dans n'importe quel port USB d'un ordinateur alimenté par du courant. Branchez l'extrémité du connecteur micro-USB du câble dans le port de charge du casque.

LIRE DE LA MUSIQUE

1. Commencez à lire de la musique sur votre appareil jumelé. La musique est lue dans votre casque.
2. Sur votre casque, appuyez sur le bouton = + + ou = - - pour augmenter ou baisser le volume.
3. REMARQUE : un bip sonore vous indique que vous avez atteint le volume maximum.
4. Appuyez sur le bouton multifonctions = O - pour reprendre la lecture.

BRANCHEMENT AVEC LE CÂBLE AUDIO

1. Branchez un câble audio 3,5 mm (non fourni) de la prise AUX de votre casque vers votre appareil audio (comme un lecteur MP3).

UTILISATION COMME HAUT-PARLEUR

Répondez à des appels / passez des appels en mode mains libres avec le casque.

Vous pouvez écouter ce qui est dit dans votre casque et parler en utilisant le microphone intégré à votre casque lors de communications téléphoniques.

Si vous passez un appel lorsque votre appareil est jumelé : L'audio et le microphone passent automatiquement par défaut dans votre casque.

- Utilisez votre téléphone pour passer l'appel
- Appuyez sur le bouton multifonctions = O - pour terminer l'appel

Si vous recevez un appel lorsque votre appareil est jumelé :

Votre téléphone sonne dans votre casque. Pour écouter et parler en utilisant votre casque :

- Appuyez sur le bouton multifonctions = O - pour prendre l'appel
- Appuyez sur le bouton multifonctions = O - pour terminer l'appel
- Appuyez sur le bouton multifonctions = O - pour refuser l'appel

Pour écouter et parler en utilisant votre casque (en fonction de votre téléphone), utilisez votre téléphone pour répondre à l'appel ou paramétrez votre téléphone pour passer au téléphone pendant un appel.

AVERTISSEMENTS ET JURIDIQUES

Pour réduire le risque d'incendie ou d'électrocution, n'exposez pas le haut-parleur à de la pluie ou à de l'humidité lorsqu'il est en charge. Le haut-parleur ne doit pas être exposé à des gouttes ou à des éclaboussures. Les objets remplis de liquide comme les vases ne doivent pas être placés sur ou à côté du haut-parleur pendant qu'il est en charge ou qu'il charge d'autres appareils. Comme avec n'importe quel produit électronique, faites attention à ne pas renverser de liquides sur n'importe quelle partie du produit. Les liquides peuvent provoquer une panne et/ou un incendie. L'alimentation électrique ne doit être utilisée qu'à l'intérieur. Ne modifiez pas le produit ou les accessoires. Les modifications non autorisées peuvent compromettre la sécurité, la conformité avec les lois et la performance du système et annuler la garantie. Ne placez pas de sources de flammes comme des bougies allumées sur ou près du haut-parleur. Le haut-parleur contient de petites pièces qui présentent un risque de suffocation et ne convient pas pour les enfants de moins de 3 ans. Ne continuez pas à charger la batterie si elle n'atteint pas sa pleine charge pendant le temps de charge spécifié. La surcharge peut amener la batterie à chauffer, se rompre ou prendre feu. Si vous voyez une déformation provoquée par la chaleur ou une fuite, éliminez la batterie

comme il se doit. N'essayez pas de charger la batterie à des températures sortant de la plage 0°-40°C. Si la batterie commence à fuir, évitez que le liquide ne rentre en contact avec votre peau ou vos yeux. En cas de contact, rincez abondamment à l'eau les zones affectées et consultez immédiatement un médecin. N'exposez pas le produit ou la batterie à une chaleur excessive comme de la lumière directe du soleil ou un feu et ne rangez ou n'utilisez pas le produit ou la batterie dans des voitures par temps chaud où la température pourrait dépasser 60°C. Si vous le faites, votre batterie et l'alimentation électrique pourraient générer de la chaleur, se rompre ou prendre feu. Utiliser ainsi le produit peut également nuire à sa performance et réduire sa durée de vie. Une exposition prolongée à la lumière du soleil directe peut endommager l'apparence externe et les qualités des matériaux. Ne marchez pas sur les batteries, l'alimentation électrique ou l'appareil, ne les lancez pas et ne les jetez pas. Ne les exposez pas à un choc important. Évitez de percer, d'écraser, de cabosser ou de déformer les batteries ou l'alimentation électrique de quelque manière que ce soit. En cas de déformation des batteries, évitez une élimination adéquate. Ne court-circuitez pas les batteries. N'essayez pas d'effectuer vous-même l'entretien du haut-parleur. Ouvrir ou enlever les façades peut vous exposer à des voltages dangereux ou à d'autres dangers et annuler la garantie constructive. Pour éviter les risques d'incendie ou d'électrocution, évitez de surcharger les prises murales, les rallonges ou les multiprises. Votre appareil Bluetooth (téléphone portable,

GARANTIE LIMITÉE D'UN AN D'INCICIO

Ce produit est garanti contre les défauts de matériaux et d'exécution pendant un an. Pour tous les détails, veuillez vous rendre sur le site : www.incipio.com/warranty

DÉCLARATION D'INCICIO

©2016 Incipio, LLC. Tous droits réservés. Incipio est une marque commerciale ou une marque commerciale déposée d'Incipio, LLC. Toutes les autres marques commerciales sont la propriété de leurs propriétaires respectifs.

Kate Spade New York et la marque de design Kate Spade New York sont des marques commerciales déposées de Kate Spade LLC.

www.katespade.com

Fabriqué par Incipio, LLC.

Pour bénéficier de l'assistance client, veuillez nous contacter aux coordonnées suivantes :

Incipio, LLC.
6001 Oak Canyon
Irvine, CA 92618

Appel gratuit aux Etats-Unis :
+1.800.733.0088

Ligne directe :
+1.949.250.4929

Email:
support@incipio.com

www.incipio.com

Fabriqué pour:
Kate Spade & Company
2 Park Avenue, New York, NY 10016