SPECIFICATIONS

- Dimension: W 13.4inch x D 6.9inch x H 1.2inch
  (34.1cm x 17.4cm x 3.15cm)
- Compatibility USB
- Key layout: 89keys
- Operating temperature and humidity
  Temperature: -20° C ~ 50° C (- 4° F ~122° F)
  Humidity: 8% ~ 90% RH
- Storage temperature and humidity
  Temperature: - 20° C ~ 65° C (- 4° F ~149° F)
  Humidity: 8% ~ 90% RH

FCC STATEMENT

FCC Compliance
NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.   However, there is no guarantee that interference will not occur in a particular installation.   If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver
  is connected.
- Consult the dealer or an experienced radio/TV technician for help.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

'Let's care for the environment!'

The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item

Please keep this manual as it contains important information.

Windows® is a registered trademark of Microsoft Corporation in the United Sates and other countries.

www.bratz.com
TM & © MGA Entertainment, Inc.
BRATZ™, BRATZ PETZ™, LIL' BRATZ™,
BRATZ BABYZ™, BRATZ KIDZ™ and all related logos, names, characters, distinctive likenesses and slogans, as well as the packaging and images appearing thereon, are the exclusive property of MGA.
16300 Roscoe Blvd.,
Van Nuys, CA 91406 USA
(800) 222-4685
Printed in China

0607-0-E/INT

The preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com

Visit Our Web Site
www. **MGAE** .com
For Customer Service
& Your Chance To Win!
No purchase necessary to participate.

Be-BRATz.com
mini keyboard

366553, 366553EU   ADULT SUPERVISION REQUIRED

INTRODUCTION

Personalize your computing station with hot new Bratz™ designed computer accessories.

CONTENTS

- 1 Be-Bratz.com™ USB Mini-Keyboard

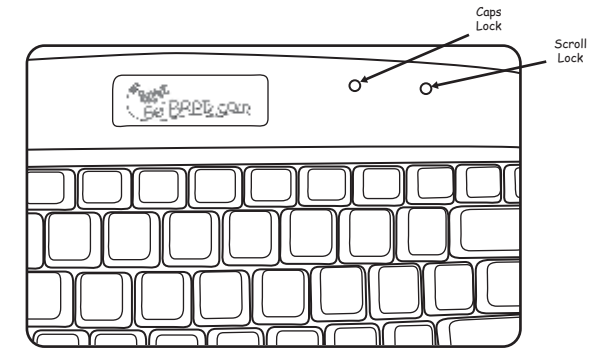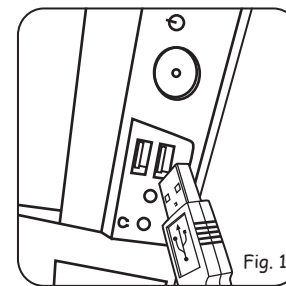Minimum (Recommended) System Requirements:
- CPU 500MHz or higher utilizing Windows 2000; Windows Me; or Windows XP operating systems
- A USB port

QUICK START

CONNECTING THE USB KEYBOARD:
1. Power Off your computer and remove any other keyboard.
2. Plug the USB Port on your Keyboard into a free USB port on your PC. (Fig. 1).
3. Power On your PC, the Keyboard will automatically be detected.
4. Use your new Keyboard with the other Be-Bratz.com™ accessories. (not included).
NOTE: If the computer does not automatically detect the USB Keyboard, please refer to the Troubleshooting section at the end of this manual.

Caps Lock

Scroll Lock

Fig. 1

SAFETY INSTRUCTIONS

- Never unplug your Keyboard from the USB port when the computer is turned ON.
- Avoid using the Keyboard under direct sunlight, or in extremely hot, cold or dusty environments.

TROUBLESHOOTING

1. My computer will not recognize the keyboard.	Please check the following things: • Make sure that your USB Keyboard is plugged into an active USB Port. • If you are not sure, try unplugging it and plugging it into another port.