# SMART Quick start manual

SMART

**Compact Color
Screen
ELRS
Transmitter**

Full

function

small

size

radio

Space Gray

Platinum White

Lily Pink
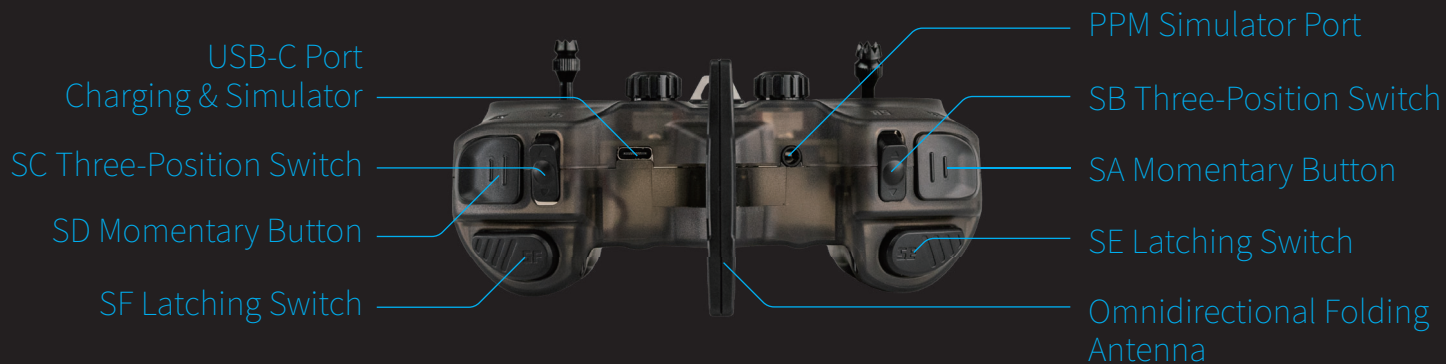
Deco Yellow

Mint Green
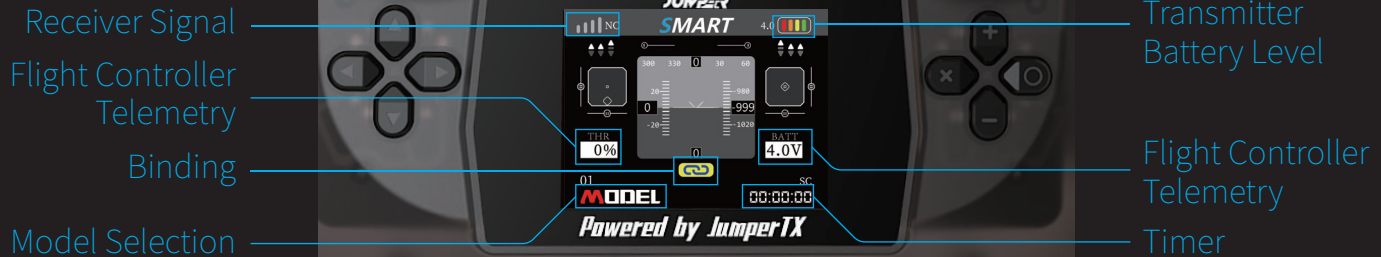
Cyan Blue

Cold Purple

JumperTX

Brief introduction

S2 Dial

S1 Dial

Power Button

T1 Left Trim

T2 Right Trim

Left Gimbal

Right Gimbal

Page Up

Option "+"

Page Left

Menu Enter

Page Down

Option "-"

Page Right

Menu Exit

USB-C Port
Charging & Simulator

PPM Simulator Port

SC Three-Position Switch

SB Three-Position Switch

SD Momentary Button

SA Momentary Button

SF Latching Switch

SE Latching Switch

Omnidirectional Folding
Antenna

Receiver Signal

Flight Controller Telemetry

Binding

Model Selection
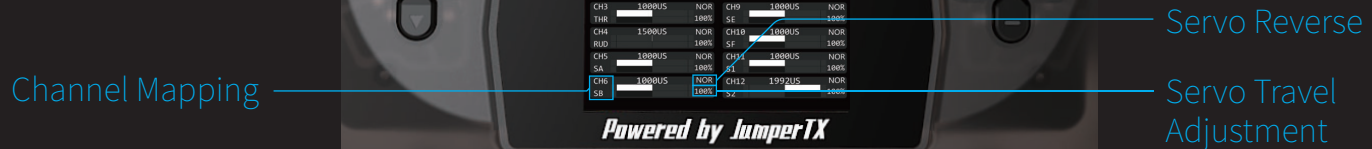
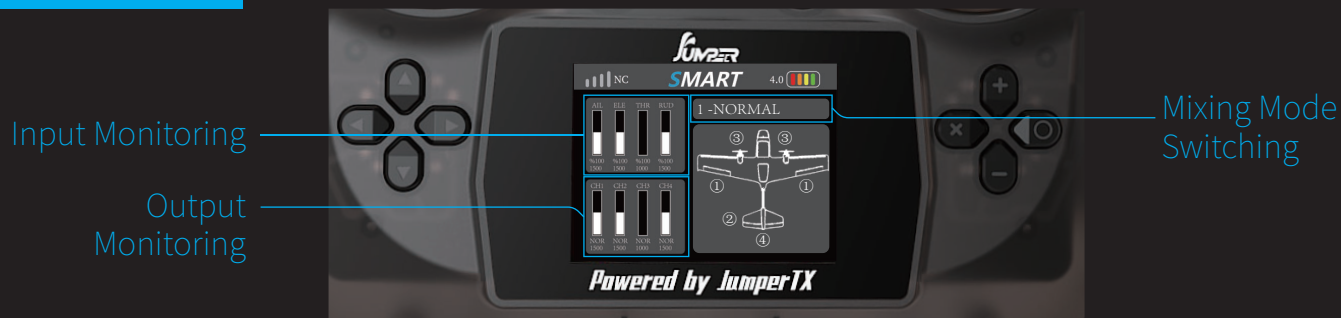Transmitter Battery Level

Flight Controller Telemetry

Timer

1. Press and hold the "O" button to enter the menu. Use the left-side directional buttons (Up, Down, Left, Right) to navigate through the menu. Adjust settings using the "+" and "-" buttons. The "O" button confirms selections, and the "✕" button exits.
Press and hold the "✕" button to enter the flight controller switching menu.

Servo Travel Settings

Channel Mapping
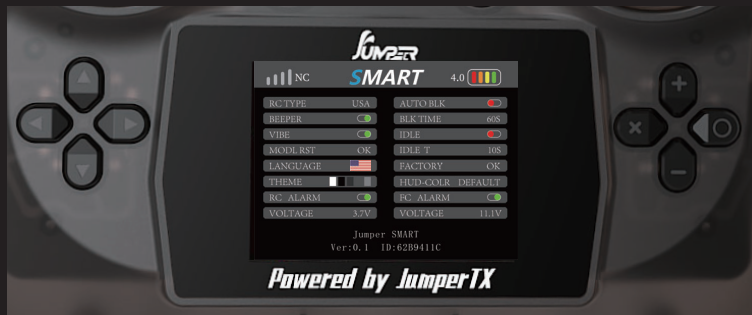
Servo Reverse

Servo Travel Adjustment

2. Press and hold the "O" button to enter the travel adjustment settings. Press the "O" button again to toggle between normal and reversed direction. Use the "+" and "-" buttons to adjust the travel range. The "✕" button exits.
Press and hold the "✕" button to enter the channel mapping menu. Use the left-side directional buttons (Up, Down, Left, Right) to select the channel to be mapped. Use the "+" and "-" buttons to change the input source. The "✕" button exits.

Mixer Selection

Input Monitoring

Output Monitoring

Mixing Mode Switching

3. Press and hold the "O" button to enter the mixing settings. Use the left-side directional buttons (Up, Down, Left, Right) to set the direction (normal/reversed) and travel range for CH1-CH4. Press the "O" button again to toggle between normal and reversed direction. Use the "+" and "-" buttons to adjust the travel range. The "✕" button exits.

System Menu

4. Configure settings as needed.
   Note: If "Idle Alarm" is enabled, the transmitter will automatically shut down after the set "Alarm Time" is reached.
   Note: If "Low Voltage Alarm" is enabled, the transmitter will automatically shut down when the voltage drops below the "Alarm Voltage."
   For further updates, please follow our official announcements.

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.