Office Wireless Optical Mouse
User's Quick Guide

Congratulations on your purchase of this Office Wireless Optical Mouse. Please carefully read the User's Quick Guide to learn about the installation and the powerful functions of your new Office Wireless Optical Mouse.

Contents of the Package
Office Wireless Optical Mouse (Ergonomic or Symmetric)
Chargeable Mouse Cradle (PS/2, USB or UP Combo)
Two AA or AAA Ni-MH Rechargeable Batteries
Office Mouse Driver CD-ROM
User's Quick Guide
Optional Parts for Wireless Optical Mouse
(The optional parts may be different due to various wireless optical mice.)
- AC to DC Adapter
- USB to DC Cable

Install Hardware
Notice:
- If you are running Windows 98 and plug the connector into the computer, you may find a pop-up window that requires to insert the Windows 98 CD-ROM. Please follow the window instruction to install the required driver or set the driver path as "Windows\system" or the other path that the driver located.
Connect the Receiver to Your Computer
1.Please turn off your computer.
2.Plug the connector of the receiver into the PS/2 or USB port of the computer.

Select the Channel
Notice:
- Please skip this section if the mouse has only one channel.
- The location of the mouse channel switch may be different due to various mouse shapes.

1. The two-channel switch is located at the back of the mouse or inside the battery case. Select Channel "1" or "2".
2. Put the batteries into the battery box.

Link the Mouse with the Receiver
1. Turn on the computer. The LED indicator on the receiver will light.
2. Press the ID Link Button on the receiver and the LED indicator will blink. The receiver is ready to automatically link with the mouse.
3. Press the ID Link Button on the back of the mouse. The indicator will stay in light while successfully finish the linkage.
4. The LED indicator will blink while you move the mouse.
5. If you need to re-link the mouse or after changing the mouse batteries, please repeat the above linkage step 2~3.
6. If the selected channel is interfered by other wireless-mouse users nearby, please change the Link ID by re-linkage or select the other channel immediately.
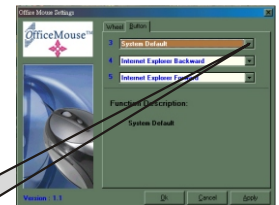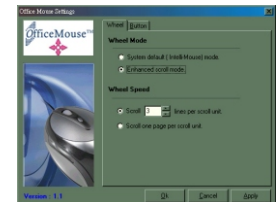7. There are 256 Link IDs per channel.

Install Driver
Notice:
- The driver supports Windows 98, Windows NT, Windows 2000, Windows ME and Windows XP.
- When you change the interface port, please reinstall the driver.

1. Insert the driver CD-ROM to your computer. The PC system may automatically install the driver through selecting the PC auto-install function.
2. If the PC system does not set the auto-install function, please double click the file "Setup.exe" and follow the setup instructions to complete the driver installation.
3. Restart the computer.
4. A Mouse Setting icon will appear on the task bar of Windows after you successfully finish the installation.
5. Double click the Mouse Setting icon and then follow the instructions of the selection items to set the mouse properties.

· F1~F10	· Down	· Interent Explorer Backward	· Minimize All Windows	· Space
· Auto Scroll	· Drag Lock	· Interent Explorer Forward	· Minimize Windows	· Start Menu
· Backspace	· End			· System Help
· Close Application	· Enter	· Lanuch Default Browser	· Page Down	· System Property
· Connect to Internet	· Esc	· Lanuch Default E-mail	· Page Up	· Tab
· Control Lock	· Explorer		· Paste	· Undo
· Control Panel	· Find Computer		· Redo	· Undo Minimize All Windows
· Copy	· Find File	· Left	· Right	· Universal Scroll
· Cut	· Home	· Maximize Windows	· Run...	· Universal Zoom
· Delete	· Horizontal Wheel	· Middle Button	· Shift Lock	· Up
· Double Click				