


WF-2630

Start Here


Read these instructions before using your product.

Note for Spanish speakers/Nota para hispanohablantes: Para obtener instrucciones de configuración en español, consulte la *Guía de instalación* en epson.com/support/wf2630sp (requiere una conexión a Internet).


1 Unpack

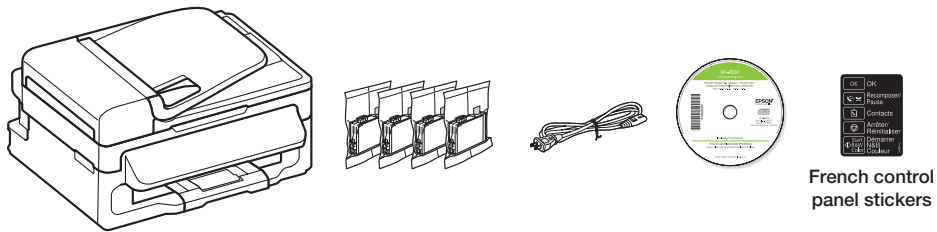

Note: Do not open ink cartridge packages until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

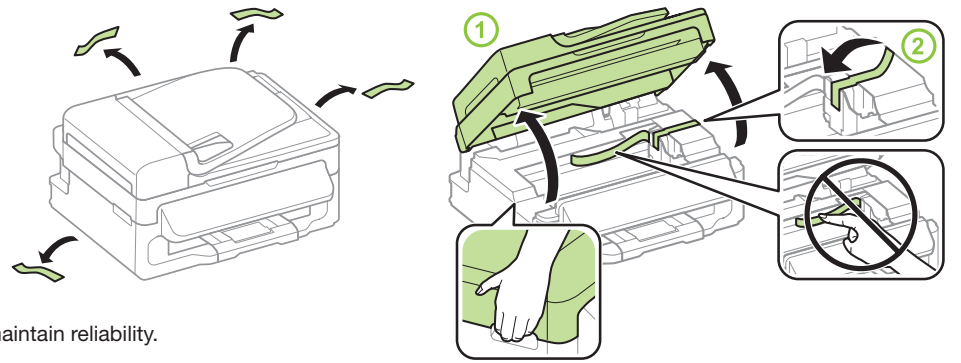

2 Turn on and configure



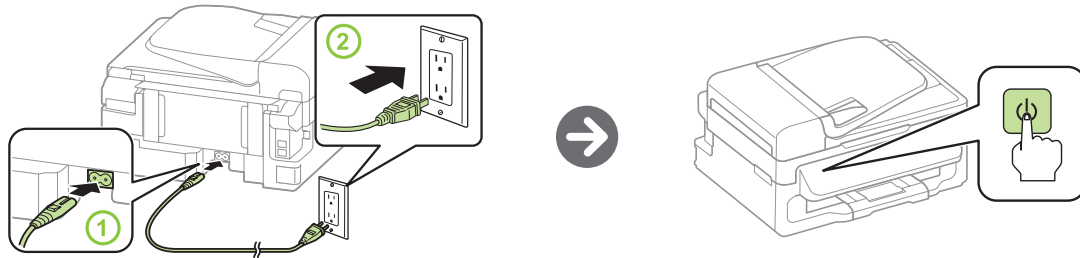


Select your language, country, date, and time.

Note: You can change these settings later using the product's control panel. For more information, see the online *User's Guide*.

Caution: Do not connect to your computer yet.

3 Install ink cartridges

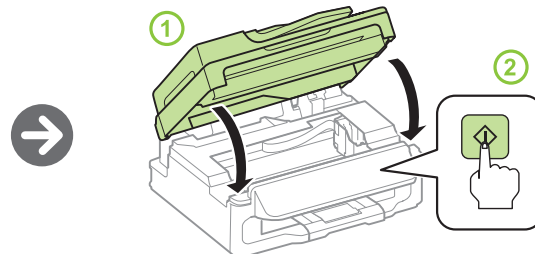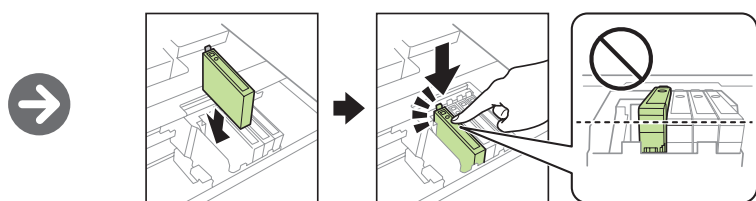
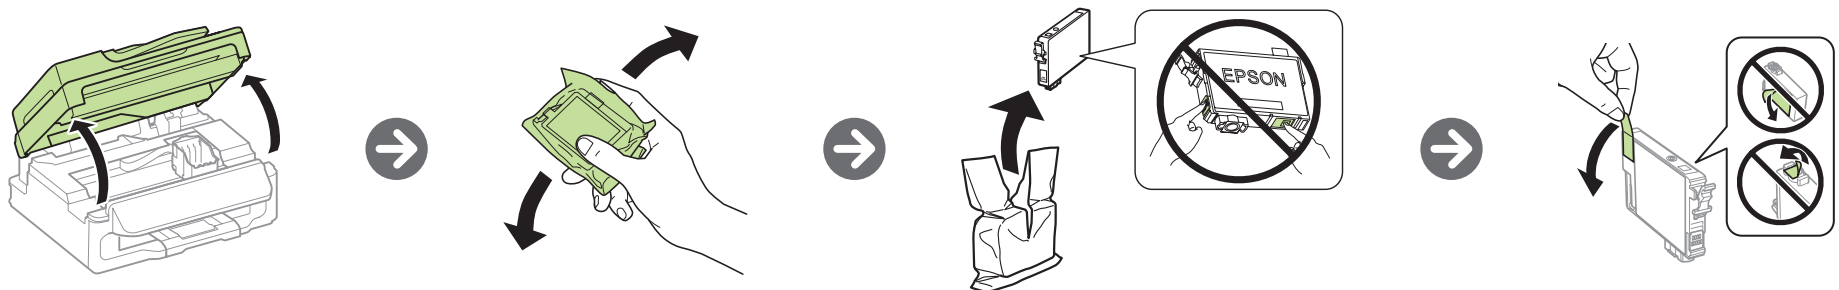


Note:



- The printer is designed for use with Epson® cartridges only, not third-party cartridges or ink.
- The cartridges included with the printer are designed for printer setup and not for resale. After some ink is used for priming, the rest is available for printing.

Caution: Don't turn off the printer while it is priming or you'll waste ink.

4 Load paper

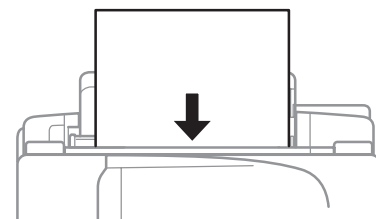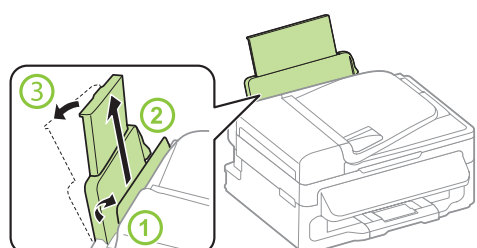

Caution: Do not load paper above the arrow mark inside the edge guide.

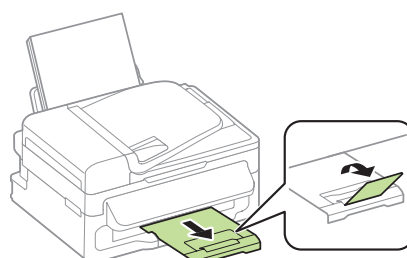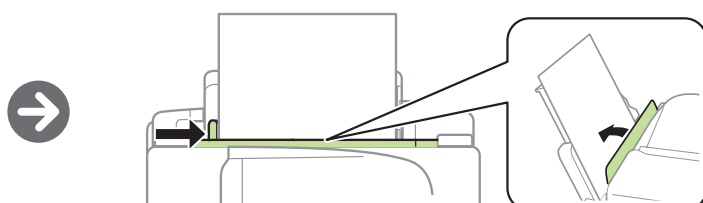


Select the paper settings on the product's control panel.



412719800

5 Connect the fax line

- 1
- Connect a phone cord to a telephone wall jack and to the **LINE** port on your product. See the online *User's Guide* for more information.

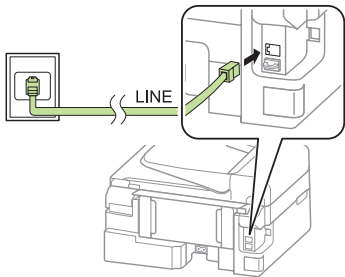


- 2
- Press **▲** if you want to set up the fax, or press **▼** to set it up later.

6 Install software

Note: If your computer does not have a CD/DVD drive or you are using a Mac, an Internet connection is required to obtain the printer software.

- 1
- Make sure the printer is **NOT CONNECTED** to your computer.

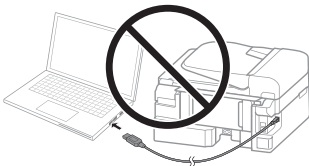

Windows®: If you see a Found New Hardware screen, click **Cancel** and disconnect the USB cable.

- 2
- Insert the product CD or download and run your product's software package:

epson.com/support/wf2630 (U.S.)
epson.ca/support/wf2630 (Canada)

- 3
- Follow the instructions on the screen to run the setup program.

OS X: Make sure you install Software Updater to receive firmware and software updates for your product.

- 4
- When you see the Select Your Connection screen, select one of the following:

- Wireless connection**
In most cases, the software installer automatically attempts to set up your wireless connection. If setup is unsuccessful, you may need to enter your network name (SSID) and password.
- Direct USB connection**
Make sure you have a USB cable (not included).

Mobile printing

Your product must be set up for wireless printing or Wi-Fi Direct. See the online *User's Guide* for instructions.

iOS/Android™



epson.com/iprint

Epson Connect™

Connect wirelessly from your tablet, smartphone, or computer. Print documents and photos from across the room or around the world.

epson.com/connect

Any problems?

Network setup was unsuccessful.


- Make sure you select the right network name (SSID).
- If you see a firewall alert message, click **Unblock** or **Allow** to let setup continue.
- If your network has security enabled, make sure you enter your network password (WEP key or WPA passphrase) correctly. Passwords must be entered in the correct case.

The printer's screen is dark.

Make sure your product is turned on and press any button to wake it from sleep mode.

Setup is unable to find my printer after connecting it with a USB cable.

Make sure it is securely connected as shown:

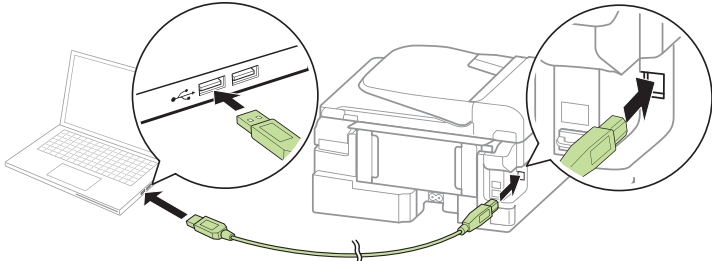

Any questions?

Quick Guide

Basic information and troubleshooting.

User's Guide

Windows: Click the icon on your desktop or Apps screen to access the online *User's Guide*.

OS X: Click the icon in **Applications/Epson Software/Guide** to access the online *User's Guide*.

If you don't have a User's Guide icon, go to the Epson website, as described below.

Technical support

epson.com/support (U.S.) or epson.ca/support (Canada)

Call (562) 276-4382 (U.S.) or (905) 709-3839 (Canada), 6 AM to 8 PM, Pacific Time, Monday through Friday, and 7 AM to 4 PM, Pacific Time, Saturday. Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Recycling

Epson offers a recycling program for end of life hardware and ink cartridges. Please go to epson.com/recycle for information on how to return your products for proper disposal.

Need paper and ink?



Try Epson specialty papers with DURABrite® Ultra Ink for professional results. You can purchase them at epson.com/ink3 (U.S. sales) or epson.ca (Canadian sales). You can also purchase supplies from an Epson authorized reseller. Call 800-GO-EPSON (800-463-7766).

DESIGNED *for* EXCELLENCE™
Epson printers, ink and specialty papers.

WF-2630 replacement ink cartridges

Color	Standard-capacity	High-capacity
Black	220	220XL
Cyan	220	220XL
Magenta	220	220XL
Yellow	220	220XL



Any problems?

Network setup was unsuccessful.


- Make sure you select the right network name (SSID).
- If you see a firewall alert message, click **Unblock** or **Allow** to let setup continue.
- If your network has security enabled, make sure you enter your network password (WEP key or WPA passphrase) correctly. Passwords must be entered in the correct case.

The printer's screen is dark.

Make sure your product is turned on and press any button to wake it from sleep mode.

Setup is unable to find my printer after connecting it with a USB cable.

Make sure it is securely connected as shown:

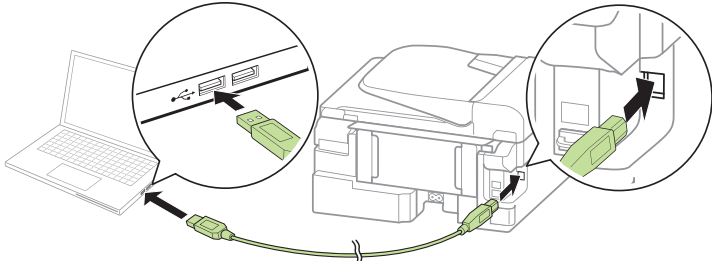

EPSON and DURABrite are registered trademarks, Epson Connect is a trademark, and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation. Designed for Excellence is a trademark of Epson America, Inc.

Mac and OS X are trademarks of Apple Inc., registered in the U.S. and other countries.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.


© 2014 Epson America, Inc., 4/14

Printed in XXXXXX


CPD-40873

Remarque pour les hispanophones : Pour obtenir des instructions de configuration en espagnol, consultez le *Guía de instalación* à l'adresse epson.com/support/wf2630sp (requiert une connexion à Internet).


2 Mettez le produit sous tension et configurez-le

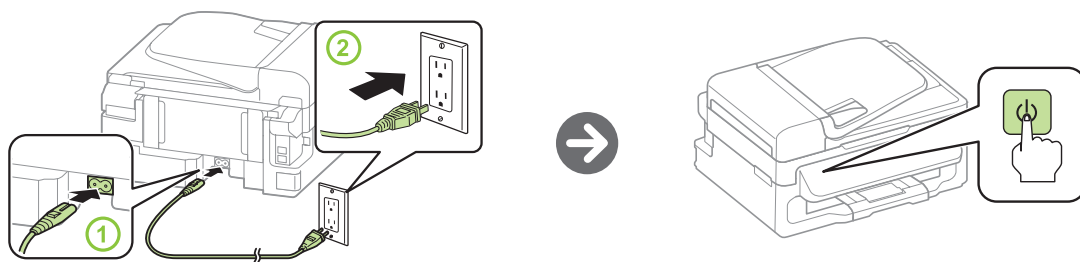

3 Installez les cartouches d'encre

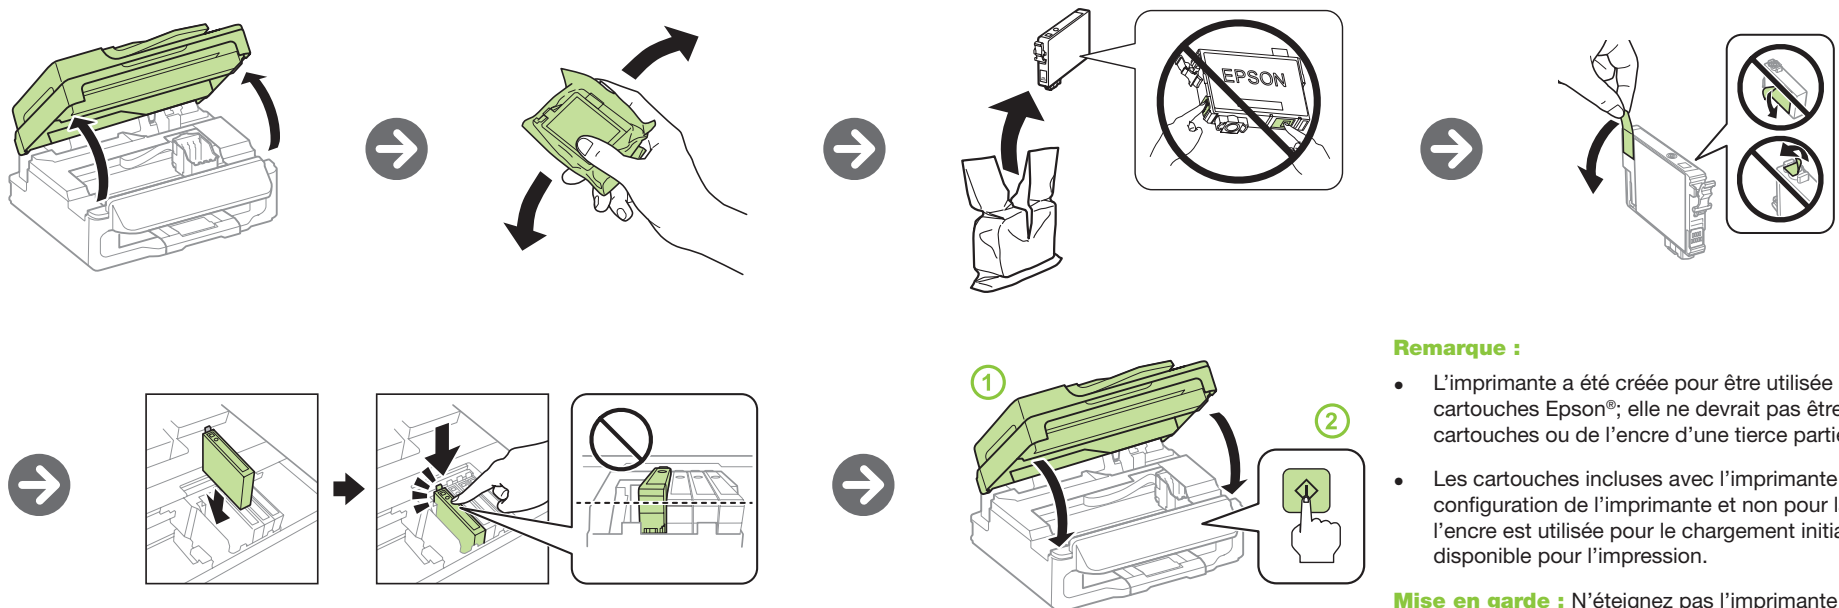


4 Chargez le papier

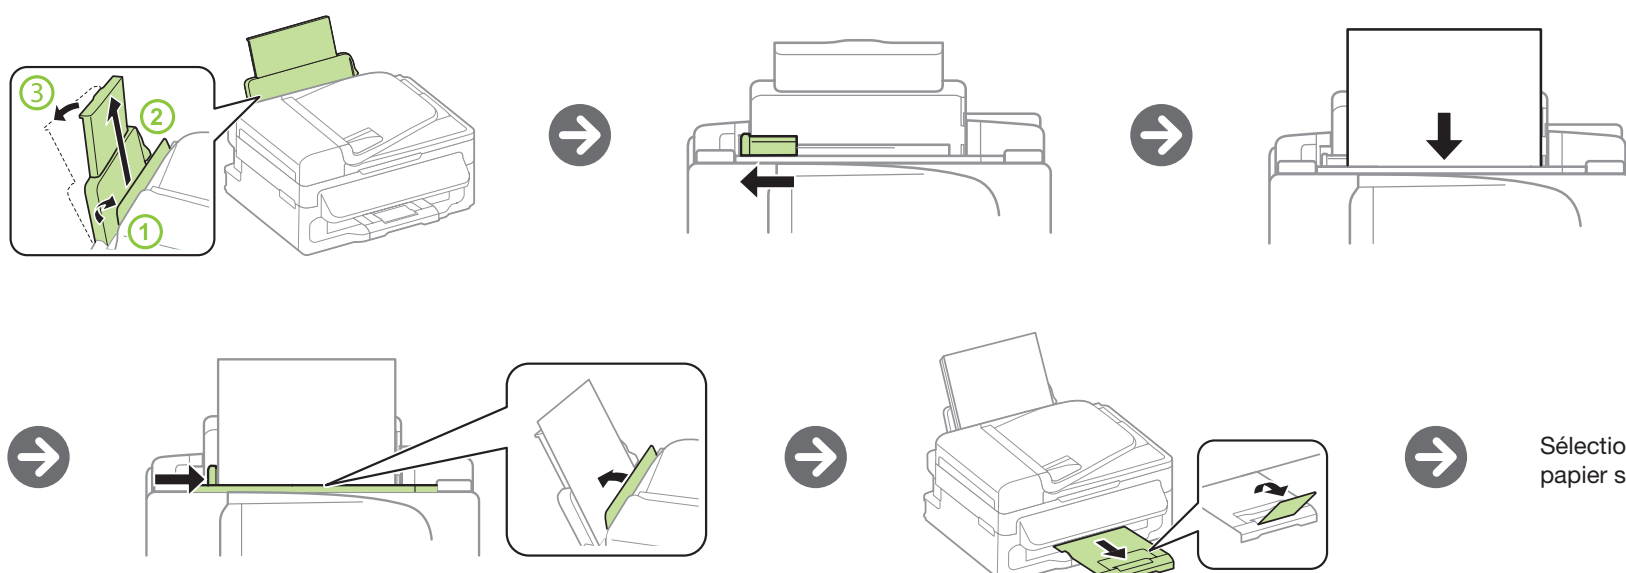

Sélectionnez les paramètres de papier sur le panneau de commande.

5 Connectez la ligne du télécopieur

- 1 Connectez un cordon téléphonique à une prise téléphonique murale et au port **LINE** sur le produit. Consultez le *Guide de l'utilisateur* en ligne pour obtenir plus d'informations.
- 2 Appuyez sur **▲** si vous souhaitez configurer le télécopieur ou appuyez sur **▼** si vous souhaitez le configurer plus tard.

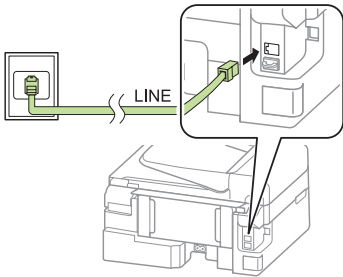


6 Installez les logiciels

Remarque : Si votre ordinateur ne possède pas de lecteur CD/DVD ou si vous utilisez un Mac, une connexion Internet est requise pour obtenir le logiciel d'impression.

- 1 Assurez-vous que le produit **N'EST PAS BRANCHÉ** à votre ordinateur.

Windows® : Si une fenêtre Nouveau matériel détecté s'affiche, cliquez sur **Annuler** et débranchez le câble USB.

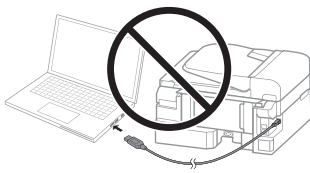

- 2 Insérez le CD de votre produit ou téléchargez et exécutez l'ensemble des logiciels de votre produit :

epson.ca/support/wf2630fr

- 3 Suivez les instructions à l'écran pour exécuter le programme de configuration.

OS X : Assurez-vous d'installer Software Updater afin de recevoir des mises à jour pour le micrologiciel et les logiciels de votre produit.

- 4 Lorsque l'écran Sélection de votre connexion s'affiche, sélectionnez l'une des connexions suivantes :

- **Connexion sans fil**

Dans la plupart des cas, le programme d'installation des logiciels essaie automatiquement de configurer votre connexion sans fil. Si la configuration échoue, il est possible que vous deviez saisir le nom de réseau (SSID) et le mot de passe.

- **Connexion USB directe**

Assurez-vous d'avoir un câble USB (non inclus).

Impression mobile

Votre produit doit être configuré pour l'impression sans fil ou Wi-Fi Direct. Consultez le *Guide de l'utilisateur* en ligne pour obtenir les instructions.

iOS/Android^{MC}



epson.com/iprint
(site Web présenté en anglais seulement)

Epson Connect^{MC}

Vous pouvez vous connecter sans fil à partir de votre tablette, votre téléphone intelligent ou votre ordinateur. Imprimez des documents et des photos à partir de la même pièce ou n'importe où dans le monde.

epson.com/connect

Avez-vous rencontré des problèmes?

La configuration réseau a échoué.


- Assurez-vous d'avoir sélectionné le bon nom de réseau (SSID).
- Si vous apercevez un message d'alerte de pare-feu, cliquez sur **Débloquer** ou **Permettre** pour permettre à la configuration de se poursuivre.
- Si la sécurité de votre réseau est activée, assurez-vous d'avoir saisi correctement le mot de passe du réseau (clé WEP ou phrase passe WPA). Le mot de passe doit être saisi selon la casse appropriée.

L'écran de l'imprimante s'est assombri.

Assurez-vous que le produit est sous tension et appuyez sur l'un des boutons afin que le produit quitte le mode veille.

Impossible de détecter le produit après l'avoir relié avec un câble USB.

Assurez-vous qu'il est bien branché tel qu'illustré ci-dessous :

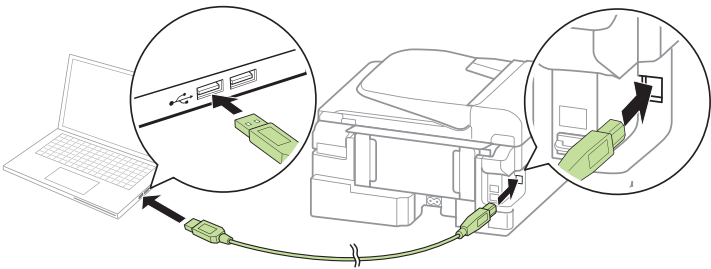

Avez-vous des questions?

Guide rapide

Informations de base et de dépannage.

Guide de l'utilisateur

Windows : Cliquez sur l'icône sur le bureau ou sur l'écran Applications afin d'accéder au *Guide de l'utilisateur* en ligne.

OS X : Cliquez sur l'icône dans le dossier **Applications/Epson Software/Guide** afin d'accéder au *Guide de l'utilisateur* en ligne.

Soutien technique

epson.ca/support

905 709-3839, de 6 h à 20 h, heure du Pacifique, du lundi au vendredi, et de 7 h à 16 h, heure du Pacifique, le samedi. Les heures et les jours de soutien peuvent être sujets à changement sans préavis. Des frais d'interurbain sont éventuellement à prévoir.

Recyclage

Epson offre un programme de recyclage pour le matériel et les cartouches d'encre en fin de vie utile. Veuillez consulter le site Web epson.com/recycle pour obtenir de l'information concernant le retour de vos produits pour une élimination appropriée (site Web présenté en anglais seulement).

Achat de papier et d'encre



Essayez les papiers pour usages spéciaux Epson® avec l'encre DURABrite® Ultra Ink pour obtenir des résultats à l'allure professionnelle. Vous pouvez les acheter à l'adresse epson.ca. Vous pouvez aussi acheter vos fournitures auprès d'un détaillant Epson autorisé. Composez le 1 800 463-7766 pour obtenir les coordonnées d'un détaillant près de chez vous.

DESIGNED *for* EXCELLENCE™

Imprimantes, encre et papiers spécialisés Epson.

Cartouches d'encre de remplacement WF-2630

Couleur	Capacité standard	Grande capacité
Noir	220	220XL
Cyan	220	220XL
Magenta	220	220XL
Jaune	220	220XL



EPSON et DURABrite sont des marques déposées, Epson Connect est une marque de commerce et EPSON Exceed Your Vision est un logotype déposé de Seiko Epson Corporation. Designed for Excellence est une marque de commerce d'Epson America, Inc.

Mac et OS X sont des marques de commerce d'Apple Inc., déposées aux États-Unis et dans d'autres pays.

Avis général : Les autres noms de produit figurant dans le présent document ne sont cités qu'à titre d'identification et peuvent être des marques de commerce de leurs propriétaires respectifs. Epson renonce à tous les droits associés à ces marques.

L'information contenue dans le présent document peut être modifiée sans préavis.

© 2014 Epson America, Inc., 4/14

Pays d'impression : XXXXXX