



# **ID ISC.M02**

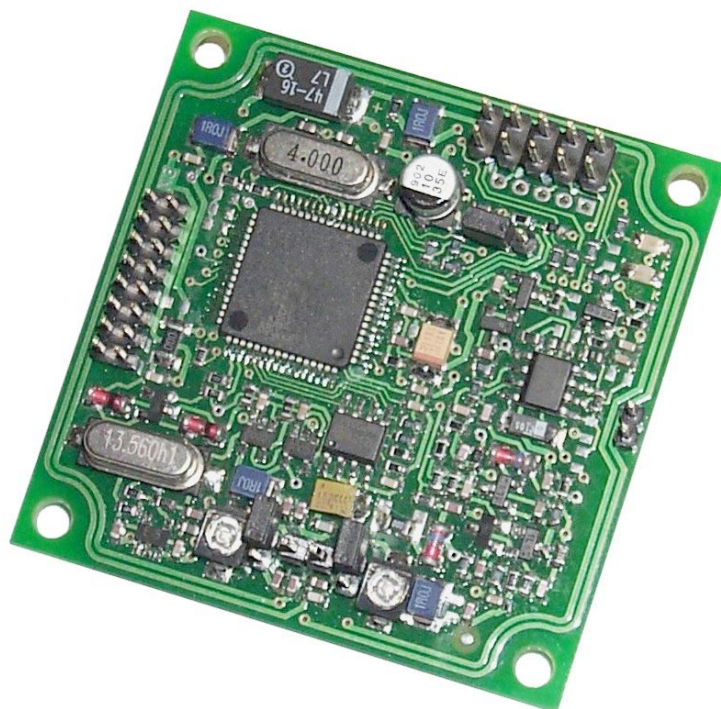

(deutsch / english)



**deutsche Version ab Seite 4**



DEUTSCH

**english version from page 24**



ENGLISH

## Hinweis

© Copyright 2002 by  
FEIG ELECTRONIC GmbH  
Lange Straße 4  
D-35781 Weilburg-Waldhausen  
Tel.: +49 6471 3109-0  
<http://www.feig.de>

Ausgabe: er/03/02/11 - m20301-0de-id-b.doc

Alle früheren Ausgaben verlieren mit dieser Ausgabe ihre Gültigkeit.

Die Angaben in diesem Handbuch können ohne vorherige Ankündigung geändert werden.

Weitergabe sowie Vervielfältigung dieses Dokuments, Verwertung und Mitteilung ihres Inhalts sind nicht gestattet, soweit nicht ausdrücklich zugestanden. Zuwiderhandlung verpflichtet zu Schadenersatz. Alle Rechte für den Fall der Patenterteilung oder Gebrauchsmuster-Eintragung vorbehalten.

Die Zusammenstellung der Informationen in diesem Dokument erfolgt nach bestem Wissen und Gewissen. FEIG ELECTRONIC GmbH übernimmt keine Gewährleistung für die Richtigkeit und Vollständigkeit der Angaben in diesem Dokument. Insbesondere kann FEIG ELECTRONIC GmbH nicht für Folgeschäden auf Grund fehlerhafter oder unvollständiger Angaben haftbar gemacht werden. Da sich Fehler, trotz aller Bemühungen nie vollständig vermeiden lassen, sind wir für Hinweise jederzeit dankbar.

Die in diesem Dokument gemachten Installationsempfehlungen gehen von günstigsten Rahmenbedingungen aus. FEIG ELECTRONIC GmbH übernimmt keine Gewähr für die einwandfreie Funktion in systemfremden Umgebungen.

FEIG ELECTRONIC GmbH übernimmt keine Gewährleistung dafür, dass die in diesem Dokument enthaltenen Informationen frei von fremden Schutzrechten sind. FEIG ELECTRONIC GmbH erteilt mit diesem Dokument keine Lizenzen auf eigene oder fremde Patente oder andere Schutzrechte.

OBID® ist ein eingetragenes Warenzeichen der FEIG ELECTRONIC GmbH

## Inhalt

<b>1. Sicherheits- und Warnhinweise - vor Inbetriebnahme unbedingt lesen</b>	<b>6</b>
<b>2. Leistungsmerkmale des Readermoduls ID ISC.M02</b>	<b>7</b>
2.1. Leistungsmerkmale.....	7
2.2. Verfügbare Modultypen.....	7
2.3. Lieferumfang.....	7
<b>3. Montage und Anschluss</b>	<b>8</b>
3.1. Abmessungen.....	8
3.2. Anschluss .....	9
3.2.1. Spannungsversorgung .....	10
3.2.2. RS232-Schnittstelle.....	11
3.2.3. Daten-/Taktschnittstelle.....	12
3.2.4. Optionales Security-Modul ID SAM.M02 .....	13
3.3. Anzeigeelemente .....	14
3.4. Bedienelemente .....	15
3.4.1. Betriebs-/Programmier-Mode: Jumper J1.....	15
3.4.2. Interne/Externe Antenne: Stiftleiste X2, Jumper J2 und J3.....	16
3.4.3. Nachgleich der internen Antenne: Trimmkondensator C65 .....	17
3.5. Montagehinweise.....	19
3.5.1. Metallische Umgebung.....	19
3.5.2. EMV-Beeinflussung über Zuleitungen .....	19
3.5.3. EMV-Beeinflussung über magnetische Felder.....	20
<b>4. Funkzulassungen</b>	<b>21</b>
4.1. Europa (CE).....	21
4.2. USA (FCC).....	21
<b>5. Technische Daten</b>	<b>22</b>

---

## 1. Sicherheits- und Warnhinweise - vor Inbetriebnahme unbedingt lesen

---

- Das Gerät darf nur für den vom Hersteller vorgesehenen Zweck verwendet werden.
- Die Bedienungsanleitung ist zugänglich aufzubewahren und jedem Benutzer auszuhändigen.
- Unzulässige Veränderungen und die Verwendung von Ersatzteilen und Zusatzeinrichtungen, die nicht vom Hersteller des Gerätes verkauft oder empfohlen werden, können Brände, elektrische Schläge und Verletzungen verursachen. Solche Maßnahmen führen daher zu einem Ausschluss der Haftung und der Hersteller übernimmt keine Gewährleistung.
- Für das Gerät gelten die Gewährleistungsbestimmungen des Herstellers in der zum Zeitpunkt des Kaufs gültigen Fassung. Für eine ungeeignete, falsche manuelle oder automatische Einstellung von Parametern für ein Gerät bzw. ungeeignete Verwendung eines Gerätes wird keine Haftung übernommen.
- Reparaturen dürfen nur vom Hersteller durchgeführt werden.
- Anschluss-, Inbetriebnahme-, Wartungs-, und sonstige Arbeiten am Gerät dürfen nur von Elektrofachkräften mit entsprechender Ausbildung erfolgen.
- Vor dem Öffnen des Gerätes ist stets die Versorgungsspannung abzuschalten und durch Nachmessen sicherzustellen, dass das Gerät spannungslos ist. Das Verlöschen einer Betriebsanzeige ist kein Indikator dafür, dass das Gerät vom Netz getrennt und spannungslos ist.
- Alle Arbeiten am Gerät und dessen Aufstellung müssen in Übereinstimmung mit den nationalen elektrischen Bestimmungen und den örtlichen Vorschriften durchgeführt werden.
- Beim Arbeiten an dem Gerät müssen die jeweils gültigen Sicherheitsvorschriften beachtet werden.

---

## 2. Leistungsmerkmale des Readermoduls ID ISC.M02

---



---

### 2.1. Leistungsmerkmale

---

Das Readermodul ID ISC.M02 ist für das Lesen und Schreiben von passiven Transpondern, sogenannten "Smart Labels", mit einer Betriebsfrequenz von 13,56 MHz entwickelt worden. Es eignet sich für alle Anwendungen, bei denen geringe Lesereichweiten bei kleinen Abmessungen des Readers benötigt werden.

Das Modul besitzt eine integrierte Antenne, wodurch keine weiteren externen Antennenkomponenten erforderlich sind.

Je nach Anforderung kann optional auch eine externe 50Ω-Antenne angeschlossen werden.

---

### 2.2. Verfügbare Modultypen

---

Folgende Modultypen sind z.Z. verfügbar:

Modultyp	Beschreibung
ID ISC.M02-B	Readermodul mit integrierter Antenne, RS232-C- und Daten-/Takt-Schnittstelle, für eine Versorgungsspannung von 5 V DC

---

### 2.3. Lieferumfang

---

Folgende Komponenten sind im Lieferumfang enthalten:

Modultyp	Lieferumfang
ID ISC.M02-B	1 x Readermodul ID ISC.M02-B

### 3. Montage und Anschluss

#### 3.1. Abmessungen

Bild 3.1-1 zeigt die Maßzeichnung des Readermoduls ID ISC.M02.

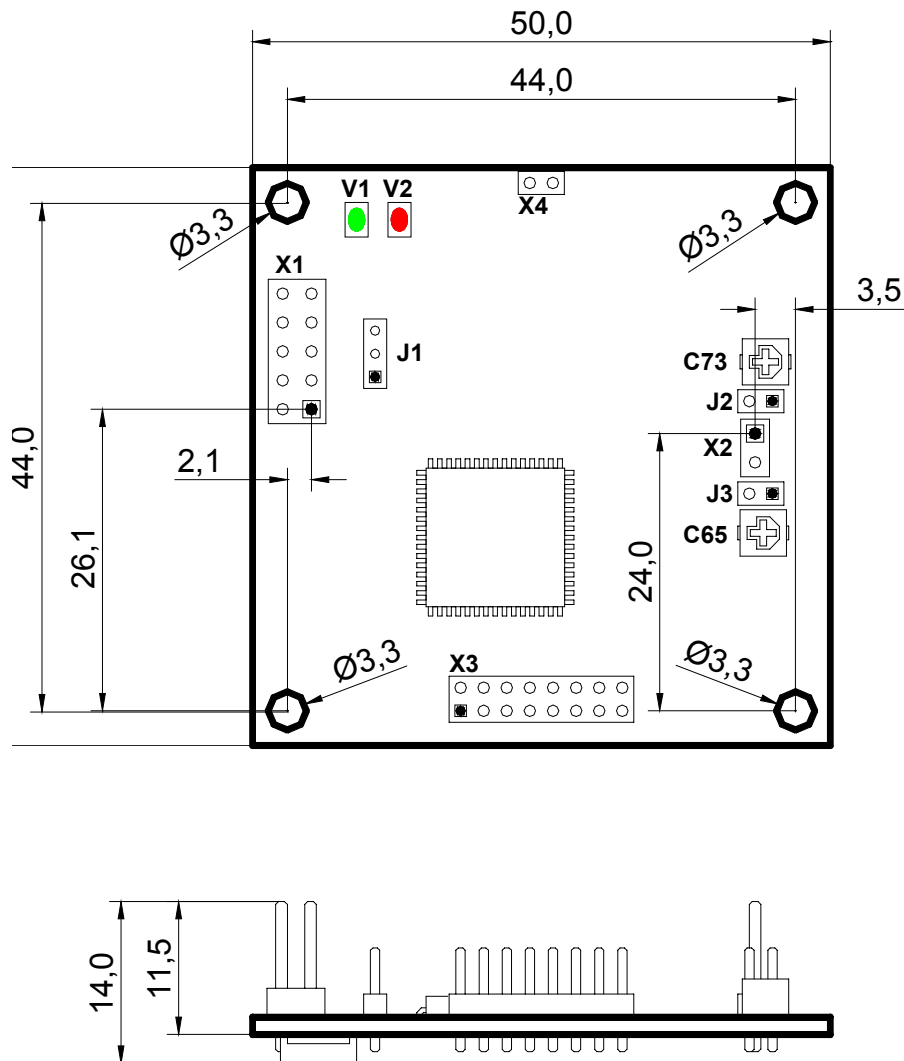


Bild 3.1-1: Maßzeichnung des Readermoduls ID ISC.M02



### 3.2. Anschluss

Bild 3.2-1 und Tabelle 3.2-1 zeigen die Belegung der Anschlussstiftleiste X1. Die Stiftleiste ist für Flachbandkabelanschluss mittels IDC-Federleiste mit Rastermaß 2,54 mm ausgelegt.

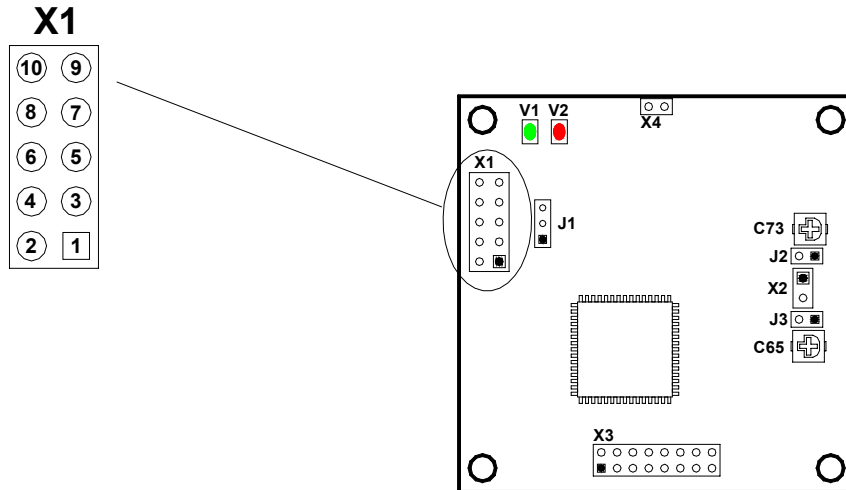


Bild 3.2-1: Belegung der Anschlussstiftleiste X1

X1 Pin-Nr.	Kurzzeichen	Beschreibung
		ID ISC.M02-B
1	DAT	Datenleitung der Daten-/Taktschnittstelle
2	CLK	Taktleitung der Daten-/Taktschnittstelle
3	TxD	RS232-TTL – Transmit Data
4	GND **	GND
5	RxD	RS232-TTL – Receive Data
6	---	Nicht angeschlossen
7	CLS	CLS-Leitung der Daten-/Taktschnittstelle
8	VCC	+ 5 V DC *
9	GND **	GND
10	---	Nicht angeschlossen
* Nur geregelte DC-Spannungen verwenden !		
** Die GND-Pins 4 und 9 sind auf dem Readermodul direkt miteinander verbunden		

Tabelle 3.2-1: Belegung der Anschlussstiftleiste X1

### 3.2.1. Spannungsversorgung

Für die Spannungsversorgung des ID ISC.M02-A/B dürfen nur geregelte DC-Spannungen verwendet werden.

Im Falle von getakteten Netzteilen zur Versorgung des Moduls ist auf eine ausreichende Filterung der Versorgungsspannung zu achten.

Störungen der Versorgungsspannung können sich in einer Reduzierung der Lese- und Schreibreichweite des Modules auswirken.

Die Länge des Zuleitungskabels der Spannungsversorgung sollte möglichst kurz sein. Sie darf 3 m nicht überschreiten.

X1 Pin-Nr.	Kurzzeichen	Beschreibung
		ID ISC.M02-B
8	VCC *	+ 5 V DC $\pm$ 5%
9, 4	GND **	GND
* Nur geregelte DC-Spannungen verwenden ! ** Die GND-Pins 4 und 9 sind auf dem Readermodul direkt miteinander verbunden		

Tabelle 3.2.1-1: Pinbelegung der Spannungsversorgung an X1

#### **HINWEIS:**

- **Eine Verpolung der Versorgungsspannung kann zur Zerstörung des Gerätes führen.**
- **Versorgungsspannungen außerhalb der Spezifikation können zur Zerstörung des Gerätes führen.**

### 3.2.2. RS232-Schnittstelle

Die Länge des Zuleitungskabels der RS232-Schnittstelle sollte möglichst kurz sein. Sie darf 3 m nicht überschreiten.

X1 Pin-Nr.	Kurzzeichen	Beschreibung
		ID ISC.M02-B
3	TxD *	RS232-TTL - Transmit Data
4, 9	GND **	GND
5	RxD *	RS232-TTL - Receive Data
* Bezeichnungen der Signale aus Sichtweise des Readermoduls. ** Die GND-Pins 4 und 9 sind auf dem Readermodul direkt miteinander verbunden		

Tabelle 3.2.2-1: Pinbelegung der RS232-Schnittstelle an X1

Die Übertragungsparameter der Schnittstelle können per Softwareprotokoll konfiguriert werden. Tabelle 3.2.2-2 zeigt die Standardparameter der RS232-Schnittstelle.

Parameter	Standardeinstellung
Baudrate	38400
Anzahl der Datenbits	8
Parität	Even
Anzahl der Stoppbits	1

Tabelle 3.2.2-2: Standardparameter der RS232-Schnittstelle.

### 3.2.3. Daten-/Taktschnittstelle

Die Länge des Zuleitungskabels der Daten-/Taktschnittstelle sollte möglichst kurz sein. Sie darf 3 m nicht überschreiten.

X1 Pin-Nr.	Kurzzzeichen	Beschreibung
		ID ISC.M02-B
1	DAT	Datenleitung der Daten-/Taktschnittstelle
2	CLK	Taktleitung der Daten-/Taktschnittstelle
7	CLS	CLS-Leitung der Daten-/Taktschnittstelle
4, 9	GND *	GND
* Die GND-Pins 4 und 9 sind auf dem Readermodul direkt miteinander verbunden		

Tabelle 3.2.3-1: Pinbelegung der RS232-Schnittstelle an X1

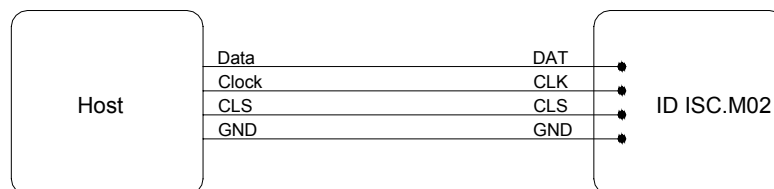


Bild 3.2.3-1: Anschluss der Daten-/Taktschnittstelle

### 3.2.4. Optionales Security-Modul ID SAM.M02

Bei Bedarf kann optional auf die Stiftleisten X3 und X4 ein Security-Modul vom Typ ID SAM.M02 aufgesteckt werden.

Das Security-Modul ID SAM.M02 bietet zusätzliche Sicherheit durch kryptographische Datenübertragung zwischen Reader und Transponder.

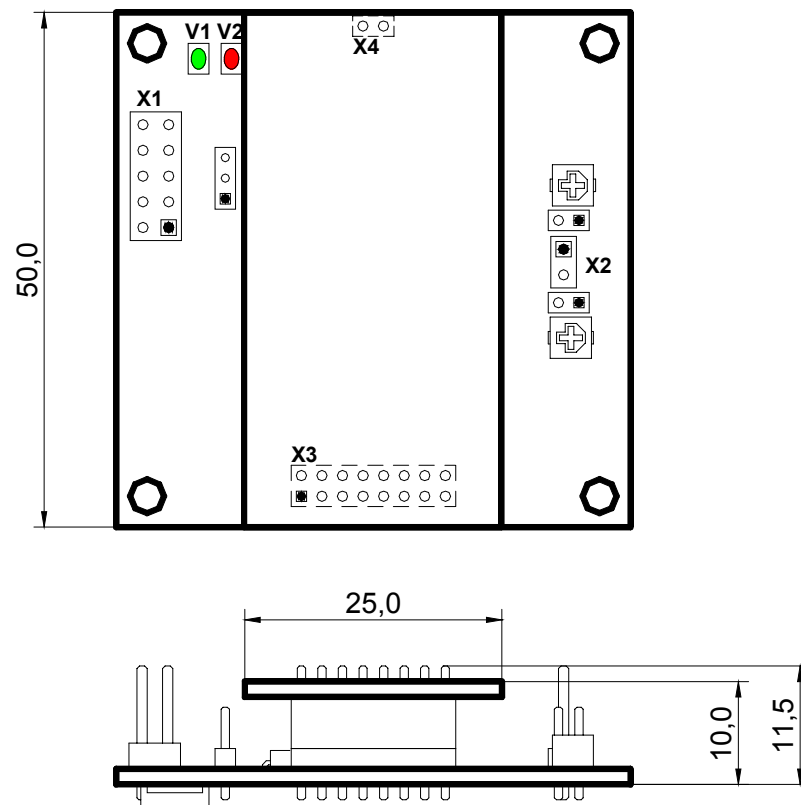


Bild 3.2.4-1: Maßzeichnung ID ISC.M02 mit ID SAM.M02

### 3.3. Anzeigeelemente

Das Readermodul ID ISC.M02 besitzt eine grüne LED (V1) und eine rote LED (V2) als Anzeigeelemente (siehe Bild 3.3-1).

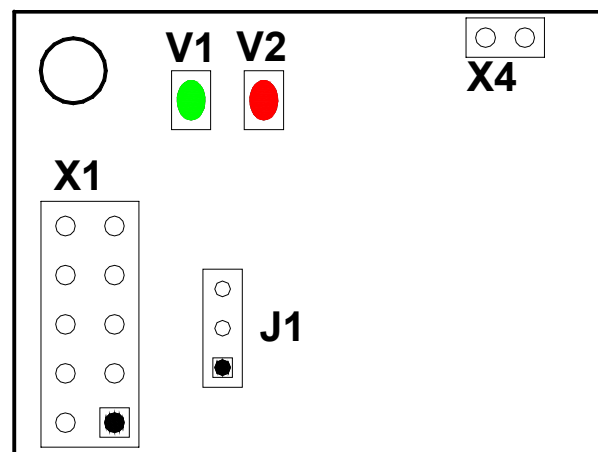


Bild 3.3-1: Position der LED's V1 und V2

Die Funktionen der beiden LED's können per Softwareprotokoll konfiguriert werden. Ergänzend dazu besteht auch die Möglichkeit beide LED's direkt durch ein weiteres Softwareprotokoll anzusteuern.

Tabelle 3.3-1 zeigt die Standardeinstellung von V1 und V2.

LED	Farbe	Standardeinstellung
V1	Grün	<ul style="list-style-type: none"> <li>• Blinkt nach einem Reset vier mal.</li> <li>• Blinkt kontinuierlich mit einer Frequenz von 2 Hz.</li> </ul>
V2	Rot	<ul style="list-style-type: none"> <li>• Blinkt nach einem Reset vier mal.</li> <li>• Leuchtet nach einer erfolgreichen Kommunikation mit einem Transponder für 1 Sekunde.</li> </ul>

Tabelle 3.3-1: Standardeinstellung der LED's

### 3.4. Bedienelemente

#### 3.4.1. Betriebs-/Programmier-Mode: Jumper J1

Der Jumper J1 dient zur Konfiguration des Betriebs- bzw. Programmier-Mode des ID ISC.M02.

Im Standardbetrieb ist der Jumper auf die Position 1-2 gesteckt (siehe Bild 3.4.1-1). Der Reader befindet sich dann im normalen Betriebsmode.

Wird der Jumper auf die Position 2-3 gesteckt, so startet nach einem Reset der integrierte Hardware Bootloader. Da die Firmware des Readers jedoch auch über einen Software Bootloader verfügt, sollte die Option des Hardware Bootloaders nur für die Installation des Software Bootloaders gewählt werden.

Näheres zum Programmieren des Readers kann in der entsprechenden Application Note "Firmware Update" nachgelesen werden.

Jumperposition	Mode
1 - 2	<b>Standardeinstellung :</b> Der Reader befindet sich im normalen Betriebsmode.
2 - 3	Aktivierung des Hardware-Bootloaders : Nach einem Reset startet die CPU des Readers seinen Hardware Bootloader und kann über diesen neu programmiert werden.

Tabelle 3.4.1-1: Jumper J1

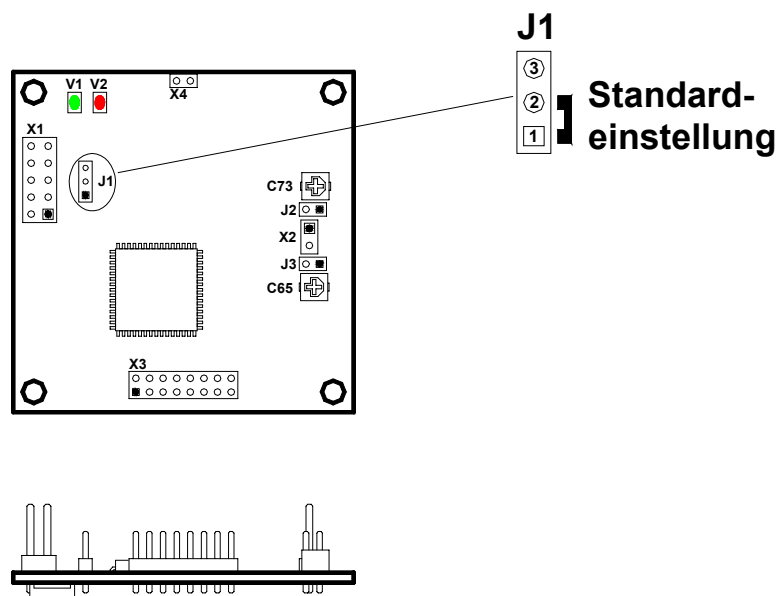


Bild 3.4.1-1: Jumper J1

### 3.4.2. Interne/Externe Antenne: Stiftleiste X2, Jumper J2 und J3

Die Stiftleiste X2 dient zum Anschluss einer externen 50Ω-Antenne an den ID ISC.M02. Hierbei handelt es sich um eine Standardstiftleiste mit dem Rastermaß 2,54 mm. Tabelle 3.4.2-1 zeigt die Anschlussbelegung der Stiftleiste X2.

Pin-Nr.	Kurzzeichen	Beschreibung
1	Signal	50Ω-Signalausgang
2	GND	GND-Anschluss

Tabelle 3.4.2-1: Anschlussbelegung der Stiftleiste X2

Die Jumper J2 und J3 verbinden die interne Antenne mit der Treiberschaltung des Readers. Für den Anschluss einer externen Antenne müssen die beiden Jumper J2 und J3 daher geöffnet werden.

Jumper J2 und J3	Beschreibung
geschlossen	Anschluss der internen Antenne
offen	Anschluss einer externen Antenne

Tabelle 3.4.2-2: Konfiguration der Jumper J2 und J3

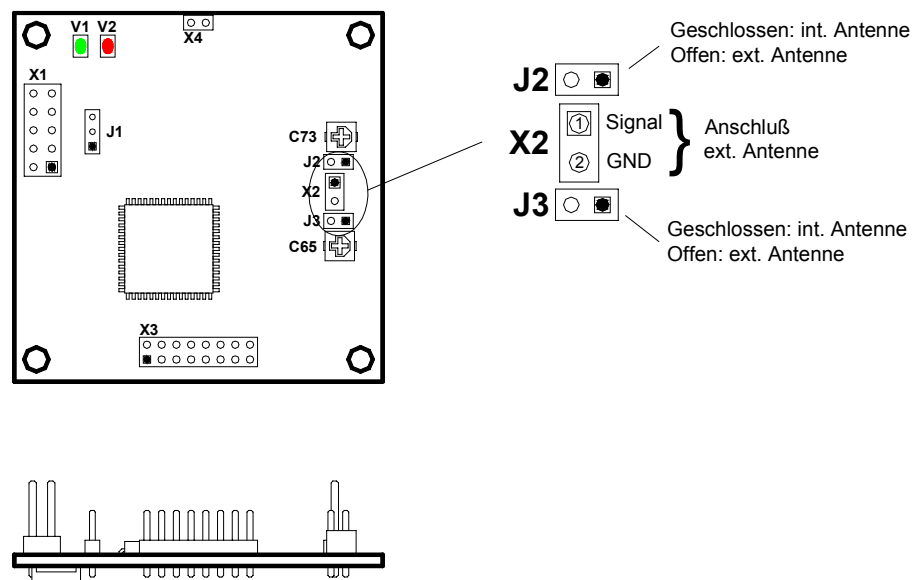


Bild 3.4.2-1: Anschluss und Konfiguration interne/externe Antenne

#### HINWEIS:

- **Werden die beiden Jumper J2 und J3 nach dem Anschluss einer externen Antenne nicht geöffnet, so wird der Sender des Readers durch beide Antennen belastet. Dies kann zu dessen Zerstörung führen!**



### 3.4.3. Nachgleich der internen Antenne: Trimmkondensator C65

Die Antenne des ID ISC.M02 kann durch verschiedene Umgebungseinflüsse wie zum Beispiel Metalle verstimmt werden (siehe Kapitel 3.5). Diese Verstimmungen können in einem gewissen Rahmen durch den Trimmkondensator C65 ausgeglichen werden.

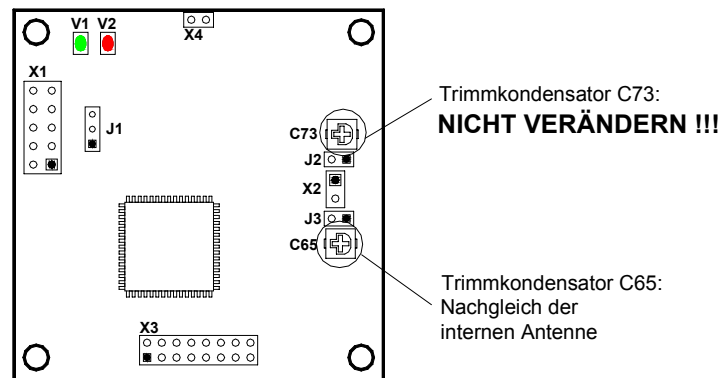


Bild 3.4.3-1: Trimmkondensator zum Nachgleich der Antenne

Der Nachgleich der integrierten Antenne kann mit Hilfe eines Oszilloskopes (Bandbreite  $\geq 20$  MHz) durchgeführt werden. Dazu wird der GND-Anschluss des Oszilloskoptastkopfes mit der Tastkopfspitze kurzgeschlossen und anschließend über die Leiterplatte des ID ISC.M02 gehalten. Der Tastkopf bildet so eine Meßschleife für das abgestrahlte magnetische Feld des ID ISC.M02. Der Abstand zwischen Oszilloskoptastkopf und ID ISC.M02 sollte im Bereich 0 bis 3 cm liegen.

Nun muss mit Hilfe des Software-Kommandos "RF-ON" (0x6A) das HF-Feld des ID ISC.M02 eingeschaltet werden. Auf dem Bildschirm des Oszilloskopes sollte anschließend ein 13,56 MHz-Signal zu sehen sein.

Für den Abgleich der internen Antenne muss nun die Signalamplitude des 13,56 MHz-Signals mit Hilfe des Trimmkondensators C65 auf Maximum abgeglichen werden.

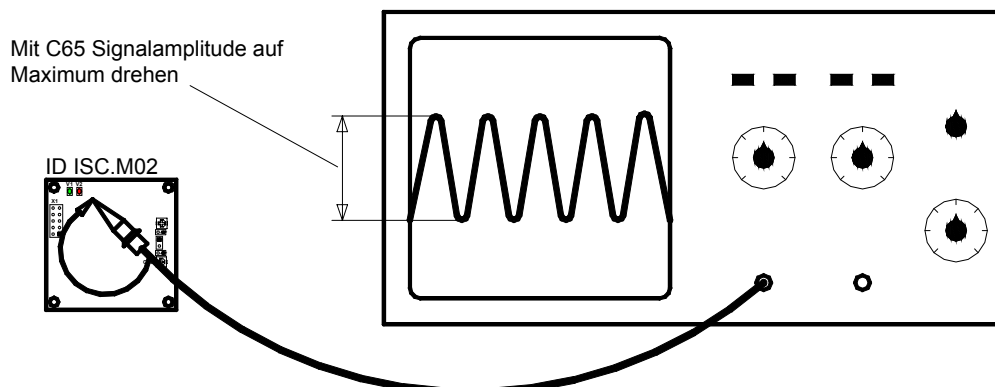


Bild 3.4.3-2: Messaufbau zum Abgleich der internen Antenne

Wird der maximale Wert der Signalamplitude bei der Minimum- oder Maximumposition des Trimmkondensators erreicht (Bild 3.4.3-3), so ist Vorsicht geboten. In diesem Fall ist meist die Verstimmung der Antenne durch die Umgebung zu groß und kann durch den Trimmkondensator nicht vollständig ausgeglichen werden.

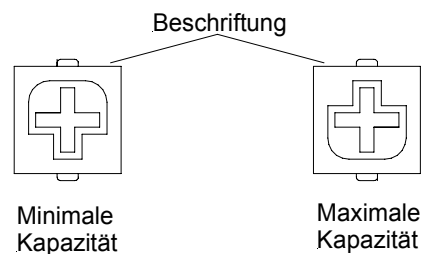


Bild 3.4.3-3: Minimal- und Maximalposition des Trimmkondensators C65

Im Anschluss an den Abgleichvorgang sollte die Antenne noch einmal auf ihre maximale Reichweite und eventuelle Kommunikationslöcher untersucht werden.

#### **HINWEIS:**

- ***Trotz der hier beschriebenen Möglichkeit des Antennennachgleichs sollte der Abstand zwischen Reader und den umgebenden Metallflächen mindestens 3 cm betragen. Dabei sollte bedacht werden, dass sich auch andere Leiterplatten, je nach Kupferauflage, wie Metallflächen verhalten.***

---

### 3.5. Montagehinweise

---

Folgende mögliche Beeinflussungen durch die Umgebung sollten beim Einbau eines ID ISC.M02 in ein anderes Gerät beachtet werden :

- Beeinflussung durch eine metallische Umgebung
  - ⇒ Verstimmung der integrierten Antenne
  - ⇒ Beeinträchtigung der Ausbreitung des magnetischen Feldes der Antenne
- EMV-Beeinflussung über Zuleitungen
  - ⇒ Beeinträchtigung der Kommunikation zwischen Reader und Label
- EMV-Beeinflussungen über magnetische Felder
  - ⇒ Beeinträchtigung der Kommunikation zwischen Reader und Label

---

#### 3.5.1. Metallische Umgebung

---

Beim Einbau eines ID ISC.M02 in ein anderes Gerät ist darauf zu achten, dass sich möglichst keine Metallflächen bzw. Metallteile in der direkten Umgebung des Readers befinden. Diese können die Antenne verstimmen und so das magnetische Feld der integrierten Antenne reduzieren. Dies wirkt sich dann in einer reduzierten Lesereichweite des Readers aus.

***Der Abstand zwischen Reader und Metallfläche sollte mindestens 3 cm betragen. Dabei sollte bedacht werden, dass sich auch andere Leiterplatten, je nach Kupferauflage, wie Metallflächen verhalten.***

Ist eine metallische Umgebung nicht zu vermeiden, so sollten die Abstände im Interesse der stabilen Funktion jedoch so groß wie nur irgend möglich gewählt werden.

Auch der Bereich zwischen Antenne und Label, sowie der Bereich auf der anderen Seite des Label sollte frei von Metallteilen sein.

Da jede Veränderung der metallischen Umgebung zu einer Verstimmung der integrierten Antenne und dadurch einer Beeinträchtigung der Funktion führt, sollten sich keine beweglichen Metallteile, wie z.B. metallische Lüfter, in der Nähe des Readers befinden.

---

#### 3.5.2. EMV-Beeinflussung über Zuleitungen

---

Trotz der internen EMV-Filter des Readers kann es durch starke Störungen auf der Spannungsversorgung zu Beeinträchtigungen der Kommunikation zwischen Reader und Transponder kommen.

Beim Einbau eines ID ISC.M02 in ein anderes Gerät sollte daher auf eine möglichst saubere, störfreie Spannungsversorgung geachtet werden.

---

### 3.5.3. EMV-Beeinflussung über magnetische Felder

---

Da im vorliegenden Fall der RF-ID-Technik die Kommunikation zwischen Reader und Transponder mittels der Modulation eines magnetischen Feldes abläuft, können sich magnetische Wechselfelder in der Nähe der Antenne negativ auf dessen Funktion auswirken.

Zu den Quellen solcher magnetischen Störfelder gehören zum Beispiel Spulen innerhalb eines primär oder sekundär getakteten Netzteils.

Bei der Festlegung der Position von Reader und Antenne in einem Gerät sollte dieses auf eventuelle Störquellen in der oben angegebenen Form untersucht werden. Notfalls sind Abschirmmaßnahmen zur Unterdrückung einer solchen Störquelle anzuwenden.

---

## 4. Funkzulassungen

---

---

### 4.1. Europa (CE)

---

Die Funkanlage entspricht, bei bestimmungsgemäßer Verwendung den grundlegenden Anforderungen des Artikels 3 und den übrigen einschlägigen Bestimmungen der R&TTE Richtlinie 1999/5/E6 vom März 99.



---

### 4.2. USA (FCC)

---

#### **FCC ID: PJMISCM02**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Unauthorized modifications may void the authority granted under Federal communications Commission Rules permitting the operation of this device.

This device is labeled with an FCC ID number.

If this label is not visible when installed in an end device, the outside of the device **MUST** also display a label referring to the enclosed module.

Wording on the label similar to the following shall be used:

This device contains transmitter module FCC ID PJMISCM02

At the time of this printing, the antennas listed below were the only antennas approved for use with the ID ISC.M02 module. Use of other antennas must be approved by FEIG ELECTRONIC GmbH.

Antennas approved: ID ISC.ANT100100; ID ISC.ANT4030

## 5. Technische Daten

### Mechanische Daten

- **Abmessungen ( B x H x T )** 50mm x 50mm x 14 mm
- **Anschlussstecker** 10 polige Stiftleiste mit Rastermaß 2,54mm

### Elektrische Daten

- **Spannungsversorgung**  
Version –B 5 V DC  $\pm$  5%
- **Leistungsaufnahme** max. 1 W
- **Betriebsfrequenz** 13.56 MHz
- **Sendeleistung** 90 mW  $\pm$  2 dB
- **Antenne** Interne Antenne, 48mm x 48mm;  
Anschluß einer externen 50 $\Omega$ -Antenne möglich
- **Schnittstellen**  
Version –B RS232 - TTL-Level, Daten-/Taktschnittstelle

### Funktionelle Eigenschaften

- **EEPROM (für Parameter)** 1 kB  
(10,000 Schreibzyklen)
- **FLASH** 64 kB  
(Softwareupdate über Schnittstelle möglich)
- **Unterstützte Transponder**
  - ISO15693 (I•Code SLI, Tag-It HFI, my-d vicinity, STM LRI512), I•Code 1
  - Optional:  
SAM (Security Access Module),  
z.B. für my-d vicinity
- **Optische Anzeigen** 2 LED's

### Umgebungsbedingungen

- **Temperaturbereich**
  - Betrieb -20°C bis +70°C
  - Lagerung -40°C bis +85°C

### Angewendete Normen

- **Zulassung Funk**
  - Europa EN 300 330
  - USA FCC 47 CFR Part 15
- **EMV** EN 301 489
- **Sicherheit** EN 60950



## Note

© Copyright 2002 by  
FEIG ELECTRONIC GmbH  
Lange Strasse 4  
D-35781 Weilburg-Waldhausen  
Tel.: +49 6471 3109-0  
<http://www.feig.de>

Edition: er/03/02/11 - m20301-0de-id-b.doc

With the edition of this manual, all previous editions become void. Indications made in this manual may be changed without previous notice.

Copying of this document, and giving it to others and the use or communication of the contents thereof are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of the grant of a patent or the registration of a utility model or design.

Composition of the information in this manual has been done to the best of our knowledge. FEIG ELECTRONIC GmbH does not guarantee the correctness and completeness of the details given in this manual and may not be held liable for damages ensuing from incorrect or incomplete information. Since, despite all our efforts, errors may not be completely avoided, we are always grateful for your useful tips.

The installation instructions given in this manual are based on advantageous boundary conditions. FEIG ELECTRONIC GmbH does not give any guarantee promise for perfect function in cross environments.

FEIG ELECTRONIC GmbH assumes no responsibility for the use of any information contained in this manual and makes no representation that they are free of patent infringement. FEIG ELECTRONIC GmbH does not convey any license under its patent rights nor the rights of others.

**OBID®** is registered trademark of FEIG ELECTRONIC GmbH.



## Contents

<b>6. Safety Instructions / Warning - Read before start-up !</b>	<b>26</b>
<b>7. Performance Characteristics of the ID ISC.M02 Reader Module</b>	<b>27</b>
7.1. Performance Characteristics .....	27
7.2. Available module types .....	27
7.3. Scope of delivery .....	27
<b>8. Installation and wiring</b>	<b>28</b>
8.1. Dimensions .....	28
8.2. Wiring .....	29
8.2.1. Supply voltage .....	30
8.2.2. RS232 interface .....	31
8.2.3. Data/Clock interface .....	32
8.2.4. Optional Security Module ID SAM.M02 .....	33
8.3. Display elements .....	34
8.4. Operating elements .....	35
8.4.1. Operating/Programming Mode: Jumper J1 .....	35
8.4.2. Internal/External antenna: Terminal X2, Jumpers J2 and J3 .....	36
8.4.3. Retuning the internal antenna: Trim capacitor C65 .....	37
8.5. Installation notes .....	39
8.5.1. Metallic surroundings .....	39
8.5.2. EMC effects on cables .....	39
8.5.3. EMC effects from magnetic fields .....	40
<b>9. Radio Approvals</b>	<b>41</b>
9.1. Europe (CE) .....	41
9.2. USA (FCC) .....	41
<b>10. Technical Data</b>	<b>42</b>

---

## 6. Safety Instructions / Warning - Read before start-up !

---

- The device has to be used only for the purpose designed by the manufacturer.
- The operation manual has to be stored available at any time and has to be handed over to each user.
- Unauthorized changes and the use of spare parts and additional devices which have not been sold or recommended by the manufacturer may cause fire, electric shocks or injuries. Such measures will lead to exclusion of any liability by the manufacturer.
- The liability-prescriptions of the manufacturer in the issue valid at the time of purchase are valid for the device. The manufacturer is not legally responsible for incorrect, unsuitable manual or automatic setting of parameters for a device or the incorrect application of a device.
- Repairs can only be executed by the manufacturer.
- Installation-, operation- and maintenance procedures should only be carried out by qualified personnel.
- Before opening the device, the power supply must always be interrupted. Make sure that the device is without voltage by measuring. CAUTION! The fading of an operation control (LED) is no indicator for an interrupted power supply or the device being without voltage!
- Works at the device and its installation have to be executed according to the national legal requirements and local prescriptions.
- When working on devices the valid safety regulations must be observed.

---

## 7. Performance Characteristics of the ID ISC.M02 Reader Module

---



---

### 7.1. Performance Characteristics

---

The ID ISC.M02 Reader Module is designed for reading and writing passive transponders, so-called “Smart Labels”, with an operating frequency of 13.56 MHz. It is suitable for any application in which short read ranges and small reader dimensions are required.

The module has an integrated antenna which eliminates the need for additional external antenna components.

Depending on the requirements, an external 50Ω antenna may also be optionally connected.

---

### 7.2. Available module types

---

The following module types are currently available:

Module type	Description
ID ISC.M02-B	Reader Module with integrated antenna, RS232-C and data/clock interface, for a supply voltage of 5 V DC

---

### 7.3. Scope of delivery

---


The following components are included:

Module type	Included
ID ISC.M02-B	1 x Reader Module ID ISC.M02-B

8. Installation and wiring

8.1. Dimensions

Fig. 3.1-1 shows the dimensions of the ID ISC.M02 Reader Module

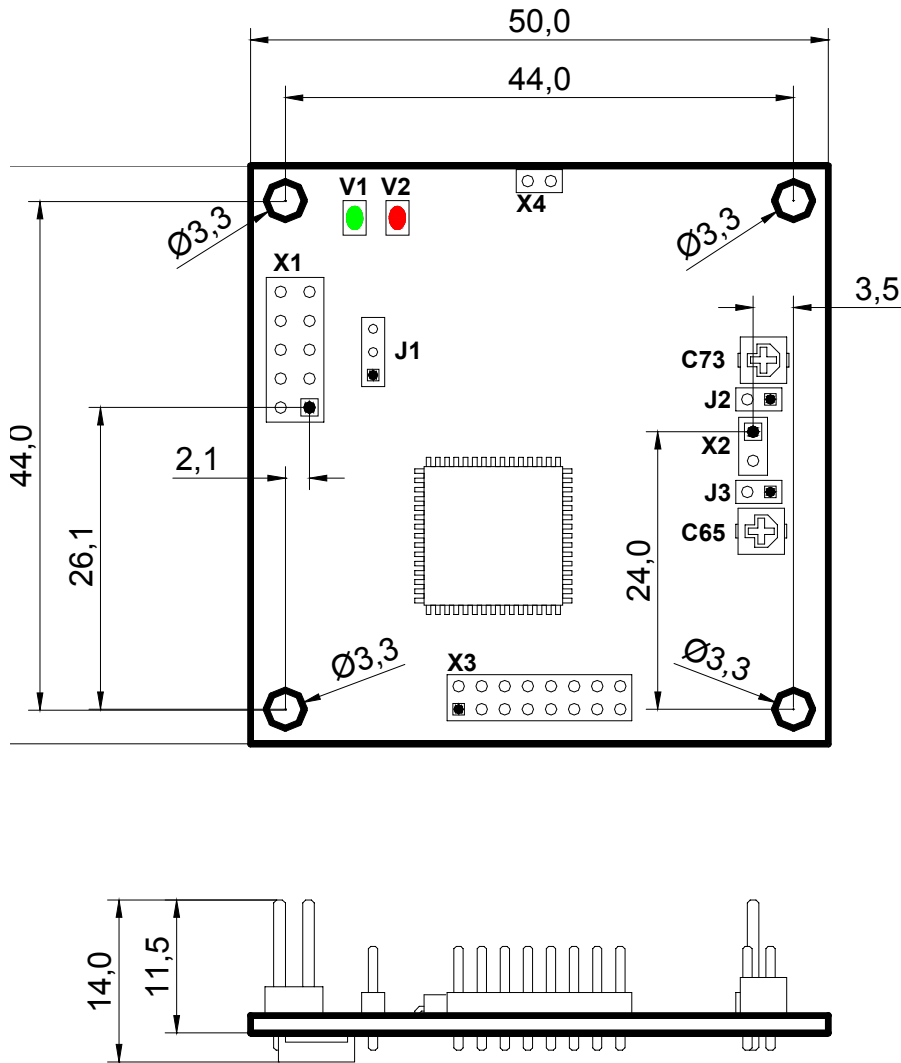

ENGLISH

Fig. 3.1-1: Dimensions of the ID ISC.M02 Reader Module

8.2. Wiring

Fig. 3.2-1 and Table 3.2-1 show the pin assignments for Terminal X1. The pin connector is designed for flat cable connection using an IDC multipoint socket connector with 2.54 mm pin spacing.

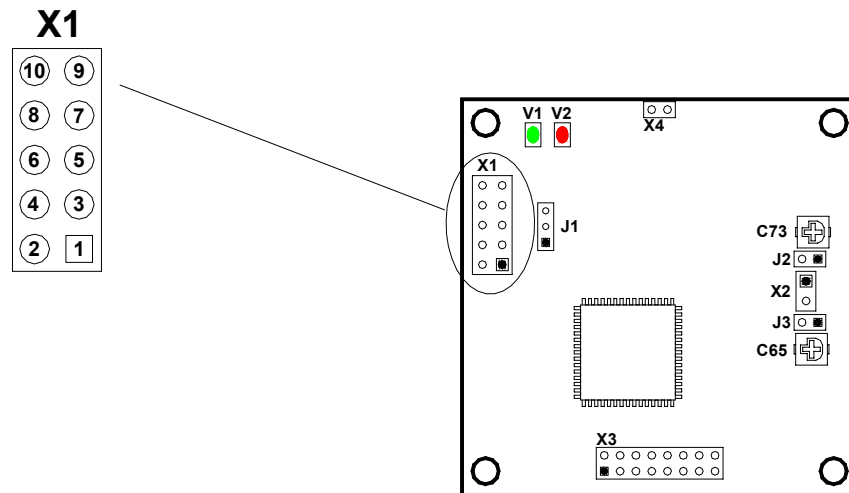


Fig. 3.2-1: Pin assignments for Terminal X1

X1 Pin no.	Function	Description
		ID ISC.M02-B
1	DAT	Data line for the data/clock interface
2	CLK	Clock line for the data/clock interface
3	TxD	RS232-TTL – Transmit Data
4	GND **	GND
5	RxD	RS232-TTL – Receive Data
6	---	not connected
7	CLS	CLS line for the data/clock interface
8	VCC	+ 5 V DC *
9	GND **	GND
10	---	not connected
* Use only regulated DC power supplies !		
** GND-Pins 4 and 9 are to be connected directly to each other on the Reader Module		

Table 3.2-1: Pin assignments for Terminal X1

### 8.2.1. Supply voltage

The ID ISC.M02-A/B must be supplied only by a regulated power supply.

If switching power supplies are used with the module, be sure that there is adequate filtering.

Noise from the power supply can result in a reduction of the read/write range of the module.

The cable length from the power supply should be as short as possible, and should in any case not exceed 3 m.

X1 Pin no.	Function	Description
		ID ISC.M02-B
8	VCC *	+ 5 V DC $\pm$ 5%
9, 4	GND **	GND
* Use only regulated power supplies ! ** GND-Pins 4 and 9 are to be connected directly to each other on the Reader Module		

Table 3.2.1-1: Pin assignments for X1

#### NOTE:

- *Reversing the polarity of the supply voltage may destroy the device.*
- *Supply voltages outside the specifications may destroy the device.*

### 8.2.2. RS232 interface

The length of the cable to the RS232 interface should be kept as short as possible, and must in any case not exceed 3 m.

X1 Pin no.	Function	Description
		ID ISC.M02-B
3	TxD *	RS232-TTL - Transmit Data
4, 9	GND **	GND
5	RxD *	RS232-TTL - Receive Data
* Signal names as seen by the Reader Module. ** GND-Pins 4 and 9 are to be connected directly to each other on the Reader Module		

Table 3.2.2-1: Pin assignments for the RS232 interface on X1

The transmission parameters for the interface can be software-configured. Table 3.2.2-2 shows the standard parameters for the RS232 interface.

Parameter	Standard setting
Baud rate	38400
No. of data bits	8
Parity	Even
No. of stop bits	1

Table 3.2.2-2: Standard parameters of the RS232 interface.

### 8.2.3. Data/Clock interface

The length of the cable to the data/clock interface should be kept as short as possible. It must not exceed 3 m.

X1 Pin no.	Function	Description
		ID ISC.M02-B
1	DAT	Data line for the data/clock interface
2	CLK	Clock line for the data/clock interface
7	CLS	CLS line for the data/clock interface
4, 9	GND *	GND
* GND-Pins 4 and 9 are to be connected directly to each other on the Reader Module		

Table 3.2.3-1: Pin configuration for the RS232 interface on Terminal X1

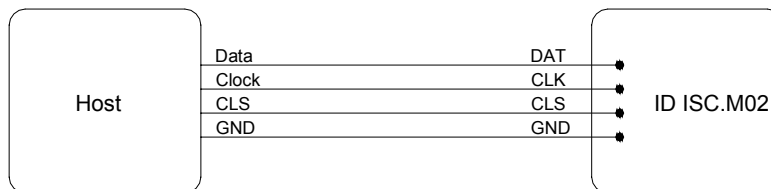


Fig. 3.2.3-1: Connecting the data/clock-interface



8.2.4. Optional Security Module ID SAM.M02

If needed, the optional ID SAM.M02 Security Module can be connected to terminals X3 and X4.

The ID SAM.M02 Security Module provided additional security by using cryptographic data transmission between the reader and transponder.

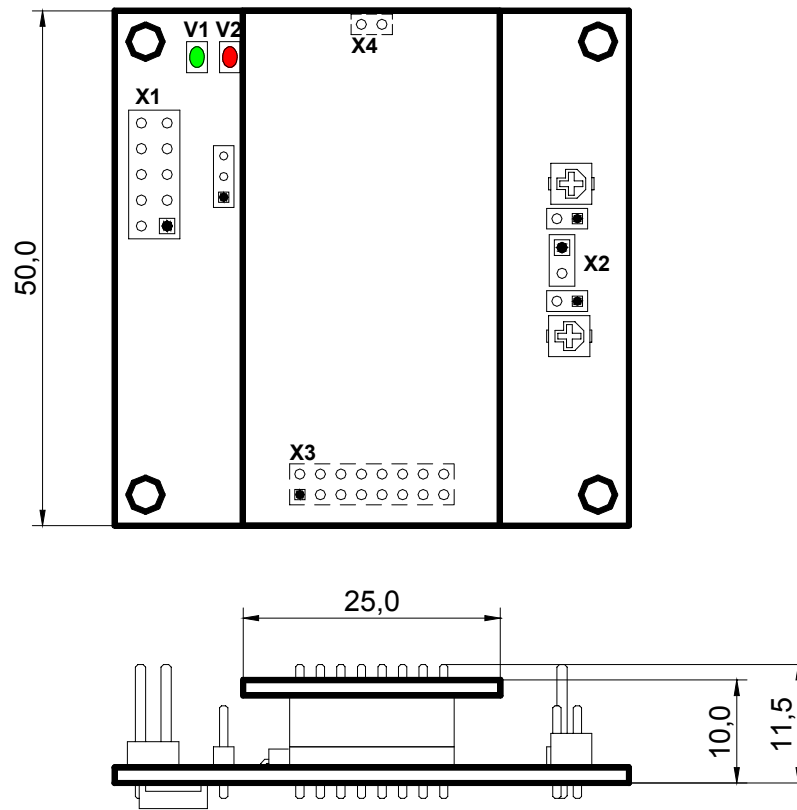


Fig. 3.2.4-1: Dimensions of ID ISC.M02 with ID SAM.M02

### 8.3. Display elements

The ID ISC.M02 Reader Module has a green LED (V1) and a red LED (V2) which are used as display elements (Fig. 3.3-1).

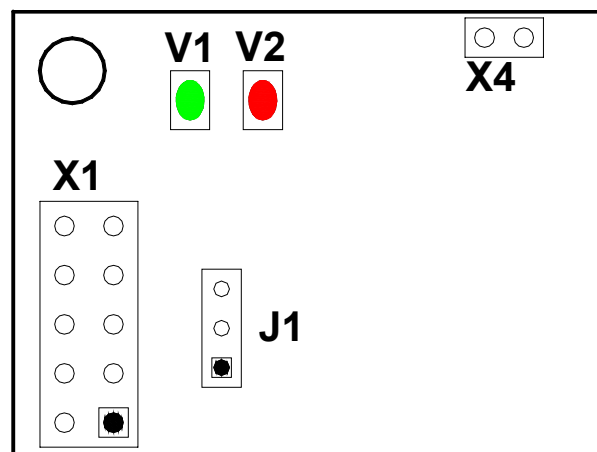


Fig. 3.3-1: Position of LEDs V1 and V2

The functions of both LEDs can be configured using software protocol. It is also possible to control both LEDs directly using an additional software protocol.

Table 3.3-1 shows the standard setting for V1 and V2.

LED	Color	Standard setting
V1	Green	<ul style="list-style-type: none"> <li>Flashes 4x after a reset.</li> <li>Flashes continuously at a frequency of 2 Hz.</li> </ul>
V2	Red	<ul style="list-style-type: none"> <li>Flashes 4x after a reset.</li> <li>Comes on for 1 second after successful communication with a transponder.</li> </ul>

Table 3.3-1: Standard setting for the LEDs

## 8.4. Operating elements

### 8.4.1. Operating/Programming Mode: Jumper J1

Jumper J1 is used to configure the operating and programming mode of the ID ISC.M02.


In standard operation the jumper is set to Position 1-2 (see Fig. 4.3.1-1). The reader is then in normal operating mode.

If the jumper is set to Position 2-3, the integrated hardware bootloader starts after a reset. Since the reader's firmware however also has a software bootloader, the hardware bootloader option should be used only for installing the software bootloader.

For additional information about programming the reader, see the corresponding Application Note „Firmware Update“.

Jumper position	Mode
1 - 2	<b>Standard setting :</b> The reader is in normal operating mode.
2 - 3	Activation of the hardware bootloader: After a reset the reader's CPU starts its hardware bootloader, which can then be used for new programming.

Table 3.4.1-1: Jumper J1

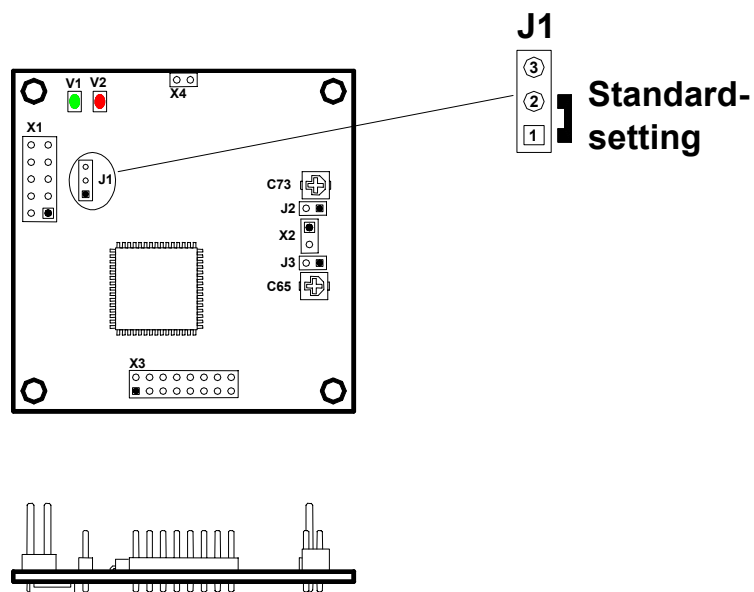

8.4.2. Internal/External antenna: Terminal X2, Jumpers J2 and J3

Terminal X2 is used to connect an external 50Ω antenna to the ID ISC.M02. This is a standard pin connector with 2.54 mm spacing. Table 3.4.2-1 shows the pin assignments for Terminal X2.

Pin no.	Function	Description
1	Signal	50Ω signal output
2	GND	GND connection

Table 3.4.2-1: Pin assignments of Terminal X2

Jumpers J2 and J3 connect the internal antenna to the driver circuit of the reader. To connect an external antenna, both jumpers J2 and J3 must therefore be removed.

Jumpers J2 and J3	Description
in	Internal antenna connected
out	External antenna connected

Table 3.4.2-2: Configuration of Jumper J2 und J3

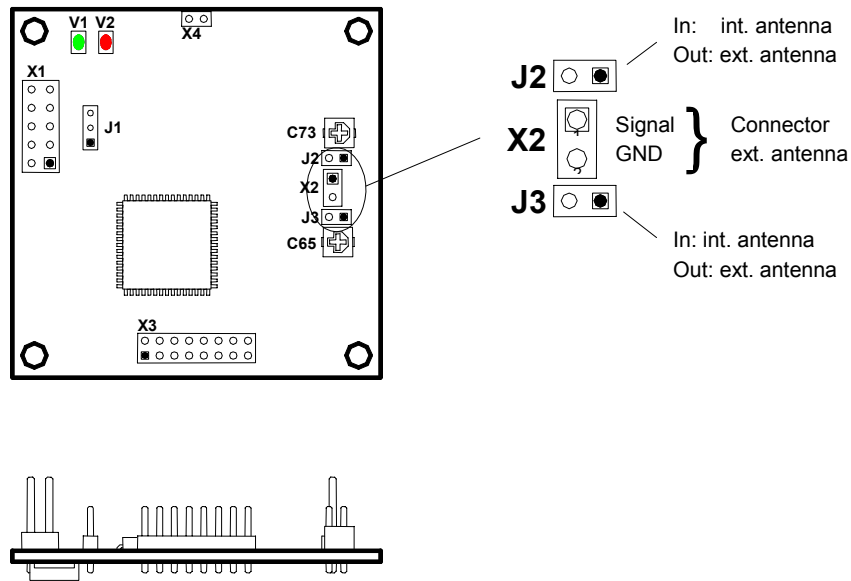


Fig. 3.4.2-1: Connecting and configuring internal/external antenna

**NOTE:**

- ***If both jumpers J2 and J3 are not removed after connecting an external antenna, the reader's transmitter will be loaded by both antennas. This could result in permanent damage to the transmitter!***

### 8.4.3. Retuning the internal antenna: Trim capacitor C65

The antenna of the ID ISC.M02 can be detuned as a result of various ambient conditions such as nearby metal objects (see Section 8.5). This detuning can be compensated to some degree using the trim capacitor C65.

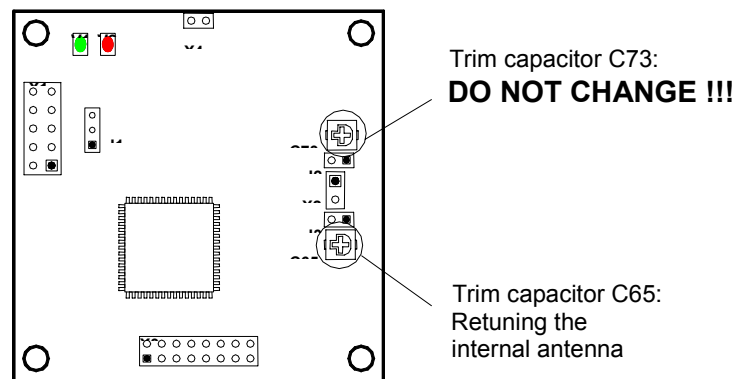


Fig.: 3.4.3-1: Trim capacitor for retuning the antenna

The integrated antenna can be retuned with the aid of an oscilloscope (bandwidth  $\geq 20$  MHz). To do this, short the GND terminal of the oscilloscope probe with the probe point and hold it over the circuit board of the ID ISC.M02. The probe then forms a measuring loop for the radiated magnetic field of the ID ISC.M02. The distance between the oscilloscope probe and the ID ISC.M02 should be between 0 and 3 cm.

Use the software command „RF-ON“ (0x6A) to turn on the HF field of the ID ISC.M02. A 13.56 MHz signal should be visible on the oscilloscope screen.

To tune the internal antenna, now set the signal amplitude of the 13.56 MHz signal to maximum using trim capacitor C65.

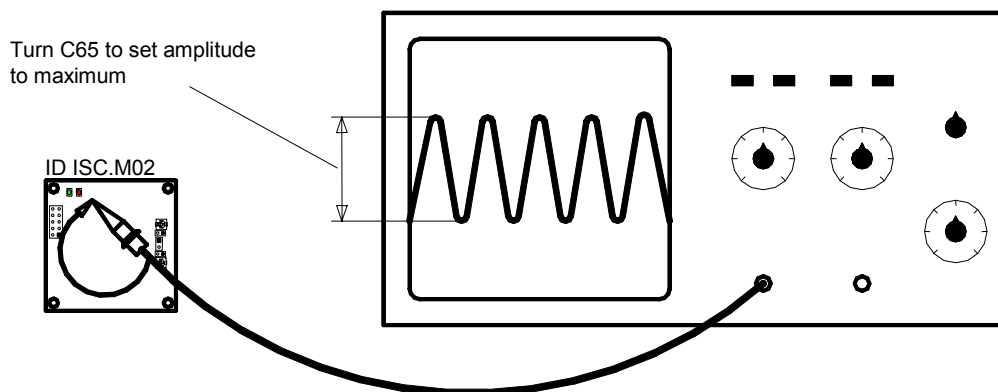


Bild 3.4.3-2: Configuration for tuning the internal antenna

Use caution when the maximum value of the signal amplitude is reached at the minimum or maximum position of the trim capacitor (Fig. 3.4.3-3). This usually means the antenna is too severely detuned by the surroundings and can no longer be fully compensated by the trim capacitor.

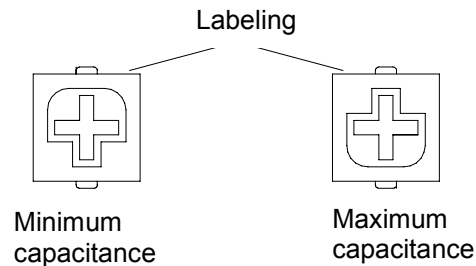


Fig. 3.4.3-3: Minimum and maximum position of the trim capacitor C65

After the antenna has been tuned, check it again for maximum range and any communication gaps.

**NOTE:**

- ***Notwithstanding the possibility of retuning the antenna as described here, the distance between the reader and the surrounding metal surfaces must be at least 3 cm. Note that even other circuit boards may act like metal objects depending on how much copper they contain.***

---

## 8.5. Installation notes

---

Be aware of the following possible environmental factors when installing an ID ISC.M02 into another device :

- Effects from nearby metal objects
  - ⇒ Detuning of the integrated antenna
  - ⇒ Impaired propagation of the antenna's magnetic field
- EMC effects on cables
  - ⇒ Impaired communication between reader and transponder
- EMC effects from magnetic fields
  - ⇒ Impaired communication between reader and transponder

---

### 8.5.1. Metallic surroundings

---

When installing an ID ISC.M02 into another device, be sure that there are no metal surfaces or objects in the direct vicinity of the reader if possible. These can detune the antenna and thus reduce the magnetic field of the integrated antenna. This will in turn result in reduced read distances for the reader.

***The distance between the reader and a metal surface should be at least 3 cm. Note that even other circuit boards may act like metal objects depending on how much copper they contain.***

If a metallic surrounding cannot be avoided, stable function should at least be ensured by keeping the distance as great as possible.

The area between the antenna and transponder as well as the area on the other side of the transponder should also be kept clear of metal parts.

Since any change in the metallic environment will result in detuning of the integrated antenna and therefore to impaired function, no moving metal parts, such as metallic fans, should be allowed in the vicinity of the reader.

---

### 8.5.2. EMC effects on cables

---

In spite of the internal EMC filters inside the reader, high levels of noise on the supply voltage can result in impairment of the communication between the reader and transponder.

When installing an ID ISC.M02 into another device, be sure therefore that a clean, noise-free power supply is used.

---

### 8.5.3. EMC effects from magnetic fields

---

Since in this type of RF-ID-Technology the communication between the reader and transponder takes place by modulation of a magnetic field, alternating magnetic fields in the vicinity of the antenna can have a negative impact on its function.

Sources of such magnetic interference fields include coils within a primary or secondary switching power supply.

When determining the position of the reader and antenna within a device, check the device for any possible sources of interference as described above. If necessary, use shielding to suppress such interference.



---

## 9. Radio Approvals

---

---

### 9.1. Europe (CE)

---

When used according to regulation, this radio equipment conforms with the basic requirements of Article 3 and the other relevant provisions of the R&TTE Guideline 1999/E6 dated March 99.



---

### 9.2. USA (FCC)

---

#### **FCC ID: PJMISCM02**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Unauthorized modifications may void the authority granted under Federal communications Commission Rules permitting the operation of this device.

This device is labeled with an FCC ID number.

If this label is not visible when installed in an end device, the outside of the device **MUST** also display a label referring to the enclosed module.

Wording on the label similar to the following shall be used:

This device contains transmitter module FCC ID PJMISCM02

At the time of this printing, the antennas listed below were the only antennas approved for use with the ID ISC.M02 module. Use of other antennas must be approved by FEIG ELECTRONIC GmbH.

Antennas approved: ID ISC.ANT100100; ID ISC.ANT4030

## 10. Technical Data

### Mechanical Data

- **Dimensions ( W x H x D )** 50mm x 50mm x 14 mm
- **Connector** 10 pol. Pin-Connector

### Electrical Data

- Supply voltage**
- Version –B** 5 V DC  $\pm$  5%
- **Power Consumption** max. 1 W
- **Operating Frequency** 13.56 MHz
- **RF Transmitting Power** 90 mW  $\pm$  2 dB
- **Antenna** Internal Antenna, 48mm x 48mm  
Optional: external Antenna
- **Interfaces**
- Version –B** RS232 – Level TTL, Data /Clock-Interface

### Functional Characteristics

- **EEPROM (for parameters)** 1 kB  
(10.000 write cycles)
- **FLASH** 64 kB  
(software update on interface possible)
- **Supported Transponders**
  - ISO15693 (I●Code SLI, Tag-It HFI, my-d vicinity, STM LRI512), I●Code 1
  - Optional:  
SAM (Security Access Module),  
e.g. for my-d vicinity
- **Optical Indicators** 2 LED's

### Ambient

- **Temperature Range**
- Operating -20°C to +70°C
- Storage -40°C to +85°C

### Applicable Norms

- **Radio Approval**
- Europe EN 300 330
- USA FCC 47 CFR Part 15
- **EMC** EN 301 489
- **Safety** EN 60950