Just start with, "Ok Google"

Hi, how can I help?

"Add Jamie's surprise party to my calendar at 8PM on Friday"

"Add guacamole to my shopping list"

"Play 80s pop music from Google Play Music"*

"Save this song to my library"

"Call Jamie"*

"Dim the lights"*

"Sing 'Happy birthday'"

"Play my 'Friday starts now' playlist"

"Next song"

"Turn it up!"

* Controlling certain devices and features in your home requires a compatible smart device. Subscriptions may be required, and additional terms, conditions, and/or charges may apply. Calling feature allows outgoing calls to most phone numbers in the United States and Canada, but does not support calls to 911.
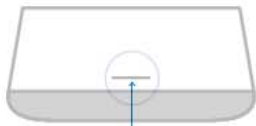
Support

If you have any questions, we're here for you 24/7.

For online help and support, visit g.co/home/help
To reach an expert, visit g.co/home/support

G133-00769-01_revA

Get to know your Google Home Max.

Google

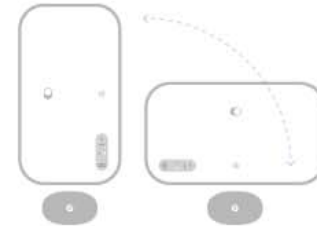## Touch controls

Tap
Play / pause

Swipe
Change volume

Status light
Factory reset button
USB-C
Aux-in

Mic switch
To turn the mic off, switch to show bright orange

Dual orientation base

Vertical vs. Horizontal
The dual orientation base connects to 2 sides of Google Home Max. The power port should always be close to the resting surface.