

HP Scanjet G4000 series



Setup and Support Guide

מדריך התקנה ותמיכה





Setup and Support Guide

English



Copyright and license

© 2006 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Trademark credits

Microsoft and Windows are registered trademarks of Microsoft Corporation.

Contents


1	Get started	4
	Step 1. Check the box contents	4
	Step 2. Install the software	5
	Step 3. Connect the TMA cable	5
	Step 4. Connect the power supply	6
	Step 5. Connect the USB cable	6
	Step 6. Test the installation	8
2	How to use the scanner	9
	Where to get additional information	9
	HP Photosmart Windows software	9
	HP Photosmart Macintosh software	10
	Front panel and accessories overview	10
	Front-panel buttons	10
	Transparent materials adapter (TMA)	10
3	Scanner installation troubleshooting	12
	Uninstall and reinstall the software	12
	Check the cables	13
4	Regulatory information and product specifications	14
	Scanner specifications	14
	Transparent materials adapter (TMA) specifications	15
	Environmental specifications	15
	Recycle and restricted material information	15
	Disposal of Waste Equipment by Users in Private Households in the European Union	16
5	Product support	17
	Accessibility	17
	HP Scanjet Web site	17
	Getting assistance	18
6	Hewlett-Packard limited warranty statement	19

1 Get started

Follow these steps to set up the scanner:

Step 1. Check the box contents

Unpack the scanner hardware. Be sure to remove any shipping tape.

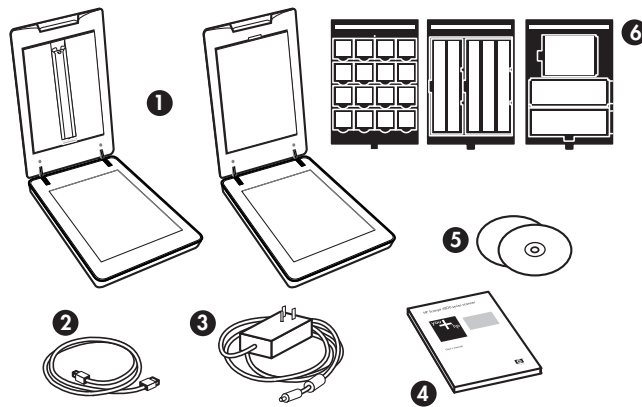


1	HP Scanjet G4010 or G4050 scanner
2	USB cable
3	Power supply
4	Setup and Support Guide (this book)
5	Scanning software CDs
6	TMA templates (HP Scanjet G4050 only)

Step 2. Install the software

-  **Caution** If you are installing the software onto a Windows computer, do not connect the USB cable to the computer yet. Install the scanning software before connecting the USB cable. If you are installing the software into a Macintosh computer, you can connect the USB cable either before or after installing the software.

1. Insert the HP Photosmart CD that came with the scanner into the computer CD drive.

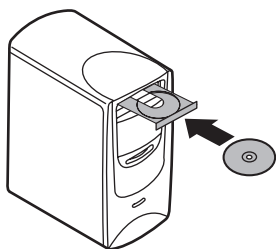


For Windows installations: Wait for the installation dialog box to display. If the installation dialog box does not display after a few moments, see *Scanner installation troubleshooting* on page 12.

For Macintosh installations: Double-click on the CD icon that appears on the desktop, and then double click on the HP Scanjet Scanner Install icon to start the installation.

2. Click **Install software** to install the scanning software. Follow the onscreen instructions to complete the scanning software installation.


Step 3. Connect the TMA cable

- Connect the TMA cable from the lid to the scanner base.

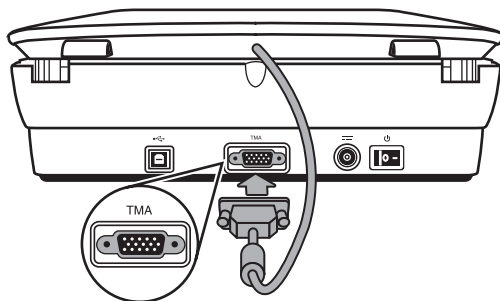

Step 4. Connect the power supply

The power supply has an attached cable that plugs into the back of the scanner.

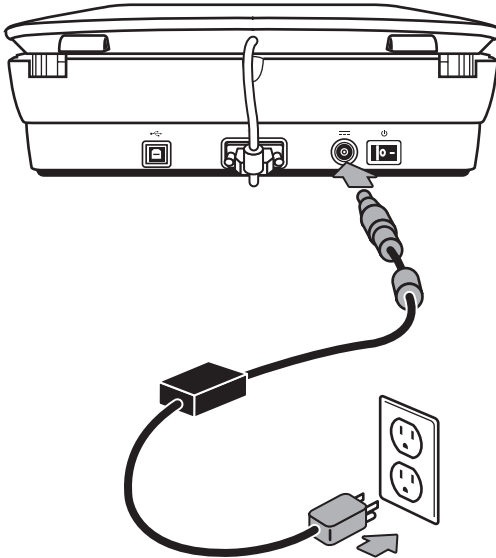

The power supply also has an AC cable that is connected to the power supply on one end and plugged into a power outlet or surge protector on the other end.

1. Plug the AC cable into the back of the power supply.
2. Plug the other end of the AC cable into a power outlet or a surge protector.


Step 5. Connect the USB cable



Caution If you are installing in a Windows environment, be sure you install the HP Photosmart software before connecting the scanner to your computer with the USB cable. See *Step 2. Install the software* on page 5. If you are installing in a Macintosh environment, you can connect the USB cable either before or after installing the software.


Use the USB cable that came with the scanner to connect the scanner to the computer.

1. Connect the square end of the cable to the scanner.

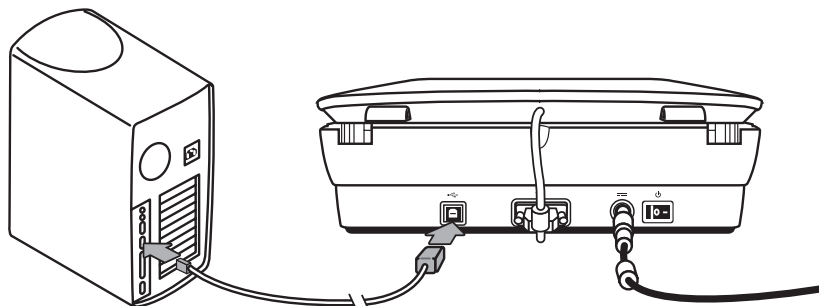

2. Connect the rectangular end of the cable to the computer.

Step 6. Test the installation

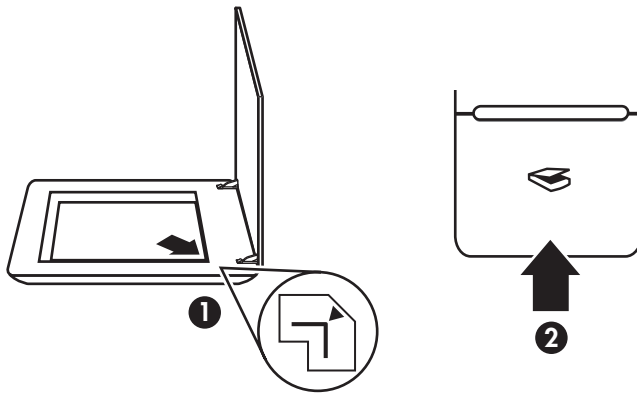

1. Place a photo or document on the scanner glass as indicated by the reference mark on the scanner.
2. Press the **Scan** (🖨️) button. If you are scanning using Windows software, the **What are you scanning?** dialog box appears. Follow the onscreen instructions to complete the scan.

If you are scanning using Macintosh software, the HP Scan Pro application opens and a preview of the scan is displayed. When the preview is accepted, the scanned image is sent to the destination that has been selected in the scanner settings.

If the **What are you scanning?** dialog box or the HP Scan Pro window does not appear, see *Scanner installation troubleshooting* on page 12.

2 How to use the scanner

This section presents an overview of the scanner and how to use it.

Where to get additional information

More information about the scanner and software can be found in the scanner Help file. If you have installed the HP Photosmart software that came with the scanner, double-click the **HP Solution Center** icon on your desktop, and then click **Help and Support**. Under the **Documentation** section, click **Product Help**.

To access an online version of the scanner user guide, click **Start**, point to **Programs** or **All Programs**, point to **HP, Scanjet, G4000 series**, and then click **User Guide**.

Macintosh users: For information about scanning procedures, open **HP Device Manager**, and then click on the question mark at the bottom of the dialog box.

HP Photosmart Windows software

When you install the HP Photosmart Windows software, two icons are added to your desktop. These icons open programs for scanning and editing your scans.

For information on how to use **HP Solution Center** and **HP Photosmart** software, see the scanner Help file. Double-click the **HP Solution Center** icon on your desktop, and then click **Help and Support**. Under the **Documentation** section, click **Product Help**.



HP Solution Center is the program that gets you started scanning pictures and documents. Use the HP Solution Center for all of the following:

- Perform scanning and copy functions
- Access help and troubleshooting information
- Access the HP Photosmart software to edit your scans
- Modify settings and preferences



HP Photosmart software is the program to use for manipulating, printing, archiving, and sharing your images after they have been scanned. You can get to the HP Photosmart software from the desktop icon or through HP Solution Center.

To start a scan:

Double-click the **HP Solution Center** icon on the desktop, click the tab for the scanner, and then click the task you want to perform.



Note If the **HP Solution Center** icon is not available on the desktop, click **Start**, point to **Programs** or **All Programs**, point to **HP**, and then click **HP Solution Center**.

HP Photosmart Macintosh software

When you install the HP scanning software on a Macintosh, two software programs are available in the Dock: HP Device Manager and HP Photosmart Studio. These programs are used for scanning and editing your scans.



HP Device Manager is the program that gets you started scanning pictures and documents. Use the Device Manager for all of the following:

- Perform scanning and copy functions
- Access help and troubleshooting information
- Access the HP Photosmart Studio to edit your scans
- Modify settings and preferences



HP Photosmart Studio is the program to use for manipulating, printing, archiving, and sharing your images after they have been scanned. You can open HP Photosmart Studio from the Dock, or from the HP Device Manager **Applications** menu.

Front panel and accessories overview

This section presents an overview of the scanner front panel and the transparent materials adapter (TMA).

Front-panel buttons

Icon	Feature name	Description
	Scan button	Scans pictures, graphics, documents, or objects.
	Scan Film button	Scans transparent positives (such as 35 mm slides) and negatives. Scanning film requires that you use the transparent materials adapter (TMA) located on the underside of the scanner lid.
	Copy button	Scans the item and sends it to the printer to make a copy.
	Scan to PDF button	Scans one or more pages and saves them as a PDF file for sharing or storing.



Note For more information on the default actions of these buttons in a Macintosh environment, open **HP Device Manager**, and then click on the question mark at the bottom of the dialog box.

Transparent materials adapter (TMA)

You can use the transparent materials adapter (TMA) to scan 35 mm slides or negatives. With the HP Scanjet G4050 TMA you can also scan medium- and large-format film. For more information about the TMA, see the scanner user guide. For

information about how to find the user guide, see *Where to get additional information* on page 9.

3 Scanner installation troubleshooting

This section contains solutions for installation and setup problems.

Uninstall and reinstall the software

An incomplete software installation could cause the scanner not to be recognized or the software not to launch correctly. Try uninstalling and then reinstalling the HP Scanning software. To reinstall the HP Scanning software, you must have the HP Photosmart software CD.

Windows environment:

1. Click **Start**, click **Settings**, and then click **Control Panel** (in Windows XP, click **Start**, and then click **Control Panel**).
2. Click **Add/Remove Programs** (in Windows XP, this is called **Add or Remove Programs**) and then select **HP Scanjet G4000 series**.
3. Click **Remove**.
4. Click **Add/Remove Programs** (in Windows XP, this is called **Add or Remove Programs**) and then select the **HP Photosmart** software.
5. Click **Remove**.
6. Unplug the scanner USB cable from the computer.
7. Reinstall the software, using the HP Photosmart software CD that came with your scanner. When you insert the CD, an installation interface launches automatically. Choose the **HP Photosmart** software to install.
8. Reconnect the scanner USB cable after the software is installed. For more information see *Step 5. Connect the USB cable* on page 6.

Macintosh environment:

1. Go to **Applications/Hewlett-Packard** and open **HP Uninstaller**.



Note You must have administrative privileges in order to uninstall the software.

2. When prompted, type your username and password. The **HP Uninstaller** window opens and displays the products that are available to be uninstalled.
3. Select the G4000 series product and click **Next**.
4. Follow the onscreen instructions to complete the uninstall process.
5. Reinstall the software, using the HP software CD that came with your scanner. After inserting the CD, click on the CD icon that appears on your desktop to begin the installation.

Check the cables

Cable type	Action
Power cable	The power cable is connected between the scanner and a power outlet. • Ensure that the power cable is securely connected between the scanner and a live electrical outlet or surge protector. • If the power cable is connected to a surge protector, ensure that the surge protector is plugged into an outlet and turned on. • Turn off the scanner power switch and turn off the computer. After 60 seconds, turn the scanner back on and then turn on the computer, in that order.
USB cable	The USB cable is connected between the scanner and the computer. • Use the cable that was included with the scanner. Another USB cable might not be compatible with the scanner. • Ensure that the USB cable is securely connected between the scanner and the computer. • If the USB cable is connected to a USB port on the front of the computer, move it to a USB port on the back of the computer. For additional USB troubleshooting information, see www.hp.com/support, select your country/region, and then use the search tool to find USB troubleshooting topics.
TMA cable	The TMA cable is connected between the TMA in the scanner lid and the scanner base. Ensure the cable is securely connected in the back of the scanner.

4 Regulatory information and product specifications

This section contains regulatory information and product specifications for the HP Scanjet G4000 series Photo Scanner and accessories.

Scanner specifications

Name	Description
Scanner type	Flatbed with transparent materials adapter (TMA)
Size	G4010: 303 mm x 5088 mm x 98 mm (11.93 x 20.00 x 3.86 inches) G4050: 303 mm x 5088 mm x 108 mm (11.93 x 20.00 x 4.25 inches)
Weight	G4010: 4.4 kg (9.6 lbs) G4050: 5.3 kg (11.6 lbs)
Scanning element	Charged-coupled device
Interface	USB 2.0 Hi-Speed
Hardware resolution	4800 x 9600 dpi hardware resolution
Selectable resolution	12 dpi to 999,999 enhanced dpi at 100 percent scaling
AC line voltage	100-120 V 60 Hz – North America 200-240 V 50 Hz – Continental Europe, United Kingdom, Australia 100-240 V 50 Hz/60 Hz – Rest of the world
Regulatory information	Regulatory model identification number: For regulatory identification purposes, your product is assigned a Regulatory Model Number. The Regulatory Model Number for your product is FCLSD-0605. This regulatory number should not be confused with the product name (HP Scanjet G4010 or G4050) or product numbers (L1956A and L1957A).
	Energy usage drops significantly while in ENERGY STAR® mode, which saves natural resources, and saves money without affecting the high performance of this product. This product qualifies for ENERGY STAR (MOU v. 1.0), which is a voluntary program established to encourage the development of energy-efficient office products.

Name	Description
	ENERGY STAR is a U.S. registered service mark of the U.S. EPA. As an ENERGY STAR partner, HP has determined that this product meets ENERGY STAR guidelines for energy efficiency. For more information on ENERGY STAR guidelines, go to the following Web site: www.energystar.gov

Transparent materials adapter (TMA) specifications

Name	Description
Media types	G4010: Up to five 35 mm slides or six 35 mm negative frames G4050: Up to sixteen 35 mm slides, thirty 35 mm negative frames, up to two medium format film frames (120 roll film), or one large format film frame (220 roll film).
Power requirements	12 Volts/400 mA max
Power consumption and regulatory information	For power consumption data, information on power supplies, and regulatory information, see the regulatory_supplement.htm file on the HP Photosmart software CD.

Environmental specifications

Name	Description
Temperature	Operating the scanner and TMA: 10° to 35°C (50° to 95°F)
	Storage: -40° to 60°C (-40° to 140°F)
Relative humidity	Operating the scanner and TMA: 15% to 80% noncondensing 10° to 35°C (50° to 95°F)
	Storage: up to 90% noncondensing at 0° to 60°C (32° to 140°F)

Recycle and restricted material information

Recycling

HP offers an increasing number of product return and recycling programs in many countries/regions, and partners with some of the largest electronics recycling centers throughout the world. HP conserves resources by reselling some of its most popular

products. For more information regarding recycling of HP products, please visit: www.hp.com/hpinfo/globalcitizenship/environment/recycle/

Product restricted material

This HP product contains the following material that might require special handling at end-of-life: Mercury in the scanner fluorescent lamp and transparent materials adapter (< 5 mg).

For recycling information, contact www.hp.com/go/recycle, your local authorities, or the Electronic Industries Alliance at www.eiae.org.

Disposal of Waste Equipment by Users in Private Households in the European Union



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service, or the shop where you purchased the product.

5 Product support

This section describes the options for product support.

Accessibility

The following accessibility options are available on this scanner:

Windows environment:

- To prevent buttons from being accidentally pushed, you can use the Button Disable Utility to disable the buttons. You can use the same utility to re-enable the buttons.
For more information about the Button Disable Utility, see the scanner User Guide.
- The scanner User Guide is also available in a Help format that is readable by most screen readers. To find this file, double-click the **HP Solution Center** icon on your desktop, and then click **Help and Support**. Under the **Documentation** section, click **Product Help**.

Macintosh environment:

- To prevent buttons from being accidentally pushed, use the Button Disable Utility to disable the buttons. You can use the same utility to re-enable the buttons.
For more information about the Button Disable Utility, see the HP Scanjet Scanner Help.
- The HP Scanjet Scanner Help is available in a format that is readable by most screen readers. To find this file, open **HP Device Manager**, and then click on the question mark at the bottom of the dialog box.

Customers with disabilities can get help by visiting www.hp.com/hpinfo/community/accessibility/prodserv/ (English only).

HP Scanjet Web site

Visit www.hp.com and select your country/language at the top of the page. On the country page, select scanners from the list of products. Use this site for a variety of information:

- Find solutions to technical issues.
- Learn tips for scanning more effectively and creatively.
- Update your HP drivers and software.
- Register your product.
- Subscribe to newsletters, driver and software updates, and support alerts.
- Purchase HP supplies and accessories.

Getting assistance

In order to get the best from your HP product, please consult the following standard HP support offerings:

1. Please consult the product documentation that came with the product.
 - Review the troubleshooting section or electronic Help of this manual/CD.
 - Review the electronic Help section within the software.
2. Visit the **HP online support** at **www.hp.com/support** or contact your point of purchase.

HP online support is available to all HP customers. It is the fastest source for up-to-date product information and expert assistance, including the following features:

 - Fast E-mail access to qualified online support specialists
 - Software and driver updates for your product
 - Valuable product and troubleshooting information for technical issues
 - Proactive product updates, support alerts, and HP newsletters (available when you register your product)
3. **HP support by phone**
 - Support options and fees vary by product, country and language.
 - Fees and policies are subject to change without notice. Please check the Web site **www.hp.com/support** for the latest information.
4. **Post-warranty period**

After the limited warranty period, help is available online at **www.hp.com/support**.
5. **Extending or upgrading your warranty**

If you would like to extend or upgrade the product's warranty, please contact your point of purchase or check the HP Care Pack Services at **www.hp.com/support**.
6. If you already purchased an **HP Care Pack Service**, please check the support conditions in your contract.

6 Hewlett-Packard limited warranty statement

The following information outlines the warranty information for this product.

Product	Duration of limited warranty
HP Scanjet G4000 series scanner	1 year

A. Extent of limited warranty

1. Hewlett-Packard (HP) warrants to the end-user customer (Customer) that each HP product specified above (Product) shall be free from defects in material and workmanship for the period specified above. The warranty period begins on the date of purchase by Customer.
2. For each software product, HP's limited warranty applies only to a failure to execute programming instructions. HP does not warrant that the operation of any Product will be uninterrupted or error free.
3. HP's limited warranty covers only those defects that arise as a result of normal use of a Product, and does not cover any other problems, including those that arise as a result of:
 - a. Improper use, maintenance, storage, handling, or modification;
 - b. Software, media, parts, accessories, supplies, or power adapters or sources not provided or supported by HP; or,
 - c. Operation or other conditions outside a Product's specifications.
4. If HP receives, during the applicable warranty period, notice of a defect in a Product, HP shall at its option either replace or repair the defective Product.
5. If HP cannot replace or repair a defective Product that is covered by HP's limited warranty, HP may, within a reasonable time after being notified of the defect, provide either another product similar in performance or a refund of the purchase price prorated based on usage and other appropriate factors.
6. HP shall have no obligation to replace, repair, or refund until Customer returns the defective Product to HP and provides a valid proof of purchase.
7. Any replacement product may be either new or like-new, provided it has functionality at least equal to that of the Product being replaced.
8. A Product may contain remanufactured parts, components, or materials equivalent to new in performance.
9. HP's limited warranty is valid in any country or locality where HP has a support presence for the Product and has marketed the Product. The level of warranty service may vary according to local standards. Upgraded warranty services, such as next day exchange, on-site service, and accident protection, may be purchased from HP.

B. Limitations of Warranty

TO THE EXTENT ALLOWED BY LOCAL LAW, NEITHER HP NOR ITS THIRD PARTY SUPPLIERS MAKE ANY OTHER WARRANTY OR CONDITION OF ANY

KIND, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO A PRODUCT, AND SPECIFICALLY DISCLAIM THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND FITNESS FOR A PARTICULAR PURPOSE.

C. Limitations of Liability

1. To the extent allowed by local law, the remedies provided in this Limited Warranty Statement (LWS) are Customer's sole and exclusive remedies.
2. TO THE EXTENT ALLOWED BY LOCAL LAW, EXCEPT FOR THE OBLIGATIONS SPECIFICALLY SET FORTH IN THIS LWS, IN NO EVENT SHALL HP OR ITS THIRD PARTY SUPPLIERS BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY AND WHETHER ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

D. Local Law

1. This LWS gives Customer specific legal rights. Customer may also have other rights that vary from state to state in the United States, from province to province in Canada, and from country to country elsewhere in the world.
2. To the extent this LWS is inconsistent with local law, this LWS shall be deemed modified to be consistent with local law. Under local law, certain disclaimers and limitations of this LWS may not apply to Customer. For example, the federal government of the United States, some states in the United States, and some governments outside the United States (including provinces in Canada), may:
 - a. Grant Customer additional warranty rights;
 - b. Preclude the disclaimers and limitations in this LWS from limiting the statutory rights of a consumer (e.g., the United Kingdom);
 - c. Otherwise restrict the ability of a manufacturer to enforce such disclaimers or limitations;
 - d. Specify the duration of implied warranties that the manufacturer cannot disclaim; or,
 - e. Disallow limitations on the duration of implied warranties
3. Customer may have additional statutory rights based on its purchase agreement. Those rights are not in any way affected by this LWS.
4. For consumer transactions in the United States, any implied warranties imposed by law are limited in duration to the express warranty period.
5. FOR CONSUMER TRANSACTIONS IN AUSTRALIA AND NEW ZEALAND, THE TERMS IN THIS LWS, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT, OR MODIFY, AND ARE IN ADDITION TO, THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF A PRODUCT TO SUCH CUSTOMERS.

You may have additional statutory rights against the seller based on your purchase agreement. Those rights are not in any way affected by this HP Limited Warranty.

You will find on the inside front cover of this book the names and address of the HP entity responsible for the performance of the HP Limited Warranty in your country.



ג. הגבלת חבות

1. ככל שהחוק המקומי מתיר זאת, הסעדים המצוינים בכתב אחריות מוגבלת זה הם הסעדים היחידים והבלעדיים של הלקוח.
2. במידה המותרת על פי החוק המקומי, להוציא התחייבויות שנקבעו מפורשות בכתב אחריות מוגבלת זו, בשום מקרה לא יישאו HP או ספקי צד שלישי מטעמה, באחריות לנזק ישיר, עקיף, מיוחד, מקרי או תוצאתי, בין אם מבוסס על חוזה, דיני נזיקין או כל תיאוריה משפטית אחרת, גם אם הוזהרו בדבר אפשרות לנזק כזה.

ד. חוק מקומי

1. כתב אחריות מוגבלת זה מעניק ללקוח זכויות חוקיות ספציפיות. כמו כן ייתכנו זכויות אחרות בהתאם למדינות השונות (ארה"ב), לפרובינציות השונות (קנדה) או לארצות השונות בעולם.
 2. במקרה של התנגשות בין כתב אחריות מוגבלת זה לבין החוק המקומי, ייחשב כתב האחריות האמור כאילו תוקן כך שיעלה בקנה אחד עם החוק המקומי. במסגרת החוק המקומי, ייתכן שחלק מההגבלות והסייגים הכלולים בכתב אחריות מוגבלת זה לא יחולו על הלקוח. לדוגמה, הממשלה הפדרלית של ארצות הברית, מדינות מסוימות בארצות הברית ומדינות מסוימות מחוץ לארצות הברית (כולל חלק מהמחוזות בקנדה) עשויות:
 - א. להעניק ללקוח זכויות אחריות נוספות;
 - ב. למנוע מכתב הוויתור וההגבלות שבכתב אחריות מוגבלת זה מלהגביל את הזכויות החקוקות של לקוח (למשל, הממלכה המאוחדת);
 - ג. להגביל בדרכים אחרות את יכולתו של יצרן לאכוף כתבי ויתור והגבלות כאלה;
 - ד. להגדיר את משך האחריות מכללא שהיצרן אינו יכול להתנער ממנה; או
 - ה. לאסור הגבלות על משך האחריות מכללא
 3. ייתכן שעומדות ללקוח זכויות נוספות על פי החוק בהתאם להסכם הרכישה שלו. אין באמור בכתב אחריות מוגבלת זו כדי להשפיע על הזכויות הללו בשום צורה ואופן.
 4. עבור עסקאות עם צרכנים בארצות הברית, כל אחריות מכללא המוטלת על ידי החוק מוגבלת לתקופת האחריות המפורשת.
 5. עבור עסקאות עם צרכנים באוסטרליה וניו זילנד, אין התנאים המצוינים בכתב אחריות מוגבלת זה, אלא במילה המותרת על פי חוק, מחריגים, מגבילים או משנים והם באים בנוסף לזכויות החקוקות המחייבות החלות על מכירת מוצרים לצרכנים כאלה.
- ייתכן גם שמוענקות לך זכויות משפטיות אל מול המוכר על בסיס הסכם הרכישה. זכויות אלה אינן מושפעות בשום דרך מהאחריות המוגבלת של HP.
- בצד הפנימי של כרית החוברת תמצא שמות וכתובות של הישות האחראית מטעם HP על יישום האחריות המוגבלת של HP בארץ מגוריך.

כתב אחריות מוגבלת של Hewlett-Packard

המידע הבא מתאר את האחריות החלה על מוצר זה.

מוצר	תקופת האחריות המוגבלת
סורק HP Scanjet G4000 series	שנה אחת

א. היקף האחריות המוגבלת

1. HP (Hewlett-Packard) מתחייבת כלפי משתמש הקצה (הלקוח) כי כל מוצר של HP שצוין לעיל (המוצר) יהיה נקי מליקויים בחומרים ובעבודה למשך התקופה שצוינה לעיל. תחילת תקופת האחריות בתאריך הרכישה על ידי הלקוח.
2. עבור כל מוצרי התוכנה, האחריות המוגבלת של HP תחול רק על אי-ביצוע הוראות תכנות. חברת HP אינה מתחייבת כי פעולת מוצרי HP תהיה רציפה או נטולת שגיאות.
3. האחריות המוגבלת של HP מכסה רק את הליקויים המתעוררים כתוצאה משימוש רגיל במוצר, ואינה מכסה כל בעיה אחרת, לרבות כאלה המתעוררות כתוצאה מהדברים הבאים:
 - א. שימוש, תחזוקה, אחסון, טיפול או ביצוע שינויים באופן שאינו נאות;
 - ב. שימוש בתוכנה, חומרי הדפסה, חלקים, אבזרים, חומרים מתכלים, מתאמים חשמליים או מקורות כוח שאינם מטעם HP או שאינם נתמכים על ידה; או,
 - ג. הפעלה או מצבים אחרים החורגים ממפרט המוצר.
4. אם תקבל HP הודעה על קיומו של פגם במוצר במהלך תקופת האחריות, תחליף HP או תתקן את המוצר הפגום על פי שיקול דעתה.
5. אם HP לא תוכל להחליף או לתקן מוצר פגום שמכוסה במסגרת האחריות המוגבלת של HP, עשויה HP לספק, בתוך פרק זמן סביר לאחר שקיבלה הודעה על הפגם, מוצר אחר דומה בעל ביצועים דומים, או להחזיר חלק יחסי של מחיר הרכישה, בהתאם לשימוש ולגורמים מתאימים אחרים.
6. HP אינה מחויבת להחלפה, תיקון או החזר כספי עד אשר יחזיר לה הלקוח את המוצר הפגום ויספק הוכחה תקפה לרכישתו.
7. כל מוצר חלופי שיסופק יהיה חדש או כמו חדש, ויכיל פונקציונליות שוות ערך, אם לא יותר, לזו של המוצר המוחלף.
8. המוצר עשוי לכלול חלקים, רכיבים או חומרים שעובדו מחדש, בעלי רמת ביצועים הזזה לזו של מוצר חדש.
9. האחריות המוגבלת שמעניקה HP תקפה בכל מדינה או אזור שיש בהם מערך תמיכה של HP עבור המוצר ואשר המוצר שווק בהן. רמת השירות שתקבל במסגרת האחריות עשויה להשתנות, בהתאם לסטנדרטים המקומיים. ניתן לרכוש מ-HP שירותי אחריות משודרגים, כגון החלפה ביום הבא, שירות באתר הלקוח והגנה מפני תאונות.

ב. הגבלת אחריות

במידה המותרת על פי החוק המקומי, לא יציעו HP או ספקי צד שלישי מטעמה כל אחריות אחרת או תנאי מכל סוג שהוא, מפורשות או מכללא, באשר למוצר, ובאופן מיוחד יתנערו מאחריות מכללא או מתנאי סחירות, איכות משביעת רצון והתאמה למטרה מסוימת.

קבלת סיוע

על מנת להפיק את המיטב ממוצר HP שברשותך, עיין בהצעות התמיכה הרגילות הבאות של HP:

1. אנא עיין בתיעוד המוצר המצורף למוצר.
 - עיין בסעיף המוקדש לפתרון בעיות או בעזרה האלקטרונית של מדריך/תקליטור זה.
 - עיין בסעיף האלקטרוני Help (עזרה) בתוכנה.
2. בקר באתר **התמיכה המקוונת של HP** בכתובת www.hp.com/support או פנה לנקודת המכירה.

התמיכה המקוונת של HP זמינה עבור כל לקוחות HP. זהו המקור המהיר ביותר עבור מידע מוצר מעודכן וסיוע מידי מומחים, הכולל את המאפיינים הבאים:

 - גישה מהירה בדואר אלקטרוני למומחים מיומנים של תמיכה טכנית מקוונת
 - עדכוני תוכנות ומנהלי התקן עבור המוצר שברשותך
 - מידע ערכי אודות המוצר ופתרון בעיות בנוגע לבעיות טכניות
 - עדכוני מנע עבור המוצר, התראות תמיכה ועלוני חדשות של HP (זמינים בעת רישום המוצר)
3. **תמיכה טלפונית של HP**
 - אפשרויות התמיכה והתעריפים משתנים בהתאם למוצר, למדינה/אזור ולשפה.
 - התעריפים וקווי המדיניות נתונים לשינוי ללא הודעה. נא חפש באתר האינטרנט www.hp.com/support את המידע המעודכן ביותר.
4. **התקופה שלאחר תום האחריות**

לאחר תקופת האחריות המוגבלת, העזרה זמינה באופן מקוון בכתובת www.hp.com/support.
5. **הרחבה או שדרוג של האחריות**

אם ברצונך להאריך או לשדרג את האחריות על המוצר, פנה לנקודת המכירה או בדוק את הצעות HP Care Pack בכתובת www.hp.com/support.
6. אם כבר רכשת שירות של **HP Care Pack Service**, בדוק את תנאי התמיכה בחוזה שלך.

5 תמיכה במוצר

סעיף זה מתאר את אפשרויות התמיכה במוצר.

נגישות

בסורק קיימות אפשרויות הנגישות הבאות:

בביט Windows:

- כדי למנוע מלחצנים להילחץ בטעות, באפשרותך להשתמש ב-Button Disable Utility (כלי שירות להשבתת לחצנים) לביטול פעולת הלחצנים. באפשרותך להשתמש באותו כלי שירות כדי להפעיל מחדש את פעולת הלחצנים.
- לקבלת מידע נוסף אודות Button Disable Utility (כלי שירות להשבתת לחצנים), עיין במדריך למשתמש של הסורק.
- המדריך למשתמש של הסורק זמין גם בתבנית עזרה שרוב קוראי המסך יכולים לקרוא. כדי לאתר קובץ זה, לחץ פעמיים על סמל **מרכז הפתרונות של HP** בשולחן העבודה ולאחר מכן לחץ על **Help and Support (עזרה ותמיכה)**. תחת הסעיף **Documentation (תיעוד)**, לחץ על **Product Help (עזרה עבור המוצר)**.

בביט Macintosh:

- כדי למנוע לחיצה לא מכוונת על לחצנים, השתמש ב-Button Disable Utility (כלי שירות להשבתת לחצנים) לביטול פעולת הלחצנים. באפשרותך להשתמש באותו כלי שירות כדי להפעיל מחדש את פעולת הלחצנים.
- לקבלת מידע נוסף אודות Button Disable Utility (כלי שירות להשבתת לחצנים), עיין בעזרה של HP Scanjet Scanner.
- העזרה של HP Scanjet Scanner זמינה בתבנית הניתנת לקריאה על-ידי רוב קוראי המסך. כדי לאתר קובץ זה, פתח את **HP Device Manager** ולאחר מכן לחץ על סימן השאלה בתחתית תיבת הדו-שיח.

לקוחות עם מוגבלויות יכולים לקבל עזרה על-ידי ביקור באתר

www.hp.com/hpinfo/community/accessibility/prodserv/ (באנגלית בלבד).

אתר האינטרנט של HP Scanjet

בקר באתר www.hp.com ובחר את המדינה/שפה שלך בראש הדף. בדף המדינות/אזורים, בחר סורקים מרשימת המוצרים. השתמש באתר זה לקבלת מידע מגוון:

- מציאת פתרונות לבעיות טכניות.
- לקבל עצות לסריקה יעילה ויצירתית יותר.
- עדכון מנהלי ההתקן והתוכנות של HP שברשותך.
- לרשום את המוצר שברשותך.
- להירשם כמנוי על עלוני חדשות, עדכוני תוכנה ומנהל התקן, וכן יידוע לגבי אפשרויות תמיכה.
- רכישת חומרים מתכלים ואביזרים של HP.

השלכת פסולת ציוד על-ידי משקי בית פרטיים באיחוד האירופי



סמל זה, המופיע על המוצר או על אריזתו, מציין כי אין להשליך מוצר זה ביחד עם האשפה הביתית הרגילה. במקום זאת, מחובתך להעביר את הציוד המשומש לנקודת איסוף ייעודית, לצורך מיחזור של ציוד חשמלי ואלקטרוני משומש. האיסוף הנפרד ומיחזור פסולת הציוד בזמן ההשלכה יסייעו בשימור משאבים טבעיים, ויבטיחו שהמיחזור יתבצע באופן שמגן על בריאות האוכלוסייה ועל הסביבה. לקבלת מידע נוסף על מקום שבו תוכל להשליך את פסולת הציוד לצורך מיחזור, פנה למשרד העירייה המקומיים, לחברה המספקת שירותי איסוף פסולת או לחנות שבה רכשת את המוצר.

מפרט מתאם החומרים השקופים (TMA)

שם	תיאור
סוגי חומרי הדפסה	G4010: עד חמש שקופיות 35 מ"מ או שש מסגרות תשליל של 35 מ"מ.
	G4050: עד שש-עשרה שקופיות 35 מ"מ, שלוש מסגרות תשליל של 35 מ"מ, עד שתי מסגרות סרט צילום בתבנית בינונית (סרט צילום של 120 תמונות) או מסגרת אחת של סרט צילום בתבנית גדולה (סרט צילום של 220 תמונות).
דרישות הספק	12 וולט/400 מיליאמפר (מקסימום)
צריכת חשמל ומידע רגולטורי	לקבלת נתוני צריכת חשמל, מידע על אספקת חשמל ומידע בנושאי תקינה, עיין בקובץ regulatory_supplement.htm בתקליטור התוכנה HP Photosmart.

מפרט סביבת העבודה

שם	תיאור
טמפרטורה	הפעלת הסורק ומתאם החומרים השקופים: 10 עד 35 מעלות צלזיוס
	אחסון: 40- עד 60 מעלות צלזיוס
לחות יחסית	הפעלת הסורק ומתאם החומרים השקופים: 15 עד 80 אחוזי לחות ללא עיבוי בטמפרטורה של 10 עד 35 מעלות צלזיוס
	אחסון: עד 90% לחות ללא עיבוי בטמפרטורה של 0° עד 60°C

מידע אודות מיחזור וחומרים מוגבלים

מיחזור

HP מציעה מספר הולך וגדל של תוכניות להחזרה ומיחזור של מוצרים בארצות/אזורים רבים, ופועלת בשותפות עם כמה מהמרכזים הגדולים ביותר למיחזור ציוד אלקטרוני ברחבי העולם. HP חוסכת משאבים באמצעות מכירה חוזרת של מהמוצרים הפופולריים ביותר שלה. לקבלת מידע נוסף בנוגע למיחזור המוצרים של HP, נא בקר בכתובת: www.hp.com/hpinfo/globalcitizenship/environment/recycle

חומרים מוגבלים במוצר

מוצר זה של HP מכיל את החומרים הבאים שעשויים לחייב טיפול מיוחד עם תום השימוש בהם: כספית בנורת הפלואורסצנט של הסורק ובמתאם החומרים השקופים (> 5 מ"ג). לקבלת מידע בדבר מיחזור, בקר באתר שכתובתו www.hp.com/go/recycle, פנה לרשויות המקומיות, או ל-Electronic Industries Alliance בכתובת www.eiae.org.

4 מידע רגולטורי ומפרט המוצר

סעיף זה כולל פרטי תקינה ומפרט מוצר לגבי סורק הצילומים HP Scanjet G4000 series והאבזרים הנלווים.

מפרט הסורק

שם	תיאור
סוג הסורק	סורק שטוח עם מתאם חומרים שקופים
גודל	303 G4010: מ"מ 5088 x מ"מ 98 x מ"מ 303 303 G4050: מ"מ 5088 x מ"מ 108 x מ"מ 303
משקל	4.4 G4010: ק"ג 5.3 G4050: ק"ג
רכיב הסריקה	התקן צמוד מטען
ממשק	כבל USB 2.0 Hi-Speed (מהירות גבוהה)
רזולוציית חומרה	רזולוציית חומרה: 4800 x 9600 dpi
רזולוציית שניתן לבחור	12 dpi עד 999,999 dpi משופר בשינוי קנה מידה של 100 אחוזים
מתח הזנה ז"ח	100-120 וולט, 60 הרץ - צפון אמריקה 240-200 וולט, 50 הרץ - מערב אירופה, בריטניה, אוסטרליה 240-100 וולט, 50/60 הרץ - שאר העולם
מידע רגולטורי	מספר זיהוי דגם רגולטורי: למטרת זיהוי רגולטורי, למוצר שברשותך מוקצה מספר דגם רגולטורי. מספר הדגם לתקינה שהוקצה למוצר שלך הוא FCLSD-0605. אין לבלבל בין מספר התקינה של הדגם לבין שם המוצר (HP Scanjet G4010 או G4050) או מספר המוצר (L1957A ו-L1956A).
	ניצול האנרגיה פוחת במידה ניכרת בעת שימוש במצב ENERGY STAR, התורם לחיסכון במשאבים טבעיים ובכסף - וזאת מבלי לפגוע ברמת הביצועים של המוצר. מוצר זה עומד בדרישות ENERGY STAR® (גרסה 1.0) - תוכנית על בסיס התנדבותי, שמטרתה לעודד פיתוח מוצרים משרדיים המנצלים אנרגיה ביעילות. Energy Star סימן שירות רשום ב-EPA בארה"ב. כשותפה לתוכנית ENERGY STAR, קבעה חברת HP כי מוצר זה עומד בהנחיות התוכנית לחיסכון באנרגיה. לקבלת מידע נוסף על הנחיות Energy Star עבור אל אתר האינטרנט שכתובתו: www.energystar.gov

בדיקת הכבלים

סוג כבל	הפעולה
כבל חשמל	כבל החשמל מחובר בין הסורק לבין שקע חשמל. • ודא שכבל החשמל מחובר היטב בין הסורק לבין שקע חשמל פעיל או מייצב מתח. • אם כבל החשמל מחובר למייצב מתח, ודא שמייצב המתח מחובר לשקע ומופעל. • כבה את מתג ההפעלה של הסורק וכבה את המחשב. לאחר 60 שניות, הדלק שוב את הסורק ואת המחשב, לפי סדר זה.
כבל USB	כבל ה-USB מחובר בין הסורק לבין המחשב. • השתמש בכבל שצורף לסורק. כבל USB אחר עלול שלא להיות תואם לסורק. • ודא שכבל ה-USB מחובר היטב בין הסורק למחשב. • אם כבל ה-USB מחובר ליציאת USB בחלקו הקדמי של המחשב, העבר אותו ליציאת USB שבחלקו האחורי של המחשב. למידע נוסף על פתרון בעיות USB, ראה www.hp.com/support, בחר במדינה או באזור שבהם אתה שוהה, ולאחר מכן השתמש בכלי החיפוש כדי למצוא נושאי פתרון בעיות USB.
כבל מתאם החומרים השקופים	כבל מתאם החומרים השקופים מחובר בין מתאם החומרים השקופים במכסה הסורק לבין בסיס הסורק. ודא שהכבל מחובר כראוי בגב הסורק.

3 פתרון בעיות בהתקנת הסורק

סעיף זה מכיל פתרונות לבעיות בהתקנה ובהגדרה.

הסרה והתקנה מחדש של התוכנה

התקנה לא מלאה של התוכנה עלולה לגרום לבעיות בזיהוי הסורק או להפעלה לא תקינה של התוכנה. נסה להסיר את תוכנת HP Scanning ולהתקין אותה מחדש. כדי להתקין מחדש את התוכנה HP Scanning, דרוש לך תקליטור התוכנה HP Photosmart.

ביבת Windows:

1. לחץ על **התחל**, לחץ על **הגדרות** ולאחר מכן לחץ על **לוח הבקרה** (ב-Windows XP, לחץ על **התחל** ולאחר מכן לחץ על **לוח הבקרה**).
2. לחץ על **הוספה/הסרה של תוכניות** (ב-Windows XP, פריט זה נקרא **הוספה או הסרה של תוכניות**) ולאחר מכן בחר את **HP Scanjet G4000 series**.
3. לחץ על **הסר**.
4. לחץ על **הוספה/הסרה של תוכניות** (ב-Windows XP, פריט זה נקרא **הוספה או הסרה של תוכניות**) ולאחר מכן בחר את התוכנה **HP Photosmart**.
5. לחץ על **הסר**.
6. נתק את כבל ה-USB של הסורק מהמחשב.
7. התקן מחדש את התוכנה באמצעות תקליטור התוכנה HP Photosmart המצורף לסורק. בעת הכנסת התקליטור, ממשק התקנה מופעל באופן אוטומטי. בחר להתקין את התוכנה **HP Photosmart**.
8. חבר מחדש את כבל ה-USB של הסורק לאחר התקנת התוכנה. לקבלת מידע נוסף, ראה "שלב 5. חבר את כבל ה-USB" בעמוד 6.

ביבת Macintosh:

1. עבור אל **Applications/Hewlett-Packard** ופתח את **HP Uninstaller**.

הערה  דרושות לך הרשאות מנהל כדי להסיר את התוכנה.

2. כשתבקש לכך, הזן את שם המשתמש והסיסמה שלך. חלון **HP Uninstaller** נפתח ומציג את המוצרים הזמינים להסרה.
3. בחר את המוצר G4000 series ולחץ על **Next (הבא)**.
4. בצע את ההוראות שעל המסך כדי להשלים את תהליך הסרת ההתקנה.
5. התקן מחדש את התוכנה באמצעות תקליטור התוכנה של HP המצורף לסורק. לאחר הכנסת התקליטור, לחץ על סמל התקליטור שמופיע בשולחן העבודה כדי להתחיל בהתקנה.

התוכנה HP Photosmart Macintosh

בעת התקנת תוכנת הסריקה של HP במחשב Macintosh, שתי תוכניות זמינות ב-Dock: HP Photosmart Studio ו-HP Device Manager. תוכניות אלה משמשות לסריקה ועריכה של הסריקות.

התוכנה HP Device Manager היא נקודת המוצא לסריקה של תמונות ומסמכים. השתמש במנהל ההתקנים עבור כל הפעולות הבאות:



- פונקציות של סריקה והעתקה
- קבלת גישה למערכת העזרה ולמידע בנושא פתרון בעיות
- גישה לתוכנה HP Photosmart Studio ועריכת התוכן שנסרק
- שינוי הגדרות והעדפות

באמצעות התוכנה HP Photosmart Studio ניתן לטפל בתמונות, להדפיס אותן, לשמור אותן בארכיון ולשתף אותן לאחר הסריקה. באפשרותך לפתוח את HP Photosmart Studio מתוך Dock, או מתוך תפריט Applications (יישומים) של HP Device Manager.



הלוח הקדמי והאבזרים - סקירה כללית

סעיף זה מציג מבט כללי על לחצני הסורק ועל מתאם החומרים השקופים.

לחצני הלוח הקדמי

סמל	שם המאפיין	תיאור
	לחצן סריקה	סריקת תמונות, גרפיקה, מסמכים או אובייקטים.
	לחצן סריקת סרט צילום	סריקת פוזיטיבים שקופים (כגון שקופיות 35 מ"מ) ונגטיבים (תשלילים). סריקת סרטי צילום מחייבת שימוש במתאם החומרים השקופים, הממוקם בתחתית מכסה הסורק.
	לחצן העתקה	סריקת הפריט ושליחתו למדפסת לצורך יצירת עותק.
	לחצן סריקה אל PDF	סריקת עמוד אחד או יותר ושמירתם כקובץ PDF לשיתוף או לאחסון.

הערה: לפרטים נוספים על פעולות ברירת המחדל של לחצנים אלה בסביבת Macintosh, פתח את **HP Device Manager** ולחץ על סמל סימן השאלה שבתחתית תיבת הדו-שיח.



מתאם חומרים שקופים

באפשרותך להשתמש במתאם החומרים השקופים כדי לסרוק שקופיות או תשלילים של 35 מ"מ. בעזרת מתאם החומרים השקופים (TMA) ב-HP Scanjet G4050, ניתן לסרוק סרט צילום גם בתבנית בינונית וגדולה. לקבלת מידע נוסף על מתאם החומרים השקופים, עיין במדריך למשתמש של הסורק. לקבלת מידע כיצד ניתן למצוא את המדריך למשתמש, ראה "קבלת מידע נוסף" בעמוד 9.

2 אופן השימוש בסורק

סעיף זה מציג סקירה אודות הסורק ואופן השימוש בו.

קבלת מידע נוסף

מידע נוסף אודות הסורק והתוכנה ניתן למצוא בקובץ העזרה של הסורק. אם התקנת את תוכנת HP Photosmart שצורפה לסורק, לחץ פעמיים על סמל **מרכז הפתרונות של HP** בשולחן העבודה ולאחר מכן לחץ על **Help and Support** (עזרה ותמיכה). תחת הסעיף **Documentation** (תיעוד), לחץ על **Product Help** (עזרה עבור המוצר).

לקבלת גישה לגירסה מקוונת של המדריך למשתמש, לחץ על **התחל**, הצבע על **תוכניות** או על **כל התוכניות**, הצבע על **HP, Scanjet, G4000 series** ולאחר מכן לחץ על **המדריך למשתמש**.

משתמשי Macintosh: לקבלת מידע על נהלי סריקה, פתח את **HP Device Manager** ולאחר מכן לחץ על סימן השאלה בתחתית תיבת הדו-שיח.

התוכנה HP Photosmart Windows

בעת התקנת תוכנת HP Photosmart Windows, נוספים שני סמלים לשולחן העבודה. סמלים אלה פותחים תוכניות לסריקה ולעריכה של סריקות.

לקבלת מידע על אופן השימוש ב**מרכז הפתרונות של HP** ובתוכנת **HP Photosmart**, עיין בקובץ העזרה של הסורק. לחץ פעמיים על סמל **מרכז הפתרונות של HP** בשולחן העבודה ולאחר מכן לחץ על **Help and Support** (עזרה ותמיכה). תחת הסעיף **Documentation** (תיעוד), לחץ על **Product Help** (עזרה עבור המוצר).

התוכנה 'מרכז הפתרונות של HP' היא נקודת המוצא לסריקה של תמונות ומסמכים. השתמש במרכז הפתרונות של HP עבור הפעולות הבאות:

- פונקציות של סריקה והעתקה
- קבלת גישה למערכת העזרה ולמידע בנושא פתרון בעיות
- קבלת גישה לתוכנה HP Photosmart ועריכת התוכן שנסרק
- שינוי הגדרות והעדפות



באמצעות התוכנה HP Photosmart ניתן לטפל בתמונות, להדפיס אותן, לשמור אותן בארכיון ולשתף אותן לאחר הסריקה. תוכל להגיע אל התוכנה HP Photosmart מסמל שולחן העבודה או דרך 'מרכז הפתרונות של HP'.




כדי להתחיל בסריקה:

לחץ פעמיים על הסמל **מרכז הפתרונות של HP** בשולחן העבודה, לחץ על הכרטיסייה של הסורק ולאחר מכן לחץ על המשימה המבוקשת.


הערה אם הסמל **מרכז הפתרונות של HP** אינו מופיע בשולחן העבודה, לחץ על **התחל**, הצבע על **תוכניות** או על **כל התוכניות**, הצבע על **HP** ולאחר מכן לחץ על **מרכז הפתרונות של HP**.

שלב 6. בדוק את ההתקנה

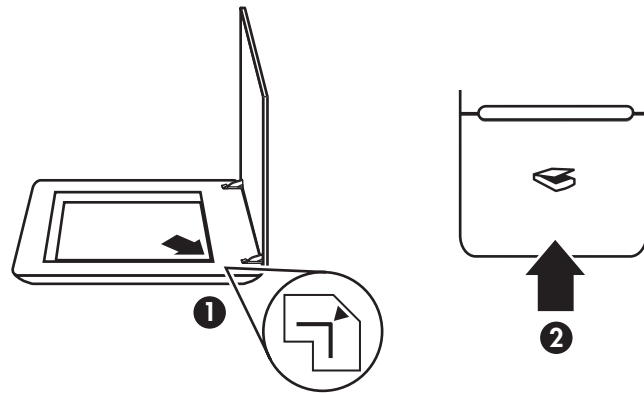

1. הנח תצלום או מסמך על זכוכית הסורק כשפניו כלפי מטה, במקום המצוין על-ידי סימן החץ שבפינת הזכוכית.
2. לחץ על הלחצן **סריקה** (🔍). אם אתה מבצע סריקה באמצעות תוכנה של Windows, מסך **What are you scanning? (מה אתה סורק?)** תופיע. פעל לפי ההוראות שעל-גבי המסך כדי להשלים את הסריקה.
אם אתה סורק באמצעות תוכנת Macintosh, יישום HP Scan Pro נפתח ומוצגת תצוגה מקדימה של הסריקה. כאשר תאשר את התצוגה המקדימה, התמונה הסרוקה נשלחת ליעד שנבחר בהגדרות הסורק.
אם מסך **What are you scanning? (מה אתה סורק?)** תיבת הדו-שיח או החלון HP Scan Pro לא יופיע. ראה "פתרון בעיות בהתקנת הסורק" בעמוד 11.


השתמש בכבל ה-USB המצורף לסורק כדי לחבר את הסורק למחשב.
1. חבר את הקצה המרובע של הכבל לסורק.

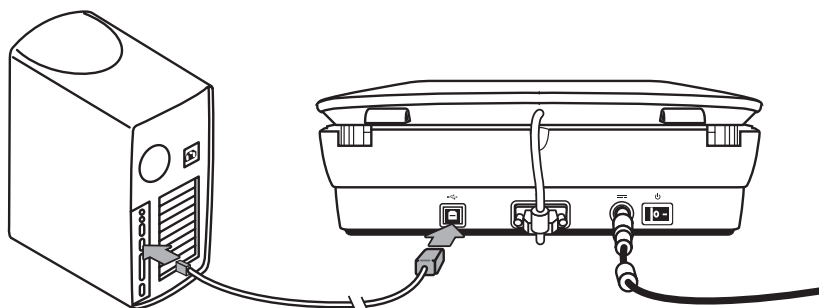

2. חבר את הקצה המלבני של הכבל למחשב.

שלב 4. חבר את ספק המתח

לספק המתח מחובר כבל המתחבר לגב הסורק.

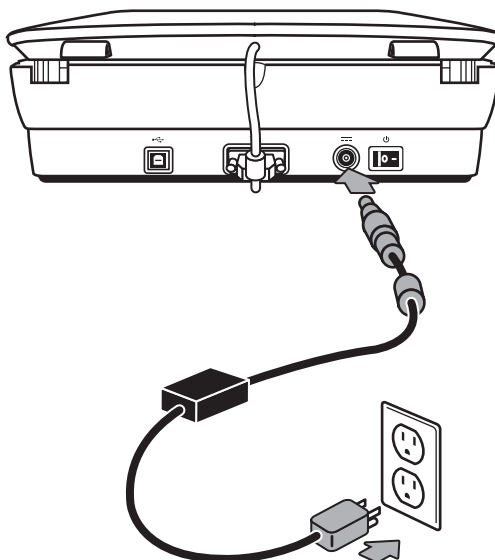

ספק המתח כולל גם כבל AC שמתחבר לספק המתח בצד אחד ולשקע חשמל או מייצב מתח בצד השני.

1. חבר את כבל ה-AC לגב ספק המתח.
2. חבר את הצד השני של כבל ה-AC לשקע חשמל או מייצב מתח.

שלב 5. חבר את כבל ה-USB

התראה אם אתה מבצע התקנה בסביבת Windows, הקפד להתקין את תוכנת HP Photosmart Software לפני חיבור הסורק למחשב באמצעות כבל ה-USB. ראה "שלב 2. התקן את התוכנה" בעמוד 5. אם אתה מבצע התקנה בסביבת Macintosh, באפשרותך לחבר את כבל ה-USB לפני או אחרי התקנת התוכנה.




שלב 2. התקן את התוכנה

התראה אם אתה מתקין את התוכנה במחשב Windows, אל תחבר עדיין את כבל ה-USB למחשב. התקן את תוכנת הסריקה לפני חיבור כבל ה-USB. אם אתה מתקין את התוכנה במחשב Macintosh, באפשרותך לחבר את כבל ה-USB לפני או אחרי התקנת התוכנה.



1. הכנס את תקליטור HP Photosmart המצורף לסורק לזון התקליטורים במחשב.

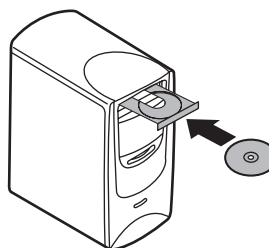


עבור התקנות במחשבי Windows: המתן להופעת תיבת הדו-שיח של ההתקנה. אם תיבת הדו-שיח של ההתקנה לא מוצגת לאחר מספר רגעים, ראה "פתרון בעיות בהתקנת הסורק" בעמוד 11.

עבור התקנות במחשבי Macintosh: לחץ פעמיים על סמל התקליטור שעל שולחן העבודה ולאחר מכן לחץ פעמיים על סמן ההתקנה HP Scanjet Scanner. לחץ על **Install software (התקנת התוכנה)** כדי להתקין את תוכנת הסריקה. בצע את ההוראות שעל-גבי המסך כדי להשלים את התקנת תוכנת הסריקה.

שלב 3. חבר את כבל מתאם החומרים השקופים

← חבר את כבל מתאם החומרים השקופים מהכיסוי לבסיס הסורק.

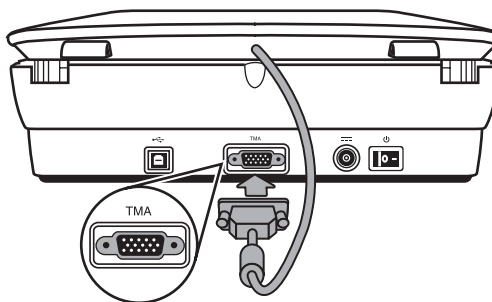


1 תחילת העבודה

כדי להתקין את הסורק, פעל בהתאם לשלבים הבאים:

שלב 1. בדוק את תכולת האריזה

הוצא את חומרת הסורק מהאריזה. הקפד להסיר את סרטי המשלוח.

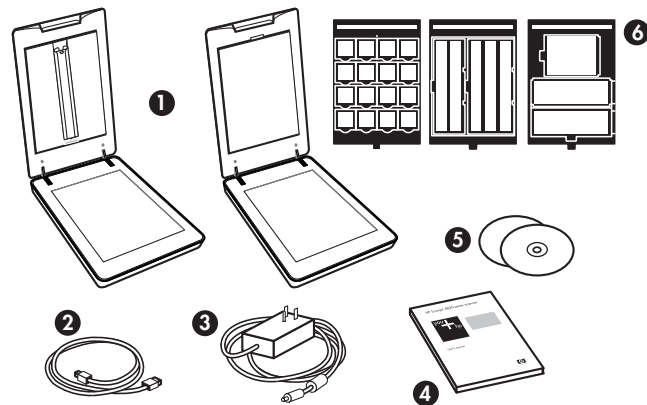

סורקים מדגמי HP Scanjet G4010 או G4050	1
כבל USB	2
ספק מתח	3
מדריך התקנה ותמיכה (ספר זה)	4
תקליטורי תוכנות סריקה	5
תבניות למתאם החומרים השקופים (HP Scanjet G4050) (TMA בלבד)	6

תוכן עניינים

4.....	1 תחילת העבודה
4.....	שלב 1. בדוק את תכולת האריזה
5.....	שלב 2. התקן את התוכנה
5.....	שלב 3. חבר את כבל המתאם לחומרים שקופים
6.....	שלב 4. חבר את ספק המתח
6.....	שלב 5. חבר את כבל ה-USB
8.....	שלב 6. בדוק את ההתקנה
9.....	2 אופן השימוש בסורק
9.....	קבלת מידע נוסף
9.....	התוכנה HP Photosmart Windows
10.....	התוכנה HP Photosmart Macintosh
10.....	הלוח הקדמי והאבזרים - סקירה כללית
10.....	לחצני הלוח הקדמי
10.....	מתאם חומרים שקופים
11.....	3 פתרון בעיות בהתקנת הסורק
11.....	הסרה והתקנה מחדש של התוכנה
12.....	בדיקת הכבלים
13.....	4 מידע רגולטורי ומפרט המוצר
13.....	מפרט הסורק
14.....	מפרט מתאם החומרים השקופים (TMA)
14.....	מפרט סביבת העבודה
14.....	מידע אודות מיחזור וחומרים מוגבלים
15.....	השלכת פסולת ציוד על-ידי משקי בית פרטיים באיחוד האירופי
16.....	5 תמיכה במוצר
16.....	נגישות
16.....	אתר האינטרנט של HP Scanjet
17.....	קבלת סיוע
18.....	6 כתב אחריות מוגבלת של Hewlett-Packard

זכויות יוצרים ורישיון

© 2006 Copyright Hewlett-Packard
Development Company, L.P.

חל איסור על שעתוק, עיבוד או תרגום ללא
הסכמה מראש בכתב, למעט כפי שמתירים
זאת חוקי זכויות היוצרים.

המידע הכלול במסמך זה נתון לשינויים ללא
הודעה מוקדמת.

האחריות הבלעדית הניתנת לגבי המוצרים
והשירותים של HP מפורטת בהצהרת
האחריות המפורשת הנלווית למוצרים
ולשירותים אלה. אין לפרש דבר מן האמור
במסמך זה כהענקת אחריות נוספת. חברת
HP לא תישא באחריות לשגיאות או
להשמטות מסיבות טכניות או בעקבות עריכה.

זכויות יוצרים של סימנים מסחריים

Microsoft ו-Windows הם סימנים
מסחריים רשומים של Microsoft
Corporation.

מדריך התקנה ותמיכה

עברית





Printed in Germany

© 2006 Hewlett-Packard Development Company, L.P.

www.hp.com

הודפס בגרמניה



L1956-90022

