

RUIZU X52 User Manual

Customer Service: ruizuservice@hotmail.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

English User manual ----- 1 ~ 12

日本語ユーザーマニュアル----- 11 ~ 35




English & Japanese content

Button control.....	1
1.Power On/Off.....	2
2.Main interface.....	2
3.Volume Adjustment.....	2
4.Fast Rewind/Forward.....	3
5.Last song/Next song.....	3
6.Screen lock/unlock.....	3
7.Return.....	3
8.Charge the player.....	3
Music.....	4
Video.....	5
Bluetooth.....	6
FM Radio.....	7
Pedometer.....	8
Recordings.....	9
Ebook.....	10
Pictures.....	10
Tools.....	10
Set.....	11

Specification.....	12
外観及びボタン	13
1.電源オン/オフ.....	14
2.ホームメニュー.....	14
3.VOL+/-スイッチ.....	14
4.早送り早戻し.....	14
5.前の曲/次の曲.....	15
6.画面をロック/ロック解除	15
7.BACK.....	15
8.充電ステップとファイルを転送する.....	16
音楽.....	17
動画.....	20
Bluetooth 機能.....	22
FM ラジオ.....	25
歩数計.....	26
録音.....	27

電子ブック.....	29
画像.....	30
アラームモード.....	31
設定.....	32
型番とスペック.....	35

Buttons & Controls

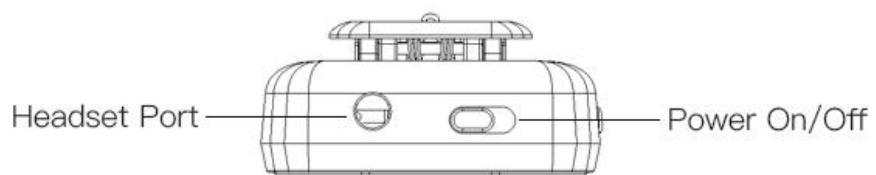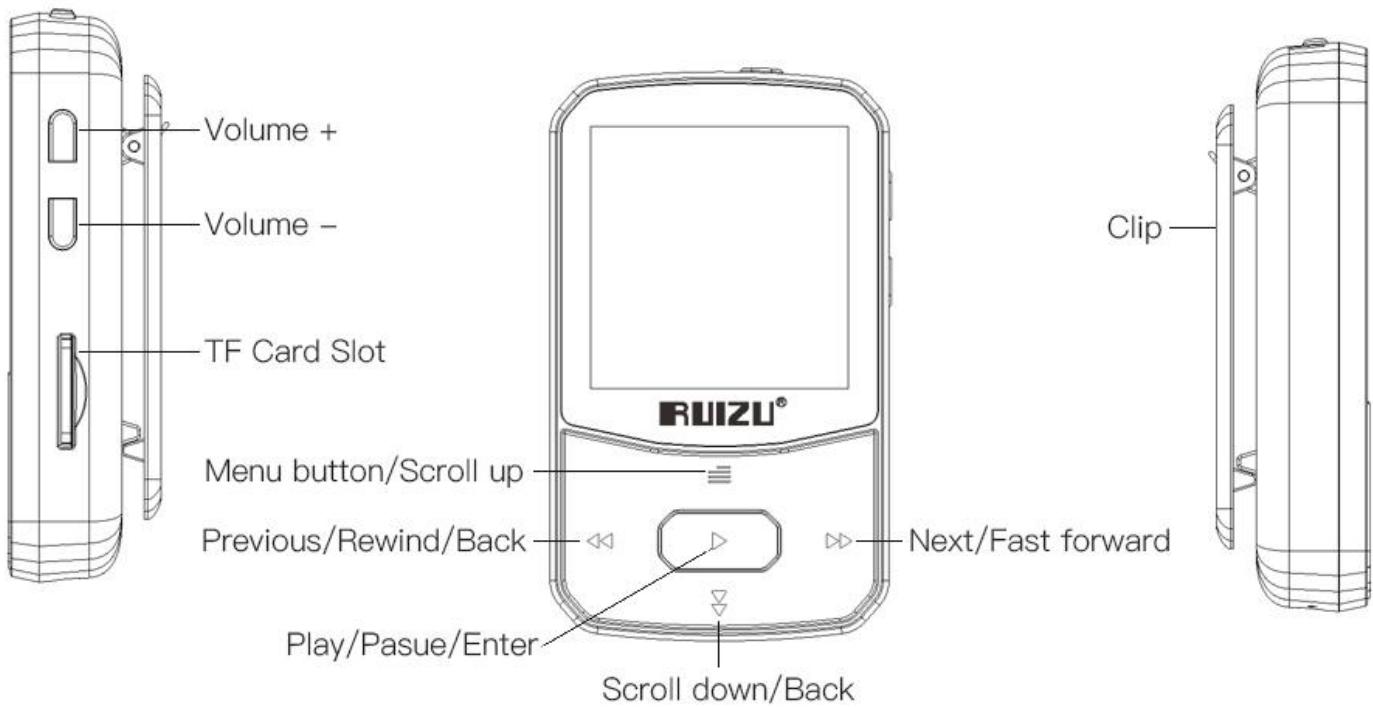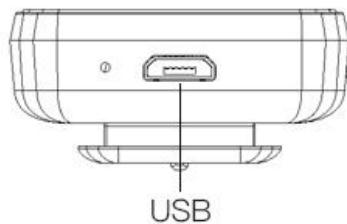

1. Power On/Off

Power On: Push the power key to the right side turn on the mp3 player

Power Off:

- 1).When the mp3 player power on,hold the center button(play button) will turn off the device, hold the center button(play button)again to power on.
- 2).Push the power key to the left side power off.

2.Main interface

On it main menu each time you click the button  /  , it will bring you to one of its 11 different functions, including “Music”, “Video”, “Bluetooth”, “FM Radio”, “Pedometer”, “Recordings”, “E-book”, “Picture”, “Tools”, “Set”, “Folder View”.

Click the button  enter to the function you have selected.

3.Volume Adjustment

Under any interface click the volume button

“+” or “-” to turn up or turn down the volume.

4.Fast Rewind/Forward

While it's on Music/Video playing interface
Hold button  for fast rewind / forward.

5.Last song /Next song

While it's on Music/Video/Picture playing interface, click button  to go to the previous/next file.

6. Screen Lock/unlock

Hold the  button to lock the screen. Repeat to unlock.

7.Return

While on music/Video/E-book playing interfaces, click the button  back to previous menu, then press the  button continually to return to the main interface. In other interfaces, press the button  to return.

8.Charge the Player

1).By USB cable

Connect the mp3 player with computer by the USB cable can both be used for data transfer and charging the player.

2).By connecting to charger(Not included)

Please note: The specifications of the charger must meet the following requirements or any accident or failure happened will be regarded as man-made damage.

Input: AC100-240V 50/60Hz Max:100mA

Output: DC5.0-5.5V 500mA-800mA

Music

Click ► button with “**Music**” on main interface access to its function. On the “Music” menu click ≡ / ▼ to choose the option on the menu, and click ► to confirm.

1)Volume Adjustment

Click the Volume +/- to turn up / down the volume.

2)Fast Rewind/Forward

While it's on Music playing interface Hold button ◀◀ / ▶▶ to play fast rewind / forward.

3)Last song /Next song

While it's on music playing interface, click button◀◀/▶▶to play the previous/next song.

4)Play setting

On the Music playing interface, click the “≡” button enter to the playing settings menu.

Play mode:

Repeat

Repeat off: Turn off repeat function.

Repeat 1: Repeat play the audio currently playing.

Repeat all: Play all of your audios and repeat.

Shuffle: Turn on/off shuffle mode.

Sound Settings

Equalizer/Variable Speed Play/Volume limit.

Add to playlist

Remove from Playlist

Delete : Delete the music

Bookmark

Video

On the main menu after select the “Video” click ▶ button access to the video menu.On

the “Video” menu click \equiv / \downarrow to select the option on the menu, and click \blacktriangleright to confirm.
Remark: This player can only support the AMV format in 128*128, you should convert video files by format conversion software first.

Video play setting: on the video playing interface click the \equiv button access to video play setting,a related list will show as below

Brightness

Repeat

Delete video

Update Playlist

Bluetooth

Press \blacktriangleright button with “Bluetooth” on main interface to access to its function. And the mp3 player will auto search the Bluetooth device around (remark: please turn on your Bluetooth device before you search the Bluetooth device).

On the Bluetooth menu a related list will show as follows:

Bluetooth switch control: Turn on/off

Bluetooth function.

Search for device: Searching nearby Bluetooth device.

Device List: View paired Bluetooth devices.

How to connect the mp3 player with Bluetooth device.

1. Turn on your Bluetooth device before you search the Bluetooth device

2. Press ► button with “Bluetooth” on main interface to access to its function. And the mp3 player will auto search the Bluetooth device around, the Bluetooth device will listed on the mp3 player after search success.

Choose the Bluetooth device and click the ► start connect.

3. After connect the mp3 player with Bluetooth device go back to main menu and enter to “Music”function , and playing music.

FM Radio

Select "FM Radio" on main menu, click button ► access to FM Radio,a related list will show as: “Presets”, “Manual Tune”, “Auto tune”,

“FM Recording”.Click  /  to select each option, and click  button to confirm.

Note: Wired headphones are required as antenna for FM radio function.

On the FM radio playing interface,click the  button enter to the settings menu. A related list will show including:

Start FM radio recording

Radio background

Save to preset

Clear Preset

Auto tune

Tuner Region

FM Recording

Pedometer

Select "Pedometer" on main interface, click button  to access to its function, then a related list will show:

Start step:

S: step counts

D: distance traveled

C: calories burned

S: walking speed

T: elapsed time

Click button ► or ▼ button and choose "Yes"/"No" to save the record.

Personal info: set your step length.

History: View up to 7 history records.

Clear history: Clear one of your history records.

Recordings

Select "Recordings" on main interface, click button ► access to recordings , then a related list will show as:

Start Voice Recording

Recordings library

Storage(only available with card inserted)

Record Format

Record Settings

Click button ► or ▼ to select each option, and click ► button to confirm.

Ebook

Click ► button with “Ebook” on main interface access to its function. On the “E-book” menu click ► or ▼ to choose the TXT article on the menu, and click ► to confirm.

When read the TXT article, click ► button will auto play, click again to stop.

Please kindly note this player only can recognize the article in TXT format.

Pictures

Click ► button with “Pictures” on main interface access to picture menu. On the “picture” menu click ► or ▼ to choose the picture files listed on the menu and click ► to confirm.

Tools

Select "Tools" on main interface, click button ► access to tools , then a related list will show as:

Calendar

Stopwatch

Alarm

Click ► or ▼ to select each option, and click ► button to confirm.

Set

Touch ► button with “Set” on main interface access to its function. And then a related list will show as follows:

Shutdown settings

Display

Language

Date and time

Information

Format device


Default settings

Click ► or ▼ to select each option, and click ► button to confirm.

Specification

Screen	1.5" TFT screen
Weight	25 g
Dimension	60mm×40mm×11mm
Flash Memory	8GB
TF Card	Support expandable up to 128GB
Audio Format	MP3/WAV/APE/WMA/FLAC etc.
USB port	Micro USB 2.0 (Support USB 3.0)
Video format	128*128 AMV (converted video)
Picture format	JPEG BMP GIF
Recording format	MP3/WAV
Recording distance	5~8 meters
Battery	Built-in Li battery
Charging time	2 ~3 hours

外見とボタン

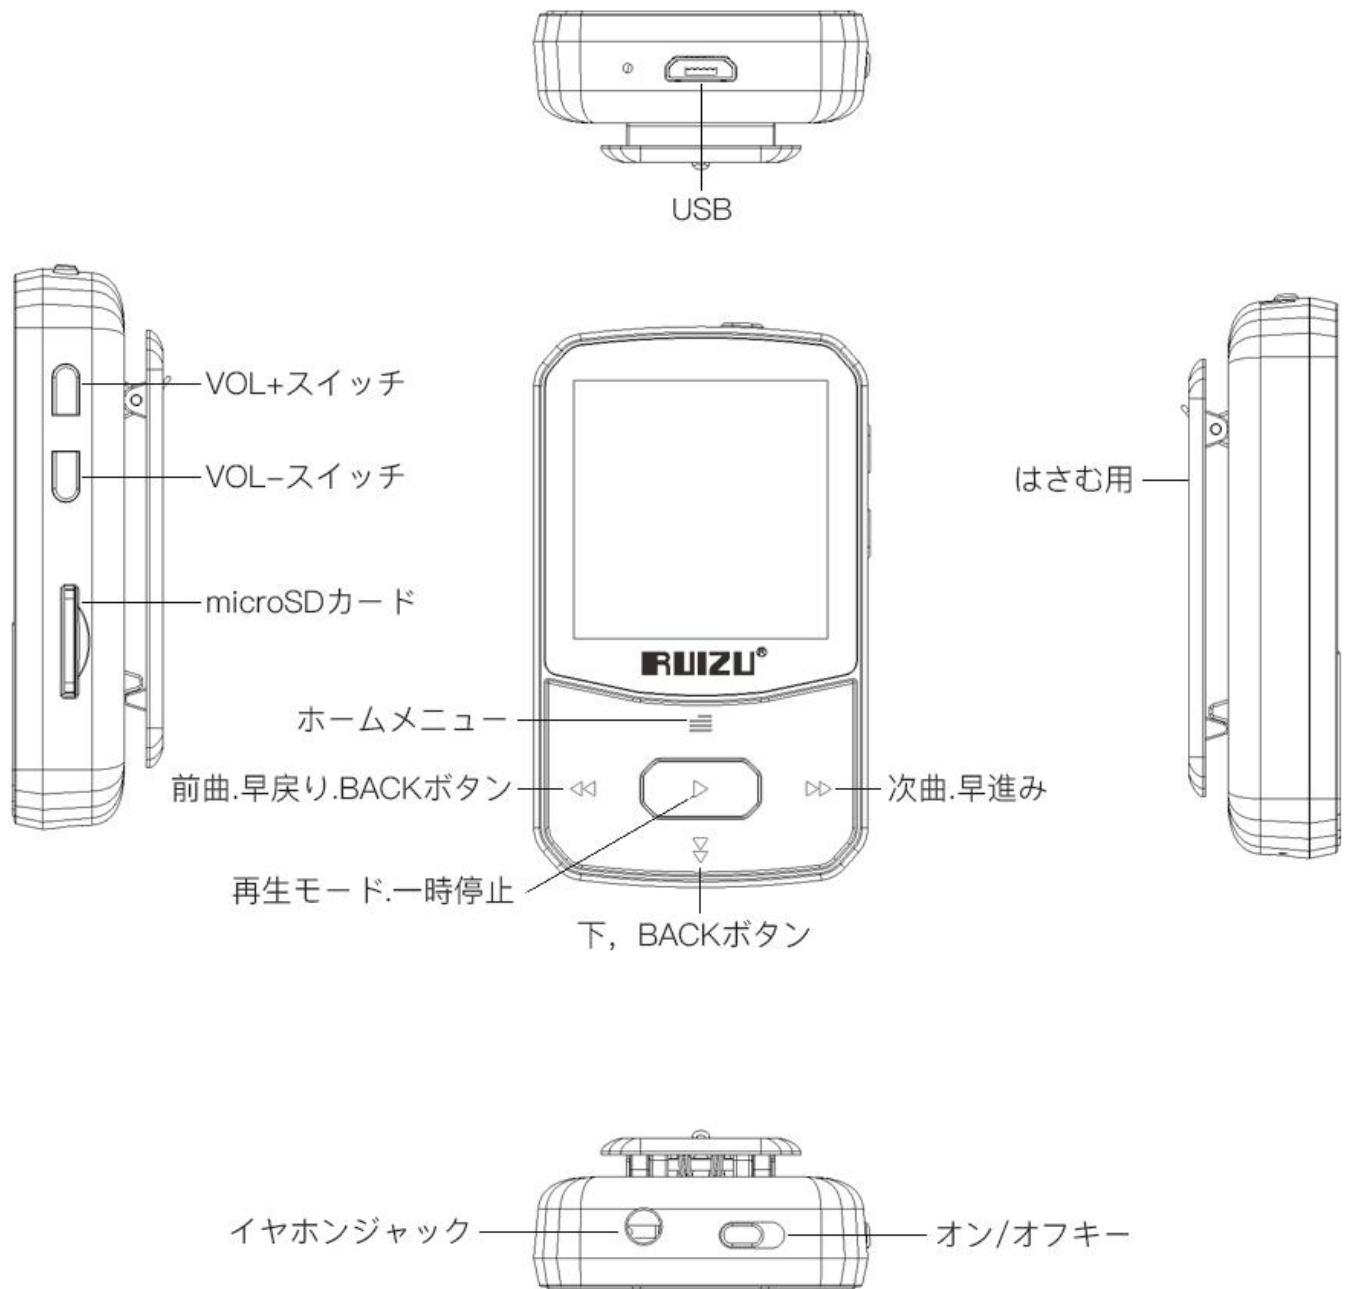

1. 電源オン/オフ

オン：電源ボタン右にしましたらオンに表示されます。

オフ：電源ボタン左にしましたらオフし表示されます

2.ホームメニュー： ホームメニューで◀◀/▶▶短く押すと音楽、ビデオ、Bluetooth、FM ラジオ、歩数計、録音、電子ブック、写真、ツール、設定、ファイルプレビューを選んでできます、▶押しすると選んでできます。

3.VOL+/-スイッチ

音量を調節します。

4. 早送り早戻し

音楽、ビデオ再生中で▶▶と◀◀押したまますると再生中の曲や動画の早送り早戻しをします。

5.前の曲/次の曲：

音楽やビデオ、ファイルプレビューなど状態で▶▶と

◀◀短く押すと前の曲/次の曲を選択できます。

6.画面をロック/ロック解除

本機が動作しているときは、≡を押長く押して画

面の電源を切り、もう一度≡を押して画面の電

源を入れます。

7. BACK

音楽再生中/ビデオ放送中/FM ラジオ再生中/

電子ブックを見るとき/画像再生などに▼を押し

て前のメニューに戻れます。そして◀◀を押してホーム

メニューに戻れます。ほかの画面で直接◀◀を使っ

て前のメニューに戻ります。

8.充電ステップとファイルを転送する

- 1) コンピューターと USB ケーブルを使用して充電する

2) USB ケーブルはデータ転送用で、充電器と連続して充電するのも適用です。

* 特にご注意：使用される充電器の仕様は以下の標準を満たすべきです。そうでなければ意外や保証が生じる場合は当社が人為の破壊とみなします

注意：入力：

AC100-240V 50/60Hz Max:100mA

出力: DC5.0-5.5V 500mA-800mA

PC ファイルを転送する：USB データケーブルをコンピューター PC と連続し、コンピュータのハードディスクに転送する音楽などの関連ファイルをコピーし、プレーヤー容量ディスクに変えて、ペーストしてデータが転送できますも適用です。

音楽

ホームメニューで“◀◀/▶▶”をクリックして、音楽のメニューを選びます。“▶”をクリックして、すべての曲、Resume、アーティスト、アルバム、ジャンル、プレイリスト、再生リストを作りますなどの機能を付けます。“≡ /▼”を放送曲を選びます。それから“▶”をクリックして、その曲に入ります、放送が始まります。

- 1) VOL+/-スイッチに音量を調節します。
- 2) 音楽再生中で▶▶と◀◀長く押すと早送り/巻き戻しを操作できます。
- 3) 音楽再生中で▶▶と◀◀短く押すと前の曲/次の曲を選択できます。
- 4) 音楽再生中で、≡をクリックして、設置デーブル（放送モデル、音設置、プレイリスト追加、

プレイリスト削減、不要項目削除) が出てきます。

再生モード：このオプションを選び、再生ボタンを押して入ると、次から音楽を再生／リピート／シャッフル／リピート設定が表示されます。

サウンド設定：“イコライザー”， “シフト配信”， “音量限制”。

プレイリストに追加：再生中の音楽をこの再生リストに加えます（三つのプレイリストの一）。

プレイリストから削除：このリストに加えている音楽を削除します。

削除：mp3 プレーヤーから曲を削除します。

ブックマーク：再生ボタンを押して、この機能に入ると、ブックマーク追加、ブックマークへの移動、ブックマーク削除が表示されます。

動画

ホームメニューで“◀◀/▶▶”をクリックして、動画のメニューを選びます。▶を押してすべての動画を見えます。好きな動画は≡ /▼を移動して選んで出来ます、▶をクリックして放送始めます。

放送中で VOL+/-スイッチに音量を調節します。
▼をクリックして前のメニューに戻ります。◀◀をクリックしてホームメニューに表示されます。

フルダビューで▶をクリックしてそして≡ /▼を押して放送欲しいファイルを選んで▶を押して放送始めます。

放送中、◀◀と▶▶”をクリックして、放送対象を選びます。“▶▶”を長く押して、早進みができ、“◀◀”を長く押して、早戻りができます。“▶”をクリックして、一時止まります。“▼”をクリックして、前のメニュー

に戻ります。◀◀をクリックしてホームメニューに戻ります。

放送中、“≡”をクリックして、動画設置出来ます、明るさ/重複放送/動画を削除/プレイリスト更新の機能が出てきます。≡ /▼で必要な機能を選択して、“▶”をクリックして入ります。“▼”をクリックして、放送画面に戻ります。◀◀をクリックしてホームメニューに戻ります。

Bluetooth 機能

ホームメニューで Bluetooth を選んで、“▶”をクリックして、入ります。入る前に先に Bluetooth のイヤホンあるいはスピーカーをオンにします。入ったら、“Bluetooth のオンオフ制御”、“検索デバイス”、“デバイスのリスト”が見えます。“≡ /▼”は選択キーで、“▶”は確認キーです。入ったら Bluetooth は

自動的に検索します。

Bluetooth のオンオフ : ≡ /▼でオン/オフを選択

して、"▶"で確認します。

デバイス検索 : "▶"をクリックして、自動的に

Bluetooth のイヤホンあるいはスピーカーの検索に

入ります。

デバイスのリスト : 検索されたデバイスはすべてリ

ストに表示されます。対象デバイスを選んで、"▶"

を使って、確認します。

Bluetooth デバイスとの接続方法 :

1. Bluetooth のイヤホンあるいはスピーカーをオンにします

2. Bluetooth の画面に入って、Bluetooth をオンにします。"▶"を移動して、デバイス検索をクリックします。それから"▶"を確認して、合うデバイスが

自動的にリストされます。

3. Bluetooth がつながったら、ホームメニューで音楽の画面に戻ります。Bluetooth のイヤホンあるいはスピーカーが一回つながり、今度使用時、Bluetooth のスイッチを入れるだけで、自動的にデバイスを認識します、音楽再生を始めます。

FM ラジオ

ホームインターフェイスの状態で、◀◀/▶▶をクリックして、FM ラジオを選択し、▶（再生ボタン）を押して入ります。FM ラジオ機能メニューはプリセット/ユーザラジオ/手動チューニング/自動チューニング/FM 録音など選びます。≡ /▼をクリックして選んで出来ます。▶を押して機能使えます。

プリセット：プリセットラジオを選んで、“▶”をクリックして、すぐすでに受け取ったラジオ放送局が見

えます。

自動チューニング：自動チューニングを選んで、“▶”をクリックして、自動的にラジオ放送局を検索します。

手動チューニング：手動チューニングを選んで、“▶”をクリックして、手動検索に入ります。“◀/▶”を使って、ラジオ放送局を検索します。

FM 録音：FM 録音で▶をクリックして、全ての録音ファイル見つけます。

ラジオチャンネルを再生して、≡ボタン短押しすると、以下のオプションが表示されます： FM ラジオ録音を開始/プリセットに保存/プリセットをクリア/自動チューニング/周波数範囲/ FM 録音/バックグラウンドオペレーション

歩数計

ホームメニューで◀◀/▶▶をクリックして歩数計を選びまして、“▶”を押して使い始めいます。

歩数計メニューで“▶”をクリックしてここでは歩数計算開始、歩数計を使う間に▼を押して「ステップを保存するか」の質問があります、削除や保存操作出来ます。

個人情報：ユーザー情報をクリックして▶▶を押して歩数の長さを設置出来ます。

歴史記録：歴史記録あります。

記録削除：記録削除出来ます。

録音

ホームメニューで◀◀/▶▶をクリックして録音を選べます。▶を押したらメニューに入ります、録音メニューで以下のオプションが表示されます： 音声録音を開始、録音ライブラリ、録音フォーマット、録音

設置。≡ /▼をクリックして選べます、►をクリックして入ります

音声録音を開始：このオプションを選択してから、►を短押しすると、録音する画面に入ります。録音中で ►をクリックして、一時停止できます、もう一度 ►をクリックして、続けます。▼をクリックして画面で保存と削除操作出来ます。

録音ライブラリ：録音メニューで◀◀/▶▶をクリックして録音ライブラリを押して、"►"を押して入ります。すべての録音ファイルはここで見つけます、必要なファイルをクリックして"►"を押したら放送出来ます、VOL+/-スイッチに音量を調節します。

録音は WAV / MP3 の形式にて保存できます、≡ /▼クリックすると選べます、"►"をクリックして保存出来ます。

録音設置：録音ビットレート設置です。MP3 書式：32kbps, 64kbps, 128kbps, 192kbps。WAV 書式：512kbps, 768kbps, 1024kbps, 1536kbps。“≡ /▼”で対象ビットレートを選んで、“▶”をクリックして、保存できます。

電子ブック

ホームメニューで電子ブック機能を選び、“▶”をクリックして、電子ブックのファイルの画面に入ります。それから“▶”をクリックして、読み始めます。

ページアップ/ダウン：“◀◀/▶▶”を短く押すとページアップ/ダウンを切り替えます。電子ブックメニューで▶をクリックして自動再生できます。

電子ブックを読んでいる時、“≡”を押して、自動放送時間設置/削除電子ブック/ブックマーク選択/ブックマーク削除/ブックマーク追加/ページ選

択の機能が出てきます。“≡ /▼”で必要な機能

を選んで、“▶”をクリックして、保存出来ます。

在图片播放界面中，短按“≡”键进入图片播

放设置界面，有亮度/背光计时器/幻灯片放

映设置/删除图片/更新播放列表，短按≡

/▼键选择，再短按“▶”键进入。

画像

ホームメニューで“◀◀/▶▶”を使って、“画像メニューを

選びます。それから“▶”をクリックして、写真のフ

ォルダに入ります。“▶”をクリックして、対象写真

を選びます。また“◀◀/▶▶”を使って、写真を上り下

りします。

写真鑑賞している時、≡を押して明るさ/バックラ

イトタイマー/バックライトタイマー/画像を削除/再

生リストを作りますの機能が出てきます。“≡ /▼”

で必要な機能を選んで、“▶”をクリックして、入ります。

アラームモード

ホームメニューで“◀/▶”を使って、アラームモードメニューを選びます。それから“▶”をクリックして、アラームモードに入ります。それでストップ・ウォッチ、カレンダー、アラームを表示されます。“≡ /▼”を使って、▶を押して選んで出来ます。

設定

ホームメニューで設定を選びまして、“▶”をクリックして設置画面に入りました、≡ /▼をクリックして必要な設定出来ます。

電源オフ設定：定時にオフと省電オフを含めて

定時にオフ：デバイスが運行中、設定された時間に自動的に電源を消すことを設けます。設定

範囲は 1~99 分です。

省電力オフ：アイドル状態 {放送なし/操作なし} で、デバイスが自動的に電源を消す時間を設けます。オフ（オン）3/5/10/20 分の選択があります。“≡ /▼”を使って、対象時間を選びます。それから“▶”をクリックして、保存します。

表示設定：ブライトネスとバックライトタイマーの設置をします。≡ /▼を押して明るさを簡単に調整出来ます、バックライトタイマー：10 秒、20 秒、30 秒、常にオン、多種のオプションがあります。“≡ /▼”を使って、時間を選らびます。それから、“▶”をクリックして、保存します。

スクリーンセーバー：デジタル時計なし

Language/言語：28 言語を選べます。

日付と時間：時間形式の設定出来ます（1

2時間、24時間) “▶”ボタンを押すと時間設置”≡ /▼”ボタンを押すと具体的な時間設置設定した後、時間設置は+/-ボタンを使って設置できます”▶”を押すと保存します。

情報：プレーヤー情報及びディスク容量をご覧になれます。

デバイスをフォーマット：フォーマットされた後、プレーヤーのすべてのデータを消去します。（謹んでご操作ください）

工場出荷時の設定：“▶”をクリックして、「はい」と「いいえ」の選択画面が出てきます。「はい」をクリックして、工場出荷時の状態に戻ります。「いいえ」をクリックして、設定から退出します。
型番とスペック：

スクリーン	1.5" TFT screen
重量	25 g
サイズ	60mm×40mm×11mm
容量	8GB
microSD カード	支持扩展内存最大 128GB
オーディオフォーム マット	MP3/WAV/APE/WMA/FLAC etc.
USB 接口	Micro USB 2.0 (Support USB 3.0)
プレーヤーフォーム マット	128*128 AMV (视频转换器 转换)
画像フォーマット	JPEG BMP GIF
録音フォーマット	MP3/WAV
録音距離	5~8 米
電池	内置锂离子电池
充電時間	2~3 小时