This Device is not intended for sale the U.S.A

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void

the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital

device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in

a residential installation. This equipment generates uses and can radiate radio frequency

energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will

not occur in a particular installation. If this equipment does cause harmful interference or

television reception, which can be determined by turning the equipment off and on, the user

is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to

which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Part 15 Class B Compliance

This device and its accessories comply with part15 of FCC rules and ICES-003 Class B

digital apparatus requirements for Industry Canada.

Operation is subject to the following two conditions:

(1) This device & its accessories may not cause harmful interference.

(2) This device & its accessories must accept any interference received,

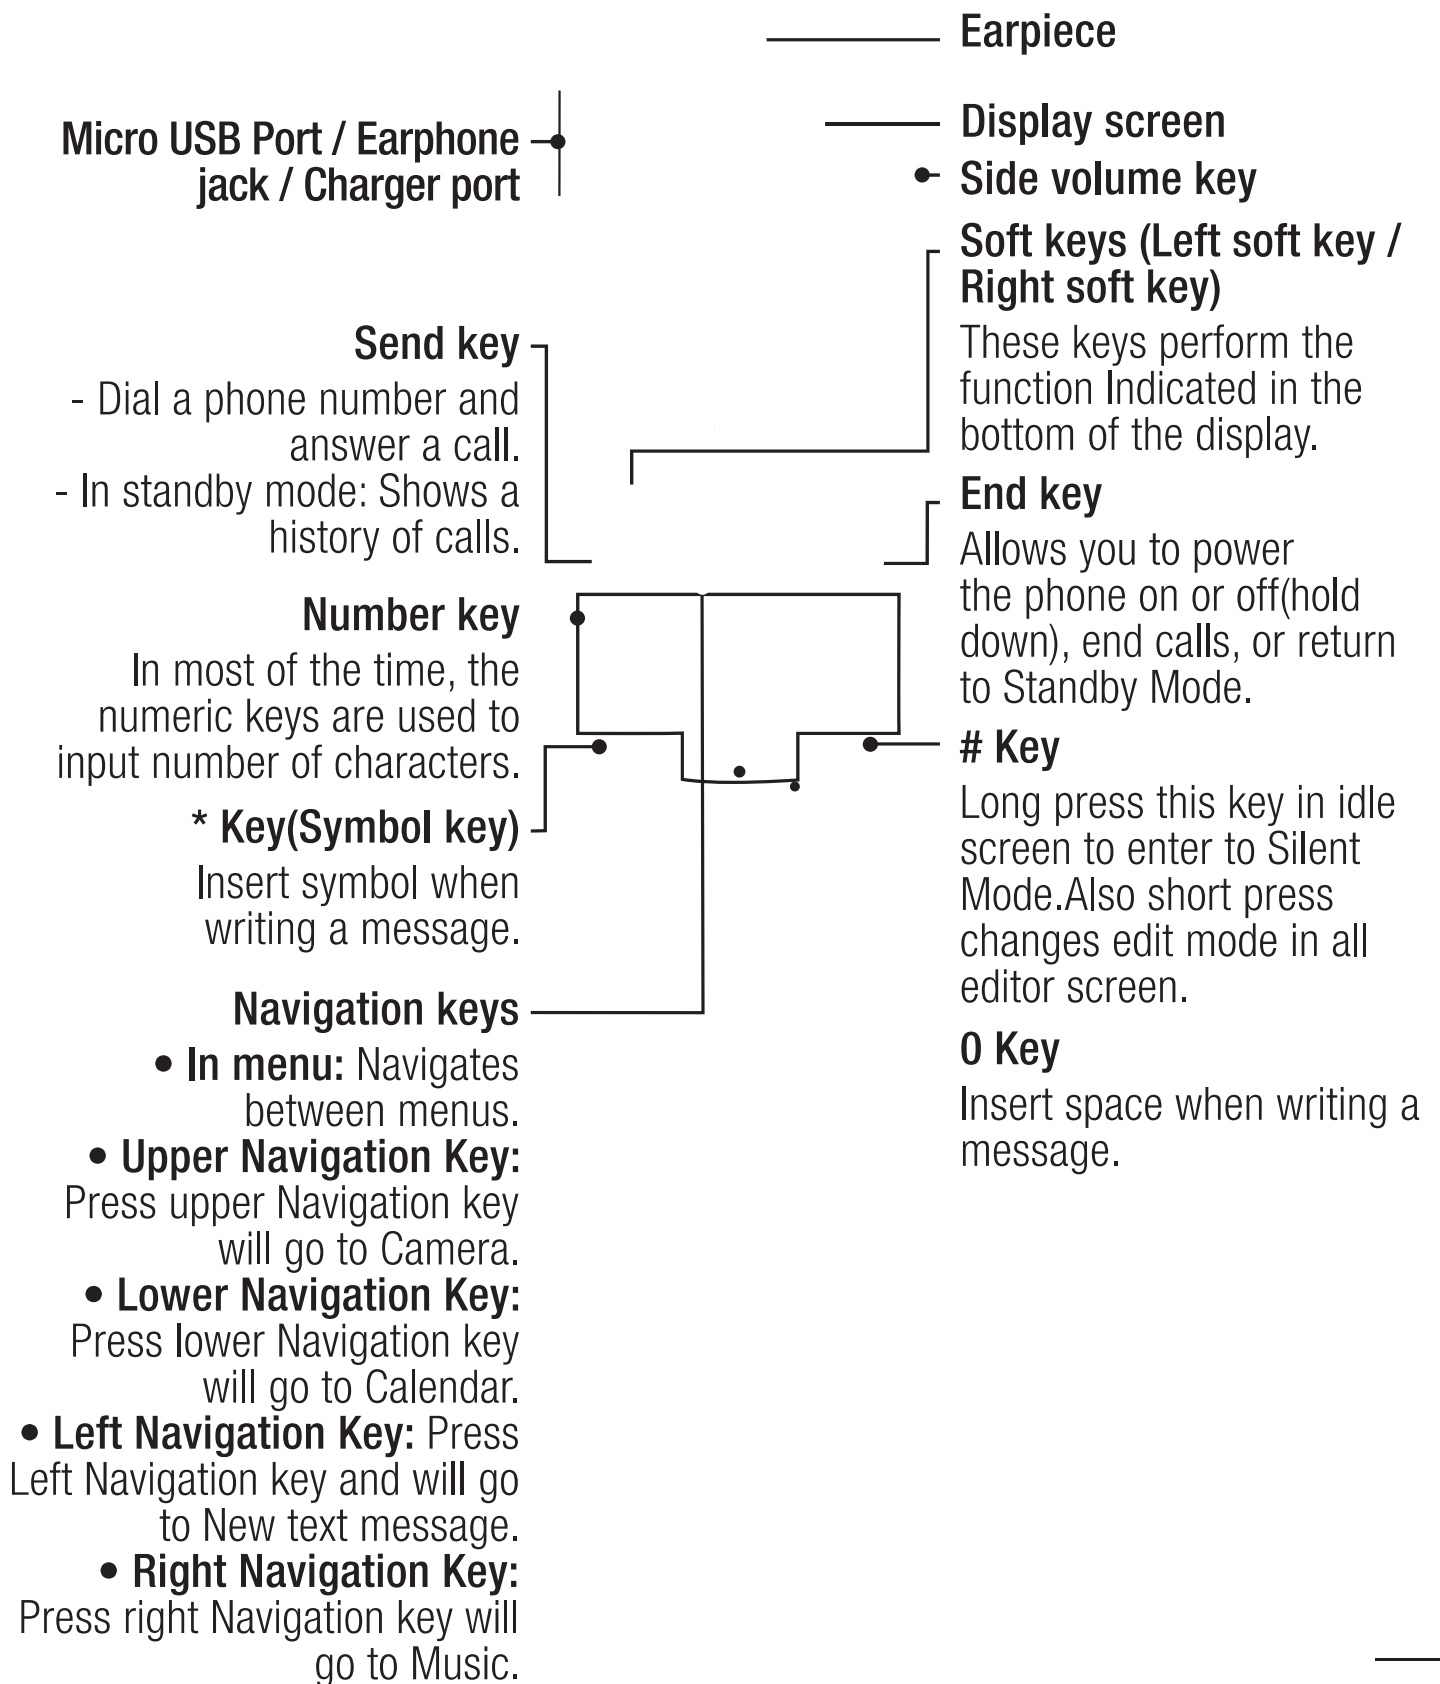including interference that may cause undesired operation.

Body-worn Operation

This device has been tested for typical body-worn operations

with the distance of 0.79inches (2.0cm) from the user's body.

To comply with FCC RF exposure requirements, a minimum separation distance

of 0.79inches(2.0cm) must be maintained from the user's body.

Additionally, Belt clips, holsters & other body-worn accessories may not contain

metallic components.

Phone Components

Earpiece

Display screen

Side volume key

Micro USB Port / Earphone jack / Charger port

Soft keys (Left soft key / Right soft key)

These keys perform the function Indicated in the bottom of the display.

Send key

- Dial a phone number and answer a call.
- In standby mode: Shows a history of calls.

End key

Allows you to power the phone on or off(hold down), end calls, or return to Standby Mode.

Number key

In most of the time, the numeric keys are used to input number of characters.

 # Key

Long press this key in idle screen to enter to Silent Mode.Also short press changes edit mode in all editor screen.

* Key(Symbol key)

Insert symbol when writing a message.

0 Key

Insert space when writing a message.

Navigation keys

- **In menu:** Navigates between menus.
- **Upper Navigation Key:** Press upper Navigation key will go to Camera.
- **Lower Navigation Key:** Press lower Navigation key will go to Calendar.
- **Left Navigation Key:** Press Left Navigation key and will go to New text message.
- **Right Navigation Key:** Press right Navigation key will go to Music.

Micro USB port
Earphone jack/
Charger port

Side volume key

Battery cover

Camera lens

SIM Card Socket

Battery

Turning Your Phone On and Off

1. Press and hold the End key until the power comes on.

2. Press and hold the End key until the power goes off.

Making a call

1. Enter a phone number including the area code.

2. Press the ☐ key to call the number.

3. To end the call, press the ☐ key.

Making an international call

1. Press and hold the ☐ key for the international prefix. The '+' character automatically selects the international access code.

2. Enter the country code, area code, and the phone number.

3. Press ☐ [Send] key to call the number.

Answering a call

1. When you receive a call, the phone rings.

2. If the **Press any key** has been set as the **Answer mode** (Settings > Call > Answer mode), any key press will answer a call except for the ☐ key.

3. To end the call, press the ☐ key.

Selecting functions and options

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked ▬ and ▬ . Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

Entering Text

You can enter alphanumeric characters by using the phone's keypad.

T9 Mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary.

123 Mode (Numbers Mode)

Type numbers using pressing and holding the button keys.

Symbol Mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options** → **Insert Symbol**. Use the navigation keys to select the desired symbol and press the OK key.

Anti Theft Mobile Tracker (ATMT)

Anti-theft mobile tracker (ATMT) allows you to track your lost phone. When someone uses your phone without your permission, the tracking service will be activated.

You are reminded by a text message sent to the default phone number you have set, without the unauthorized user's knowledge. You can always activate the ATMT and configure your personal settings.

To activate Anti-theft mobile tracker

1. From the main menu, select **Settings** > **Security** > **Anti-theft mobile tracker** and press **Select**.

2. Select **Set Anti-theft** and press **Select**.

3. Switch **On** or **Off** and press **Select**.

4. Input the security code to enable or disable this function.

5. Select Sending number list option then press ▣ NEW to configure the ATMT settings with name, primary phone number, secondary number. ATMT SMS will contain information about the stolen phone IMEI, current location & number of the person who is using that handset.

> **Note:** The default ATMT code is "0000". You have to enter the code before configuring the ATMT settings.

This section provides brief explanations of features on your phone.

Messaging

Create message

This menu includes functions related to SMS (Short Message Service) and MMS (Multimedia Message Service).

Tips: You can send SMS to many contacts at a time. From Options select "Send",it will open the contacts list, from where user can mark/unmark contacts for sending the message. Only 20 contacts can be marked and if user select Mark all only first 20 contacts will be marked.
To send the SMS to a particular group of contacts select 'Contact groups' Option from Send option.

Inbox

You will be alerted when you have received messages. They will be stored in Inbox.

My mailbox

My Email lets you get your favourite emails on your mobile for a fixed price each month.

Create new e-mail address

By selecting this menu, you will be directed to Hotmail portal, where you will be able to create Hotmail account.

Once you have created the account, you can set it up in the email setup wizard to receive Hotmail emails.

Drafts

You can save the message temporarily in Drafts.

Outbox

This is a temporary storage folder for the unsent messages or messages that you have sent but fail to deliver.

Sent items

After sending out the message, the text message or multimedia message is saved in the Sent folder.

Saved items

You can access your saved messages, text templates and multimedia templates.

Emoticons

A list of useful Emoticons, already written for a quick reply.

SOS message

An emergency message can be sent to the predefined number's (3 maximum) by long press of 9 Key in the idle screen also it can be set from message menu using SOS sub menu. On long press of 9 key in the idle screen, a popup comes, 'Set SOS message?'. Press 'Yes' then set SOS message ON , then type the required message and input maximum 3 numbers in the recipient list for which you want to send the message in emergency mode and press Done.

Message settings

This menu allows you to set features of your network service provider.

Contacts

Names

Select Search from Options and enter the name that you want to search from the contact list.

You can register a new contact address by selecting Add new contact from Options. You can enter the name, different phone numbers, email addresses, groups, image etc using add details option of a new contact.

Settings

You can set the contact list display,copy,move,send contacts via bluetooth,if SD card is inserted then backup and restore contacts also can clear contacts and check memory info.

Groups

You can add your contacts to any of the available groups.

Speed dials

You can assign any of the keys from 2 to 8 with a name and number list entry. You can call directly by pressing this key when you are in idle screen.

Service dial numbers

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

Own number

You can save and check your own number in SIM card.

My business card

This option allows you to create your own business card featuring name and any numbers.

Log

Call log

You can view lists of all outgoing or incoming calls.

Missed calls

You can view the unanswered calls.

Received calls

You can view the Received calls.

Dialled numbers

You can view the outgoing or attempted call numbers.

Call duration

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.

Packet data counter

You can check the amount of data transferred over the network.

Call costs

View the charges applied to your Last call , All calls numbers and can set the limit of calls. Also you can do Cost Settings.

Settings

Profiles

You can adjust and customize the phone tones for different events, or environments.

Display

You can change settings for the phone display.

Date & time

You can set functions relating to the date and time.

Connectivity

Bluetooth - You can adjust setting on BT connection.

USB Connection Mode - You can transfer files from/to a compatible PC to the memory in your phone using the Mass Storage Mode.

Call

You can set the menu relevant to a call.

Call divert - The Call divert service allows you to divert incoming voice calls to another number. For details, contact your service provider.

All voice calls: Diverts voice calls unconditionally.
When busy: Diverts voice calls when the User is in another call.
No answer: Diverts voice calls when you do not answer.
Not reachable: Diverts voice calls when the phone is switched off or out of coverage.

Call barring - The call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password.

Fixed dial numbers - You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

Turn On: You can restrict your outgoing calls to selected phone numbers.

Call waiting

Activate: If you select Activate, you can accept a waiting (receiving) call.
Deactivate: If you select Cancel, you cannot recognize the waiting (receiving) call.
View status: Shows the status of Call waiting.

Call reject

Call Reject On/Off: You can set whether to reject incoming calls.

- **Off:** Disables Automatic call reject.
- **Reject on List:** Only rejects target numbers in the list you set. You can set the reject list using Reject List menu.
- **Reject All Calls:** Rejects all calls on list.
  Or Else User can set Reject list by selecting Contacts, Groups, Unregistered & No caller ID.

Send my number

Set by network

On: You can send your phone number to another party. Your phone number will be shown on the receiver's phone.
Off: Your phone number will not be shown.

Auto redial

On: When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.
Off: Your phone will not make any attempts to redial when the original call has not connected.

Answer mode

Press send key: If you select this menu, you can receive a call by only pressing the ▭ key.
Press any key: If you select this menu, you can receive a call by pressing any key except the end key and the right soft key.

Free call timer - This menu allows keep track of free call minutes. Once you enter the minutes available, the device will keep track of free minutes. The device will automatically start subtracting minutes that you've used when you're in a phone call.

Minute minder - Determines whether to sound when you are on the call for every selected minute.

Save new number - Select Yes to save a new number.

Voice clarity - Minimizes surrounding noise when you're in a phone call. Select On or Off.

Phone

Allows you to set the phone.

Auto key lock - You can make the key pad locked automatically after some time.

Language - You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

Power save - Choose among the followings, Off/Auto/Always On, to change the factory set power saving settings.

Handset information - Shows your phone number, model number and S/W version.

Network

You can set select network and network mode settings using this menu. Also you can add a preferable network to be connected to Preferred lists.

Internet profiles

This menu shows the Internet profiles. You can create new profiles, delete or edit them using the options menu. However, you cannot delete or edit default configurations.

Memory info

You can check free space and memory usage of phone, SIM card and external memory (if inserted).

Restore factory settings

You can initialize all factory defaults. You need Security code to activate this function.

Gallery

My memory card

If your phone has a memory card in the card slot, you can save images, sounds, and videos onto it.

My images

Shows the list of image files.

My sounds

Saved audio files are displayed in the list.

My videos

Displays the list of video files.

My games & apps

You can access a great selection of games and applications on your phone.

Others

When you receive files of an undefined format via email, the files are saved in this folder.

Media

Camera

You can take photos with the built in camera and adjust its settings to suit your needs.

Video

You can record a video clip through the built-in camera.

Music

Using the songs in your phone, you can easily enjoy various music.

FM radio

You can listen to FM radio with your external earphone.

Voice recorder

You can record voice memo.

Ringtone creator

This function allows you to create your own personal ringtones by using this tool.

Organiser

Alarm clock

You can set five alarm clocks to go on at a specified time.

Calendar

You can see the calendar and add hundred events here in selected date.

To-do list

You can view, edit and add hundred tasks to do.

Notes

You can add fifty new notes, view and manage saved notes.

Secret notes

You can add fifty secret notes. You need to enter the security code to use this menu to protect your secret notes privacy.

Calculator

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division. You can also use the available functions like Sin, Cos, tan, log, ln, exp, %, x^2, x^y, sqrt, +/-, deg and rad.

Stopwatch

This option allows you to use the function of a stopwatch.

Date finder

You can count the target date by adding(After) days.

Converter

This converts any measurement into a unit you want. There are many types that can be converted into units: Currency, Area, Length, Weight, Temperature, Volume, Velocity.

World time

The World time function provides time information on major cities worldwide.

Go to

It helps you to go to the menu you search for. You can set the item as Go to.

SIM services

Display additional functions or applications provided by your network service provider.

Applications

Your LG-S310 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder. Press Menu and select Applications. Choose My games & apps.

> **Note:** An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

Web

Home

Connects to a homepage. The homepage will be the site which is defined in the activated profile.

Bookmarks

This menu allows you to store the URL of favorite web pages for easy access at a later time.

Social network

Social network services (SNS) - Your LG-S310 has SNS that lets you enjoy and manage your social network.
Select **Social network** menu and select the site as below: **Flickr** and **Twitter**.

Flickr

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others. Select Options to choose Refresh, News Feed filter (Status updates, Photo), Delete or Settings.

Twitter - Twitter is a microblogging service that enables its users to send and read messages known as tweets.

Last web address

This menu shows the history of recently browsed pages.

Settings

You can set the profile, appearance settings cache and security related to internet service.

Go to address

You can connect directly to the site you want. After entering a specific URL, press ▣ key to make the connection done to connect to the site.

Saved pages

Allows you to view your saved web pages.