COLOR SPECIFICATIONS

SPOT COLORS

DIE LINE COLOR (NO PRINT)

DIE LINES

PROCESS COLORS

SPECIFICATIONS / NOTES:

MODIFICATION DATE:

THIS PRINT SIZE / SCALE:

100% of original

Designer:

Location:

User Guide

User Guide

Logitech®

# Cordless Vantage™

## Headset | Casque

---

**1**

ENGLISH

## SAFETY

**IMPORTANT SAFETY INSTRUCTIONS**

⚠ ⚡

**CAUTION ELECTRIC SHOCK HAZARD**

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Install in accordance with the manufacturer's instructions.
- No naked (open) flame sources, such as lighted candles, should be placed on or near the apparatus.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The apparatus shall be disconnected from the mains by unplugging the power cord of the apparatus from the AC mains receptacle.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.**

ENGLISH

### Protect Your Hearing:

**Listening Advice to Avoid Hearing Damage:**

Listening via headphones, earbuds or headsets at a high volume may cause permanent hearing loss to occur. The louder the volume, the less time is required before your hearing could be affected.

**To establish a safe volume level:**

- Start your equipment with the volume control at its lowest setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.
- Avoid setting the volume at a level that prevents you from hearing conversations and other similar noises around you.

Once you have established a comfortable sound level, leave it there. If you experience a ringing in your ears, discomfort or muffled speech, reduce the volume or stop listening and have your hearing checked. See the product support page on the Logitech® website www.logitech.com for additional information.

FRANÇAIS

## SÉCURITÉ

**CONSIGNES DE SECURITE IMPORTANTES**

⚠ ⚡

**ATTENTION: RISQUE D'ELECTROCUTION**

- Veuillez lire ces instructions.
- Conservez ces instructions.
- Tenez compte de tous les avertissements.
- Suivez toutes les instructions à la lettre.
- N'utilisez pas l'appareil à proximité d'une source d'eau
- Nettoyez-le uniquement à l'aide d'un chiffon sec.
- Procédez à l'installation en respectant les instructions du fabricant.
- Tenez l'appareil éloigné de toute source incandescente ou flamme (nue), telle qu'une bougie allumée.
- N'installez pas l'appareil à proximité d'un radiateur, d'un poêle ou de toute autre source de chaleur (y compris les amplificateurs).
- N'utilisez que les éléments annexes et les accessoires spécifiés par le fabricant.
- Débranchez cet appareil en cas d'orage ou si vous ne l'utilisez pas pendant des périodes prolongées.
- Les réparations doivent être effectuées par des techniciens qualifiés. L'appareil doit être réparé dès qu'il a été endommagé (par exemple, si un liquide a été renversé ou si des objets sont tombés dessus, s'il a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il est tombé.
- L'appareil doit être déconnecté de l'alimentation secteur en plaçant le commutateur d'alimentation en position fermée et en débranchant le cordon d'alimentation de la prise secteur.
- La prise d'alimentation doit se trouver à proximité de l'équipement et doit être facilement accessible

**AVERTISSEMENT: POUR REDUIRE LE RISQUE D'INCENDIE OU D'ELECTROCUTION, N'EXPOSEZ PAS CET APPAREIL A LA PLUIE NI A L'HUMIDITE.**

FRANÇAIS

### Protégez Votre Audition:

**Recommandations d'écoute pour éviter les troubles de l'audition**

Ecouter de la musique à un volume sonore élevé via des écouteurs, des oreillettes ou un casque peut provoquer la surdité permanente. Plus le volume sonore est élevé, plus tôt vous risquez de subir des troubles de l'audition.

**Pour déterminer un niveau de volume sans danger:**

- Mettez votre équipement sous tension en vous assurant que la commande de volume est réglée au minimum.
- Augmentez lentement le volume sonore jusqu'à ce que vous obteniez un son net, clair et sans distorsion.
- Evitez de régler le volume à un niveau qui vous empêche d'entendre les conversations et autres bruits similaires environnants.

Une fois que vous avez atteint un niveau d'écoute confortable, ne l'augmentez pas davantage. Si vous éprouvez un bourdonnement dans les oreilles, une gêne ou une surdité partielle, réduisez le volume ou cessez l'écoute et consultez un spécialiste de l'audition. Pour obtenir des informations complémentaires, veuillez vous reporter à la page d'assistance technique du site Web de Logitech® www.logitech.com.

ESPAÑOL

## SEGURIDAD

**INFORMACIÓN DE SEGURIDAD**

⚠ ⚡

**PRECAUCIÓN SOBRE RIESGO DE DESCARGAS ELÉCTRICAS**

- Lea estas instrucciones.
- Conserve estas instrucciones.
- Haga caso de todas las advertencias.
- Siga todas las instrucciones.
- No use el dispositivo cerca del agua.
- Limpie el dispositivo sólo con un paño seco.
- Realice la instalación de acuerdo con las instrucciones del fabricante.
- No coloque el dispositivo cerca de fuentes de luz o calor con llama al descubierto.
- No realice la instalación cerca de fuentes de calor como radiadores, calentadores, estufas u otros aparatos (incluidos amplificadores) que generen calor.
- Utilice únicamente adaptadores o accesorios específicamente recomendados por el fabricante.
- Desenchufe este dispositivo si no va a utilizarlo durante periodos de tiempo prolongados o durante tormentas con relámpagos.
- Asigne las posibles operaciones de mantenimiento y reparación a personal técnico cualificado. El dispositivo requerirá servicio técnico en aquellos casos en los que haya sufrido algún desperfecto, como daños, contacto con líquidos o introducción de objetos en el interior del dispositivo, exposición a lluvia o humedad excesiva, funcionamiento incorrecto o golpes o caídas.
- El dispositivo debe desconectarse de la toma de corriente mediante la colocación del conmutador de encendido/modo de espera en la posición de modo de espera y la desconexión del cable de alimentación del dispositivo de la toma CA.
- La toma de pared debería estar instalada cerca del equipo, en un lugar fácilmente accesible.

**ADVERTENCIA: PARA REDUCIR EL RIESGO DE INCENDIOS O DE DESCARGAS ELÉCTRICAS, NO EXPONGA ESTE DISPOSITIVO A LLUVIA O HUMEDAD.**

ESPAÑOL

### Proteja Sus Oídos:

**Consejos para evitar lesiones**

La escucha con auriculares a un volumen alto puede causar la pérdida del oído con carácter permanente. Cuanto más alto sea el volumen de escucha, mayor será la celeridad con la que puede producirse el daño.

**Para asegurar el uso de un volumen adecuado:**

- Inicie su equipo con el control de volumen al mínimo.
- ncremente el volumen paulatinamente, hasta que escuche el sonido claramente y sin distorsión.
- Evite niveles de volumen que le impidan seguir una conversación o ruidos similares a su alrededor.

Mantenga el nivel de volumen establecido. Si nota un zumbido o una sensación incómoda en el oído, o si percibe el sonido debilitado, reduzca el volumen o interrumpa la escucha y consulte con su médico. Visite la sección de asistencia al producto en la página Web de Logitech® (www.logitech.com) para más información.

**2**

**ENGLISH** **Important**
Charge to full before first use.

**FRANÇAIS** **Important**
Charge to full before first use.

**ESPAÑOL** **Important**
Charge to full before first use.

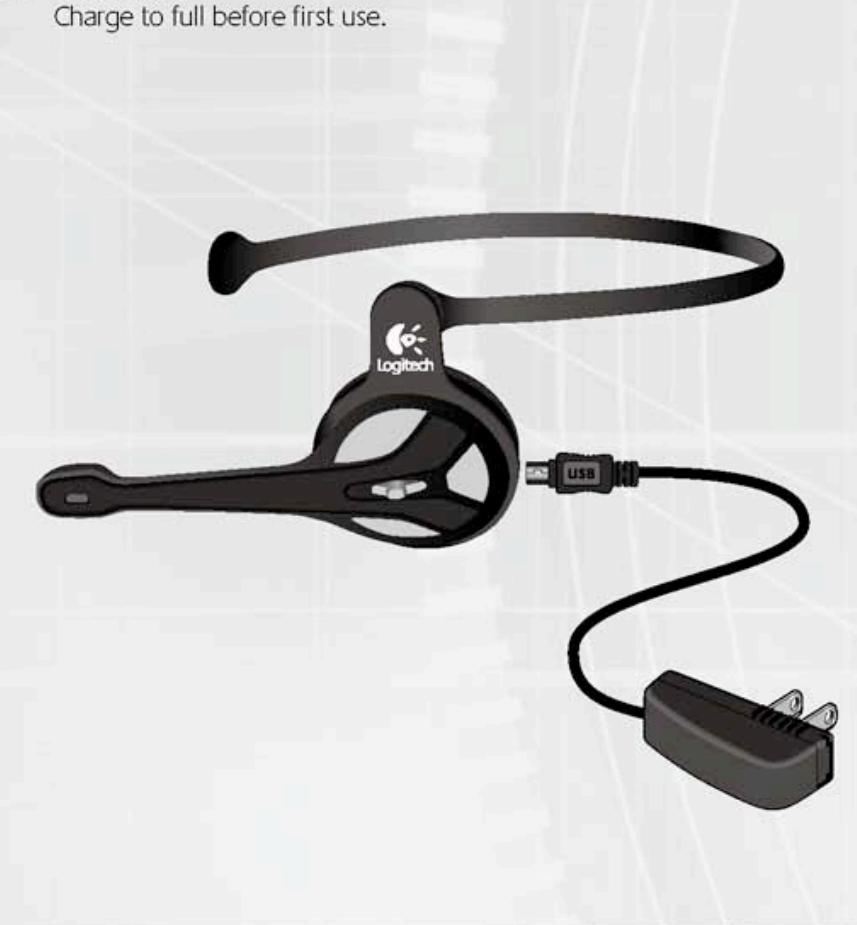

**3**

**ENGLISH**

Register today! Thank you for purchasing a Logitech® Cordless Vantage™ Headset (for PLAYSTATION® 3). Please take a moment to register your new product. Registration helps to ensure that you have the latest product information by providing you with these benefits: 1) Customer Service Updates - special notices about your new product and related upgrade offers; 2) Advance notice of new products and special offers. Visit our website at http://register.logitech.com and register now!

**FRANÇAIS**

Register today! Thank you for purchasing a Logitech® Cordless Vantage™ Headset (for PLAYSTATION® 3). Please take a moment to register your new product. Registration helps to ensure that you have the latest product information by providing you with these benefits: 1) Customer Service Updates - special notices about your new product and related upgrade offers; 2) Advance notice of new products and special offers. Visit our website at http://register.logitech.com and register now!

**ESPAÑOL**

Register today! Thank you for purchasing a Logitech® Cordless Vantage™ Headset (for PLAYSTATION® 3). Please take a moment to register your new product. Registration helps to ensure that you have the latest product information by providing you with these benefits: 1) Customer Service Updates - special notices about your new product and related upgrade offers; 2) Advance notice of new products and special offers. Visit our website at http://register.logitech.com and register now!

**4**

ENGLISH

## PRODUCT USAGE

This headset is designed to be used exclusively with PS3 gaming console with software that supports USB headsets. Before using this product, carefully read this manual and retain it for future reference. Please do not return this device to the store. If you are having difficulties configuring or using your new headset, please contact technical support online at support.logitech.com, or refer to the table of technical support telephone numbers in this document.

**Product Information**

1. The Multifunction Button (MFB) – is used to power on/off the headset, adjust the volume, activate mute, and put the headset in pairing mode.
   a. Power On/Off - press in to power on/off headset (3 seconds).
   b. Volume - pressing the MFB up or down will increase or reduce the volume level (when in game or chat).
   c. Mute – press the MFB in for 1 second and release to activate or de-activate the mute functionality (when in game or chat).
   d. Pairing – press and hold the MFB in for 10 seconds until the lights blink alternating red and green (from off state).
2. Ambidextrous behind the head design.
3. Large diameter audio driver with advanced noise filtering circuitry.
4. Noise canceling microphone.

FRANÇAIS

## PRODUCT USAGE

This headset is designed to be used exclusively with PS3 gaming console with software that supports USB headsets. Before using this product, carefully read this manual and retain it for future reference. Please do not return this device to the store. If you are having difficulties configuring or using your new headset, please contact technical support online at support.logitech.com, or refer to the table of technical support telephone numbers in this document.

**Product Information**

1. The Multifunction Button (MFB) – is used to power on/off the headset, adjust the volume, activate mute, and put the headset in pairing mode.
   a. Power On/Off - press in to power on/off headset (3 seconds).
   b. Volume - pressing the MFB up or down will increase or reduce the volume level (when in game or chat).
   c. Mute – press the MFB in for 1 second and release to activate or de-activate the mute functionality (when in game or chat).
   d. Pairing – press and hold the MFB in for 10 seconds until the lights blink alternating red and green (from off state).
2. Ambidextrous behind the head design.
3. Large diameter audio driver with advanced noise filtering circuitry.
4. Noise canceling microphone.

ESPAÑOL

## PRODUCT USAGE

This headset is designed to be used exclusively with PS3 gaming console with software that supports USB headsets. Before using this product, carefully read this manual and retain it for future reference. Please do not return this device to the store. If you are having difficulties configuring or using your new headset, please contact technical support online at support.logitech.com, or refer to the table of technical support telephone numbers in this document.

**Product Information**

1. The Multifunction Button (MFB) – is used to power on/off the headset, adjust the volume, activate mute, and put the headset in pairing mode.
   a. Power On/Off - press in to power on/off headset (3 seconds).
   b. Volume - pressing the MFB up or down will increase or reduce the volume level (when in game or chat).
   c. Mute – press the MFB in for 1 second and release to activate or de-activate the mute functionality (when in game or chat).
   d. Pairing – press and hold the MFB in for 10 seconds until the lights blink alternating red and green (from off state).
2. Ambidextrous behind the head design.
3. Large diameter audio driver with advanced noise filtering circuitry.
4. Noise canceling microphone.

**5**

**ENGLISH**

## CHARGING YOUR HEADSET

**Note: Fully charge before initial use.**

**Charging via USB cable.**

1. Your Cordless headset can be charged via the PLAYSTATION®3 using the USB cable (Included with PLAYSTATION®3) or you can use the included Logitech® Power Supply. (See adjacent.)

   Note: When headset is charging, amber light is solid. When headset is charged, amber light is on.

**FRANÇAIS**

## CHARGE DU CASQUE

**Note: Fully charge before initial use.**

**Charge par le biais d'un câble USB.**

1. Vous pouvez charger votre casque sans fil par le biais de votre PLAYSTATION®3 en utilisant le câble USB fourni avec la console, ou par le biais de l'alimentation Logitech® incluse. Voir ci-contre.

   Remarque: lorsque le casque est en charge, le témoin s'allume en orange constant. Lorsque le casque est chargé, le témoin orange s'éteint.

**ESPAÑOL**

## CARGA DEL AURICULAR

**Note: Fully charge before initial use.**

**Carga a través del cable USB.**

1. Cordless Vantage™ Headset se puede cargar a través de la PLAYSTATION®3 mediante el cable USB (incluido con la PLAYSTATION®3) o mediante la fuente de alimentación Logitech® incluida (véase a continuación).

   Nota: durante la carga del auricular, permanece iluminado el diodo ámbar. Una vez cargado, se apaga el diodo.ff.

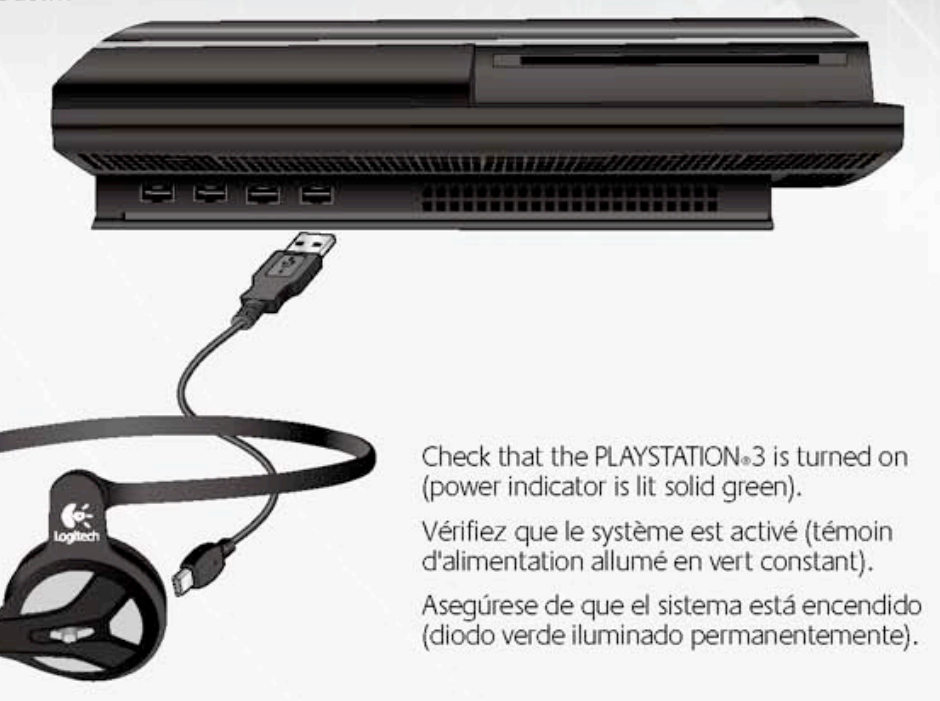

Check that the PLAYSTATION®3 is turned on (power indicator is lit solid green).

Vérifiez que le système est activé (témoin d'alimentation allumé en vert constant).

Asegúrese de que el sistema está encendido (diodo verde iluminado permanentemente).

**ENGLISH**

**Charging via Power Supply:**

1. Connect the power adapter to your Headset.
2. Plug the power adapter into your wall outlet.

   Note: When headset is charging, amber light is solid. When headset is charged, amber light is off.

**FRANÇAIS**

**Carga a través de la fuente de alimentación:**

1. Conecte el adaptador de alimentación al auricular.
2. Conecte el adaptador de alimentación a una toma de pared.

   Nota: durante la carga del auricular, permanece iluminado el diodo ámbar. Una vez cargado, se apaga el diodo.

**ESPAÑOL**

**Charge à l'aide du câble d'alimentation:**

1. Connectez l'adaptateur secteur au casque.
2. Branchez l'adaptateur secteur sur une prise murale.

   Remarque: lorsque le casque est en charge, le témoin s'allume en orange constant. Lorsque le casque est chargé, le témoin orange s'éteint.

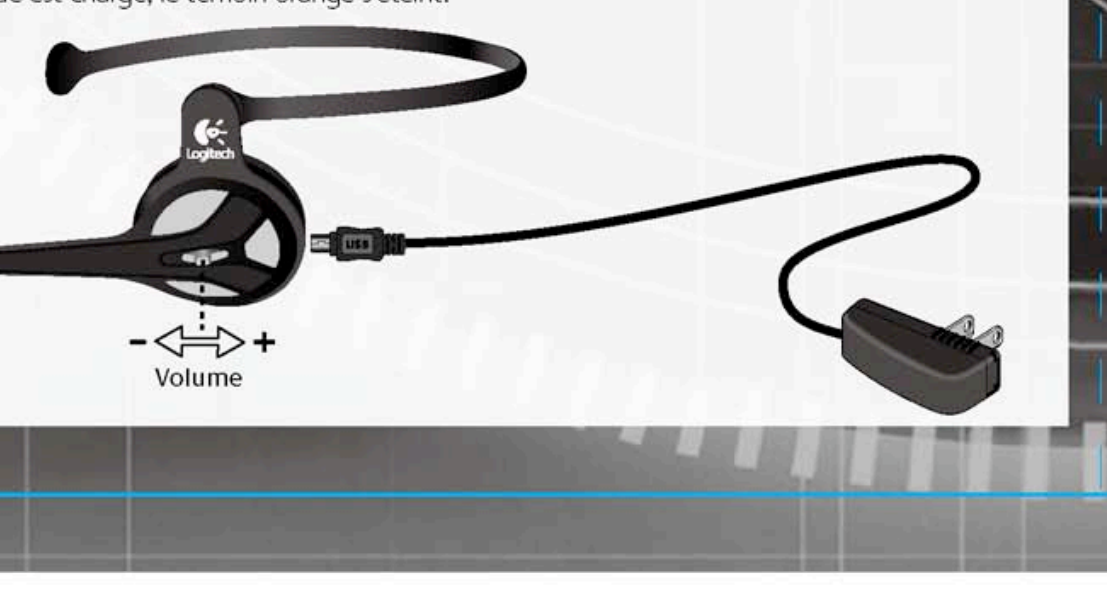

**6**

ENGLISH

## PAIRING YOUR HEADSET TO THE PLAYSTATION®3

**Before using your Logitech® Cordless Vantage™ Headset you must first pair it to your PLAYSTATION®3.**

To pair your headset:

1. Make sure headset is fully charged and turned OFF.
2. On the PLAYSTATION®3 go to the Settings section.
3. Select Accessory Settings.
4. Select Register Bluetooth® Device.
5. Select Register Headset/Microphone/Headphones. Select "yes" if you get the warning message "Do you want to register a different Bluetooth device?" (This warning appears if the user has previously paired a different headset to the PLAYSTATION®3.)
6. From the OFF state place your Cordless Vantage™ Headset in pairing mode by pressing and holding in the Multifunction Button for 10 seconds. The headset is in pairing mode when the lights flash red & green.
7. Select Start Scanning from the PLAYSTATION®3 menu.
8. The PLAYSTATION®3 will list all Bluetooth® devices within range. Select Cordless Vantage™ Headset.
9. Enter the pairing code 0000.
10. The PLAYSTATION®3 should confirm it successfully registered your headset.
11. Please refer to your game manual for game-specific configuration settings.

NOTE: Once paired on a PLAYSTATION®3 and selected as audio device for playback and mic, you must go into chat functions within PLAYSTATION®3 menus and configure the headset to be used with chat by pressing triangle button in chat and selecting Cordless Vantage™ Headset.

FRANÇAIS

## PAIRING YOUR HEADSET TO THE PLAYSTATION®3

**Before using your Logitech® Cordless Vantage™ Headset you must first pair it to your PLAYSTATION®3.**

To pair your headset:

1. Make sure headset is fully charged and turned OFF.
2. On the PLAYSTATION®3 go to the Settings section.
3. Select Accessory Settings.
4. Select Register Bluetooth® Device.
5. Select Register Headset/Microphone/Headphones. Select "yes" if you get the warning message "Do you want to register a different Bluetooth device?" (This warning appears if the user has previously paired a different headset to the PLAYSTATION®3.)
6. From the OFF state place your Cordless Vantage™ Headset in pairing mode by pressing and holding in the Multifunction Button for 10 seconds. The headset is in pairing mode when the lights flash red & green.
7. Select Start Scanning from the PLAYSTATION®3 menu.
8. The PLAYSTATION®3 will list all Bluetooth® devices within range. Select Cordless Vantage™ Headset.
9. Enter the pairing code 0000.
10. The PLAYSTATION®3 should confirm it successfully registered your headset.
11. Please refer to your game manual for game-specific configuration settings.

NOTE: Once paired on a PLAYSTATION®3 and selected as audio device for playback and mic, you must go into chat functions within PLAYSTATION®3 menus and configure the headset to be used with chat by pressing triangle button in chat and selecting Cordless Vantage™ Headset.

ESPAÑOL

## PAIRING YOUR HEADSET TO THE PLAYSTATION®3

**Before using your Logitech® Cordless Vantage™ Headset you must first pair it to your PLAYSTATION®3.**

To pair your headset:

1. Make sure headset is fully charged and turned OFF.
2. On the PLAYSTATION®3 go to the Settings section.
3. Select Accessory Settings.
4. Select Register Bluetooth® Device.
5. Select Register Headset/Microphone/Headphones. Select "yes" if you get the warning message "Do you want to register a different Bluetooth device?" (This warning appears if the user has previously paired a different headset to the PLAYSTATION®3.)
6. From the OFF state place your Cordless Vantage™ Headset in pairing mode by pressing and holding in the Multifunction Button for 10 seconds. The headset is in pairing mode when the lights flash red & green.
7. Select Start Scanning from the PLAYSTATION®3 menu.
8. The PLAYSTATION®3 will list all Bluetooth® devices within range. Select Cordless Vantage™ Headset.
9. Enter the pairing code 0000.
10. The PLAYSTATION®3 should confirm it successfully registered your headset.
11. Please refer to your game manual for game-specific configuration settings.

NOTE: Once paired on a PLAYSTATION®3 and selected as audio device for playback and mic, you must go into chat functions within PLAYSTATION®3 menus and configure the headset to be used with chat by pressing triangle button in chat and selecting Cordless Vantage™ Headset.

---

**7**

ENGLISH

## TESTING YOUR CORDLESS VANTAGE™ HEADSET

**To validate your headset settings:**

1. Go to the Settings section.
2. Select Accessory Settings.
3. Select Audio Device Settings.
4. Verify Cordless Vantage™ Headset is displayed or shown as the Input and Output Device.
5. Set mic level to 3.
6. If your headset is not listed. Verify the headset is powered on. If your headset is not listed select Input Device and search through the list for your headset. If the headset is still not listed, go back to the previous step and re-pair the headset with the PLAYSTATION®3.
7. While speaking into the headset microphone, the graphical bar on the screen should be blinking in the blue range. If the volume output is not loud enough, you may need to adjust the microphone so it is closer to your mouth.
8. Headset amplification levels should be left at -normal- on the PLAYSTATION®3 as the device has its own volume control. Only change this if absolutely necessary.

### USING YOUR HEADSET DURING GAME PLAY

- Make sure your headset is powered on and connected to the PLAYSTATION®3.
- Launch your game and follow the in-game instructions for using a headset.
- For some games this will include pushing a button on the gamepad to allow voice chat.

**Setup for other devices:**

The Cordless Vantage™ Headset is designed specifically for use with the PLAYSTATION®3; however it may function with other Bluetooth® compatible devices like phones and PCs. Please refer to the hardware instruction manuals for these devices; some advanced features may not be supported.

FRANÇAIS

## TESTING YOUR CORDLESS VANTAGE™ HEADSET

**To validate your headset settings:**

1. Go to the Settings section.
2. Select Accessory Settings.
3. Select Audio Device Settings.
4. Verify Cordless Vantage™ Headset is displayed or shown as the Input and Output Device.
5. Set mic level to 3.
6. If your headset is not listed. Verify the headset is powered on. If your headset is not listed select Input Device and search through the list for your headset. If the headset is still not listed, go back to the previous step and re-pair the headset with the PLAYSTATION®3.
7. While speaking into the headset microphone, the graphical bar on the screen should be blinking in the blue range. If the volume output is not loud enough, you may need to adjust the microphone so it is closer to your mouth.
8. Headset amplification levels should be left at -normal- on the PAYSTATION®3 as the device has its own volume control. Only change this if absolutely necessary.

USING YOUR HEADSET DURING GAME PLAY

- Make sure your headset is powered on and connected to the PLAYSTATION®3.
- Launch your game and follow the in-game instructions for using a headset.
- For some games this will include pushing a button on the gamepad to allow voice chat.

**Setup for other devices:**

The Cordless Vantage™ Headset is designed specifically for use with the PLAYSTATION®3; however it may function with other Bluetooth® compatible devices like phones and PCs. Please refer to the hardware instruction manuals for these devices; some advanced features may not be supported.

ESPAÑOL

## TESTING YOUR CORDLESS VANTAGE™ HEADSET

**To validate your headset settings:**

1. Go to the Settings section.
2. Select Accessory Settings.
3. Select Audio Device Settings.
4. Verify Cordless Vantage™ Headset is displayed or shown as the Input and Output Device.
5. Set mic level to 3.
6. If your headset is not listed. Verify the headset is powered on. If your headset is not listed select Input Device and search through the list for your headset. If the headset is still not listed, go back to the previous step and re-pair the headset with the PLAYSTATION®3.
7. While speaking into the headset microphone, the graphical bar on the screen should be blinking in the blue range. If the volume output is not loud enough, you may need to adjust the microphone so it is closer to your mouth.
8. Headset amplification levels should be left at -normal- on the PLAYSTATION®3 as the device has its own volume control. Only change this if absolutely necessary.

USING YOUR HEADSET DURING GAME PLAY

- Make sure your headset is powered on and connected to the PLAYSTATION®3.
- Launch your game and follow the in-game instructions for using a headset.
- For some games this will include pushing a button on the gamepad to allow voice chat.

**Setup for other devices:**

The Cordless Vantage™ Headset is designed specifically for use with the PLAYSTATION®3; however it may function with other Bluetooth® compatible devices like phones and PCs. Please refer to the hardware instruction manuals for these devices; some advanced features may not be supported.

**8**

ENGLISH

## QUICK REFERENCE GUIDE

| State | LEDs | Tone |
|---|---|---|
| OFF | Both LEDs are off | None |
| Pairing Mode | Alternating green & red LEDs quickly | None |
| Ready to connect | Green LED blinks once every 3 seconds | None |
| Headset is connected | Green LED is solid | None |
| LOW BATTERY | Green LED turns to red | Beep every minute |
| Headset is muted | Green LED solid blinks Red once every 4 sec | None |
| Headset is charging | Amber LED solid | None |
| Headset charged | Amber LED off | None |

## FREQUENTLY ASKED QUESTIONS

**Q: My headset is not showing up on the PLAYSTATION®3**

A: Verify your headset is charged and powered on. (The light should be blinking green.) Follow the pairing instructions to make sure your headset is successfully paired to the PLAYSTATION®3.

**Q: I am having a hard time hearing people through my headset**

A: Press the MFB towards your ear to back of head increase the headset volume.

**Q: Does my game support voice chat?**

A: You will need to check your game documentation to see if it supports voice.

**Q: Can I use my headset while it is plugged into the wall?**

A: Yes, the headset will work when it is plugged in.

FRANÇAIS

## QUICK REFERENCE GUIDE

| State | LEDs | Tone |
|---|---|---|
| OFF | Both LEDs are off | None |
| Pairing Mode | Alternating green & red LEDs quickly | None |
| Ready to connect | Green LED blinks once every 3 seconds | None |
| Headset is connected | Green LED is solid | None |
| LOW BATTERY | Green LED turns to red | Beep every minute |
| Headset is muted | Green LED solid blinks Red once every 4 sec | None |
| Headset is charging | Amber LED solid | None |
| Headset charged | Amber LED off | None |

FREQUENTLY ASKED QUESTIONS

**Q: My headset is not showing up on the PLAYSTATION®3**

A: Verify your headset is charged and powered on. (The light should be blinking green.) Follow the pairing instructions to make sure your headset is successfully paired to the PLAYSTATION®3.

**Q: I am having a hard time hearing people through my headset**

A: Press the MFB towards your ear to back of head increase the headset volume.

**Q: Does my game support voice chat?**

A: You will need to check your game documentation to see if it supports voice.

**Q: Can I use my headset while it is plugged into the wall?**

A: Yes, the headset will work when it is plugged in.

ESPAÑOL

## QUICK REFERENCE GUIDE

| State | LEDs | Tone |
|---|---|---|
| OFF | Both LEDs are off | None |
| Pairing Mode | Alternating green & red LEDs quickly | None |
| Ready to connect | Green LED blinks once every 3 seconds | None |
| Headset is connected | Green LED is solid | None |
| LOW BATTERY | Green LED turns to red | Beep every minute |
| Headset is muted | Green LED solid blinks Red once every 4 sec | None |
| Headset is charging | Amber LED solid | None |
| Headset charged | Amber LED off | None |

FREQUENTLY ASKED QUESTIONS

**Q: My headset is not showing up on the PLAYSTATION®3**

A: Verify your headset is charged and powered on. (The light should be blinking green.) Follow the pairing instructions to make sure your headset is successfully paired to the PLAYSTATION®3.

**Q: I am having a hard time hearing people through my headset**

A: Press the MFB towards your ear to back of head increase the headset volume.

**Q: Does my game support voice chat?**

A: You will need to check your game documentation to see if it supports voice.

**Q: Can I use my headset while it is plugged into the wall?**

A: Yes, the headset will work when it is plugged in.

**9**

ENGLISH

## END-OF-LIFE BATTERY DISPOSAL INSTRUCTIONS

This device uses a Lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it. If the battery does not recharge, please contact Logitech Customer Support for repair information. **The Logitech® Cordless Vantage™ Headset do not have a user-serviceable battery. Please do NOT attempt to change the battery yourself.**

⚠ **Caution:** The battery used in this device may present a risk of fire, explosion or chemical burn if mistreated.

Do not expose batteries to heat above 130° F (54°C), or incinerate. Do not use or charge the batteries if they appear to be leaking, discolored, deformed, or in any way abnormal. Do not leave your batteries discharged or unused for extended periods of time. When batteries are misused, they may explode or leak, causing burns and personal injury. If your batteries leak, use normal precaution and discard the batteries immediately.

Leaking batteries can cause skin burns or other personal injury. Do not dispose of batteries in a fire. Do not immerse batteries in water. Keep batteries out of reach of children.

FRANÇAIS

## CONSIGNES DE RECYCLAGE DES BATTERIES USAGÉES

Le dispositif fonctionne avec une pile au lithium-ion d'une durée de vie égale à la sienne. Si vous pensez que la pile ne fonctionne plus, essayez de la charger. Si elle ne se recharge pas, veuillez contacter le Service clientèle de Logitech pour obtenir des informations sur les réparations. **La pile du casque Cordless Vantage™ de Logitech® n'est pas réparable par l'utilisateur. N'essayez PAS de la remplacer vous-même.**

⚠ **Attention:** la pile du dispositif peut présenter des risques d'incendie ou de brûlure chimique si elle n'est pas manipulée comme il se doit.

Ne l'incinérez pas et ne l'exposez pas à des températures supérieures à 54°C. N'utilisez et ne rechargez pas la pile si elle coule, si elle est décolorée, déformée ou si elle présente une anomalie. Ne laissez pas vos piles déchargées ou inutilisées pendant de longues périodes. En cas de mauvaise utilisation, elle risque d'exploser ou de couler, entraînant des dommages matériels et corporels. Si elles coulent, prenez les précautions d'usage et débarrassez-vous en immédiatement.

Une pile qui coule risque de provoquer des brûlures de peau ou d'autres dommages corporels. Ne jetez pas les piles dans le feu. Ne les plongez pas dans l'eau. Tenez-les hors de portée des enfants.

ESPAÑOL

## INSTRUCCIONES PARA DESECHAR LA PILA

Este dispositivo utiliza una pila de ion litio, que debería durar tanto como el dispositivo propiamente dicho. Si piensa que la suya puede estar gastada, pruebe a cargarla. Si no se recarga, póngase en contacto con el servicio de atención al cliente para información sobre reparación. **Los auriculares Logitech® Cordless Vantage™ no tienen una pila que pueda reparar el usuario. NO intente cambiar la pila.**

⚠ **Precaución:** La pila usada en este dispositivo puede provocar incendios, explosiones o quemaduras químicas si no se trata debidamente.

No someta las pilas a temperaturas superiores a 54°C (130° F) ni incineración. No utilice ni recargue las pilas si parece que tienen fugas, pérdida de color, están deformadas o presentan cualquier otro tipo de anomalía. No deje las pilas descargadas o sin utilizar durante periodos prolongados. Un uso inadecuado de las pilas puede hacerlas explotar u originar escapes, con el consiguiente riesgo de quemaduras y lesiones físicas. Si se produce alguna fuga, tome las precauciones habituales y deseche las pilas inmediatamente.

Las pilas con fugas pueden producir quemaduras en la piel u otros tipos de lesiones físicas. No arroje las pilas al fuego. No sumerja las pilas en agua. Mantenga las pilas fuera del alcance de los niños.

**10**

ENGLISH

### RECYCLING INFORMATION FOR LITHIUM-ION BATTERIES

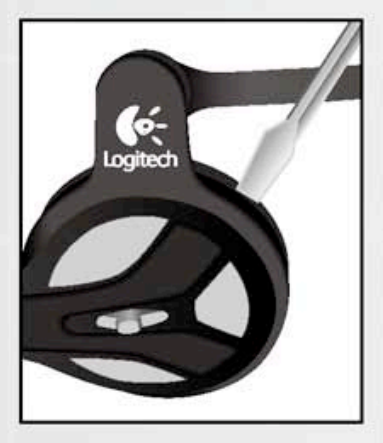

1. Remove ear pad.
2. Use either T6 Torque Head or a regular screwdriver to remove back as shown.
3. Pull housing apart and remove PCBA.
4. Peel battery away from the PCBA.
5. Disconnect battery connector.
6. Do not place in trash. Dispose of battery according to local battery recycling laws.

**Regulatory Information:**

**FCC and IC Statements**

This Class B digital apparatus complies with Canadian ICES-003 and part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: The manufacturer is not responsible for ANY interference, for example RADIO OR TV interference, caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FRANÇAIS

### INFORMATIONS SUR LE RECYCLAGE DES BATTERIES LITHIUM-ION.

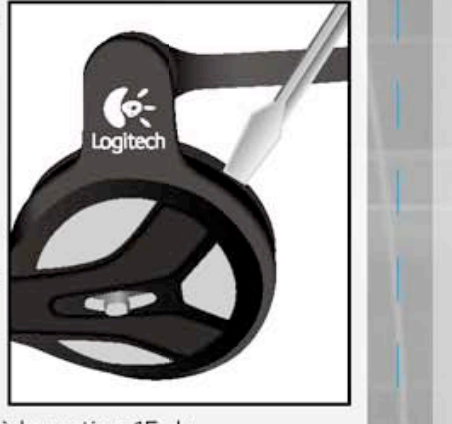

1. Enlevez l'oreillette.
2. Utilisez un tournevis de serrage T6 ou un tournevis standard pour retirer le couvercle arrière tel qu'indiqué.
3. Dégagez le compartiment et ôtez la carte de circuits imprimés
4. Détachez la batterie de la carte de circuits imprimés.
5. Débranchez le connecteur de la batterie.
6. Ne jetez pas la batterie dans une poubelle ordinaire. Débarrassez-vous en conformément aux directives locales en matière de recyclage.

**Informations réglementaires**

**Déclarations FCC et IC**

Ce dispositif de classe B est conforme à la norme canadienne ICES-003 et à la section 15 du règlement de la FCC. L'utilisation de l'appareil est soumise aux deux conditions suivantes: 1) le dispositif concerné ne doit pas causer d'interférences dangereuses et 2) il doit accepter toute interférence reçue, y compris les interférences risquant d'engendrer un fonctionnement indésirable. Remarque: le fabricant n'est en aucun cas responsable de toute interférence (interférences radio ou TV) provoquée par des modifications non autorisées sur le dispositif. De telles modifications pourraient contraindre l'utilisateur à ne plus utiliser son équipement.

REMARQUE: cet équipement a été testé et déclaré conforme aux limitations prévues dans le cadre de la catégorie B des appareils numériques selon la définition de la section 15 du règlement de la FCC. Ces limitations ont été conçues pour fournir une protection raisonnable contre tout brouillage nuisible au sein d'une installation résidentielle. Cet équipement génère, utilise et diffuse des ondes radio et, s'il n'est pas installé ni utilisé en conformité avec les instructions dont il fait l'objet, peut causer des interférences gênantes avec les communications radio. Nous ne saurions toutefois garantir l'absence d'interférences dans une installation particulière. Si cet équipement produit des interférences graves lors de réceptions radio ou télévisées qui peuvent être détectées en allumant et en éteignant l'équipement, vous êtes invité à les supprimer de plusieurs manières:

- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance séparant l'équipement et le récepteur.
- Connecter l'équipement à un circuit différent de celui auquel le récepteur est connecté.
- Contacter votre revendeur ou un technicien radio/TV qualifié.

ESPAÑOL

### INFORMACIÓN DE RECICLAJE PARA PILAS DE ION LITIO.

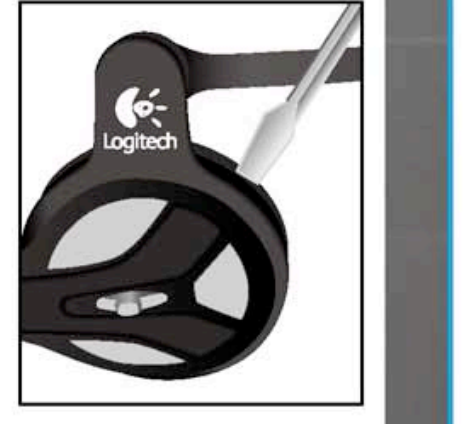

1. Extraiga la almohadilla.
2. Utilice un destornillador normal o un perno con par de apriete calibrado T6 para retirar el panel posterior de la forma mostrada.
3. Desmonte el panel y saque la placa PCBA.
4. Extraiga la pila de la placa PCBA.
5. Desconecte el conector de la pila.
6. No la tire a la basura. Deshágase de la pila según las leyes sobre reciclaje concernientes a su jurisdicción.

**Información sobre normativas**

**Declaración de normativas FCC e ICC**

Este dispositivo digital de clase B cumple todos los requisitos especificados en la normativa canadiense ICES-003 y en la sección 15 de las normativas FCC. El funcionamiento está sujeto a las dos condiciones siguientes: (1) este dispositivo no debe originar interferencias perjudiciales y (2) este dispositivo no debe rechazar ninguna interferencia recibida, incluso cuando ésta pudiera originar el funcionamiento indebido del dispositivo. Nota: el fabricante no se responsabiliza por NINGUNA interferencia, por ejemplo interferencia de RADIO O TV, que pueda producirse en este equipo debido a modificaciones sin autorización realizadas en el mismo. Estas modificaciones podrían anular el derecho del usuario a utilizar el equipo.

NOTA: Este equipo ha sido sometido a las pruebas pertinentes y cumple con los límites establecidos para un dispositivo digital de la Clase B, según lo establecido en el apartado 15 de las normas de la FCC. Estos límites están destinados a proporcionar protección adecuada ante interferencias perjudiciales en instalaciones domésticas. Este equipo genera, usa y puede emitir energía radioeléctrica. Respete las instrucciones pertinentes durante la instalación y utilización del equipo para evitar la aparición de posibles interferencias de radio. No obstante, no hay garantía de que no vayan a producirse interferencias en una instalación concreta. Si este equipo es el responsable de la presencia de interferencias en la recepción de radio o televisión (lo que puede verificarse apagando y encendiendo el equipo), se aconseja tomar una o varias de las medidas siguientes para intentar eliminar las interferencias:

- Cambie la orientación o la ubicación de la antena receptora.
- Aumente la separación entre el equipo y el receptor.
- Conecte el equipo a una toma de corriente perteneciente a un circuito diferente al que está conectado el receptor.
- Recurra a su distribuidor o a personal técnico especializado en radio y televisión.

**11**

ENGLISH

## LIMITED WARRANTY

**Logitech® Hardware Product Limited Warranty**

Logitech® warrants that your Logitech hardware product shall be free from defects in material and workmanship for two (2) years, beginning from the date of purchase. Except where prohibited by applicable law, this warranty is nontransferable and is limited to the original purchaser. This warranty gives you specific legal rights, and you may also have other rights that vary under local laws.

**Remedies**

Logitech's entire liability and your exclusive remedy for any breach of warranty shall be, at Logitech's option, (1) to repair or replace the hardware, or (2) to refund the price paid, provided that the hardware is returned to the point of purchase, or such other place as Logitech may direct, with a copy of the sales receipt or dated itemized receipt. Shipping and handling charges may apply except where prohibited by applicable law. Logitech may, at its option, use new or refurbished or used parts in good working condition to repair or replace any hardware product. Any replacement hardware product will be warranted for the remainder of the original warranty period, or thirty (30) days, whichever is longer or for any additional period of time that may be applicable in your jurisdiction.

This warranty does not cover problems or damage resulting from (1) accident, abuse, misapplication, or any unauthorized repair, modification or disassembly; (2) improper operation or maintenance, usage not in accordance with product instructions or connection to improper voltage supply; or (3) use of consumables, such as replacement batteries, not supplied by Logitech except where such restriction is prohibited by applicable law.

**How to Obtain Warranty Support**

Before submitting a warranty claim, we recommend you visit the support section at www.logitech.com for technical assistance. Valid warranty claims are generally processed through the point of purchase during the first thirty (30) days after purchase; however, this period of time may vary depending on where you purchased your product. Please check with Logitech or the retailer where you purchased your product for details. Warranty claims that cannot be processed through the point of purchase and any other product related questions should be addressed directly to Logitech. The addresses and customer service contact information for Logitech can be found in the documentation accompanying your product and on the web at www.logitech.com/contactus.

**Limitation of Liability**

LOGITECH SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, REVENUE OR DATA (WHETHER DIRECT OR INDIRECT) OR COMMERCIAL LOSS FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON YOUR PRODUCT EVEN IF LOGITECH HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some jurisdictions do not allow the exclusion or limitation of special, indirect, incidental, or consequential damages, so the above limitation or exclusion may not apply to you.

**Duration of Implied Warranties**

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS HARDWARE PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THE APPLICABLE LIMITED WARRANTY PERIOD FOR YOUR PRODUCT. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**National Statutory Rights**

Consumers have legal rights under applicable national legislation governing the sale of consumer goods. Such rights are not affected by the warranties in this Limited Warranty.

**No Other Warranties**

No Logitech dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

FRANÇAIS

## GARANTIE LIMITÉE

**Garantie limitée du matériel Logitech**

Logitech garantit que votre produit Logitech exempt de tout défaut de matériel et de construction pour 2 ans, à partir de sa date d'achat. Hormis lorsque les lois en vigueur l'interdisent, cette garantie n'est pas transférable et elle est limitée à l'acheteur initial. Cette garantie vous octroie un certain nombre de droits et vous bénéficiez également d'autres droits qui varient selon les lois locales en vigueur.

**Recours**

En cas de rupture de garantie, la seule obligation de Logitech et votre seul recours consistent, à la discrétion de Logitech, (1) à réparer ou remplacer le matériel, ou (2) à rembourser le montant payé, sous réserve qu'il soit renvoyé au point de vente ou à tout autre lieu indiqué par Logitech, accompagné d'un justificatif d'achat ou d'un reçu détaillé et daté. Des frais de port et de traitement peuvent être demandés, sauf si cela est contraire aux lois applicables. Logitech se réserve le droit d'utiliser des pièces neuves, remises à neuf ou déjà utilisées mais en état de marche pour réparer ou remplacer le produit. Tout matériel de remplacement sera garanti pour le reste de la période de garantie initiale ou pour trente (30) jours, selon la période la plus longue, ou pour toute durée supplémentaire éventuellement requise par la loi dans votre juridiction.

[illegible]

**Comment** [illegible]

[illegible]

**Limite de** [illegible]

[illegible]

**Durée des** [illegible]

[illegible]

**Droits nat**[illegible]

[illegible]

**Aucune au**[illegible]

[illegible]

ESPAÑOL

## GARANTÍA LIMITADA

**Garantía Limitada de Productos de Hardware Logitech**

Logitech garantiza que sus productos de hardware Logitech no presentarán defectos materiales ni de fabricación durante 2 años, a partir de la fecha de compra. Salvo disposición legal contraria, esta garantía no es transferible y se limita al comprador original. Esta garantía le otorga derechos legales específicos y es posible que usted también tenga otros derechos que varían según las leyes locales.

**Recursos**

La responsabilidad total de Logitech y su recurso exclusivo en caso de violación de la garantía consistirá en, según el criterio de Logitech, (1) reparar o reemplazar el hardware, o (2) reembolsar el precio abonado, siempre que se devuelva el hardware al punto de venta u otro lugar similar indicado por Logitech, con una copia del recibo de venta o del recibo detallado y fechado. Es posible que se apliquen gastos de envío y entrega, salvo disposición legal contraria. Es posible que Logitech utilice, según su criterio, piezas nuevas, restauradas o usadas en buenas condiciones para reparar o reemplazar cualquier producto de hardware. Todo producto de hardware de reemplazo estará cubierto por la garantía durante el período restante correspondiente al período de la garantía original o durante treinta (30) días, el período que sea más largo, o durante cualquier período adicional establecido en su jurisdicción.

[illegible]

---

Logitech®

www www.logitech.com/support

| Location / Pays | Hotline Technical Help / Numéro Aide Technique |
|---|---|
| United States | +1 702 269 3457 |
| Argentina | 0800 555 3284 |
| Brazil | 0800 891 4173 |
| Canada | +1 416 207 2782 |
| Chile | 1230 020 5484 |
| Latin America | +55 11 3444 6761 |
| Mexico | 001 800 578 9619 |

© 2007 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners.

© 2007 Logitech. Tous droits réservés. Logitech, le logo Logitech et les autres marques Logitech sont la propriété exclusive de Logitech et sont susceptibles d'être des marques déposées. Toutes les autres marques de commerce sont la propriété exclusive de leurs détenteurs respectifs.

© 2007 Logitech. Reservados todos los derechos. Logitech, el logotipo de Logitech y las demás marcas de Logitech pertenecen a Logitech y pueden estar registradas. Las demás marcas comerciales pertenecen a sus respectivos propietarios.

624608-0403