

Fast Lane

File Name: US-10-FL-BLK-050-A-1 Mfr#: KD0704 Skn#:	
Studio: Design Design	Vendor: MAC DUE INT
Product Description: FT-001	
Flat Art Size: A5 x 8 pages	Coating: PKG color K
Packaging Dimension:	Insert color
Raster Effect: 150 DPI	Date: 10-5-13
(PDP) Primary Display Panel Size: Warning Size/Legal Panel:	

*REMINDER: Open space above UPC on packaging (and end of sewn-in-label if applicable) is the DATE CODE STAMP area. Please refer to TRU Shipping manual for date code requirements detail.

English version Front

SAFETY FIRST

Read these instructions carefully before using this product and keep in a safe place for future reference.

We advise the use of this product while under the guidance of an adult.

This toy is for children of 6 years and above.

Do not use this toy on the road and keep away from animals and young children.

Do not attempt to modify this product in any way or lift it off the ground while in movement.

Keep moving parts of this product away from hair, clothes and hands.

Handle with care at all times and only when the motor is off.

Examining the adaptor periodically for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event of such conditions, the adaptor should not be used until properly repaired.

FCC Statements

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply within the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generated, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harm to radio communications.

However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Please keep this packaging for future reference.



#KD0701

CAUTION: ELECTRIC TOY
Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.
CAUTION-SUPERVISION REQUIRED-ELECTRIC TOY-UNPLUG WHEN NOT IN USE.

FT-001

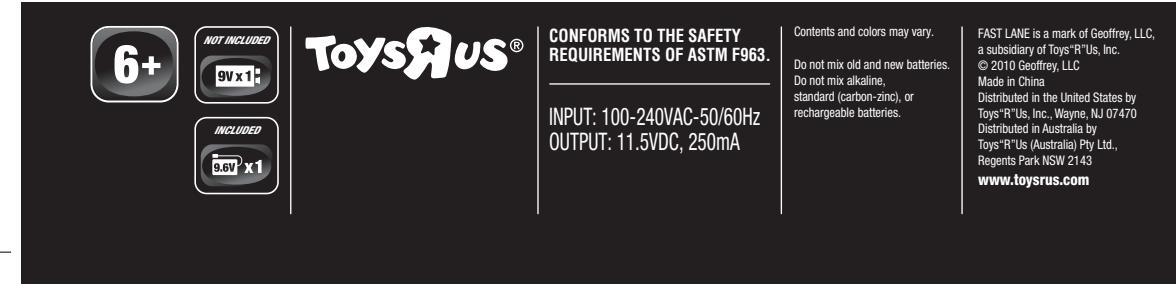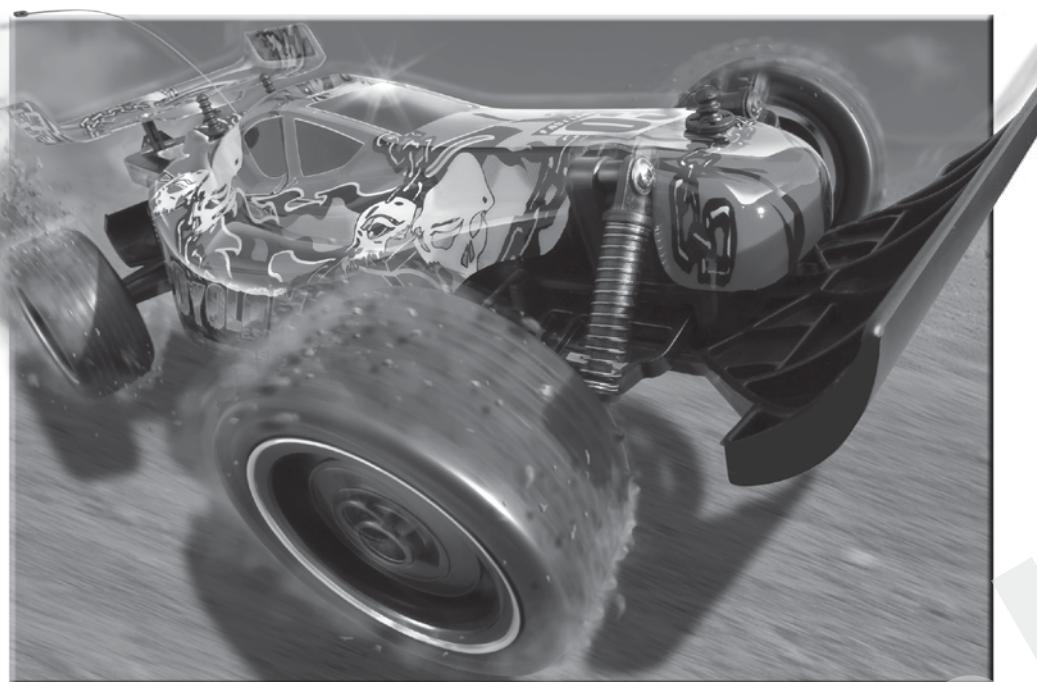

English version Back

CHARACTERISTICS

Functions: Forwards, Backwards, Right, left and stop.

BATTERY INSTALLATION

A-TRANSMITTER
1. Ensure that the ON/OFF switch is in the OFF position;
2. Open the battery compartment and insert 9V/6F22 battery paying attention to the + and - indications;
3. Replace the battery compartment cover ensuring that it closed securely;
4. Attach the antenna to the top of the transmitter ensuring that it is screwed on tight, until fully secured on.

B-VEHICLE

1. Ensure that the ON/OFF switch is in the OFF position;
2. Open the battery compartment and insert the 9.6V battery pack connecting the cables inside.
3. Replace the battery compartment cover ensuring that it closed securely;

RECHARGING THE BATTERY

"WARNING" RISK OF ELECTRIC SHOCK. USE THE BATTERY CHARGER IN A DRY LOCATION ONLY.
ATTENTION! The battery charger is not a toy. Keep out of the reach of children. Inspect the battery charger before use. In the case of damage or wear do not use, instead contact an authorised assistance centre for repair or replacement. Battery recharging should be done by an adult.

After the initial charging the battery will not be fully charged, for the best results the battery pack should be used and recharged 4-5 times. For best results ensure that the battery pack is only recharged after the life is fully exhausted.

1. Connect the cables from the battery charger to those of the battery pack. Then plug the battery charger to the current ensuring the voltage is correct. The normal recharge time is 4 - 6 hours.
2. Disconnect the battery charger from the current and then the battery from the recharger. After recharge the battery will be warm to the touch.

BATTERY MAINTENANCE

Do not overcharge the battery. For best results ensure that the battery is completely used before charging. The battery will heat up during recharge and use, handle with care and allow cooling before recharging. Use only the recharger supplied to recharge the battery.

OPERATING FUNCTION

Move the ON/OFF switches of the transmitter and vehicle to the ON position.
1) To make the vehicle move forwards or backwards push on or pull back the trigger respectively;
2) To make the car turn left or right, turn the wheel forward or backwards on the transmitter respectively;
3) To stop the vehicle release the trigger
4) For best performance ensure that the antenna is pointing towards the vehicle.
While not in use ensure that transmitter switch and vehicle switch are in the OFF position.

Trouble shooting		
Problem	Analyze	Solution
Car does not work	Low power Loose battery connector Bad battery On/off switch is off	Recharge the battery Secure battery connection Replace with new battery Set the switch to on
Short run time	Low power Battery is old	Re-charge the battery fully Change to new battery
Low speed	Low power	Re-charge the battery fully
Does not respond to remote control	Remote battery weak Remote out of distance	Replace with new battery Reduce distance Between car and remote

WARNING!

Do not submerge this item in water.
Use a damp cloth and dry before use.
Do not leave this item in direct sunlight for a long period.
Non-rechargeable batteries are not to be recharged.
Rechargeable batteries are only to be charged by an adult.
Different types of batteries or new and used batteries are not to be mixed (transmitter only).
Only batteries of the same or equivalent type as recommended are to be used.
Batteries are to be inserted with correct polarity.
Exhausted batteries are to be removed from the toy.
Remove the batteries from the toy when not in use for an extended period of time.
The supply terminals are not to be short-circuited.
If there are leaks of liquid or signs of wear don't attempt to recharge the battery pack.
The manufacturer is not responsible for the possible interferences from radio or TV owing to non-permitted modifications on this appliance.
Transformers or battery chargers used with the toy must be regularly examined if any damage to the cord, plug, enclosure and other parts. And in the event of such damage, they must not be used until the damage has been repaired.
Do not dispose of this product and accessories in a fire, as they may leak and explode, dispose of them in the appropriate container.

Spanish version Front

LA SEGURIDAD ES SIEMPRE LO PRIMERO

Lea con detenimiento estas instrucciones antes de usar este producto y guárdelas en un lugar seguro para futuras consultas.

Recomendamos que este producto se use con la orientación de un adulto.

Este juguete es para niños a partir de 6 años de edad.

No use este juguete en la carretera y manténgalo fuera del alcance de animales y niños pequeños.

No intente modificar este producto de ninguna manera ni levantarlo del suelo mientras esté en movimiento.

Mantenga las piezas móviles alejadas del pelo, ropa y manos.

Manipúlelo siempre con cuidado y sólo cuando el motor esté apagado.

Se recomienda revisar periódicamente el adaptador para comprobar si hay riesgo de incendio, descarga eléctrica o lesiones a personas, si alguno de estos riesgos está presente, no se deberá utilizar el adaptador hasta que esté correctamente reparado.

Información de la FCC (Comisión Federal de Comunicaciones)

Este dispositivo cumple con la apartado 15 de las reglas de la FCC. El funcionamiento está sujeto a las siguientes condiciones:

- 1) Este dispositivo no debe causar interferencias dañinas.
- 2) Este dispositivo debe aceptar las interferencias recibidas, incluyendo interferencias que puedan causar un funcionamiento no deseado.

NOTA: Este equipo ha sido probado y se ha comprobado que cumple con los límites para un dispositivo digital Clase B, de conformidad con el apartado 15 de las normas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede ocasionar interferencias dañinas para las telecomunicaciones.

Si embargo, no existe garantía de que no se produzcan interferencias dañinas en la recepción de radio o televisión, lo que se puede determinar al apagarlo y encenderlo, intente corregirlo a través de las medidas siguientes:

- Reorientar o reubicar la antena receptora.
- Aumentar la separación entre el equipo y el receptor.
- Conectar el equipo a una toma en un circuito distinto a la del receptor.
- Consultar al distribuidor o a un técnico experimentado de radio/TV para obtener más información.
- Advertencia: los cambios o modificaciones que no hayan sido expresamente aprobados por la parte responsable y que no cumplen las normativas vigentes podrían anular la autoridad del usuario para utilizar el equipo.


Guarde este embalaje para futuras consultas.



#KD0701

PRECAUCIÓN-JUGUETE ELÉCTRICO:
No recomendada para niños menores de 6 años. Al funcionar con electricidad, deben cumplirse los consejos de seguridad durante la manipulación y la utilización para evitar posibles descargas eléctricas.
PRECAUCIÓN-NECESARIA SUPERVISIÓN-JUGUETE ELÉCTRICO-DESCONECTAR CUANDO NO ESTÉ EN USO.

FT-001

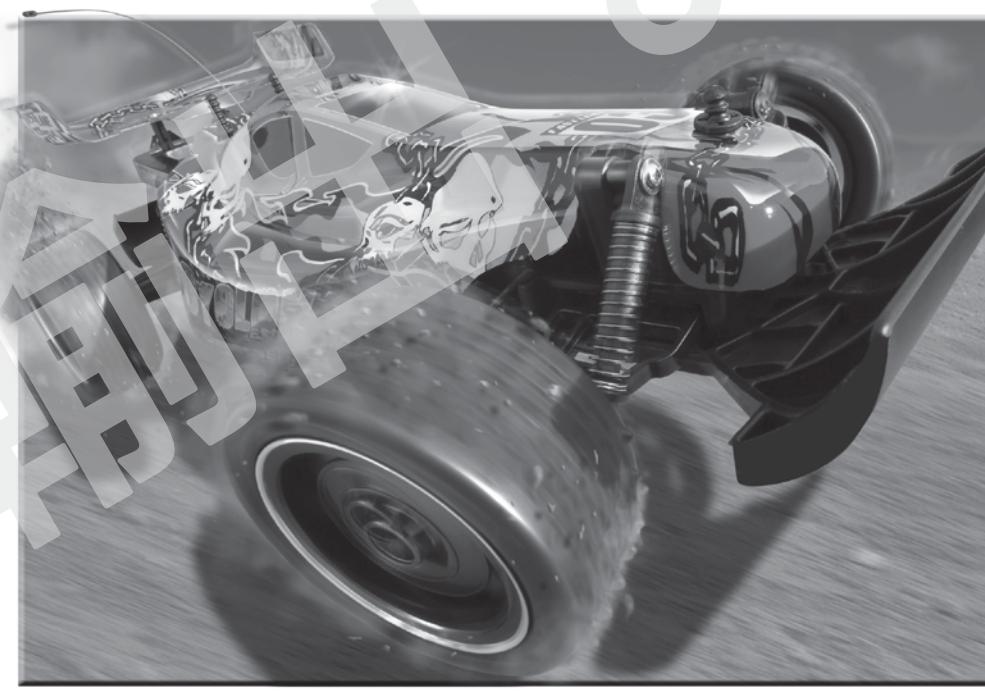

Spanish version Back

CARACTERÍSTICAS

Funciones: hacia adelante, hacia atrás, hacia la derecha, hacia la izquierda y parada.

INSTALACIÓN DE LAS PILAS

A-CONTROL REMOTO

1. Asegúrese de que el interruptor ON/OFF esté en la posición OFF (apagado).
2. Abra el compartimento de las pilas e introduzca una de 9 V de tipo 6F22 respetando las indicaciones sobre polaridad.
3. Vuelva a colocar la tapa del compartimento de las pilas y asegúrese de esté bien cerrada.
4. Monte la antena en la parte superior del control remoto y asegúrese de atornillarla bien hasta que quede fija por completo.

B-VEHÍCULO

1. Asegúrese de que el interruptor ON/OFF esté en la posición OFF (apagado).
2. Abra el compartimento de la batería e inserte el paquete de la batería de 9.6 V y conecte los cables en el interior.
3. Vuelva a colocar la tapa del compartimento de la batería y asegúrese de que esté bien cerrada.

RECARGA DE LA BATERÍA

"ADVERTENCIA" DE RIESGO DE DESCARGA ELÉCTRICA.

UTILICE ESTE CARGADOR DE LA BATERÍA SÓLO EN UN LUGAR SECO.

ATENCIÓN: El cargador de la batería no es un juguete. Manténgalo fuera del alcance de los niños. Inspírencia el cargador de la batería antes de utilizarlo. No lo utilice si está dañado o desgastado; en su lugar, póngase en contacto con un centro de asistencia autorizado para su reparación o cambio. Se recomienda que la recarga de la batería se lleve a cabo por parte de un adulto.

Tras la recarga inicial, la batería no estará cargada por completo: para obtener los mejores resultados el paquete de batería debe usarse y recargarse cuatro o cinco veces. Para obtener los mejores resultados, asegúrese de recargar el paquete de batería sólo cuando esté agotada por completo.

1. Conecte los cables del cargador de la batería a los del paquete de batería. Despues, asegúrese de que el voltaje sea el correcto y conecte el cargador de la batería a la corriente. El tiempo normal de recarga es de entre cuatro y seis horas.

2. Desconecte de la corriente el cargador de la batería y, despues, la batería del cargador. Tras la recarga, la batería estará ligeramente caliente al tacto.

MANTENIMIENTO DE LA BATERÍA

No sobrecharge la batería. Para obtener los mejores resultados, asegúrese de que esta esté usada por completo antes de cargarla. La batería se calienta durante la recarga y el uso: manipúlela con cuidado y deje que se enfrie antes de recargarla. Use exclusivamente el cargador que se proporciona para recargar la batería.

FUNCIONAMIENTO

Coloque el interruptor ON/OFF (encendido/apagado) tanto del control remoto como del vehículo en la posición ON (encendido).

- 1) Para hacer que el vehículo avance o retroceda, empuje hacia delante o tire hacia atrás del gatillo respectivamente.
- 2) Para hacer que el vehículo gire a la izquierda o hacia la derecha, gire el volante del control remoto hacia delante o hacia atrás respectivamente.
- 3) Para detener el vehículo, suelte el gatillo.
- 4) Para obtener el mejor funcionamiento, asegúrese de dirigir la antena hacia el vehículo. Cuando no se usen, asegúrese de que el control remoto y el vehículo estén en la posición OFF (apagado).

Problema	Solución de problemas
El coche no funciona	Comprobar Poca potencia Recargar la batería Conexión suelta de la batería Poner el conector Batería agotada y en mal estado Cambiar por una batería nueva
El interruptor ON/OFF está en la posición OFF (apagado).	Cambiar por la posición de encendido
Poco tiempo de funcionamiento	Batería con poca potencia Recargar la batería por completo La batería es vieja Cambiar por una batería nueva
Velocidad baja	Poca potencia Recargar la batería por completo
Comportamiento extraño del control remoto	Pilas del control remoto agotadas Cargar la batería de forma adecuada Control remoto demasiado lejos Mantener una distancia corta entre el coche y el control remoto

AVISOS
No sumerja este artículo en agua.
Use un trapo húmedo y séquelo tras su uso.
No deje este artículo expuesto a la luz solar directa durante un largo período de tiempo.
Las pilas no recargables no se deben recargar.
Las baterías recargables se deben retirar del juguete antes de cargarse (si se pueden cambiar).
Las baterías recargables solo las debe cargar un adulto.
No se deben mezclar distintos tipos de pilas