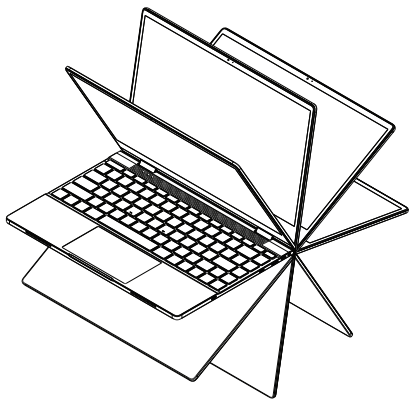# Quick Start Guide

nexdock

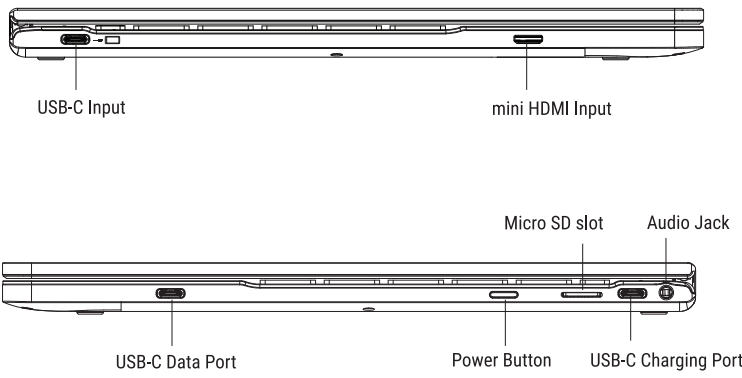Questions? Get answers 24/7 at NexDock.com/support.

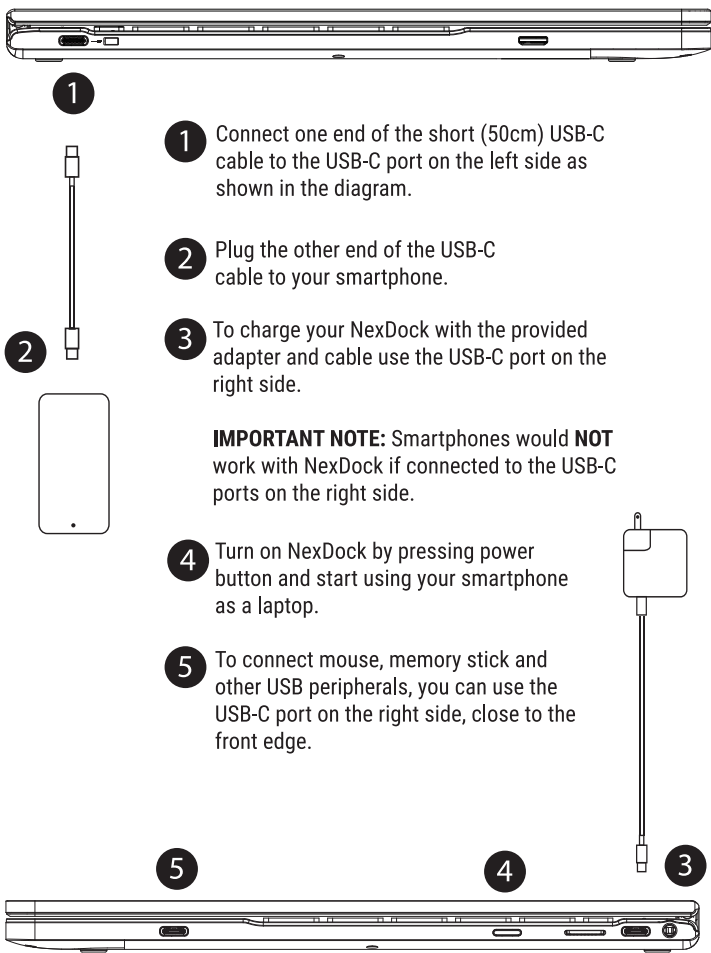## Get to Know Your NexDock

What's in the Box:

- NexDock
- 18W USB-C PD Charger
- 180 cm USB-C charging cable
- 50 cm USB-C smartphone cable
  (Gen2 USB-C 3.1)
- USB-C to USB-A Adapter
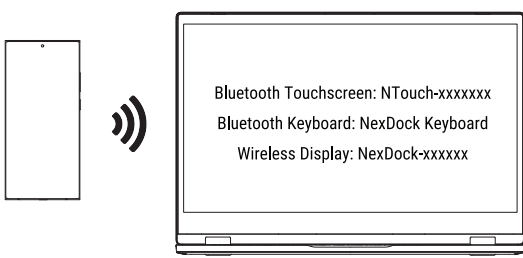- 100 cm mini HDMI to HDMI cable
- Quick Start Guide

Ports on NexDock:

USB-C Input   mini HDMI Input

Micro SD slot   Audio Jack

USB-C Data Port   Power Button   USB-C Charging Port

Quick Start Guide for Smartphones

1 Connect one end of the short (50cm) USB-C cable to the USB-C port on the left side as shown in the diagram.

2 Plug the other end of the USB-C cable to your smartphone.

3 To charge your NexDock with the provided adapter and cable use the USB-C port on the right side.

IMPORTANT NOTE: Smartphones would **NOT** work with NexDock if connected to the USB-C ports on the right side.

4 Turn on NexDock by pressing power button and start using your smartphone as a laptop.

5 To connect mouse, memory stick and other USB peripherals, you can use the USB-C port on the right side, close to the front edge.

Wireless Connection Guide for Smartphones

Bluetooth Touchscreen: NTouch-xxxxxxx
Bluetooth Keyboard: NexDock Keyboard
Wireless Display: NexDock-xxxxxx

1 Turn on your NexDock and wait for "NexDock is ready to connect" screen.

2 Open Settings/Connections/Bluetooth on your smartphone.

Click "Scan" and pair to "NexDock Keyboard". For touchscreen connection, pair to "NTouch-xxxxxxx" where xxxxxxx can be random characters such as NTouch-a1DF168.

3 For Samsung phones, pull down the notification bar and tap on DeX in the Quick Settings panel. Alternatively, open "Settings/Advanced Features" and enable "Samsung DeX".

Choose "DeX on TV or Monitor" and "Connect wirelessly". When you see "NexDock-XXXXX" click "Start Now".

NOTE 1: If you are using a non-Samsung phone, search for "Cast" or "Screen Sharing" or "Wireless Display" in Settings and follow the instructions on your phone. For Motorola phones that support "Ready For" go to "Settings/Connected Devices/Ready For" and follow the instructions.

NOTE 2: You can disconnect bluetooth keyboard any time by pressing FN+C keys on NexDock. To disconnect bluetooth touchscreen you need to unpair NTouch-xxxxxxx from your smartphone's bluetooth settings.
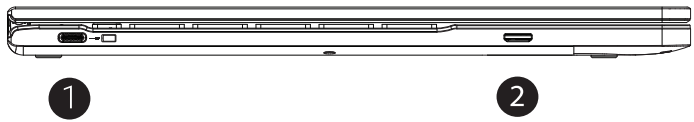
Connecting other devices

1 USB-C Input

Multiple devices can be connected to NexDock's display, keyboard & touchpad via USB-C cable. This cable can power your device (up to 5V1A) and connect to the other ports on the right side. The devices you can use with USB-C input port are:

- USB-C smartphones with video output
- USB-C Macbooks, USB-C iPads
- USB-C Laptops, Chromebooks
- Nintendo Switch, Steam Deck

2 HDMI Input

The devices you can use with HDMI input are:

- PCs, Laptops, Servers
- Game consoles such as Play Station, XBox
- TV Sticks, Chromecast and any other device with HDMI out

When a device is connected via HDMI, a secondary USB cable is required to connect to keyboard, touchpad and touchscreen. Raspberry Pi 4 can also be connected via USB-C by adding a line of code to config.txt. Please check NexDock.com/support to learn more.

When a device is connected only through HDMI, you can still control volume, brightness and more settings via OSD Control panel on the touch screen (see next page).
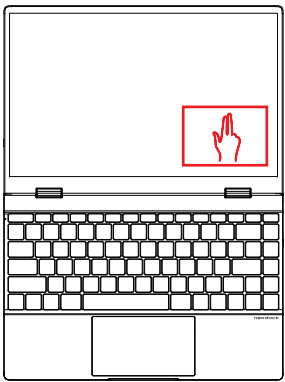
On Screen Display (OSD) Control Panel

OSD control panel lets you adjust the volume, screen brightness, contrast, sharpness, color temperature of the display and more!

To open the OSD control panel swipe down with 2 fingers at lower right corner of the touch screen as shown.

You can also disable smartphone charging, lock screen rotation and check battery charge level of NexDock using OSD control panel.

The settings available on the OSD control panel are:

① Volume
② Backlight Brightness
③ Sharpness
④ Display brightness
⑤ Type C input
⑥ HDMI input
⑦ Wireless Screen Casting
⑧ Smartphone charging ON
⑨ Smartphone charging OFF
⑩ Rotate On/Off
⑪ OSD Previous Page
⑫ OSD Next Page
⑬ Exit OSD Panel
⑭ HDR on/off
⑮ Reset
⑯ Information
⑰ Color Temperature
(Only in USER mode)

Keyboard Function Keys

Function keys on the keyboard works only when a device is connected via USB-C input or bluetooth and when NexDock is not working in tablet mode.

To use alternate commands hold down Fn and press the Function key at the same time.

The function keys on NexDock are:

Fn + F1		Switch between the open apps
Fn + F2		Check battery charge level of NexDock
Fn + F3		Mute
Fn + F4		Volume Down
Fn + F5		Volume Up
Fn + F6		Brightness Down
Fn + F7		Brightness Up
Fn + F8		Previous Track
Fn + F9		Play/Pause Media
Fn + F10		Next Track
Fn + F11		Turn On/Off Keyboard Backlight
Fn + F12 PrtSc		Take Screenshot
Fn + C		Disconnect bluetooth keyboard

For more technical support, troubleshooting please visit NexDock.com/support.