

GB Nyko Pro Commander™ for Nintendo® Wii U™

Thank you for purchasing the Pro Commander™ Controller for the Nintendo® Wii U™ entertainment system. Please read this manual to familiarize your self with the installation and operation of this device.

FEATURES

- Unique ergonomic design for added comfort
- Soft feel surface provides superior grip
- Built-in rechargeable lithium-ion battery provides up to 20 hours of playtime
- Trigger inspired shoulder buttons provide faster response time
- Responsive Analog sticks for superior control
- Built-in vibration feedback

CHARGING

Before use, charge the Nyko Pro Commander controller fully by connecting it to a Powered USB port on the Console (USB ports on the front and back of the console can be used for this). The Battery charge indicator LED on the front of the device will glow to indicate that the controller is charging.

IMPORTANT NOTE:

The Wii U™ console must be powered ON for the USB ports to provide power. If the Nintendo® Wii U™ console is powered down it will not be able to charge the controller.

- Once the controller is fully charged, the Battery Charge indicator LED will turn OFF, to indicate that the controller is fully charged.
- Once the controller is fully charged, disconnect it from the console

BATTERY INDICATOR LIGHT

Slow blinking light - battery is low and needs to be charged
Solid light - battery charging



Fig. 1

LED light turns OFF while charging = battery fully charged

SYNC & SET UP

1. Power ON the Pro Commander controller by pressing the POWER button (A in Fig. 2) located on the back of the controller.
2. Now power ON your Nintendo® Wii U™ console, by pressing the power button located on the front of your console.
3. Press the Sync button located on the front of the Nintendo® Wii U™ console
4. Now press the Sync button (B in Fig. 2) on the back of the Pro Commander controller
5. After a few seconds the controller should sync up with the console, and the Player indicator lights on the controller should indicate the player number to whom the controller is now assigned
6. If you have any problems please repeat the process.
7. You can also assign controllers, and change settings using the Wii U™ Gamepad screen during the pairing process, or change and delete pair data using the System Settings option from the main menu.

If you continue to have issues pairing the device, please refer to your Console manual for further details and suggestions regarding the controller pairing protocol for your Nintendo® console. You can also contact a Nyko service professional to assist you. All contact information for the Nyko customer service department is listed in the warranty section of this manual. We will gladly assist you with any issues encountered, so you can have the most positive experience possible with your new Nyko accessory.

Once the Controller is properly paired with your console, you can use the Power button on the controller to Power ON, or power OFF the console.

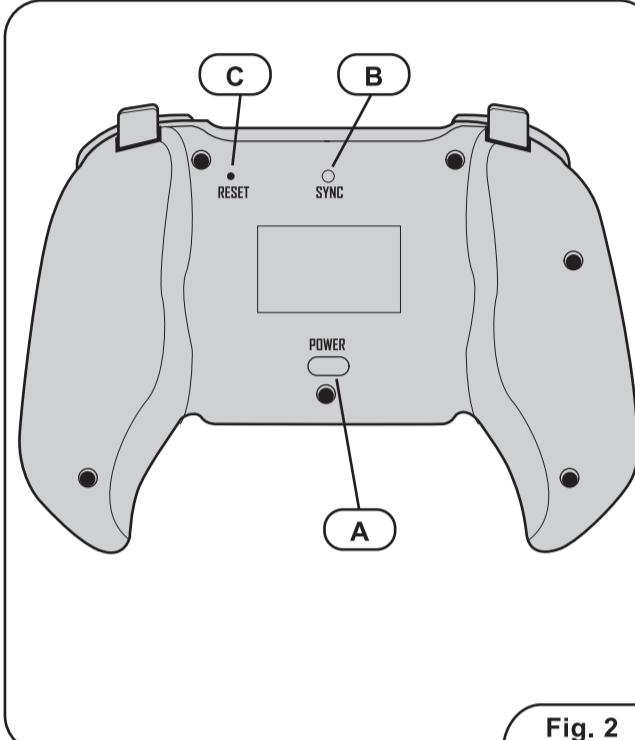


Fig. 2

Syncing controller to another console

Once the controller has been successfully synced with your console, it will not need to be synced again. However if you wish to use the controller with another console you will need to use the System Settings option, to un-pair the device first from your console, prior to syncing it with a new console.

TROUBLESHOOTING

Problem: The Pro Commander Controller does not work.
Solution: Check to make sure that the controller is fully charged and properly paired with the Nintendo® Wii U™ Console. If needed try un-pairing and re-pairing the controller to the console.

Problem: The Pro Commander Controller does not turn on when I press the HOME/U Button, or other action buttons on the controller

Solution: The Pro Commander only turns on when the POWER button is pressed. (A in Fig. 2)

Problem: The Pro Commander will not function once a game has loaded.

Solution: Some games only allow the Player 1 controller to control the console once the game is loaded. To change the controller to Player 1, use the system setting and assign the controller to the Player 1 setting

Problem: The Pro Commander will not turn off.

Solution: The Controller can be turned off by holding down the POWER button located on the back of the controller. If left idle for 5 minutes the Pro Commander will automatically turn off.

Problem: The Pro Commander will not sync with the Wii U™ console.

Solution: Locate the RESET button on the back of the Pro Commander™ Controller (C in Fig. 2). Press and hold it for several seconds then release, allow a minute for the controller to reset, and then repeat the Sync procedure outlined in this document.

CARE AND MAINTENANCE

Please review the following guidelines to ensure optimal performance from the Pro Commander™ Controller.

- Keep controller free of dust or other debris.
- Do not expose controller to extreme conditions, including direct sunlight or excessive heat or humidity.
- Keep your controller away from liquids.
- If cleaning is necessary, use a dry cloth to clean the affected area.
- Do not modify, alter, or tamper with this device as this voids the warranty and can be dangerous.

TECHNICAL SUPPORT

We appreciate your support of Nyko products, and endeavor to guarantee your satisfaction with this purchase. If you are experiencing difficulties, please contact us:

Online: www.nyko.com

Email: customersupport@nyko.com

Phone: +1-888-400-6956

Nyko Product Limited Warranty

This Nyko product is warranted to the original purchaser for the product's normal intended use for a period of ninety (90) days from the date of purchase. If a defect covered under this warranty occurs, Nyko will repair or replace the product at its discretion or refund the Nyko portion, at no charge. This warranty does not apply to defects resulting from misuse or modification of the product. The product should be returned with proof of purchase, a brief statement of the claimed defect, and the purchaser's contact information to: Nyko Technologies, Inc., 1990 Westwood Blvd., 3rd Floor, Los Angeles, CA 90025, with freight charges prepaid. Please allow 3-4 weeks for processing.

NYKO**PRO COMMANDER**
for/pour/para/für
Nintendo® Wii U™

Item# 87161

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC15.105: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

NYKO
Produkt online registrieren:
www.nyko.com

NYKO and Pro Commander are trademarks of Nyko Technologies, Inc. Wii U and Pro Controller are trademarks of Nintendo. This is a Nyko product and is not endorsed, manufactured or distributed by Nintendo.
©2013 Nyko Technologies, Inc. All Rights Reserved.

Synchronisation de la manette à une autre console
Une fois la synchronisation établie, vous n'aurez plus besoin de synchroniser la manette à la console. Cependant, si vous voulez utiliser la manette avec une autre console, il vous faudra d'abord dissocier l'appareil de la console en utilisant l'option System Settings avant de synchroniser la manette à une autre console.

RÉSOLUTION DE PROBLÈMES

Problème : La manette Pro Commander ne marche pas.

Solution : Vérifiez que la manette est complètement chargée et correctement synchronisée avec la console Nintendo® Wii U™. Au besoin, essayez de désosier et de resynchroniser la manette à la console.

Problème : La manette Pro Commander ne s'allume pas quand j'appuie sur la touche HOME/U ou d'autres boutons d'action de la manette.

Solution : La manette Pro Commander ne s'allume qu'après avoir appuyé sur le bouton POWER. (A, fig. 2).

Problème : La manette Pro Commander ne marche pas après avoir chargé un jeu.

Solution : Certains jeux ne permettent que la manette du joueur 1 de commander la console quand le jeu est chargé. Pour associer la manette au Joueur 1, modifiez les paramètres du système.

Problème : La manette Pro Commander ne s'éteint pas.

Solution : Éteignez la manette en appuyant sur le bouton POWER au dos de la manette tout en le maintenant enfoncé. Si elle n'est pas utilisée pendant 5 minutes, la manette Pro Commander s'éteindra automatiquement.

Problème : La manette Pro Commander ne se synchronise pas avec la console Wii U™.

Solution : Repérez le bouton RESET au dos du Pro Commander™ (C, fig. 2). Appuyez dessus tout en le maintenant enfoncé pendant quelques

secondes avant de le relâcher. Attendez une minute que la manette se réinitialise puis répétez les opérations de synchronisation décrites dans ce mode d'emploi.

ENTRETIEN

Veuillez lire les consignes suivantes pour assurer une performance optimale de la manette Pro Commander™.

- Maintenez la manette à l'écart de saletés ou autres débris.
- N'exposez pas l'appareil à des conditions extrêmes telles que l'ensoleillement, direct ou une chaleur ou humidité excessives.
- Maintenez la manette à l'écart de liquides.
- Si un nettoyage s'impose, utilisez un chiffon sec pour nettoyer la surface en question. N'utilisez jamais de produits chimiques.
- Ne modifiez pas ni altérez cet appareil d'une manière quelconque. Cela annulera la garantie et pourra présenter un danger.

SUPPORT TECHNIQUE

Nous vous remercions de votre confiance, et nous tenons à vous garantir satisfaction avec votre achat. Si vous avez des problèmes difficile à résoudre, veuillez nous contacter:

Internet: www.nyko.com

E-mail: customersupport@nyko.com

Tel: +1-888-400-6956

Garantie Limitee des Produits Nyko

NYKO garantit ce produit à l'acheteur d'origine pendant une période de quatre-vingt dix jours (90) à compter de la date d'achat, pourvu qu'il soit utilisé selon l'emploi prévu dans des conditions d'utilisation normales. Si un défaut non couvert au titre de la garantie survient, Nyko se réserve le droit de remplacer ou réparer le produit ou les pièces affectées à ses frais. Cette garantie ne couvre pas les défauts résultant d'un emploi inadéquat ou de mauvaise utilisation de ce produit. Le produit devra être retourné accompagné du reçu d'achat, d'une brève description du défaut et des coordonnées de l'acheteur pour le renvoi à: Nyko Technologies, Inc., 1990 Westwood Blvd., 3rd floor, Los Angeles, CA 90025, port payé. Les demandes seront traitées en 3 à 4 semaines.

Controlador Pro Commander™ (C en la Fig. 2). Mantén presionado el botón durante varios segundos y luego suéltalo, aguarda un minuto para que el controlador se reinicie y luego repita el procedimiento de sincronización indicado en este documento.

CUIDADO Y MANTENIMIENTO

Para asegurar el óptimo funcionamiento del Controlador Pro Commander™, ten en cuenta las siguientes indicaciones.

- Mantén el controlador libre del polvo y otros residuos.
- No expongas el controlador a condiciones extremas, incluyendo la luz directa del sol, o calor y humedad excesivos.
- Mantén tu controlador lejos de los líquidos.
- De ser necesario su limpieza, usa un paño seco para limpiar el área afectada. Nunca uses productos químicos.
- No modifiques, alteres ni manipules este dispositivo, ya que anularías la garantía y podrás presentar un daño.

ASISTENCIA TÉCNICA

Agradecemos su compra de productos Nyko. Nos esforzamos para garantizar su satisfacción con dicha compra. Si experimenta dificultades no duden en comunicarse con nosotros.

Web: www.nyko.com

Correo electrónico: customersupport@nyko.com

Teléfono: +1-888-400-6956

Garantía Limitada de Nyko

La garantía de este producto de Nyko se extiende al comprador original por una duración de noventa (90) días a partir de la fecha de compra. Si se produce un defecto cubierto por la presente garantía, Nyko, a su entera discreción, reemplazará o reparará el producto o sus piezas defectuosas, sin cargo alguno para dicho comprador. La presente garantía no cubre defectos que surjan del uso indebido o de la modificación de este producto. El producto deberá ser devuelto junto con el recibo de compra, una breve descripción escrita del defecto reclamado y la información de contacto del comprador a: Nyko Technologies, Inc., 1990 Westwood Blvd., 3rd Floor, Los Angeles, CA 90025, con cargos de envío prepagados. Favor de aguardar entre 3 y 4 semanas para el procesamiento de dicha devolución.

eine Minute, bis der Controller zurückgesetzt wurde. Wiederholen Sie dann das in diesem Dokument beschriebene Synchronisationsverfahren.

PFLEGE UND WARTUNG

Bitte beachten Sie die folgenden Richtlinien, um optimale Leistung des Pro Commander™ Controller zu gewährleisten.

- Den Controller vor Staub und sonstigen Ablagerungen schützen.
- Den Controller keiner extremen Bedingungen wie direkter Sonneninstrahlung, übermäßiger Wärme oder Luftfeuchtigkeit aussetzen.
- Flüssigkeiten vom Controller fernhalten.
- Falls Reinigung erforderlich wird, den betroffenen Bereich mit einem trockenen Tuch abwischen. Keinesfalls Chemikalien verwenden.
- Das Produkt nicht umbauen, ändern oder unsachgemäß manipulieren, da dies gefährlich ist und hierdurch die Garantie hinfällig wird.

TECHNISCHER SUPPORT

Herzlichen Dank für Ihre Unterstützung von Nyko-Produkten. Wir bemühen uns nach Kräften, Ihre Zufriedenheit mit dem gekauften Produkt zu gewährleisten. Bei Problemen wenden Sie sich bitte an:

Online: www.nyko.com

E-Mail: customersupport@nyko.com

Telefon: +1-888-400-6956

EINGESCHRÄNKTE PRODUKTGARANTIE VON NYKO

Dieses Nyko-Produkt kommt mit einer Garantie von neunzig (90) Tagen ab Kaufdatum für den ursprünglichen Käufer, die sich auf den normalen, vorgesehenen Gebrauch bezieht. Sollte von dieser Gewährleistung gedeckter Defekt auftreten, wird Nyko das Produkt oder die defekten Komponenten nach eigenem freiem Ermessen kostenlos ersetzen oder reparieren. Diese Gewährleistung gilt nicht für Defekte, die durch Missbrauch oder Modifikationen am Produkt entstehen. Das Produkt kann zusammen mit dem Kaufnachweis, einer kurzen Beschreibung des Defekts und den Kontaktinformationen des Käufers eingeschickt werden: Nyko Technologies Inc., 1990 Westwood Blvd., 3rd Floor, Los Angeles, CA 90025. Versandkosten gehen zu Lasten des Käufers. Bitte berücksichtigen Sie eine Bearbeitungszeit von 3-4 Wochen.