

# ONKYO

## デジタルオーディオプレイヤー Digital Audio Player

## DP-X1

### クイックスタートガイド Quick Start Guide

本書には、スタートアップに必要な内容や操作について記載しています。さらに詳しい使い方については、取扱説明書（PDF形式）をお読みください。

■ **本機で取扱説明書（PDF形式）を見る**

本機で取扱説明書をご覧いただけます。

- ホーム画面で「取扱説明書」をタップする
  - 取扱説明書が表示されます。（Wi-Fi接続する必要があります。）
  - パソコンでご覧になる場合はWeb サイトからダウンロードしてください。  
www.jp.onkyo.com/audiovistual/dap/

**タッチパネルの使い方**  
本機の画面はタッチパネルになっており、操作は画面にタッチして行います。本書ではタッチ操作について以下のように記載しています。

	<b>タップ</b> 画面に軽く触れて離す
	<b>ドラッグ</b> 画面に触れたまま指を動かす
	<b>ロングタッチ</b> 画面に長く触れる（1秒以上）
	<b>フリック</b> 画面を指で軽くはらうように動かす
	<b>ドラッグ&amp;ドロップ</b> 画面に触れたまま指を動かし、離す

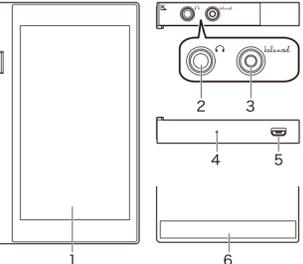
オンキヨー&パイオニアバージョンズ株式会社  
〒104-0028 東京都中央区八重洲2丁目3番12号

オンキヨーオーディオコールセンター  
電話 050-3161-9555  
E-mail customer@jp.onkyo.com

Manufacturer  
Onkyo & Pioneer Innovations Corporation  
2-3-12, Yaesu, Chuo-Ku, Tokyo 104-0028, Japan

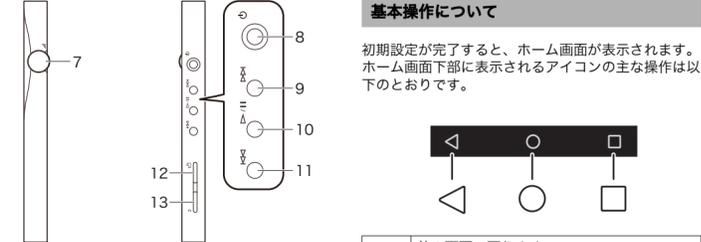
© 2015 Onkyo & Pioneer Innovations Corporation  
All rights reserved.  
© 2015 Onkyo & Pioneer Innovations Corporation  
Tous droits de reproduction et de traduction réservés.

<b>付属品</b>	
USB 接続ケーブル	

<b>各部の名前</b>	
--------------	---

- ディスプレイ（タッチパネル）
- ヘッドホンジャック
- ヘッドホンジャック（バランス出力端子）
- マイク
- microUSB 端子（充電端子兼用）
- 内蔵アンテナ  
アンテナは本体に内蔵されています。アンテナ付近を手で塞ぐと、通信速度に影響を及ぼす場合があります。

- 完了画面で「終了」をタップする
- 使用許諾が表示されますので、内容を確認し、「同意する」をタップする
  - 初期設定が完了すると、ホーム画面が表示されます。



- ボリュームダイヤル  
ダイヤルを回して音量を調整します。画面上のタッチ操作でも音量を調整することができます。
- 電源ボタン (Ⓟ)  
電源ボタンを長押しして電源を入/切します。画面を点灯・消灯するときは、短く押します。
- スキップ (▶▶) ボタン  
次の曲へスキップします。
- 再生 / 一時停止 (▶/||) ボタン
- スキップ (◀◀) ボタン  
前の曲へスキップします。
- microSD カードスロット 1
- microSD カードスロット 2

	前の画面へ戻ります。
	ホーム画面を表示します。
	最近使用したアプリケーションを表示します。

**基本操作について**

初期設定が完了すると、ホーム画面が表示されます。ホーム画面下部に表示されるアイコンの主な操作は以下のとおりです。

	前の画面へ戻ります。
	ホーム画面を表示します。
	最近使用したアプリケーションを表示します。

**充電する**

本機と起動しているパソコンを USB 接続ケーブル（付属）で接続する。

- プラグの幅の広い方を上にして接続してください。上下逆に接続すると、プラグや端子を破損するおそれがあります。



- お買い上げ時、バッテリーは充電されていませんので、充電してからお使いください。
- 本機の電源を切っている場合、画面にアイコンが表示され、充電が始まります。

- 数時間充電してからご使用ください。
- 電源を入れたままでも充電することができます。その場合は、通常より充電時間が長くなる場合があります。

**電源を入れる / 切る**

**電源を入れる**

- 電源ボタン (Ⓟ) を長押しして電源を入れる。

**電源を切る**

- 電源ボタン (Ⓟ) を長押しする。
- 「電源を切る」をタップする。
  - 電源が切れます。

	前の画面へ戻ります。
	ホーム画面を表示します。
	最近使用したアプリケーションを表示します。

**初期設定をする**

**電源ボタン (Ⓟ) を長押しして電源を入れる**

- 初めて本機の電源を入れると、設定ウィザード画面が表示されます。画面の指示に従って以下項目の設定をしてください。

- 言語を選択する
- Wi-Fi® 設定をする
  - 接続したいアクセスポイント名をタップし、パスワードを入力して設定してください。

- 日付と時間の設定をする
- 利用者情報の入力をする
- Google™ アカウント設定をする
  - 「アカウントの追加」あるいは「または新しいアカウントを作成」をタップし、画面の指示に従って設定してください。

- 完了画面で「終了」をタップする
- 使用許諾が表示されますので、内容を確認し、「同意する」をタップする
  - 初期設定が完了すると、ホーム画面が表示されます。

	前の画面へ戻ります。
	ホーム画面を表示します。
	最近使用したアプリケーションを表示します。

オンキヨーオーディオコールセンター  
050-3161-9555  
（受付時間：10:00 ～ 18:00 土・日・祝日および弊社で定める休業日を除きます）

- 製品操作のご案内、リモコン等付属パーツのご案内、その他ご不明な点についても受付けております。
- スムーズな対応のため、お問い合わせの前に以下の情報をお調べください。
  - 製品の型番

■ **主な仕様**  
**プラットフォーム：**  
Android5.1  
**ディスプレイ：**  
解像度 720 × 1280 ドット  
**インターフェース / 入出力端子：**  
ヘッドホンジャック 1  
ヘッドホンジャック（バランス出力）1  
microUSB 端子 1  
**ネットワーク部：**  
無線 LAN: IEEE802 b/g/n /ac 準拠  
Bluetooth®: A2DP, AVRCP, HSP, OPP, HID, PAN  
**バッテリー電源：**  
1,630 mAh  
**動作温度：**  
5℃～ 35℃  
**内蔵メモリ：**  
32 GB（Android システム領域含む）  
**本体重量：**  
203 g  
**外形寸法（突起部含まず）：**  
129 mm × 75.9 mm × 12.7 mm（高さ / 幅 / 奥行き）

仕様および外観は予告なく変更することがあります。

■ **周波数について**  
周波数表示の見かた

	2.4FH1/DS4/OF4
---	----------------

2.4：2.4GHz 帯を使用する無線設備を表します  
FH/DS/OF：変調方式を表します  
1、4：想定される電波干渉距離 1：10 m、4：40 m を表します

■ **ライセンスと商標について**

- Google およびAndroidはGoogle Inc.の商標または登録商標です。
- Microsoft®、Windows® は、米国 Microsoft Corporationの米国およびその他の国における登録商標または商標です。

■ **免責事項**  
外部サービスのご利用にあたって本製品は外部の音楽配信サービスまたはウェブサイト（以下「外部サービス」とします）に接続することが可能です。この利用規約は、本製品を通じて外部サービスに接続する際の利用に関する諸条件を定めるものです（以下「本規約」とします）。また、外部サービスをご利用の場合は、本規約に同意いただいたものとみなします。

1.定義  
（1）「当社」とは、本製品を設計、製造、販売し、または第三者に設計、製造、販売させた会社及びその関係会社をいいます。  
（2）「コンテンツ」とは、楽曲、歌詞及びその録音物や録画物（ミュージックビデオ等の映像）、楽曲名、カバーアート、アーティスト画像、その他、外部サービスにより提供される電子データの総称をいいます。  
2.非保証  
（1）外部サービスの利用に関して、本製品またはお客様が使用されている通信機器、通信ソフト等の一切のサポートならびに各種トラブル対応との接続に関する音情等は一切受け負けないものとし、お客様の通信環境または外部サービスのサポート状況によって、外部サービスをご利用いただけない場合に関しまして、当社は保証致しかねます。  
（2）お客様は、外部サービスのご利用にあたり、通信回線の接続状況または通信速度、お客様が使用する通信機器類の性質等の理由により、外部サービスの品質に影響を受ける可能性があることを事前に承諾するものとし、当社は予見可能性の有無を問わず、外部サービスの均一性、再現性、安定性、同質性ならびにお客様の期待される水準への合致等の品質または特定目的への適合性について、何らの保証を行うものではありません。  
（3）外部サービスにより提供されるコンテンツまたはサービスの内容及び権利の帰属について、当社は一切保証致しません。

3.免責  
外部サービスの提供の遅滞または不能、外部サービスにより提供される情報等の未到達その他外部サービスに関連して生じたいかなる損害についても、当社は理由の如何に関わらず一切責任を負いません。  
4.権利義務の譲渡禁止  
お客様は、当社の事前の書面による承諾によらず、本規約に基づく権利義務の全部または一部について、第三者に譲渡、移転等の処分または担保権の設定等をしてはならないものとします。  
5.規約の変更・改訂  
（1）当社は、お客様の承諾なくこの規約を変更または改訂できるものとします。  
（2）当該変更または改訂は、本製品にかかる当社所定のウェブサイト上に掲示するものとし、掲示された時点で効力を生じるものとします。  
6.お問い合わせ  
当社は外部サービスに関するいかなるお問い合わせもお受け致しかねます。  
外部サービスに関するお問い合わせは、お客様が直接外部サービスの事業者に対して行うものとします。  
7.準拠法及び管轄裁判所  
（1）本規約は日本法に従って解釈されるものとします。  
（2）本規約に関して紛争が生じた場合は、当社の本店所在地を管轄する裁判所を第一審の専属的合意管轄裁判所とします。

**ご相談窓口・修理窓口のご案内**  
**販売店の「長期保証」制度にご加入の場合は**  
保証の手続き上、お買い上げになった販売店様での受け付けが必要となります。長期保証期間内の製品は、店頭への修理品持込みをお願いいたします。

■ **お電話による故障判定と、修理受け付け**

- 意外な操作ミスが故障と思われる場合があります。お問い合わせの前に取扱説明書をもう一度お調べください。また弊社ホームページサポート情報にもトラブル解決のFAQを掲載していますので、ご参照ください。

オンキヨーオーディオコールセンター  
050-3161-9555  
（受付時間：10:00 ～ 18:00 土・日・祝日および弊社で定める休業日を除きます）

- 製品操作のご案内、リモコン等付属パーツのご案内、その他ご不明な点についても受付けております。
- スムーズな対応のため、お問い合わせの前に以下の情報をお調べください。
  - 製品の型番

- 接続している他機器
- できるだけ詳しい不具合状況
- ご購入店名
- ご購入年月日

■ **メールによる修理お申込み**  
http://www.jp.onkyo.com/support/servicebase.htm  
からお申込みいただけます。

**保証書について**  
保証書の記載事項をご確認ください。また、所定事項をご記入いただき大切に保管してください。保証期間内に万一、故障や異常が生じたときは、保証書をご用意のうえ、上記相談窓口にご相談ください。

**保証期間終了後の修理について**  
修理によって機能が維持できる場合は、お客様のご要望により有料修理いたします。

**補修用性能部品の保有期間について**  
本機の補修用性能部品は、製造打ち切り後、最大8年間保有しています。保有期間経過後でも故障箇所によっては修理可能な場合がありますので、ご相談ください。

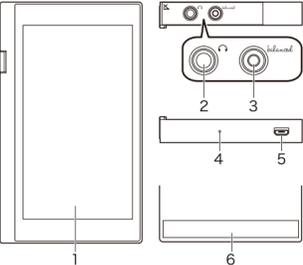
電話番号、受付時間などは変更になる場合がございます。

<b>ENGLISH</b>
<b>Before starting</b>
This guide has information and operations required for start up. For further instructions, refer to the Instruction Manual (PDF).
<b>Viewing the Instruction Manual (PDF) on this unit</b> You can view the Instruction Manual on this unit. 1. Tap "Manual" in the home screen. <ul style="list-style-type: none"><li>The instruction manual is displayed. (A Wi-Fi connection is required.)</li> <li>パソコンでご覧になる場合は Web サイトからダウンロードしてください。 www.jp.onkyo.com/audiovistual/dap/</li></ul>

**How to use the touch panel**  
The screen of this unit is a touch panel and you operate the unit by touching the screen. Touch operations are described as follows in this guide.

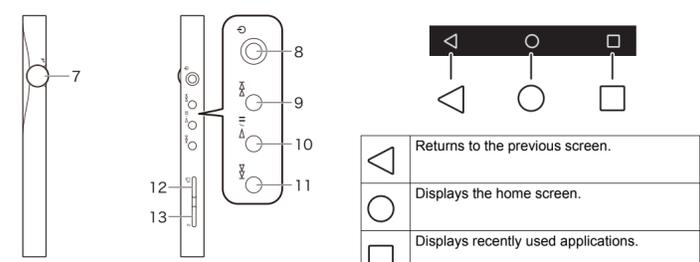
	<b>Tap</b> A light touch of the panel then remove
	<b>Drag</b> Move your finger across the screen while touching it
	<b>Long tap</b> Touch the screen for more than a second
	<b>Flick</b> A light flick of the finger on the screen
	<b>Drag and drop</b> Move your finger across the screen while touching it, then release

<b>Supplied Accessories</b>	
USB cable	

<b>Names of the parts</b>	
---------------------------	---

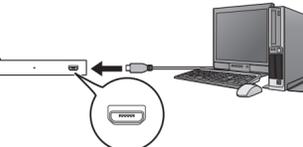
- Display (touch panel)
- Headphone jack
- Headphone jack (balanced output jack)

- Microphone
- microUSB port (also used for recharging)
- Built-in antenna  
The antenna is built into the main unit. The transmission speed of the unit may be adversely affected if you block the antenna area with your hand.



- Volume dial  
Turn the dial to adjust the volume. You can also adjust the volume with touch operations on the display.
- Power button (Ⓟ)  
Press and hold the power button to turn the power on or off. To turn the screen on or off, just press the button.
- Skip (▶▶) button  
Skip to the next track.
- Play/pause (▶/||) button
- Skip (◀◀) button  
Skip to the previous track.
- microSD card slot 1
- microSD card slot 2

	Returns to the previous screen.
	Displays the home screen.
	Displays recently used applications.

<b>Charging</b>	
<b>Use the USB cable (supplied) to connect this unit to a computer that is running.</b>	
<ul style="list-style-type: none"><li>Connect so the wider side of the plug is up. You may damage the plug or jack if you try to insert it the wrong way.</li></ul>	

- The battery is not charged at the time of purchase. Please charge it before use.
  - If the unit is off, an icon is displayed on the screen and charging starts.
- Charge for a few hours before use. You can also charge while the unit is on. The time for charging may increase in this case.

	前の画面へ戻ります。
	ホーム画面を表示します。
	最近使用したアプリケーションを表示します。

**Turning the power on/off**

**Turning the power on**

- Press and hold the power button (Ⓟ) to turn the power on.

**Turning the power off**

- Press and hold the power button (Ⓟ).
- Tap "Power off".
  - The power turns off.

**Making initial settings**

**Press and hold the power button (Ⓟ) to turn the power on.**

- A setup wizard is displayed when you turn this unit on for the first time. Follow the instructions on the screen to set the following items.

- Select the language
- Setup Wi-Fi®
  - Tap the name of the access point you want to connect to and then enter the password.
- Set the date and time
- Enter user information
- Set the Google™ account
  - Tap "Add your account" or "Or create a new account" and make the settings according to the instructions on the screen.

- Tap "FINISH" in the final screen.
- A user agreement is displayed. Read the content and tap "Agree".
  - The home screen is displayed when these initial settings are complete.

- Tap the track you want to start play.

**Basic operations**

The home screen is displayed when these initial settings are complete. The following describes the main operations of the icons displayed at the bottom of the home screen.

	Returns to the previous screen.
	Displays the home screen.
	Displays recently used applications.

**Listening to music on this unit**

To play music on this unit, follow the steps below to save music files from a Windows computer to this unit, then play the files with the "Music" player.

- Transfer data to this unit using the "X-DAP Link" data transfer software.
- Play music files with the "Music" player.

■ **Transfer data to this unit**  
Install "X-DAP Link" on your computer and transfer the music files on your computer to this unit.

**Installing "X-DAP Link"**

- On a computer connected to the Internet, access the following page and follow the on screen instructions to download the installer.  
**www.jp.onkyo.com/audiovistual/dap/**
- Double-click on the installer you have downloaded (setup.exe) to install "X-DAP Link".
  - The installation wizard is displayed, so follow the on screen instructions.
  - A shortcut icon is created on the desktop when installation is completed.

**Transfer the music content to this unit**

- Use the USB cable (supplied) to connect this unit to a computer.
- Select the folder that contains the file(s) you want to transfer from ➊ to display the music files.
  - Select the check box of the file you want to transfer.
- Click the check box ➋ with the same color as the transfer destination to turn it on.
  - The files for which you have selected the check box are transferred to this unit.
- Click the transfer button ➌.
  - It may take some time until the music content appears in the library of this unit.

	前の画面へ戻ります。
	ホーム画面を表示します。
	最近使用したアプリケーションを表示します。

■ **Playing Music**

- Tap the "Music" player in the home screen.
  - The "Music" player starts.

## ■ Specifications

### Platform:

Android5.1

### Display:

720×1280 dot resolution

### Interfaces and input/output jacks:

Headphone jack 1

Headphone jack (balanced output jack) 1

MicroUSB jack 1

### Network Section:

Wireless LAN: IEEE802 b/g/n /ac compliant

*Bluetooth*®: A2DP, AVRCP, HSP, OPP, HID, PAN

### Battery power:

1,630 mAh

### Operating temperature range:

5 °C to 35 °C

### Internal memory:

32 GB (including system area for Android)

### Mass of main unit:

203 g (7.2 oz)

### External dimensions (excluding protrusions):

129 mm × 75.9 mm × 12.7 mm

(5-1/16" × 3 × 1/2")(height/width/depth)

Specifications and features are subject to change without notice.

## ■ License and Trademark Information

- Google and Android are trademarks or registered trademarks of Google Inc.
- Microsoft® and Windows® are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.

## ■ DISCLAIMER

Through this device you are able to link to other services or websites which are not under the control of any company which has designed, manufactured or distributed/have distributed this device, and its affiliates (collectively,

"Company"). We have no control over the nature, content and availability of those services. The inclusion of any links does not necessarily imply a recommendation or endorse the views expressed within them.

All information, content and services available through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws of applicable countries.

The information, content and services provided through this device are for your personal, noncommercial use only. Any information, content or services may not be used in any manner other than previously approved by the appropriate content owner or service provider.

You may not modify, copy, republish, translate, exploit, create derivative works, upload, post, transmit, sell or distribute in any manner any information, content or services available through this device, unless expressly permitted by the appropriate copyright, patent, trademark and/or other intellectual property owner, including, without limitation, content owner or service provider.

THE CONTENT AND SERVICES AVAILABLE THROUGH THIS DEVICE ARE PROVIDED "AS IS". COMPANY DOES NOT WARRANT INFORMATION, CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. COMPANY EXPRESSLY DISCLAIMS ANY WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF TITLE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Company makes no representation or warranty of any kind, express or implied, about the completeness, accuracy, validity, legality, reliability, suitability or availability with respect to the information, content or services available through this device. Company shall not be liable, whether in contract or tort, including negligence and strict liability, for any direct, indirect, special, incidental or consequential damages or any other damages arising out of, or in connection with, any information contained in, or as a result of the use of any content or service by you or any third party, even if Company has been advised of the possibility of such damages, nor shall Company be liable for any third party claims against users of this device or any third party. In no event shall Company be responsible nor liable for, without limiting the generality of the foregoing, any interruption or suspension of any information, content or service available through this device. Company is neither responsible nor liable for customer service related to the information, content and services available through this device. Any question or request for service relating to the information, content or services should be made directly to the appropriate content owners and services providers.



## ■ Specifications

### Platform:

Android5.1

### Display:

720×1280 dot resolution

### Interfaces and input/output jacks:

Headphone jack 1

MicroUSB jack 1

### Network Section:

Wireless LAN: IEEE802 b/g/n /ac compliant

*Bluetooth*®: A2DP, AVRCP, HSP, OPP, HID, PAN

### Battery power:

1,630 mAh

### Operating temperature range:

5 °C to 35 °C

### Internal memory:

32 GB (including system area for Android)

### Mass of main unit:

198 g (7.0 oz)(without bumper)

203 g (7.2 oz)(with bumper)

### External dimensions (excluding protrusions):

128,9 mm × 75.9 mm × 13 mm

(5-1/6" × 3 × 1/2")(height/width/depth)(without bumper)

145,9 mm × 75.9 mm × 13.9 mm

(5-3/4" × 3 × 9/16")(height/width/depth)(with bumper)

Specifications and features are subject to change without notice.

## ■ License and Trademark Information

- Google and Android are trademarks or registered trademarks of Google Inc.
- Microsoft® and Windows® are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.

## ■ DISCLAIMER

Through this device you are able to link to other services or websites which are not under the control of any company which has designed, manufactured or distributed/have distributed this device, and its affiliates (collectively, "Company"). We have no control over the nature, content and availability of those services. The inclusion of any links does not necessarily imply a recommendation or endorse the views expressed within them.

All information, content and services available through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws of applicable countries.

The information, content and services provided through this device are for your personal, noncommercial use only. Any information, content or services may not be used in any manner other than previously approved by the appropriate content owner or service provider.

You may not modify, copy, republish, translate, exploit, create derivative works, upload, post, transmit, sell or distribute in any manner any information, content or services available through this device, unless expressly permitted by the appropriate copyright, patent, trademark and/or other intellectual property owner, including, without limitation, content owner or service provider.

THE CONTENT AND SERVICES AVAILABLE THROUGH THIS DEVICE ARE PROVIDED "AS IS". COMPANY DOES NOT WARRANT INFORMATION, CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. COMPANY EXPRESSLY DISCLAIMS ANY WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF TITLE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Company makes no representation or warranty of any kind, express or implied, about the completeness, accuracy, validity, legality, reliability, suitability or availability with respect to the information, content or services available through this device. Company shall not be liable, whether in contract or tort, including negligence and strict liability, for any direct, indirect, special, incidental or consequential damages or any other damages arising out of, or in connection with, any information contained in, or as a result of the use of any content or service by you or any third party, even if Company has been advised of the possibility of such damages, nor shall Company be liable for any third party claims against users of this device or any third party. In no event shall Company be responsible nor liable for, without limiting the generality of the foregoing, any interruption or suspension of any information, content or service available through this device. Company is neither responsible nor liable for customer service related to the information, content and services available through this device. Any question or request for service relating to the information, content or services should be made directly to the appropriate content owners and services providers.



