FEDERAL COMMUNICATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :(1) this device may not cause harmful interference, and (2) this device must accept anyinterference received, including interference that may cause undesired operation.

⚠ Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation if this equipment does cause harmful interference to radio or television, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
-Consult the dealer or an experienced radio/TV technician of help.

Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Instruction Of The Wireless Desktop

Compatible Equipment

Compatible with all IBM-compatible PCs and equipped with PS/2 interface.

Compatible with Windows Operating Systems:

Windows XP, 2000, ME, 98SE, 98, 95, and NT4.0

Please Review this Checklist

Your System Includes:

· Wireless keyboard	1
· Receiver	1
· Wireless mouse	1
· AAA size batteries	2
· AA size battery	1
· Driver Disk	1
· Instruction manual	1

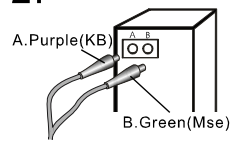⚠ **Please read the instruction for installing, operating, and using the wireless desktop.**
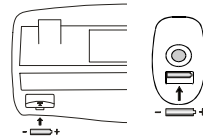
Quick Installation Guide.

1.

Turn off the computer power.

2.

A.Purple(KB)

B.Green(Mse)

Connect the receiver to your mouse and keyboard ports.

3.

Insert the batteries in the mouse and keyboard.

4.

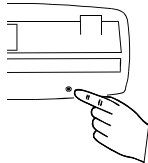Turn on the computer power.

5.

Press the receiver button.

6.

Press the reset button on the mouse.

7.

Press the reset button on the keyboard.

1.Move your mouse to make sure the connection.
2.Type any key on your keyboard to make sure the connection.
3.If the mouse or keyboard does not work properly please repeat step 5 to step 7.

★ Your keyboard and mouse should be ready to use and enjoy.

⚠ **If you have previously installed other keyboard ormouse drivers on your PC, please uninstall them first.**

● Insert the driver disk to install the hotkey program.
  If the program does not autorun, please find the "setup.exe" in the driver folder.

Product Features:

● PS/2 Standard Keyboard Hotkey Functions

▶‖ **Play / Pause** - Starts and stops the playback of your Audio and Video applications

🔇 **Volume Mute** - Mutes your system volume

✉ **Mail** - Opens your systems default E-mail application
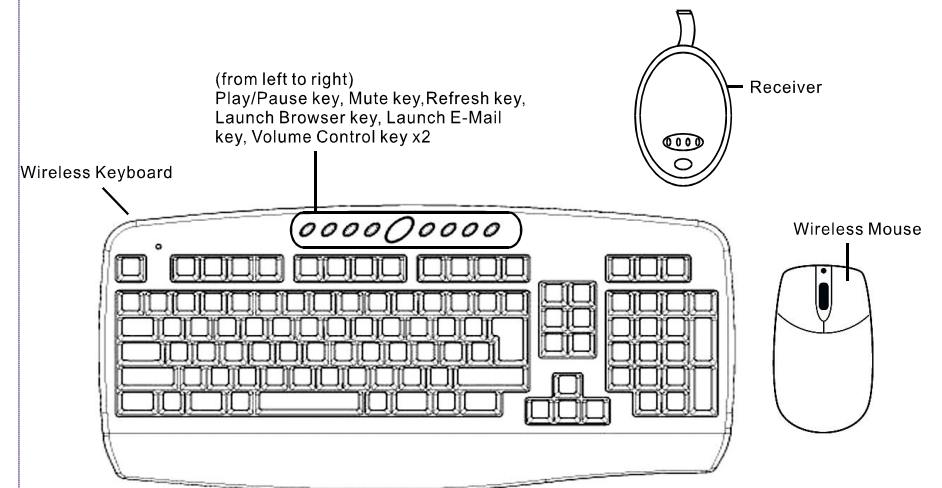
www Internet - Opens your systems default Internet Browser

↻ **Refresh** - Refreshes the currently displayed web page

VOL+ Volume Up - Increases your system volume
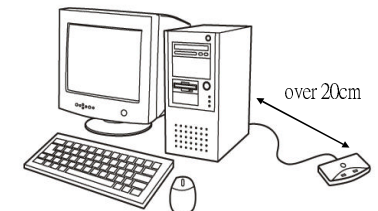
VOL - Volume Down - Decreases your system volume

● Extendable props on the keyboard may be adjusted in two stages to optimize the position for the user.

(from left to right)
Play/Pause key, Mute key,Refresh key, Launch Browser key, Launch E-Mail key, Volume Control key x2

Receiver

Wireless Keyboard

Wireless Mouse

● Normal expected battery life for the keyboard and mouse units:

Battery life is greatly affected by the length of time these units are in use. Under "normal" usage conditions, you may expect unit batteries to last between three and six months. The environment within which the units are used will also affect the length of battery life.

over 20cm

Maintaining your hardware and resolving basic problems

■ Should the ball on the mouse not roll smoothly, open the ball enclosure, remove the ball and wipe it thoroughly using a clean, lint-free cloth. With a cotton swab slightly moistened with industrial alcohol, clean the three roller contacts located inside the enclosure. When finished, return the ball to the enclosure and replace the cover.

■ If using this product in an environment with one or more other wireless mouse or keyboard devices affects normal functions, try switching the operating channel to avoid transmission frequency conflicts.

■ Please locate the receiver at a minimum distance of 20 cm away from both the computer and monitor.

■ A desk made of iron will negatively impact wireless keyboard and mouse operations.

Wireless Desktop
User Manual

PT-2002-T

User Manual