

INSTRUCTION MANUAL

ATTENTION PARENTS


It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

BATTERY INSTALLATION

HOW TO INSTALL BATTERY IN VEHICLE


1. Make sure the "ON/OFF" switch at the underside of the vehicle is at the "OFF" position. (See Diagram #1)
2. UNSCREW to open the battery compartment. (See Diagram #1)
3. Insert 3 "AAA" batteries by matching the (+) and (-) signs as indicated in the battery compartment. (See Diagram #2)
4. Replace the battery cover and tighten the screw to secure the battery cover.

On/Off switch

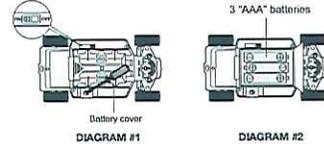

HOW TO INSTALL BATTERY IN TRANSMITTER


1. Remove battery cover and install 2 "AA" batteries by matching + and - poles as indicated in the battery compartment (See Diagram #3).
 2. Replace the battery cover.
- Note: Remove all batteries after you have finished using your vehicle.

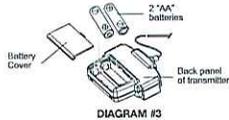


HOW TO PLAY

START TO PLAY

1. Build up antenna by passing the cable through the antenna tube provided and plug into the vehicle tightly. Otherwise, the vehicle will not work. (See Diagram #4)
2. Push the ON/OFF switch to the "ON" position of the vehicle. (See Diagram #5)

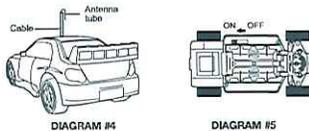

3. Operate the vehicle with the transmitter. Functions include: Forward, Reverse, Left and Right, Stop (See Diagram 6).
4. Turn OFF the vehicle after playing and remove all batteries from the transmitter and the car.

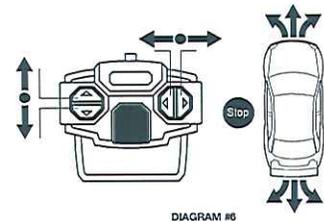

FRONT WHEELS STEERING ADJUSTMENT

5. If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram #7)
6. If the vehicle runs towards left, turn "Steering Alignment Lever" towards "R".
7. If the vehicle runs towards right, turn "Steering Alignment Lever" towards "L".



DIAGRAM #7

BATTERY CAUTIONS

1. For maximum performance, use alkaline batteries.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
4. Do not recharge non-rechargeable battery.
5. Ensure batteries are inserted with the correct polarity.
6. Remove batteries when toy is not in use.
7. Remove exhausted batteries from toy and dispose of in accordance with the makers recommendation.
8. Rechargeable batteries should only be charged under adult supervision.
9. Remove rechargeable batteries from toy before charging.
10. The supply terminals are not to be short-circuited.
11. The antenna wires are not to be inserted into socket outlet.

NOT SUITABLE FOR CHILDREN UNDER 3 YEARS OF AGE, DUE TO SMALL PARTS.

FCC NOTE:
THE ANTENNA PROVIDED IS A UNIQUE ANTENNA. BY INSTALLATION OF UNAUTHORIZED ANTENNA TO THIS EQUIPMENT. SUCH UNAUTHORIZED INSTALLATION COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

ATTENTION PARENTS:
IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.



PRINTED IN CHINA
O.I. NO.4519

ATENCIÓN PARA LOS PADRES


Se recomienda que este juguete y accesorios sean examinados periódicamente para evitar problemas o daños en piezas para que puedan ser reparados o reemplazados.

COLOCACIÓN DE LAS PILAS

COMO COLOCAR LAS PILAS EN EL VEHICULO


1. Asegúrese que el interruptor "ON/OFF" está en la posición "OFF". (Ver Diagrama #1)
2. Desatornille y quite la tapa del compartimento de las pilas. (Ver Diagrama #1)
3. Introduzca 3 pilas tipo "AAA" de acuerdo con las marcas de las polaridades (+) y (-) según se indica dentro del compartimiento. (Ver Diagrama #2)
4. Reemplace la tapa del compartimento de pilas y apretar el tornillo firmemente para cerrar.

Interruptor "ON/OFF"

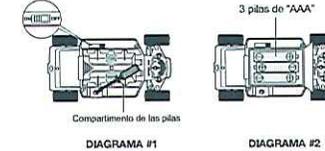

COMO COLOCAR LAS PILAS EN EL MANDO DE CONTROL


1. Deslice la tapa del compartimento de las pilas situada en la parte posterior del mando abriéndola y coloque 2 pilas tipo "AA" dentro siguiendo el símbolo grabado. (Ver Diagrama #3)
 2. Coloque la tapa del compartimento de las pilas.
- Nota: Retire las pilas después de usar el vehículo.

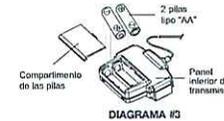


COMO JUGAR

COMIENZO DEL JUEGO

1. Coloque la antena pasando el cable a través del tubo incluido y conectelo en el coche firmemente. Sino el vehículo no funcionará. (Ver Diagrama #4)
2. Coloque el interruptor ON/OFF del vehículo en la posición "ON". (Ver Diagrama #5)

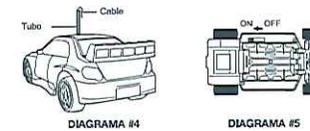

2. Dirige el vehículo con el mando de control. (Ver Diagrama #6)
3. Apague el interruptor del vehículo después de jugar y retire todas las pilas del mando de control y del coche.

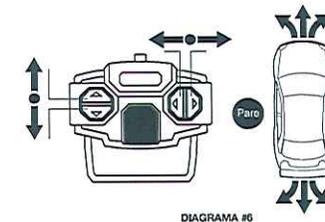

AJUSTE DE LA DIRECCIÓN DE LAS RUEDAS DELANTERAS

5. Si el vehículo no corre en dirección recta hacia delante, ajuste la palanca para un alineamiento satisfactorio en la parte inferior del vehículo. (Ver Diagrama #7)
6. Si el vehículo tiende a ir hacia la izquierda, gire la "palanca de alineamiento de dirección" hacia la posición "R".
7. Si el vehículo tiende a ir hacia la derecha, gire la "palanca de alineamiento de dirección" hacia la posición "L".




DIAGRAMA #7

PILAS PRECAUCIONES

1. Para un funcionamiento óptimo, use pilas alcalinas.
2. No deben mezclarse diferentes tipos de pilas, ni pilas nuevas con usadas.
3. No mezclar pilas alcalinas con pilas estándar (carbón-zinc) o recargables.
4. No se deben recargar pilas no recargables.
5. Se deben recargar las pilas respetando la polaridad correcta.
6. Extraiga las pilas del juguete cuando no se use durante un periodo prolongado.
7. Se deben quitar las pilas agotadas del juguete y tirarlas en un contenedor de recogida selectiva.
8. Las pilas recargables deberán ser cargadas solamente por un adulto.
9. Se deben quitar las pilas del juguete antes de cargarlas.
10. Las terminales de suministro no deben ser cortocircuitadas.
11. Los cables de antena no deben insertarse en la salida del enchufe.

NO RECOMENDADO PARA NIÑOS MENORES DE 3 AÑOS. CONTIENE PIEZAS PEQUEÑAS QUE PUEDEN SER INGERIDAS.



IMPRESO EN CHINA
O.I. NO.4519

SIZE: 210 X 297MM PN#65-4519-000-0100