LATITUDE 10
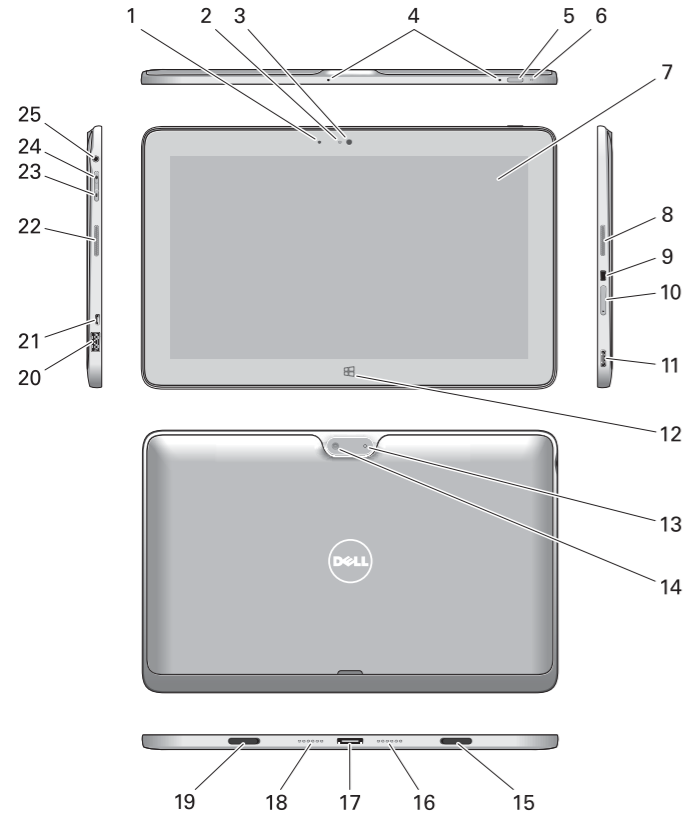
Setup and Features Information
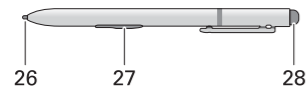
Language | Language | Language | Language

Views | Views | Views | Views | Views

1	camera LED
2	Ambient Light Sensor
3	front camera
4	microphones
5	power button
6	power LED
7	touch screen
8	speaker
9	Noble security lock slot
10	memory card reader
11	mini HDMI connector
12	start button
13	rear camera
14	camera flash
15	dock holder
16	dock pins
17	dock/power connector
18	dock pins
19	dock holder
20	USB connector
21	micro USB/power connector
22	speaker
23	volume decrease button
24	volume increase button
25	audio connector
26	Pen Tip (replaceable)
27	Programmable button – right mouse click (default)
28	Eraser Tip

Stylus (optional) | Stylus (optional) | Stylus (optional) |
Stylus (optional) | Stylus (optional)

0YFKK9A00

2013 - 08

1	Language	1	Language	1	Language	1	Language
2	Language	2	Language	2	Language	2	Language
3	Language	3	Language	3	Language	3	Language
4	Language	4	Language	4	Language	4	Language
5	Language	5	Language	5	Language	5	Language
6	Language	6	Language	6	Language	6	Language
7	Language	7	Language	7	Language	7	Language
8	Language	8	Language	8	Language	8	Language
9	Language	9	Language	9	Language	9	Language
10	Language	10	Language	10	Language	10	Language
11	Language	11	Language	11	Language	11	Language
12	Language	12	Language	12	Language	12	Language
13	Language	13	Language	13	Language	13	Language
14	Language	14	Language	14	Language	14	Language
15	Language	15	Language	15	Language	15	Language
16	Language	16	Language	16	Language	16	Language
17	Language	17	Language	17	Language	17	Language
18	Language	18	Language	18	Language	18	Language
19	Language	19	Language	19	Language	19	Language
20	Language	20	Language	20	Language	20	Language
21	Language	21	Language	21	Language	21	Language
22	Language	22	Language	22	Language	22	Language
23	Language	23	Language	23	Language	23	Language
24	Language	24	Language	24	Language	24	Language
25	Language	25	Language	25	Language	25	Language
26	Language	26	Language	26	Language	26	Language
27	Language	27	Language	27	Language	27	Language
28	Language	28	Language	28	Language	28	Language

Specifications

📝 **NOTE:** Offerings may vary by region. The following specifications are only those required by law to ship with your tablet. For more information regarding the configuration of your tablet, go to **Start Screen → Help and Support** and select the option to view information about your tablet.

Power	
Coin-cell battery	3 V CR1220 lithium ion
Input voltage	100 VAC - 240 VAC
Output Power	19.0V - 19.5V, 1.54A - 1.58A

Physical	
Height	10.2mm (0.4 inch)
Width	279.74mm (11.01 inches)
Depth	176.76mm (6.96 inches)
Weight (Minimum)	785.5grams (1.73 lbs)

Environmental	
Operating Temperature	0 °C to 35 °C (32 °F to 95 °F)

Language

📝 **LANGUAGE:** Offerings may vary by region. The following specifications are only those required by law to ship with your tablet. For more information regarding the configuration of your tablet, go to **Start Screen → Help and Support** and select the option to view information about your tablet.

Power	
Coin-cell battery	3 V CR1220 lithium ion
Input voltage	100 VAC - 240 VAC
Output Power	19.0V - 19.5V, 1.54A - 1.58A

Physical	
Height	10.2mm (0.4 inch)
Width	279.74mm (11.01 inches)
Depth	176.76mm (6.96 inches)
Weight (Minimum)	785.5grams (1.73 lbs)

Environmental	
Operating Temperature	0 °C to 35 °C (32 °F to 95 °F)

Language

📝 **LANGUAGE:** Offerings may vary by region. The following specifications are only those required by law to ship with your tablet. For more information regarding the configuration of your tablet, go to **Start Screen → Help and Support** and select the option to view information about your tablet.

Power	
Coin-cell battery	3 V CR1220 lithium ion
Input voltage	100 VAC - 240 VAC
Output Power	19.0V - 19.5V, 1.54A - 1.58A

Physical	
Height	10.2mm (0.4 inch)
Width	279.74mm (11.01 inches)
Depth	176.76mm (6.96 inches)
Weight (Minimum)	785.5grams (1.73 lbs)

Environmental	
Operating Temperature	0 °C to 35 °C (32 °F to 95 °F)

Language

📝 **LANGUAGE:** Offerings may vary by region. The following specifications are only those required by law to ship with your tablet. For more information regarding the configuration of your tablet, go to **Start Screen → Help and Support** and select the option to view information about your tablet.

Power	
Coin-cell battery	3 V CR1220 lithium ion
Input voltage	100 VAC - 240 VAC
Output Power	19.0V - 19.5V, 1.54A - 1.58A

Physical	
Height	10.2mm (0.4 inch)
Width	279.74mm (11.01 inches)
Depth	176.76mm (6.96 inches)
Weight (Minimum)	785.5grams (1.73 lbs)

Environmental	
Operating Temperature	0 °C to 35 °C (32 °F to 95 °F)

⊙ ANATEL

Bateria integrada de íon de lítio recarregável:

Marca: Dell Modelo: FWRM8 (7.4Vdc, 30Wh)/ PPNPH (7.4Vdc, 60Wh).

Carregador: PA-1300-04.

Este produto está homologado pela Anatel, de acordo com os procedimentos regulamentados pela Resolução nº 242/2000 e atende aos requisitos técnicos aplicados, incluindo os limites de exposição da Taxa de Absorção Específica referente a campos elétricos, magnéticos e eletromagnéticos de radiofreqüência, de acordo com as Resoluções nº 303/2002 e 533/2009. Este dispositivo está em conformidade com as diretrizes de exposição à radiofreqüência quando posicionado a pelo menos 1,0 centímetro de distância do corpo. Para maiores informações, consulte o site da ANATEL - **www.anatel.gov.br**
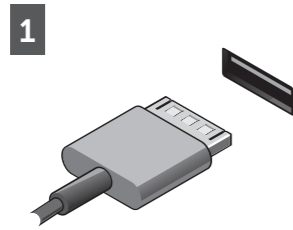
1

2

Connect the AC adapter to the AC adapter connector on the tablet and to the electrical outlet.

Press the power button to turn on the tablet.

Connect the AC adapter to the AC adapter connector on the tablet and to the electrical outlet.

Press the power button to turn on the tablet.

Connect the AC adapter to the AC adapter connector on the tablet and to the electrical outlet.

Press the power button to turn on the tablet.

Connect the AC adapter to the AC adapter connector on the tablet and to the electrical outlet.

Press the power button to turn on the tablet.

Connect the AC adapter to the AC adapter connector on the tablet and to the electrical outlet.

Press the power button to turn on the tablet.

Connect the AC adapter to the AC adapter connector on the tablet and to the electrical outlet.

Press the power button to turn on the tablet.

Information para NOM (únicamente para México)

The following information provided on the device described in this document in compliance with the requirements of the official Mexican standards (NOM)

Voltaje de alimentación	100 V AC - 240 V AC
Frecuencia	50 - 60 Hz
Consumo eléctrico	1,00 A ~ 1,30 A
Voltaje de salida	19,0 V de CC ~ 19,5 V de CC
Intensidad de salida	1,54 A ~ 1,58 A

| Regulatory Model Language Language Language Language | T06G |
| Regulatory Type Language Language Language Language | T06G001 |

© 2013 Dell Inc.

Printed in Poland | Printed in Poland | Printed in Poland | Printed in Poland | Printed in Poland

---

Start screen

You can get to the Start screen by swiping in from the right edge of your screen and tapping the **Start charm**.

Or point the mouse at the lower or upper right corner of the screen and then click the **Start charm**.

Close App

If you're using a mouse, click the top of the app and drag it to the bottom of the screen. If you're using touch, drag the app to the bottom of the screen.

✍ **NOTE:** When you're not using an app, Windows will remain open in the background and it will close eventually.

Shutdown

- Swipe in from the right edge of the screen, and then tap Settings. If you're using a mouse, point to the upper-right corner of the screen, move the mouse pointer down, and then click **Settings**.
- Tap or click **Power**, and then tap or click **Shut down**.

More Information

For regulatory and safety best practices see the safety and regulatory documents that shipped with your tablet and the regulatory compliance website at **www.dell.com/regulatory_compliance**.

See **www.dell.com** for additional information.

Language

You can get to the Start screen by swiping in from the right edge of your screen and tapping the **Start charm**.

Or point the mouse at the lower or upper right corner of the screen and then click the **Start charm**.

Language

If you're using a mouse, click the top of the app and drag it to the bottom of the screen. If you're using touch, drag the app to the bottom of the screen.

✍ **NOTE:** When you're not using an app, Windows will remain open in the background and it will close eventually.

Language

- Swipe in from the right edge of the screen, and then tap Settings. If you're using a mouse, point to the upper-right corner of the screen, move the mouse pointer down, and then click **Settings**.
- Tap or click **Power**, and then tap or click **Shut down**.

More Information

For regulatory and safety best practices see the safety and regulatory documents that shipped with your tablet and the regulatory compliance website at **www.dell.com/regulatory_compliance**.

See **www.dell.com** for additional information.

Language

You can get to the Start screen by swiping in from the right edge of your screen and tapping the **Start charm**.

Or point the mouse at the lower or upper right corner of the screen and then click the **Start charm**.

Language

If you're using a mouse, click the top of the app and drag it to the bottom of the screen. If you're using touch, drag the app to the bottom of the screen.

✍ **NOTE:** When you're not using an app, Windows will remain open in the background and it will close eventually.

Language

- Swipe in from the right edge of the screen, and then tap Settings. If you're using a mouse, point to the upper-right corner of the screen, move the mouse pointer down, and then click **Settings**.
- Tap or click **Power**, and then tap or click **Shut down**.

More Information

For regulatory and safety best practices see the safety and regulatory documents that shipped with your tablet and the regulatory compliance website at **www.dell.com/regulatory_compliance**.

See **www.dell.com** for additional information.

Language

You can get to the Start screen by swiping in from the right edge of your screen and tapping the **Start charm**.

Or point the mouse at the lower or upper right corner of the screen and then click the **Start charm**.

Language

If you're using a mouse, click the top of the app and drag it to the bottom of the screen. If you're using touch, drag the app to the bottom of the screen.

✍ **NOTE:** When you're not using an app, Windows will remain open in the background and it will close eventually.

Language

- Swipe in from the right edge of the screen, and then tap Settings. If you're using a mouse, point to the upper-right corner of the screen, move the mouse pointer down, and then click **Settings**.
- Tap or click **Power**, and then tap or click **Shut down**.

More Information

For regulatory and safety best practices see the safety and regulatory documents that shipped with your tablet and the regulatory compliance website at **www.dell.com/regulatory_compliance**.

See **www.dell.com** for additional information.

Language

You can get to the Start screen by swiping in from the right edge of your screen and tapping the **Start charm**.

Or point the mouse at the lower or upper right corner of the screen and then click the **Start charm**.

Language

If you're using a mouse, click the top of the app and drag it to the bottom of the screen. If you're using touch, drag the app to the bottom of the screen.

✍ **NOTE:** When you're not using an app, Windows will remain open in the background and it will close eventually.

Language

- Swipe in from the right edge of the screen, and then tap Settings. If you're using a mouse, point to the upper-right corner of the screen, move the mouse pointer down, and then click **Settings**.
- Tap or click **Power**, and then tap or click **Shut down**.

More Information

For regulatory and safety best practices see the safety and regulatory documents that shipped with your tablet and the regulatory compliance website at **www.dell.com/regulatory_compliance**.

See **www.dell.com** for additional information.