



Excello^{Tab}

Warranty card

This item comes with a 1-year manufacturer's warranty.

To register your product, please go to the following link:

www.simbans.com/warranty

Also fill in the details below for your own reference and keep this card in a safe place.

Order Number:

Model Number:

Serial Number:

Term and Conditions

Following are the terms and conditions for the warranty:

1. The warranty covers only the product listed on this card.
2. Warranty covers any manufacturing defects which occurred within one year of the purchase. Normal wear and tear is not covered.
3. The retailer will cover the expenses for the return shipping if the defect occurs within first 30 days. After first 30 days of the purchase, buyer is responsible to pay the shipping cost for sending the item for repair.
4. The average time to repair and send the unit back is about 6 weeks.
5. The manufacturer may send a replacement unit instead of repairing the defective one at his own discretion.
6. Please remove all your personal information before sending the unit for repair. The manufacturer is not responsible for any loss of data or information.

Excello^{Tab}

Quick Start Guide

This is a quick start guide only.
Ceci est un guide de démarrage rapide seulement.
Dies ist eine Kurzanleitung nur.
Questa è solo una guida rapida.
Esta es sólo una guía de inicio rápido.


For full user manual, please visit
Pour le mode d'emploi complet , s'il vous plaît visitez
Für vollständige Bedienungsanleitung finden Sie unter
Per manuale utente completo , visitare il sito
El manual de usuario completo, visitar

www.simbans.com/manuals


Read me first

Please read this manual before operating your tablet and keep it for future reference.
The descriptions in this manual are based on the default settings.
Images and screenshots used in this manual may differ from the actual product.
Available features and additional services may vary by device, software or service provider.
Our company is not liable for performance issues caused by third-party applications.

Ports and Buttons

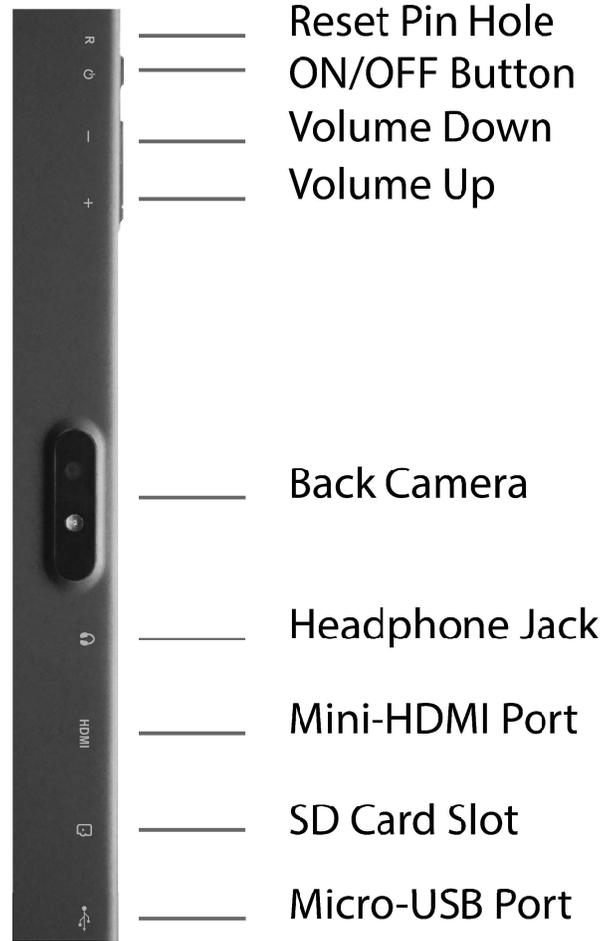

Charger Configurations

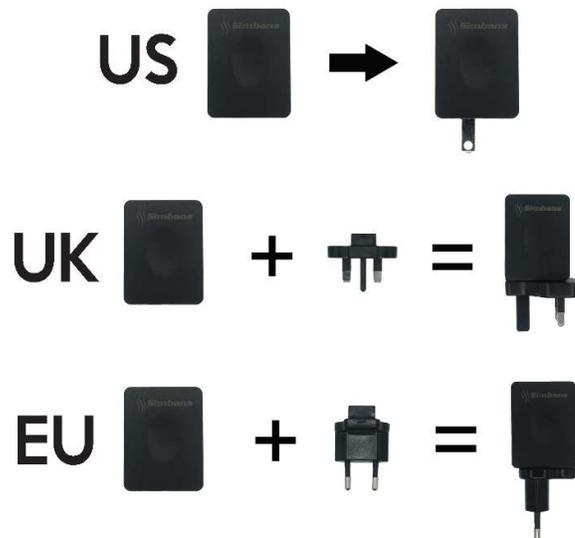

Startup, Charging and Data Transfer

 Press and Hold for 3 Seconds
to turn on the Tablet



 Plug in Micro-USB Cable for
Charging and Data Transfer



 Insert Micro-SD Card to
expand storage



Charge the Tablet

The Tablet comes with a built-in rechargeable lithium-polymer battery. It is recommended to fully charge the battery before first use.

- To charge the Tablet, plug the charger to an electrical socket with the other end of the adapter inserted to the microUSB input slot on the Tablet (Refer to Step 1 on the previous page).
- You may continue to use the Tablet while it is charging. You may stop charging any time even when it is not 100% charged.
- If the Tablet is powered on, the battery charge status will be indicated at the top right corner of the screen by the battery meter. If the Tablet is powered off, it will charge until the battery is full.
- When the battery life runs out, the battery meter turns red and the device needs to be charged soon. It will continue to operate as usual until it drops to 0%.



Displays your current battery charge level is very low (Charge: ~15% - 5%).



Shows your current battery only has up to 4% power remaining and will soon shutdown. (Charge: ~4% - 1%).

- Disconnect the power adapter when the Tablet is fully charged.

Note: When the Tablet is connected to a computer via the USB cable, the battery will charge via the USB socket, but at a much slower rate than the power adapter supplied.

- ⚠ **Do not use any other power adapters than the one supplied. Using an incompatible power adapter could damage the tablet and poses the potential risk of fire.**

Turn on the Tablet

- Press the power key circled in red for 5 seconds.
- Wait for about 30 seconds for Android™ to load and start.
- The Tablet will guide you through the basic setup.

Initial setup

- On the welcome page, scroll to select the desired language.
- Tap the arrow circled in green to proceed.
- Select a Wi-Fi network, i.e. the wireless network for Internet connection
- Enter the password and wait for the connection and system check. It may take up to 2 minutes.
- Sign in to your Google™ account

If you have an existing Google account

- ⇒ Enter your Google email and press Next
- ⇒ Enter your Google account password and press Next
- ⇒ Accept the Terms of Service and Privacy Policy

If you do not have a Google account yet

- ⇒ Select “Or create a new account”
- ⇒ Enter you first name and last name and press Next

- ⇒ Enter your desired username and press Next
 - ⇒ Create your password with at least 8 characters and press Next
 - ⇒ You will be prompted to add your phone number. You may insert your phone number or skip this step.
 - ⇒ Agree to the Privacy Policy and Terms of Service by pressing “I agree”
- Wait for about 30 seconds for the Tablet to sign in and load your account info
 - Select backup options, payment info accordingly (You may skip this step and change the setup later)
 - The Home screen with a digital clock will show up.
 - Press and swipe up the lock icon to unlock.

The Tablet is now ready for use.

Power on and off


To turn on the Tablet: Press and hold the power key until the LCD screen turns on. Wait until the Home screen appears. The tablet is now ready to use.

To turn off/ reboot the Tablet: Press and hold the Power key until the “power off” menu appears. Choose “Power off” to turn off the Tablet or “Reboot” to reboot the device.


To lock screen: When the Tablet is on, press the power key once to lock screen. The tablet will enter the standby mode. Alternatively, press and hold the Power key until the “lock now” menu appears.

To unlock screen: When the Tablet is on but in standby mode, press the power key once to get to the unlock screen. The home screen will show up. Press and swipe up the lock icon to unlock.

Ports et boutons

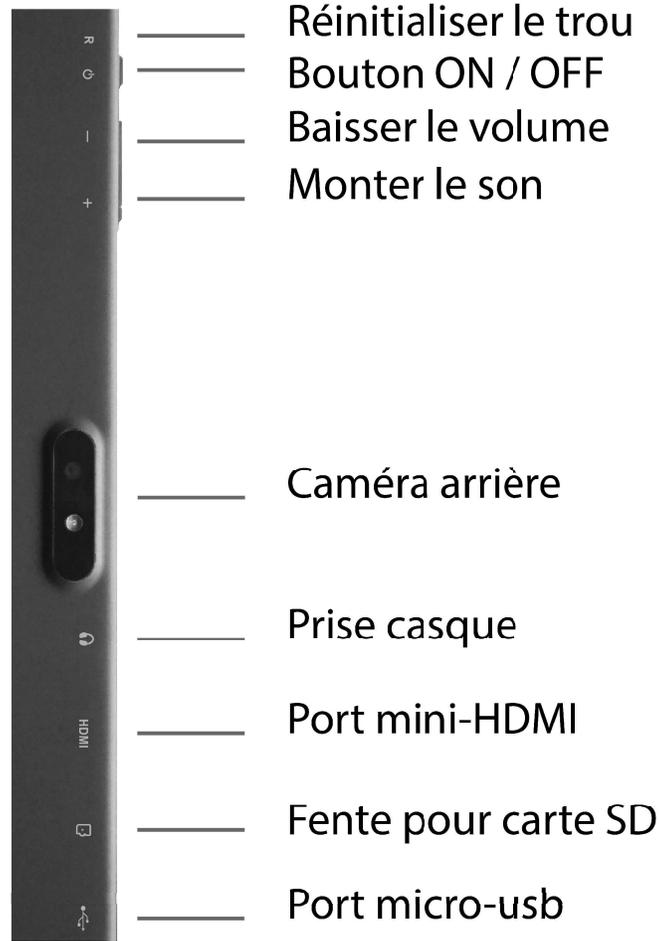

Configurations de Chargeur

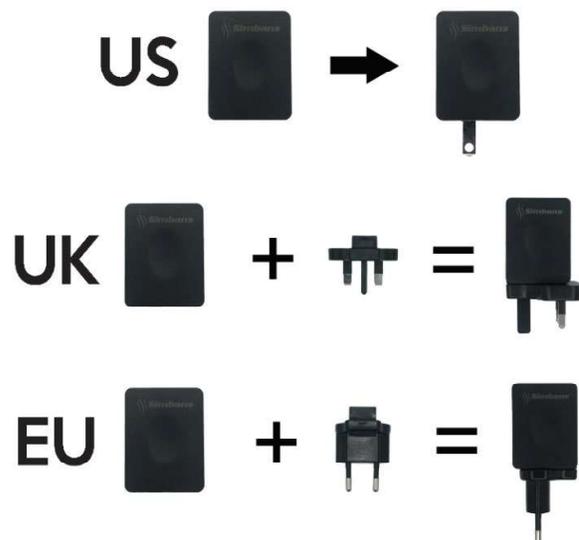

Démarrage, charge et transfert de données

 Appuyez et maintenez pendant 3 secondes allumer la tablette



 Câble micro-USB enfichable pour Charge et transfert de données




 Insérer une carte Micro-SD dans augmenter le stockage



Charge de la Tablette

Le Tablet est livré avec une batterie lithium-polymère rechargeable intégrée. Il est recommandé de charger complètement la batterie avant la première utilisation.

- Pour charger la tablette, branchez le chargeur sur une prise électrique avec l'autre extrémité de l'adaptateur inséré dans la fente de chargement sur la tablette.
- Vous pouvez continuer à utiliser la tablette pendant qu'elle se recharge. Vous pouvez arrêter la charge en tout temps, même quand elle n'est pas à 100% de charge.
- Si la tablette est sous tension, l'état de charge de la batterie est indiqué dans le coin supérieur droit de l'écran par le niveau de la batterie. Si la tablette est éteinte, il sera chargé jusqu'à ce que la batterie soit pleine.
- Lorsque la durée de vie de la batterie est épuisée, la jauge de batterie devient rouge et l'appareil doit être rechargé bientôt. Il continuera à fonctionner comme d'habitude jusqu'à ce qu'il tombe à 0%.

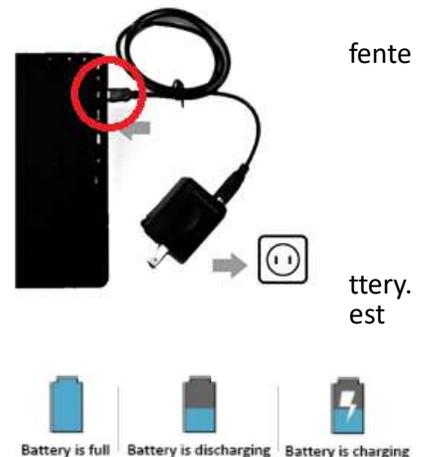

Displays your current battery charge level is very low (Charge: ~15% - 5%).



Shows your current battery only has up to 4% power remaining and will soon shutdown. (Charge: ~4% - 1%).


- Débranchez l'adaptateur secteur lorsque la tablette est complètement chargée.

Remarque: Lorsque la tablette est connectée à un ordinateur via le câble USB, la batterie se charge via la prise USB, mais à un rythme beaucoup plus lent que par l'intermédiaire de l'adaptateur d'alimentation DC 5V.

- ⚠ **Ne pas utiliser un autre adaptateur que celui fourni. L'utilisation d'un adaptateur incompatible pourrait endommager le comprimé et pose le risque potentiel d'incendie.**

Allumez le Tablet

- Appuyez sur la touche d'alimentation entourée en rouge pendant 5 secondes.
- Le logo Samsung sera affiché au milieu de l'écran, puis le logo Android™.
- Attendez environ 30-60 secondes pour Android pour charger et démarrer les applications. Vous verrez alors l'écran de verrouillage avec une horloge au milieu.
- Appuyez et faites glisser l'icône de verrouillage pour déverrouiller.

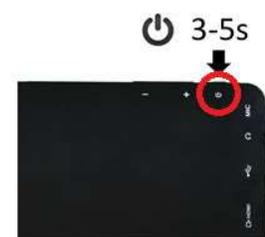

La configuration initiale.

- Sur la page d'accueil, faites défiler pour sélectionner la langue souhaitée.
- Appuyez sur la flèche encerclée en vert pour continuer.
- Sélectionnez un réseau Wi-Fi, à savoir le réseau sans fil pour la connexion Internet
- Entrez le mot de passe et attendez que la connexion et le système contrôlent. Il peut prendre jusqu'à 2 minutes
- Connectez-vous à votre compte Google™.

Si vous avez un compte Google existant

- ⇒ Entrez votre email Google et cliquez sur Suivant
- ⇒ Entrez votre mot de passe compte Google et cliquez sur Suivant
- ⇒ Acceptez les Conditions d'utilisation et Politique de confidentialité

Si vous ne possédez pas encore de compte Google

- ⇒ Sélectionnez "Ou créer un nouveau compte"
 - ⇒ vous Entrez le prénom et le nom et appuyez sur Suivant
 - ⇒ Entrez votre nom d'utilisateur désiré et appuyez sur Suivant
 - ⇒ Créer votre mot de passe avec au moins 8 caractères et appuyez sur Suivant
 - ⇒ Vous serez invité à ajouter votre numéro de téléphone. Vous pouvez insérer votre numéro de téléphone ou de sauter cette étape.
 - ⇒ D'accord à la politique de confidentialité et conditions de service en appuyant sur "Je suis d'accord"
- Attendez environ 30 secondes pour que la tablette pour vous connecter et de charger vos informations de compte
 - Sélectionnez les options de sauvegarde, informations de paiement en conséquence (Vous pouvez sauter cette étape et modifier la configuration plus tard)
 - L'écran d'accueil avec une horloge numérique sera affiché.
 - Appuyez et faites glisser l'icône de verrouillage pour déverrouiller.

La tablette est maintenant prêt à être utilisé.

Mise sous tension et hors tension

Pour allumer la tablette: Appuyez et maintenez la touche d'alimentation jusqu'à ce que l'écran LCD est allumé. Attendez jusqu'à ce que l'écran d'accueil apparait. La tablette est maintenant prêt à utiliser.

Pour désactiver / redémarrer le Tablet: Appuyez et maintenez la touche Power jusqu'à ce que le menu "hors tension" apparait. Choisissez "Power off" pour éteindre la tablette ou "Reboot" pour redémarrer l'appareil.


Pour verrouiller l'écran: Lorsque la tablette est en marche, appuyez sur la touche d'alimentation une fois pour verrouiller l'écran. La tablette passe en mode veille. Sinon, appuyez sur la touche d'alimentation jusqu'à ce que le "verrouiller maintenant" menu apparait.

Pour déverrouiller l'écran: Lorsque la tablette est allumé, mais en mode veille, appuyez sur la touche d'alimentation une fois pour se rendre à l'écran de déverrouillage. L'écran d'accueil sera affiché. Appuyez et faites glisser l'icône de verrouillage pour déverrouiller.

Anschlüsse und Schaltflächen



Ladegerät Konfigurationen

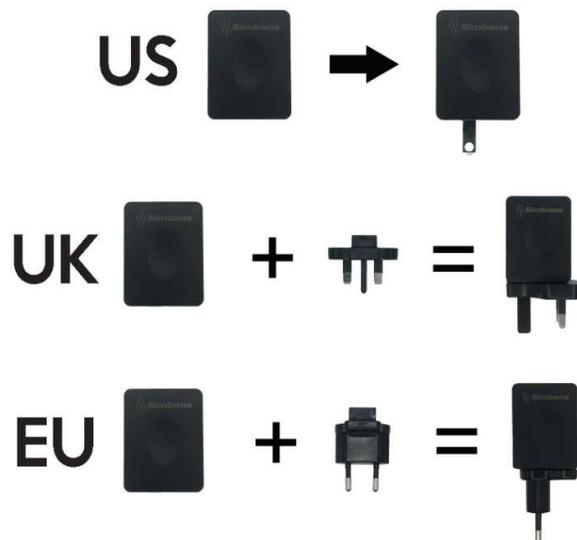

Inbetriebnahme, Aufladen und Datenübertragung

 Halten Sie 3 Sekunden lang gedrückt um das Tablet einzuschalten



 Stecken Sie das Micro-USB-Kabel für ein Aufladen und Datenübertragung



 Legen Sie eine Micro-SD-Karte in ein Speicher erweitern

