

SONY®



US

FR

ES

PLAYSTATION® 3

Safety and Support
Sécurité et support technique
Seguridad y soporte técnico

CECHH01

Before using this product, carefully read the supplied documentation and retain it for future reference.

Avant d'utiliser ce produit, lisez attentivement la documentation fournie et conservez-la pour pouvoir la consulter ultérieurement.

Antes de utilizar este producto, lea detenidamente la documentación suministrada con el mismo y consérvela para consultarla en el futuro.

WARNING

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Caution

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

The use of optical instruments with this product will increase eye hazard.



This appliance is classified as a CLASS 1 LASER product under IEC60825-1+A2:2001.

This equipment complies with FCC/IC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and legs).

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

The wireless controller complies with FCC/IC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If you have questions about this product, call our technical support line at 1-800-345-7669, or write to:

Sony Computer Entertainment America
Consumer Services/Technical Support
PO Box 5888, San Mateo, CA 94402-0888 U.S.A.

Declaration of Conformity

Trade Name : SONY
Model No. : CECHH01
Responsible Party : Sony Electronics Inc.
Address : 16530 Via Esprillo
San Diego, CA 92127 U.S.A.
Telephone No. : 858-942-2230

This device complies with Part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of this device.

About the lithium coin memory back-up battery

The lithium coin memory back-up battery inside this product contains Perchlorate.

The following statement is required by the State of California, USA:

Perchlorate Material - special handling may apply, See

<http://www.dtsc.ca.gov/hazardouswaste/perchlorate>

Photosensitivity/Epilepsy/Seizures

A very small percentage of individuals may experience epileptic seizures or blackouts when exposed to certain light patterns or flashing lights. Exposure to certain patterns or backgrounds on a television screen or when playing video games may trigger epileptic seizures or blackouts in these individuals. These conditions may trigger previously undetected epileptic symptoms or seizures in persons who have no history of prior seizures or epilepsy. If you, or anyone in your family, has an epileptic condition or has had seizures of any kind, consult your physician before playing.

IMMEDIATELY DISCONTINUE use and consult your physician before resuming gameplay if you or your child experience any of the following health problems or symptoms:

- dizziness,
- altered vision,
- eye or muscle twitches,
- loss of awareness,
- disorientation,
- seizures, or
- any involuntary movement or convulsion.

RESUME GAMEPLAY ONLY ON APPROVAL OF YOUR PHYSICIAN.

Use and handling of video games to reduce the likelihood of a seizure

- Use in a well-lit area and keep as far away as possible from the television screen.
- Avoid large screen televisions. Use the smallest television screen available.
- Avoid prolonged use of the PS3™ system. Take a 15-minute break during each hour of play.
- Avoid playing when you are tired or need sleep.

US

Radio waves

Radio waves may affect electronic equipment or medical devices (for example, pacemakers), which may cause malfunctions and possible injuries.

- If you use a pacemaker or other medical device, consult your physician or the manufacturer of your medical device before using the wireless networking feature (Bluetooth and wireless LAN).
- Do not use the wireless networking feature in the following locations:
 - Areas where wireless network use is prohibited, such as in hospitals. Abide by medical institution regulations when using the system on their premises.
 - Areas near fire alarms, automatic doors and other types of automated equipment.

PlayStation® and PlayStation®2 format software

This model of the PLAYSTATION®3 system is designed to play PLAYSTATION®3 format software and has limited backward compatibility. This system is not compatible with and will not play PlayStation®2 format software.

Some PlayStation® format software may play on this system. For more information, visit www.us.playstation.com.

About DNAS

Sony Computer Entertainment Inc. uses DNAS (Dynamic Network Authentication System), a proprietary authentication system, to help protect copyright and security in connecting the PS3™ system to a network. DNAS may retrieve information about a user's hardware and software for authentication, copy protection, account blocking, system, rules, or game management and other purposes. The information collected does not identify the user personally. The unauthorized transfer, exhibition, export, import or transmission of programs and devices circumventing its authentication scheme may be prohibited by law.

System software

The system software included within this product is subject to a limited license from Sony Computer Entertainment Inc. Refer to <http://www.scei.co.jp/ps3-eula> for further details.

Table of contents

WARNING	2
About the PS3™ system documentation	5

■ Before use

Precautions	6
-------------------	---

■ Troubleshooting

Before requesting service.....	10
--------------------------------	----

■ Limited warranty

LIMITED HARDWARE WARRANTY AND LIABILITY	14
---	----

■ Additional information

Removing / replacing the hard disk	16
Reinstalling the system software	18
Caution on disposal of the PS3™ system	20
Wireless controller battery	20
Specifications	22

Information about system functionality published in this document may vary from the information for your PS3™ system, depending on the system software version in use.

About the PS3™ system documentation

The PS3™ system documentation includes the following:

Safety and Support (this document)

This document contains safety information related to the use of the PS3™ system, troubleshooting, specifications and other information.

Quick Reference

This document contains information on setting up the PS3™ system, preparing for use and basic hardware operations.

User's Guide (<http://manuals.playstation.net/document/>)

This online document is accessed through the Internet and contains detailed information related to use of the PS3™ system software.

Notice

For up-to-date information regarding the PS3™ system, visit <http://www.us.playstation.com>.

US

Before use

Precautions

Safety

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential for causing fire, electrical shock or personal injury. To help ensure accident-free operation, follow these guidelines:

- Observe all warnings, precautions and instructions.
- Regularly inspect the AC power cord for damage.
- Stop use, unplug the AC power cord from the electrical outlet and disconnect any other cables immediately if the device functions in an abnormal manner, produces unusual sounds or smells or becomes too hot to touch.
- For more information on product safety and troubleshooting, visit <http://www.us.playstation.com/Support>. Contact SCEA Consumer Services at 1-800-345-7669 if the device does not operate properly.

Use and handling

- Use in a well-lit area and keep as far away as possible from the television screen.
- Avoid prolonged use of the PS3™ system and wireless controller.
- Stop using the system immediately if you begin to feel tired or if you experience discomfort or pain in your hands or arms while operating the wireless controller. If the condition persists, consult a doctor.
- If you experience any of the following health problems, discontinue use of the system immediately. If symptoms persist, consult with your physician.
 - Dizziness, nausea, fatigue or symptoms similar to motion sickness
 - Discomfort or pain in a part of the body, such as eyes, ears, hands or arms
- Keep the system and accessories, including cable ties and fasteners, out of the reach of small children.
- Do not connect cables other than a USB cable while the system is turned on (power indicator is lit solid green).

- Any TV or component connected to the system must be functioning properly and free of defects. If a TV or component connected to the system is faulty or defective, it may cause damage to the TV or component, or to the system itself.
- Do not touch the system or connected cables or accessories during an electrical storm.
- Do not use the system or accessories near water.
- Do not allow liquid, small particles or other foreign objects to get into the system or accessories.
- Do not touch the connectors of the system or accessories.
- Do not expose the system or accessories to dust, smoke or steam. Also, do not place the system in an area subject to excessive dust or cigarette smoke. Dust build-up or cigarette smoke residue on the internal components (such as the lens) may cause the system to malfunction.
- Do not expose the system or accessories to high temperatures, high humidity or direct sunlight.
- Do not place the system or accessories on surfaces that are unstable, tilted or subject to vibration.
- Do not set the system other than in the vertical or horizontal position. Also, do not change the position while the system is turned on.
- Be careful when carrying the system. If you do not have a good grip, the system may drop causing potential damage or injury.
- Do not move or change the position of the system with a disc inserted. The vibration may result in scratching of the disc or the system.
- Do not turn off the system while data is being saved on or loaded from the hard disk.
- Do not stand on or put objects on the system, and do not stack the system with other devices.
- Do not place the system and connected accessories on the floor or in a place where they may cause someone to trip or stumble.
- Do not allow bodily contact with the system or air from the system vents for an extended period of time while in use. Extended contact under these conditions may cause low-temperature burns.
- When connecting the system to a plasma or projection* TV, do not leave a still image on the TV screen for an extended period of time, as this may leave a faint image permanently on the screen.

*Except LCD screen types

- Parents are encouraged to monitor children in online activities to ensure safe and responsible Internet usage.

- When using the motion sensor function of the SIXAXIS™ wireless controller, be cautious of the following points. If the controller hits a person or object, this may cause accidental injury or damage.
 - Before using, check that there is plenty of space around you.
 - When using the controller, grip it firmly to make sure it cannot slip out of your hand.
 - If using a controller that is connected to the PS3™ system with a USB cable, make sure there is enough space for the cable so that the cable will not hit a person or object. Also, take care to avoid pulling the cable out of the PS3™ system while using the controller.

Vents

Do not block any vents. To maintain good ventilation, follow the guidelines below:

- Place the system at least 10 cm (4 in) away from a wall surface.
- Do not place on a carpet or rug with long fibers.
- Do not place in a narrow or cramped space.
- Do not cover with cloth.
- Do not allow dust to build up on the vents.

AC power cord use

- To avoid possible damage to the system or a connected TV or component, the AC power cord must be plugged into a polarized, three-prong, electrical outlet that is properly wired and grounded.
- Do not plug the AC power cord for the system into an electrical outlet until you have made all other connections. Make sure the TV or other component is unplugged from the electrical outlet prior to connecting it to the system.
- To help ensure safe operation, regularly inspect the AC power cord. If damaged, stop use immediately and call SCEA Consumer Services at 1-800-345-7669 for assistance.
- Do not use a power cord other than the supplied AC power cord. Do not modify the cord.
- Do not touch the plug of the AC power cord with wet hands.
- Protect the AC power cord from being walked on or pinched particularly at plugs, expansion receptacles and the point where the cord exits from the system.

- Do not place heavy items on the cord.
- Do not place the AC power cord near heating equipment and do not expose the cord to heat.
- Unplug the AC power cord from the electrical outlet before cleaning or moving the system, or when you do not intend to use the system for an extended period of time. When disconnecting, grasp the power cord by the plug and pull straight out of the electrical outlet. Never pull by the cord and do not pull out at an angle.
- Do not connect the AC power cord to a voltage transformer or inverter. Connecting the AC power cord to a voltage transformer for overseas travel or an inverter for use in an automobile may cause heat to build up in the system and may cause burns or a malfunction.

Never disassemble or modify the system or accessories

Use the PS3™ system and accessories according to the instructions in the product documentation. No authorization for the analysis or modification of the system or accessories, or the analysis and use of its circuit configurations, is provided. Unauthorized modification of the system or accessories will void your warranty. There are no user serviceable components inside the PS3™ system (the supplied hard disk may be removed but not disassembled or modified). Additionally, there is a risk of exposure to laser radiation as well as to electrical shock.

Network

- A broadband connection is required to access the Internet. Note that dial-up connectivity is not supported.
- User is responsible for Internet service fees. For details, refer to the information provided in your service contract or contact your Internet service provider.
- Use only an Ethernet cable compatible with 10BASE-T, 100BASE-TX or 1000BASE-T networks. Do not use a cord for a standard residential telephone line or cables of types other than those mentioned here. Using the wrong type of cord or cable can cause more electrical current than necessary to flow through the LAN connector, which may lead to heat build-up, fire or malfunction.

Wireless networking feature

- The 2.4 GHz range of radio waves used by the wireless networking feature of this product is a range shared by various devices. This product has been designed to minimize the effect of other devices using the same range. However, in some cases interference from other devices may reduce the connection speed, shorten the signal range or cause the connection to be terminated unexpectedly.
- When using the PS3™ system's scan function to select a wireless LAN access point, access points that are not intended for public use may be displayed. Only connect to an access point that you are authorized to use.

Moisture condensation

If the system or disc is brought directly from a cold location to a warm one, moisture may condense on the lens inside the system or on the disc. Should this occur, the system may not operate properly. In this case, remove the disc and turn off and unplug the system. Do not put the disc back in until the moisture evaporates (this may take several hours). If the system still does not operate properly, call SCEA Consumer Services at 1-800-345-7669 for assistance.

Cleaning

For safety reasons, before cleaning the system or connected accessories, disconnect the AC power cord from the electrical outlet.

Exterior surfaces (plastic cover of system and wireless controller)

Follow the instructions below to help prevent the product exterior from deteriorating or becoming discolored.

- Wipe with a soft, dry cloth.
- Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
- Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.

Vents

When dust accumulates in the system vents, remove the dust with a low-powered vacuum cleaner.

Backing up data

It is recommended that you regularly back up data on the hard disk. If for any reason software or data loss or corruption occurs, it may not be possible to restore or repair the software or data. Sony Computer Entertainment Inc. and its subsidiaries and affiliates will not be held liable for damage or injury related to software or data loss or corruption.

Using the backup utility

You can back up data stored on the hard disk to a USB mass storage device and restore data that has been backed up. Select "Backup Utility" under "System Settings" and follow the on-screen instructions to perform this operation. Note that depending on the system's usage condition, you might not be able to back up or restore some data. It is recommended that you create a spare backup for important data in advance by copying or moving the data to a USB mass storage device. For details on the backup utility feature, refer to the user's guide (↔▶ page 5).


Copying/moving files

The following file types saved on the system's hard disk can be copied or moved to a USB mass storage device. Select the file, press the ⊕ button, and then select "Copy" or "Move" from the options menu. You may not be able to copy or move files that contain copyright-protected data.

File type	Back up destination
Saved data from games; video, audio or image files	USB mass storage device (USB flash drive, etc.)

Hint

By using a commercially available card reader/writer (USB connector type), you can back up files saved on the hard disk to storage media such as a Memory Stick™ or an SD Memory Card.

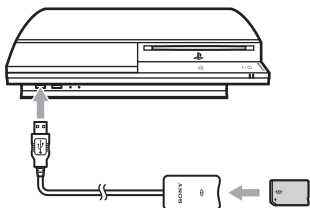

Discs

Note on compatibility

Some media may have region or territorial restrictions and may not work with your system. See media packaging for details.

Handling

- Do not touch the disc surface when handling a disc; hold it by the edges.
- Do not stick paper or tape onto discs and do not write on discs.
- Fingerprints, dust, dirt or scratches on the disc can distort the picture or reduce sound quality. Always handle carefully and check that discs are clean before use.

Storage

- Do not expose discs to high temperatures, high humidity or direct sunlight.
- When discs will not be used for an extended period of time, store them in their cases. Stacking uncased discs or storing them at an angle can cause them to warp.

Cleaning method

- Clean discs with a soft cloth, lightly wiping from the center outwards.
- Do not use solvents, record cleaners, anti-static spray or other chemicals as these can damage the discs.



US

Before use

Troubleshooting

Before requesting service

Go through this section if you experience difficulty in operating the PS3™ system. Should any problem persist, call SCEA Consumer Services at 1-800-345-7669 for assistance. For additional support information, visit our Web site at <http://www.us.playstation.com>.

Power

The system does not turn on.

- ➔ Check that the main power switch on the system rear is turned on.
- ➔ Check that the AC power cord is securely inserted in the system and the electrical outlet.

Picture

There is no picture on the TV screen.

- ➔ Adjust the video input on the TV to match the input connector that is being used to connect to the PS3™ system.
- ➔ Check that the cable is securely inserted. Try disconnecting the cable from the PS3™ system or TV and then reconnecting it.
- ➔ There may be a problem with the AV cable in use. Try using another cable that is compatible with the PS3™ system.
- ➔ If the video output settings on the system do not match those of the cable or TV in use, there may be no picture. If the screen goes blank, turn off the system. Then, with only the system and the TV connected, touch the system's power button for more than 5 seconds to turn the system back on. The video output settings will automatically be reset to the standard resolution.
- ➔ If the resolution of the video content is not supported by the TV in use, when the video is played the screen may go blank. If this happens, go to the screen for selecting the resolution in the system's video output settings, and then select all the resolutions that are supported by the TV.

The Blu-ray Disc (BD) or DVD cannot be played, or the picture is distorted.

- ➔ When outputting DVD content or PLAYSTATION®3 format software in SD resolution, only discs recorded in the NTSC standard can be played.
- ➔ If the system is connected to a VCR or a combination TV/VCR unit, copy protection encoding on some BDs and DVDs may cause image distortion, or may cause the image to become lighter or darker. In such cases, connect the system to the TV directly.
- ➔ If the BD or DVD does not match the region code set in the system, it cannot be played.
- ➔ Some DVDs are preset with parental control restrictions. Enter the password that was set in "Security Settings" to temporarily increase the viewer age restriction level.
- ➔ Some BDs are preset with parental control restrictions. Enter the password that was set in "Security Settings" to change the parental control level.
- ➔ The BD may be disc-locked. Enter the password that was set when the disc was created.
- ➔ See also the notices under "Playable discs" (➔ page 23).

Certain BDs cannot be played.

- ➔ To play commercially available BD video software, the encryption key for AACS (Advanced Access Control System) may need to be renewed. To renew the key, you must update the system software.

The size of the video image and the TV screen do not match.

- ➔ Check that the system's video output settings are correct.
- ➔ Check that the settings of the connected TV are correct. For details, refer to the instructions supplied with your TV.
- ➔ With some video content, the screen size cannot be changed.

The screen color does not seem right.

- ➔ The system's background color changes automatically in time with the hour of the day.

Audio

There is no sound.

- ➔ Check whether the muting function on the TV or speakers is turned off. Also check that the volume is at the appropriate level.
- ➔ If an audio device is connected, check the settings of the device. For details, refer to the instructions supplied with the audio device.
- ➔ There may be a problem with the AV cable. Try using another cable that is compatible with the PS3™ system.
- ➔ Some software do not support digital audio output.
- ➔ If the system's audio output settings do not match the AV cable or device in use, the system may not produce sound. Check that the system's audio output settings are correct.
- ➔ Some content that support Dolby Digital, DTS, and other formats may not produce audio from all channels.

Music files do not play.

- ➔ Tracks with a time limit or a limited number of playing times cannot be played.
- ➔ Playback methods may be limited for some music files that are distributed via the Internet. In such cases, it may not be possible to play the data on the PS3™ system.

Video

Even after selecting an item from the control panel, the desired operation cannot be performed.

- ➔ Playback conditions may be set in advance by the software developer. In such cases, certain options may not be available, even if you follow the instructions in the product documentation.

Network

A connection to the network cannot be established.

- ➔ Check that the Ethernet cable is securely connected.
- ➔ Check that the network settings are correct. Refer to the instructions supplied by your Internet service provider or in the software manual to make the correct network settings.

The Web page does not display properly.

- ➔ Some Web pages may not display properly due to the browser.

Disc media and USB devices

The system does not recognize the disc.

- ➔ Remove the disc and reinsert it.
- ➔ If the disc has a label, insert it with the label side up.
- ➔ Check whether the disc is scratched or dirty. If dirty, wipe it gently with a soft cloth.
- ➔ See also the notices under "Playable discs" (➔ page 23).

The disc cannot be removed.

- ➔ Touch the eject button on the system front for 10 seconds or longer to force the disc to eject. After removing and before reinserting a disc into the system, turn off the system, and then turn on the system again to resume use.

The system does not recognize the USB device, or the USB device does not operate properly.

- ➔ Check that the device is inserted correctly.
- ➔ The connected device may not be compatible with the system.
- ➔ Try using a different USB connector. The device may not be recognized depending on the combination of USB connectors in use.

- ➔ In some cases, the system may not recognize the device if a USB hub is used or more than the allotted number of devices are connected. Try removing unused devices.


When connecting a USB device, the message "An unknown USB device has been connected." is displayed.

- ➔ The connected device may not be usable with the system.
- ➔ The device may be compatible with specific software only. If software that is compatible with the device is started, the device will become usable.
- ➔ There may be too many USB hubs connected. Try removing a USB hub.

Wireless controller

The wireless controller does not function.

- ➔ When using the controller wirelessly, if the controller and the system are too far apart, you will not be able to operate the system effectively.
- ➔ When using the wireless controller, you must pair it with the system and assign a controller number. With the system turned on (power indicator on the system front is lit solid green), connect the system and the controller using the USB cable, and then press the PS button on the controller.
- ➔ The controller number may have been cleared. Press the PS button on the controller to reassign the number.
- ➔ Check the charge level of the wireless controller battery. When the controller is used in wireless mode, it will not function if the battery does not have any charge left. Charge the battery by connecting the controller to the system with the USB cable.
- ➔ Wireless controllers for the PS3™ system are not equipped with a vibration function and will not vibrate when using software that support the vibration function.
- ➔ Reset the wireless controller by pushing the reset button on the controller rear with a sharp-tipped object such as a pen.



The battery does not charge or does not fully recharge.

- ➔ The battery can only be charged when the system is turned on (power indicator on the system front is lit solid green).
- ➔ See "Wireless controller battery" (⇨ page 20).

The battery charge does not last long.

- ➔ The battery may be wearing out. Battery duration will gradually decrease with repeated usage and age. See "Wireless controller battery" (⇨ page 20).

Even when the battery is not being used, it loses its charge.

- ➔ Battery charge is used even when the wireless controller is not in use. It is recommended that you charge the battery frequently.

Other issues

The system makes noise.

- ➔ Because some discs read at higher speeds, disc noise may be louder than normal.
- ➔ When using the system in a location where heat can build up, such as an enclosed AV cabinet, the fan will rotate rapidly to reduce the system's internal temperature and this may generate increased noise. Move the system to a location with good ventilation.

You forgot your password for security settings.

- ➔ If you initialize the system using "System Settings" ⇨ "Restore Default Settings", your password will return to "0000". However, note that all settings other than the password will also be reset. Once these settings are reset, they cannot be recovered.

The system is warm.

- ➔ When the system is being used or is turned on, it may become warm. This is not a malfunction.

The screen is frozen. The system does not operate.

- ➔ Restart the system. Touching the power button on the system front for 10 seconds or longer will force the system to shut down. After shutdown, turn on the system again.

The power indicator on the system front is flashing red and green alternately.

- ➔ The interior of the system has become hot. Check whether the system is being used in a hot location or whether the vents are blocked. Continuing to use the system in the above condition will cause it to stop functioning. Turn the system off and leave it unused until it cools down. After the system cools down, turn it on again.

The power indicator on the system front is flashing red and the system does not operate.

- ➔ The temperature inside the system has risen too high. Check whether the system is being used in a hot location or whether the vents are blocked. Touch the power button on the system front to stop the flashing, and then leave the system unused until it cools down. After it cools down, turn on the system again.

The system does not recognize content.

- ➔ The content may be of a format that is not supported by the system. Content of types not supported by the system will not be recognized. For information on supported formats, refer to the user's guide (**▶page 5).

Limited warranty

LIMITED HARDWARE WARRANTY AND LIABILITY

Sony Computer Entertainment America ("SCEA") warrants to the original purchaser that the PS3™ hardware shall be free from material defects in material and workmanship for a period of one (1) year from the original date of purchase (the "Warranty Period"). If the product is determined to be materially defective during the Warranty Period, your sole remedy and SCEA's sole and exclusive liability shall be limited to the repair or replacement of this product with a new or refurbished product at SCEA's option. For purpose of this Limited Hardware Warranty and Liability, "refurbished" means a product that has been returned to its original specifications. Visit <http://www.us.playstation.com> or call 1-800-345-7669 for instructions on how to deliver the product, freight prepaid, to an authorized service facility.

THIS WARRANTY SHALL NOT APPLY IF THIS PRODUCT (A) IS USED WITH PRODUCTS THAT ARE NOT COMPATIBLE WITH THIS PRODUCT; (B) IS USED FOR COMMERCIAL PURPOSES (INCLUDING RENTAL); (C) IS MODIFIED, OR TAMPERED WITH; (D) IS DAMAGED BY ACTS OF GOD, MISUSE, ABUSE, NEGLIGENCE, ACCIDENT, WEAR AND TEAR, UNREASONABLE USE, OR BY OTHER CAUSES UNRELATED TO DEFECTIVE MATERIALS OR WORKMANSHIP; (E) HAS HAD THE SERIAL NUMBER ALTERED, DEFACED OR REMOVED; OR (F) HAS HAD THE WARRANTY SEAL ON THE PS3™ SYSTEM ALTERED, DEFACED, OR REMOVED. THIS WARRANTY DOES NOT COVER CONSUMABLES (SUCH AS BATTERIES) OR PRODUCTS SOLD "AS IS" OR WITH ALL FAULTS. THIS WARRANTY SHALL ALSO BE VOIDABLE BY SCEA IF (1) SCEA REASONABLY BELIEVES THAT THE PS3™ SYSTEM HAS BEEN USED IN A MANNER THAT WOULD VIOLATE THE TERMS AND CONDITIONS OF A SEPARATE END USER LICENSE AGREEMENT FOR SYSTEM SOFTWARE; OR (2) THE PRODUCT IS USED WITH PRODUCTS NOT SOLD OR LICENSED BY SCEA (INCLUDING, BUT NOT LIMITED TO, NON-LICENSED GAME ENHANCEMENT DEVICES, CONTROLLERS, ADAPTORS AND POWER SUPPLY DEVICES). YOU ASSUME ALL RISKS AND LIABILITIES ASSOCIATED WITH USE OF THIRD PARTY PRODUCTS. A VALID

PROOF OF PURCHASE IN THE FORM OF A BILL OF SALE OR RECEIPT FROM AN AUTHORIZED RETAILER WITH THE DATE OF THE ORIGINAL PURCHASE MUST BE PRESENTED TO OBTAIN WARRANTY SERVICE.

THIS WARRANTY IS PROVIDED TO YOU IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE FOR THE PS3™ HARDWARE, WHICH ARE DISCLAIMED HEREUNDER. HOWEVER, IF SUCH WARRANTIES ARE REQUIRED AS A MATTER OF LAW, THEN THEY ARE LIMITED IN DURATION TO THE WARRANTY PERIOD.

YOUR SOLE AND EXCLUSIVE RECOURSE IN THE EVENT OF ANY DISSATISFACTION WITH OR DAMAGE ARISING FROM THE USE OF THE PS3™ HARDWARE AND SCEA'S MAXIMUM LIABILITY SHALL BE LIMITED TO REPAIR OR REPLACEMENT OF THE PS3™ SYSTEM.

EXCEPT AS EXPRESSLY STATED ABOVE, SCEA EXCLUDES ALL LIABILITY FOR ANY LOSS OF DATA, LOSS OF PROFIT, OR ANY OTHER LOSS OR DAMAGE SUFFERED BY YOU OR ANY THIRD PARTY, WHETHER SUCH DAMAGES ARE DIRECT, INDIRECT, CONSEQUENTIAL, SPECIAL, OR INCIDENTAL AND HOWEVER ARISING UNDER ANY THEORY OF LAW, AS A RESULT OF USING YOUR PS3™ HARDWARE. SOME STATES OR PROVINCES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS AND SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province. This warranty is valid only in the United States and Canada. The warranty offered by Sony Computer Entertainment America on your PS3™ hardware is the same whether or not you register your product.

This warranty does not apply to any system software that is pre-installed in the PS3™ hardware, or is subsequently provided via update or upgrade releases. Such system software is licensed to you under the terms and conditions of a separate end user license agreement at <http://www.scei.co.jp/ps3-eula/> and such software is provided pursuant to its own warranty.

Service policy

You understand and acknowledge that any time SCEA services your PS3™ system (either within the Warranty Period or under a separate service arrangement), it may become necessary for SCEA to provide certain services to your PS3™ system to ensure it is functioning properly in accordance with SCEA guidelines. Such services may include the installation of the latest software or firmware updates, or service or replacement of the PS3™ hard disk or the PS3™ system with a new or refurbished product. You acknowledge and agree that some services may change your current settings, cause a removal of cosmetic stickers or system skins, cause a loss of data or content, or cause some loss of functionality. You should back up your hard disk regularly to prevent loss or alteration of data, although some content cannot be backed up and must be reinstalled by the user. You should also remove any peripherals, non-PS3™ system components, and any content that you consider proprietary, private, or confidential before you send in your PS3™ system for service. SCEA shall not be liable for damages resulting from your failure to comply with the foregoing, or any instructions provided to you by SCEA. SCEA reserves the right to refuse service or void the warranty of any PS3™ system that has been modified or tampered with.

Except as otherwise stated in the Limited Hardware Warranty and Liability above, you agree that (i) the services are provided "AS IS" without any express or implied warranties; and (ii) SCEA shall not be liable for any direct and indirect, consequential, or special damages, including any damages that may arise from loss of data or functionality. The foregoing limitation shall apply to the extent permitted by applicable law.

Additional information

Removing / replacing the hard disk


The following section explains how to remove and replace the hard disk. If your PS3™ system requires service, you will be asked to remove the hard disk under most circumstances.

⚠ Caution

- For safety reasons, be sure to turn off and unplug the system before attempting to remove or install the hard disk.
- Remove the hard disk in a location out of the reach of small children to help prevent accidental swallowing of small parts such as the screws.
- The inside of the system is hot directly after use. Allow time for the system to cool down before starting to remove the hard disk.
- Be careful not to injure yourself when removing or handling the hard disk.
- Be sure to reattach the HDD bay cover before turning the PS3™ system on. If the cover is not attached, it may cause heat to build up inside the system.

Notices

- All hard disks, including a PS3™ hard disk must be reformatted before use in a PS3™ system. However, reformatting may not occur if the original PS3™ hard disk is reinstalled onto the original PS3™ system that was provided with the PS3™ hard disk, and such PS3™ hard disk has not been previously reformatted.
- Depending on the type of service performed, the hard disk that had been in use prior to servicing may need to be reformatted. Be sure to back up important data in advance.
- The PS3™ system cannot execute any content stored on a hard disk of any other computer or operating system, including a PS3™ hard disk that has been reformatted.
- It is recommended that you regularly back up data on the hard disk. If for any reason software or data loss or corruption occurs, it may not be possible to restore or repair the software or data. Sony Computer Entertainment Inc. and its subsidiaries and affiliates will not be liable for damage or injury related to software or data loss or corruption.
- The PS3™ hard disk is intended for use with the PS3™ system, and it may not be possible to execute content stored on a PS3™ hard disk on any other operating system.
- Improper removal or installation of a hard disk may cause damage to your PS3™ system or loss of data, and may void your PS3™ hardware warranty. SCEA shall not be liable for any resulting damages, including any damages to your hard disk. User assumes all risks and liabilities associated with using a replacement hard disk, including any incompatibility or interoperability problems with the PS3™ system. Services will not be provided on any non-PS3™ hard disks.
- To help protect your personal information, be sure to clear passwords for all PLAYSTATION®Network accounts before submitting the PS3™ system for service. To clear

a password, select "Sign In" under "Friends", and then from the screen that is displayed clear the "Save Password" checkbox. Note that if "Sign In Automatically (Auto Sign-In)" is set, the icon for "Sign In" will no longer be displayed. In that case, you must first clear the auto sign-in option. To clear the auto sign-in option, select your icon under "Friends", press the  button, and then select "Auto Sign-In Off" from the options menu. After the auto sign-in option is turned off, proceed with the password clearing process.

- To help protect your personal information, also remove the hard disk as instructed prior to submitting.
- To attach or remove screws, use an appropriate crosshead screwdriver. If the size does not match, the groove on the screw's head may be damaged.

Removing the hard disk

1 Touch the power button on the system front for at least two seconds.

The power indicator will turn solid red and the system will enter standby mode.

2 Turn off the system using the main power switch on the system rear.


3 Unplug the AC power cord and detach the other cables from the system.

For safety reasons, remove the plug for the power cord from the electrical outlet, and then detach the other cables.

4 Remove the HDD bay cover on the system's left side.


Use the space at the left edge of the HDD bay cover to pull it out from the system.

If the cover is difficult to remove, gently insert a small screwdriver in the space and pry the cover off. Be careful not to damage the system or the cover when using a screwdriver.

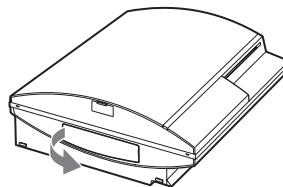

5 Free the hard disk from the system.


- 1 Remove the blue screw with an appropriate crosshead screwdriver.
- 2 Pull the lever forward.

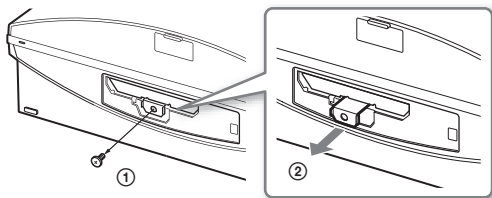

Pull while sliding the lever to the left. Be careful not to hurt yourself during this operation.

6 Remove the hard disk from the system.

Pull the lever to remove the hard disk from the system.

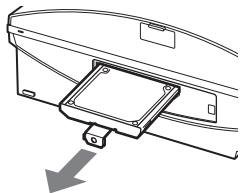

Notices

The hard disk is a sensitive piece of equipment and should be handled with care at all times. To help prevent software or data loss or corruption, or damage to the hard disk, carefully follow the precautions listed below:


- Do not drop the system or hard disk, or subject to physical shock or vibration.
- Do not allow liquid or small particles to get into the system or hard disk.
- Do not touch the connectors or insert foreign objects into the connectors.
- Do not place the system or hard disk close to magnetic fields such as those produced by magnets or loudspeakers. Also, do not place devices that may be sensitive to magnetic forces (such as a wrist watch or a magnetic card) near the hard disk.
- Do not put heavy objects on the hard disk.
- When handling the hard disk hold it only by the edges or metal frame.

- The hard disk is sensitive to static electricity. Ensure that proper handling methods are used when installing the hard disk.
- Store in a cool, dry location.


Replacing the hard disk

When replacing the hard disk, follow the procedure below to remove the metal frame.

1 Using a crosshead screwdriver, remove the screws (4 places).

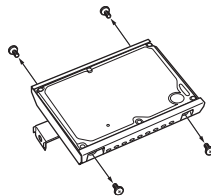

2 Remove the hard disk from the metal frame.

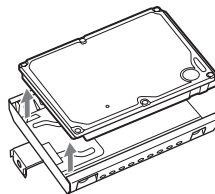

3 Place the replacement hard disk on the PS3™ system hard disk's metal frame, and then attach using the screws (4 places).

Do not overtighten the screws.

4 Install the hard disk in the system.

Fully insert the hard disk in the HDD bay. Attach the blue screw to lock the hard disk in place. Refer to the instructions in "Removing the hard disk" (▶▶ page 16) and follow them in reverse order when installing.

5 Reattach the HDD bay cover.

6 Reinstall the system software.

When the hard disk is replaced, the system software must be reinstalled (→▶ page 18).

Replacement hard disks

You can use hard disks of the following types with the PS3™ system:


Size	2.5 inch (internal type) ^{*1}
Interface format	Serial ATA ^{*2}

*1 Proper operation is not guaranteed for all models.

*2 Parallel ATA is not supported.

Reinstalling the system software

If the system software does not start when the system is turned on (such as when the hard disk has been replaced), a screen such as the one shown below is displayed on the system. In this case, you must reinstall the system software.

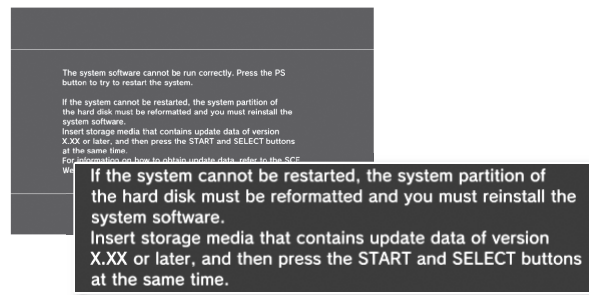

Step 1: Download the system software

Download the system software update data from the Web site shown below using a PC.

<http://www.us.playstation.com/PS3/Network/Updates>

Hints

- Use the latest version of the update data. You cannot reinstall the system software using a version that is older than the system software version that had previously been used.
- If you have a game disc or other disc that contains update data, you may be able to use that disc to reinstall the system software. If you insert the disc in the PS3™ system and follow the on-screen instructions, you can verify whether the update data can be used.
- If you do not have Internet access from a PC, contact SCEA Consumer Services at 1-800-345-7669.
- For additional information on the installation of the system software, refer to the section "Updating using a PC" at the Web site above.

Step 2: Save the update data on storage media

Save the downloaded update data on any of the following types of storage media.

■ Disc media such as a CD-R

CD-R, CD-RW, DVD-R, DVD-RW, DVD+RW and BD-RE are supported.

■ USB mass storage device

Storage media such as a USB flash drive are supported.

■ Memory Stick Duo™ and other card-type storage media

If using this type of media, a commercially available card reader/writer (USB connector type) is required.

In general, the storage media must have at least 120 MB or more of free space. The amount of free space that is required varies depending on the version of the update data.

Save the update data according to the instructions below. Using a PC, create a folder named "PS3" on the storage media. Within the "PS3" folder, create a folder named "UPDATE". Save the update data in the "UPDATE" folder.



Notice

Be sure to save the update data as noted below. If the data is not saved in the correct way, the PS3™ system will not recognize the update data. The folder name must be in all uppercase letters.
Location: Save in the "PS3" folder > "UPDATE" folder
File name: Save as file name "PS3UPDAT.PUP"

Step 3: Install the system software

Notices

- Do not turn off the system or remove the storage media during the installation. If the installation is cancelled before completion, the system software may become damaged, and the system may require servicing or exchange.
- During the installation, the power button on the system front and the PS button on the SIXAXIS™ wireless controller are not active.

Turn on the PS3™ system, and then insert the storage media. Follow the on-screen instructions to reinstall the system software.

Caution on disposal of the PS3™ system

Before disposing of the system, it is recommended that personal information and other data of similar nature be deleted. To delete data, go to "System Settings" → "Restore PS3™ System".

It is recommended that you select "Full Format" when the screen for selecting a hard disk format method is displayed during system restoration. Although formatting time can be reduced by using "Quick Format", it might be possible to restore erased data in some cases if a special tool is used.

Wireless controller battery

Caution

If you come into contact with material from a leaking battery, take the following actions:

- If the material gets into the eyes, do not rub. Immediately flush the eyes with clean water and seek medical attention.
- If the material comes into contact with the skin or clothes, immediately rinse the affected area with clean water. Consult your physician if inflammation or soreness develops.

Do not allow the battery to come into contact with fire or subject it to extreme temperatures such as in direct sunlight, in a vehicle exposed to the sun or near a heat source.

Wireless controller battery life

- The battery has a limited lifespan. Battery duration will gradually decrease with repeated usage and age.
- Battery life also varies depending on the storage method, usage state, environment and other factors.

Storage

When the wireless controller is not used for an extended period of time, it is recommended that you fully charge it at least once a year in order to maintain battery functionality.

When disposing of the wireless controller

The lithium-ion battery of the wireless controller is recyclable. When disposing of the wireless controller, remove the battery and follow local regulations regarding disposing of batteries.

Removing the battery


Caution

- Remove the battery in a location out of the reach of small children to help prevent accidental swallowing of small parts such as the screws.
- Be careful not to hurt your nails or fingers when removing the controller casing.
- For safety reasons, attach tape or a seal on the metal part of the battery before disposing.

Notice


Other than when disposing of the wireless controller, never remove the screws and never remove the battery from the wireless controller.

- 1 Remove the USB cable from the wireless controller.**
- 2 Using a crosshead screwdriver, remove the screws (5 places).**

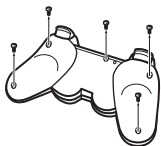


- 3 Remove the casing.**

- ① Push in the direction of the arrow.
- ② Pull the casing apart.

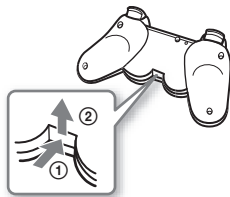

- 4 After removing the connector, remove the battery.**

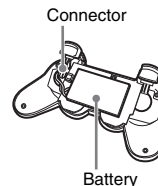

Recycling Lithium-Ion Batteries

Lithium-Ion batteries are recyclable.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.



For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rerc.org/>

Caution

Do not handle damaged or leaking Lithium-Ion batteries.

Specifications

Design and specifications are subject to change without notice.

PLAYSTATION®3 system

CPU		Cell Broadband Engine™
GPU		RSX™
Audio output		Dolby Digital 5.1 ch, DTS 5.1 ch, LPCM 7.1 ch, AAC, others*1 *2
Memory		256 MB XDR Main RAM, 256 MB GDDR3 VRAM
Hard disk	2.5" Serial ATA	40 GB*3
Inputs/outputs*4	Hi-Speed USB (USB 2.0)	2
Networking		Ethernet (10BASE-T, 100BASE-TX, 1000BASE-T) × 1
		IEEE 802.11 b/g
		Bluetooth 2.0 (EDR)
Controller		Wireless controller (Bluetooth)
AV output	Resolution	1080p, 1080i, 720p, 480p, 480i
	HDMI OUT connector*5	1
	AV MULTI OUT connector	1
	Digital out (optical) connector	1
BD/DVD/CD drive (read only)	Maximum read rate	BD × 2 (BD-ROM) DVD × 8 (DVD-ROM) CD × 24 (CD-ROM)

Power	120 V AC, 60 Hz
Power consumption	Approx. 280 W
External dimensions (excluding maximum projecting part)	Approx. 325 × 98 × 274 mm (12.8 × 3.86 × 10.79 in) (width × height × length)
Mass	Approx. 4.4 kg (9.7 lb)
Operating temperature	5°C - 35°C (41°F - 95°F)

*1 A device compatible with Linear PCM 7.1 Ch. is required to output 7.1 Ch. audio, supported by Dolby TrueHD or a similar format, from the HDMI OUT connector.

*2 This system does not support output from the DTS-HD 7.1 Ch. DTS-HD 7.1 Ch. audio is output from a 5.1 or lower channel.

*3 Hard disk capacity calculated using base 10 mathematics (1 GB = 1,000,000,000 bytes). System software versions 1.10 and higher calculate capacity using binary mathematics (1 GB = 1,073,741,842 bytes), which will display lower capacity and free space. A portion of hard disk capacity is reserved for system administration, which varies depending upon system software version, and is not available for use.

*4 Functionality of all storage media types is not guaranteed.

*5 "Deep Color" and "x.v.Color (xvYCC)" defined by HDMI ver1.3a are supported.

SIXAXIS™ wireless controller

Battery type	Built-in rechargeable Lithium-Ion battery
Voltage	DC 3.7 V
Battery capacity	610 mAh
Mass	Approx. 136 g (4.8 oz)

Supplied AV cable and USB cable

AV cable	Company:	SONY
	Part No.:	1-834-231-11
USB cable	Company:	SONY
	Part No.:	1-833-625-12

Playable discs

For additional information on compatible media types, visit our Web site at <http://www.us.playstation.com>.

Blu-ray Disc (BD)	PLAYSTATION®3 format BD-ROM
	BD-ROM
	BD-R
	BD-RE*1
DVD	DVD-ROM
	DVD+R/RW
	DVD-R/RW
	AVCHD
	DSD Disc

CD	PlayStation® format CD-ROM*2
	CD-DA (audio CD)*3
	CD-R/RW

*1 Playback of BD-RE ver. 1.0 discs is not supported.

*2 This model of the PLAYSTATION®3 system is designed to play PLAYSTATION®3 format software and has limited backward compatibility. This system is not compatible with and will not play PlayStation®2 format software. Some PlayStation® format software may play on this system. For more information, visit www.us.playstation.com.

*3 Playback of Super Audio CDs is not supported.




Notices

- Use only circular-shaped discs with the system. Do not use irregularly-shaped discs (for example, heart- or star-shaped discs). Using irregularly-shaped discs may cause a malfunction.
- Do not use damaged, re-shaped or repaired discs. Use of such discs may cause a malfunction.
- When using an 8 cm disc, insert the disc in the system without an adaptor.
- The audio CD playback feature of this system is designed to conform to the Compact Disc (CD) standard. Recently, some record companies have started marketing music discs encoded with copyright protection technologies. Some of these music discs do not conform to the CD standard and may not be playable on this system.
- A DualDisc is a dual-sided disc that combines a DVD side and an audio side. Note that the audio side is not guaranteed to play because this type of disc does not conform to the specifications required for an audio Compact Disc (CD).
- If a device that is not compatible with the HDCP (High-bandwidth Digital Content Protection) standard is connected to the system using an HDMI cable, video or audio cannot be output from the system.
- Copyright-protected Blu-ray video discs can only be output at 1080p using an HDMI cable connected to a device that is compatible with the HDCP (High-bandwidth Digital Content Protection) standard.
- When you use the AV MULTI OUT connector of the system to connect to a TV, the resolution used to output copyright-protected video from a BD or from video files may be limited or the video may not be output.
- When playing discs with content that was copied fraudulently, abnormal sounds may be produced or the content may not play correctly.

- To enjoy continuous playback of copyright-protected BDs, the encryption key for AACS (Advanced Access Control System) may need to be renewed. To renew the key, you must update the system software.
- Some discs may not be playable due to scratches, dust, the quality of recording, or the characteristics of the recording device.
- In rare instances, CDs, DVDs, BDs and other media may not operate properly when played on the PS3™ system. This is primarily due to variations in the manufacturing process or encoding of the software.

Region codes

Depending on the disc, a region code that is based on the geographic region where the disc is distributed may be assigned. This system can play discs marked with the following region codes.

Disc	Region code
Blu-ray Disc (BD)	
DVD	
PLAYSTATION®3 format BD-ROM	
PlayStation® format CD-ROM	NTSC U/C

DVD and PLAYSTATION®3 format software



- When outputting DVD content or PLAYSTATION®3 format software in SD resolution, only discs recorded in the NTSC standard can be played.
- When playing PLAYSTATION®3 format software in HD resolution, a TV that supports video playback at 59.94 Hz is required.

DVD-R/DVD-RW/DVD+R/DVD+RW discs

Discs that have not been finalized cannot be played.

Copyright and trademarks

"PS", "PlayStation" and "PLAYSTATION" are registered trademarks of Sony Computer Entertainment Inc. Also, "PS3" and "SIXAXIS" are trademarks of the same company.

"SONY" and "" are registered trademarks of Sony Corporation. "Memory Stick", "Memory Stick Duo", "" and the "x.v.Color" name and logo are trademarks or registered trademarks of Sony Corporation.

"AVCHD" and "AVCHD" logo are trademarks of Matsushita Electric Industrial Co., Ltd. and Sony Corporation.

AVCHD™

Contains Macromedia® Flash® Player technology by Adobe
Copyright © 1995-2007 Adobe Systems Incorporated. All rights reserved. Flash, Macromedia, and Macromedia Flash are either trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.



macromedia
**FLASH
ENABLED**



© 2006 All Media Guide, LLC

Content and technology provided by **All Media Guide®**.

"Blu-ray Disc" and  are trademarks.

Copyright © 2004-2006 Cambridge Silicon Radio Ltd.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Computer Entertainment Inc. is under license.

DLNA and DLNA CERTIFIED are trademarks and/or service marks of Digital Living Network Alliance.



Manufactured under license from DTS, Inc. under one or more of the following U.S. Pat. No's: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535 and other U.S. and world-wide patents issued and pending. "DTS" and "DTS Digital Surround" are registered trademarks of DTS, Inc. Copyright 1996, 2002-2006, DTS, Inc. All Rights Reserved.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

The DVD logo is a trademark.

All of the Japanese fonts and some parts of the Latin fonts in this machine use characters provided by Fontworks Japan, Inc.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

ATOK is a registered trademark of JUSTSYSTEM CORP. in Japan and other countries.



This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Anti-Grain Geometry - Version 2.0

Copyright © 2002-2004 Maxim Shemanarev (McSeem)

Permission to copy, use, modify, sell and distribute this software is granted provided this copyright notice appears in all copies. This software is provided "as is" without express or implied warranty, and with no claim as to its suitability for any purpose.

Windows and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO

PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

This product includes RSA BSAFE® Cryptographic software from RSA Security Inc. RSA, BSAFE are either registered trademarks or trademarks of RSA Security Inc. in the United States and/or other countries. RSA Security Inc. All rights reserved.



This product adopts S3TC texture compression technology under license from S3 Graphics, Co., Ltd.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, Inc.

The "Wi-Fi CERTIFIED" logo is a certification mark of the Wi-Fi Alliance.



eZiText® and Zi® are registered trademarks of Zi Corporation.



Portions of this software are copyright © 1996-2007 The FreeType Project (www.freetype.org). All rights reserved.

This software is based in part on the work of the Independent JPEG Group.

linungif
Copyright © 1997 Eric S. Raymond

libtiff
Copyright © 1988-1997 Sam Leffler
Copyright © 1991-1997 Silicon Graphics, Inc.

Visit <http://www.scei.co.jp/ps3-license/index.html> for other licensees and trademarks.

All other trademarks are the property of their respective owners.

About national export control

This product may fall within the scope of national export control legislation. You must comply fully with the requirements of such legislation and of all other applicable laws of any jurisdiction in relation to this product.

Notice about U.S. Export Administration Regulations

This product contains software that is subject to certain restrictions under the U.S. Export Administration Regulations, and may not be exported or re-exported to U.S. embargoed destinations. In addition this product may not be exported or re-exported to persons and entities prohibited by the U.S. Export Administration Regulations.

AVERTISSEMENT

Pour éviter tout risque d'électrocution, ne pas ouvrir le boîtier. En cas de dépannage, adressez-vous uniquement à du personnel qualifié.

Attention

L'application de commandes, de réglages ou de procédures autres que ceux spécifiés ci-après peut entraîner une dangereuse exposition aux rayonnements.

L'utilisation d'instruments optiques avec ce produit présente des risques accrus pour les yeux.



Cet appareil est certifié comme produit LASER DE CLASSE 1 conformément à la norme IEC60825-1+A2:2001.

Cet équipement est conforme aux limites d'exposition aux radiofréquences IC établies pour un environnement non contrôlé et se conforme aux exigences de conformité pour l'exposition aux RF IC, dans le supplément C à OET65 et RSS-102. Cet équipement doit être installé et opéré à au moins 20 cm d'écart entre le radiateur et la personne physique (extrémités du corps non prises en compte : mains, poignets, pieds et jambes).

Ce transmetteur ne doit pas être utilisé conjointement ou placé avec tout autre transmetteur ou antenne.

Ce transmetteur est conforme aux limites d'exposition aux radiofréquences FCC/IC établies pour un environnement non contrôlé et se conforme aux exigences de conformité pour l'exposition aux RF FCC, Supplément C à OET65 et RSS-102 des exigences d'exposition aux RF IC. Cet environnement possède des niveaux d'énergie RF très bas se conformant sans tests nécessaires aux taux d'absorption spécifique (SAR).

Remarque

Cette unité a été testée et il a été déterminé qu'elle se conforme aux normes stipulées par l'article 15 des règlements de la FCC pour un appareil numérique de catégorie B. Ces normes sont établies afin d'offrir une protection raisonnable contre toute possibilité de brouillage préjudiciable dans une installation résidentielle. Cette unité produit, utilise et peut émettre une énergie radioélectrique, et si elle n'est pas installée et utilisée conformément aux instructions, pourrait causer un brouillage préjudiciable à la radiocommunication. Il est toutefois impossible de garantir qu'il n'y aura pas de brouillage préjudiciable dans une installation donnée. Si cette unité cause un brouillage préjudiciable à la réception radio ou télévisuelle, ce qui peut être déterminé en activant ou désactivant l'appareil, l'utilisateur est encouragé à tenter de corriger le brouillage en prenant l'une ou plusieurs des mesures proposées suivantes :

- Réorienter ou déplacer l'antenne de réception.
- Éloigner l'unité du récepteur.
- Connecter l'appareil à une prise sur un autre circuit que celui auquel le récepteur est connecté.
- Demander de l'aide au détaillant ou à un technicien radio/télévision spécialisé.

Aucun changement ou modification n'est permis sans avoir été approuvé par les parties responsables des réglementations qui est en droit de refuser l'autorisation de l'utilisateur à utiliser ce produit.

Si vous avez des questions au sujet de ce produit, communiquez avec la ligne d'assistance technique au 1-800-345-7669 ou écrivez à :

Sony Computer Entertainment America

Consumer Services/Technical Support

PO Box 5888, San Mateo, CA 94402-0888 U.S.A.

Déclaration de Conformité

Nom commercial : SONY

N° de modèle : CECHH01

Partie responsable : Sony Electronics Inc.

Adresse : 16530 Via Esprillo

San Diego, CA 92127 U.S.A.

N° de téléphone : 858-942-2230

Cet appareil est conforme aux stipulations de l'article 15 des règlements de la FCC et RSS-Gen des règles IC. Son opération est sous réserve des deux conditions suivantes : (1) cet appareil ne peut pas causer de brouillage préjudiciable et (2) cet appareil doit accepter le brouillage préjudiciable reçu, y compris un brouillage qui pourrait causer son fonctionnement irrégulier.

À propos de la pile bouton au lithium de sauvegarde de mémoire

La pile bouton au lithium de sauvegarde de mémoire à l'intérieur de ce produit contient du perchlorate.

La déclaration suivante est requise par l'État de Californie, États-Unis :

Contient du perchlorate - des précautions spéciales sont peut être nécessaires.

Consulter <http://www.dtsc.ca.gov/hazardouswaste/perchlorate> *

* Site Web uniquement disponible en anglais.

Photosensitivité/Epilepsie/Attaques

Un nombre limité de personnes peuvent éprouver des symptômes d'épilepsie ou bien des étourdissements lorsqu'elles sont exposées à certaines lumières ou motifs clignotants. L'exposition à certains motifs ou certaines images d'arrière-plan sur des écrans de télévision ou en jouant à des jeux vidéo, peut déclencher des crises d'épilepsie ou des étourdissements chez ces personnes.

Ces conditions peuvent déclencher des symptômes d'épilepsie non détectés auparavant chez des personnes qui n'ont jamais été sujettes à des crises d'épilepsie. Si vous-même ou un membre de votre famille souffrez d'épilepsie ou êtes sujets à des crises de quelconque origine, consultez votre médecin avant de jouer.

Il faut **CESSER IMMÉDIATEMENT** l'utilisation et consulter un médecin avant de rejouer si vous ressentez un des symptômes ou problèmes de santé suivants :

- vertiges ;
- trouble de la vision ;
- contractions des yeux ou des muscles ;
- perte de conscience ;
- troubles de l'orientation ;
- attaques ;
- ou tout mouvement involontaire ou convulsions.

REPRENEZ LE JEU SEULEMENT SI VOTRE MEDECIN VOUS Y AUTORISE.

Conseils d'utilisation et de manipulation des jeux vidéo afin de réduire les probabilités d'attaques

- Utilisez dans une pièce bien éclairée et éloignez-vous suffisamment de l'écran de télévision.
- Évitez les écrans larges. Utilisez si disponible l'écran de télévision le plus petit.
- Évitez toute utilisation prolongée du système PS3™. Accordez-vous une pause d'environ 15 minutes pendant chaque heure de jeu.
- Évitez de jouer si vous êtes fatigué ou manquez de sommeil.

FR

Ondes radio

Les ondes radio peuvent affecter les appareils électroniques ou les équipements électroniques médicaux (par exemple les stimulateurs cardiaques) et risquent d'entraîner des pannes et des blessures.

- Si vous utilisez un stimulateur cardiaque ou tout autre appareil médical, consultez votre médecin ou le fabricant de l'appareil avant d'utiliser la fonction de réseau sans fil (Bluetooth et LAN sans fil).
- N'utilisez pas la fonction de réseau sans fil dans les cas suivants :
 - Les endroits où son utilisation est interdite, comme les hôpitaux. Respectez les règlements dans les institutions médicales en utilisant le système à ces endroits.
 - Les endroits près des alarmes d'incendie, des portes automatiques et d'autres types d'appareils automatiques.

Logiciels au format PlayStation® et PlayStation®2

Ce modèle de système PLAYSTATION®3 est conçu pour l'exécution des logiciels au format PLAYSTATION®3 et n'offre qu'une compatibilité rétroactive limitée. Ce système n'est pas compatible avec les logiciels au format PlayStation®2 et ne peut pas les lire. Certains logiciels au format PlayStation® peuvent être lus sur ce système. Pour plus d'informations, visiter www.us.playstation.com.

A propos de DNAS

Sony Computer Entertainment Inc. utilise le système d'authentification déposé DNAS (Dynamic Network Authentication System) pour protéger les droits d'auteur et la sécurité lors des connexions du système PS3™ à un réseau. DNAS peut extraire des informations sur le matériel et le logiciel de l'utilisateur aux fins de l'authentification, la protection contre les copies, le blocage du compte, la gestion du système, les règles de jeu ou le déroulement du jeu ainsi que d'autres fonctions. Les informations recueillies ne permettent pas d'identifier personnellement l'utilisateur. Il est possible que le transfert, l'exploitation, l'exportation, l'importation ou la transmission non autorisés de programmes et de dispositifs permettant de contourner ce système d'authentification soient interdits par la législation.

Logiciel du système

Le logiciel du système fourni avec ce produit est soumis à une licence limitée de Sony Computer Entertainment Inc. Consultez <http://www.scei.co.jp/ps3-eula> pour plus d'informations.

Table des matières

AVERTISSEMENT	28
A propos de la documentation du système PS3™	31

■ Avant d'utiliser l'appareil

Précautions	32
-----------------------	----

■ Guide de dépannage

Avant de porter l'appareil en réparation	36
--	----

■ Garantie limitée

GARANTIE ET RESPONSABILITÉ LIMITÉE SUR LE MATÉRIEL	40
---	----

■ Informations supplémentaires

Retirer/remplacer le disque dur	42
Réinstallation du logiciel système	44
Soyez prudent lors de la mise au rebut du système PS3™	46
Batterie de la manette sans fil	46
Spécifications	48

Les informations relatives aux fonctionnalités du système publiées dans le présent document peuvent être différentes de celles de votre système PS3™, selon la version du logiciel du système utilisée.

A propos de la documentation du système PS3™

La documentation du système PS3™ comprend :

Sécurité et support technique (le présent document)

Le présent document renferme des informations de sécurité relatives notamment à l'utilisation, au dépannage et aux spécifications du système PS3™.

Aide-mémoire

Ce document contient des informations relatives à l'installation du système PS3™, à sa préparation avant son utilisation et aux principes de fonctionnement du matériel.

Mode d'emploi (<http://manuals.playstation.net/document/>)

Ce document en ligne est accessible par l'intermédiaire d'Internet et contient des informations détaillées sur l'utilisation du logiciel du système PS3™.

Notice

Pour les informations les plus récentes sur le système PS3™, visitez <http://www.us.playstation.com>.

Avant d'utiliser l'appareil

Précautions

Sécurité

Ce produit a été conçu dans le souci d'offrir les meilleures garanties de sécurité possibles. Cependant, tout dispositif électrique utilisé de façon incorrecte risque de provoquer incendie, électrocution ou blessures. Pour un fonctionnement en toute sécurité, veillez à respecter les points suivants :

- Observez tous les avertissements, précautions et instructions.
- Inspectez régulièrement le cordon d'alimentation pour détecter tout dégât.
- Si l'appareil fonctionne de manière anormale, s'il émet des sons ou des odeurs anormales, ou encore s'il est tellement brûlant que vous ne pouvez plus le toucher, arrêtez immédiatement de l'utiliser, débranchez son cordon d'alimentation de la prise électrique et déconnectez les autres câbles éventuels.
- Pour plus d'information relatives à la sécurité et le dépannage, consultez le site <http://www.us.playstation.com/Support>. Si l'appareil ne fonctionne pas correctement, contactez le Service consommateurs SCEA au 1-800-345-7669.

Utilisation et manipulation

- Utilisez l'appareil dans une pièce bien éclairée et le plus loin possible de l'écran du téléviseur.
- Evitez toute utilisation prolongée du système PS3™ et de la manette sans fil.
- Arrêtez immédiatement d'utiliser le système si vous commencez à vous sentir fatigué ou si vous éprouvez une sensation désagréable ou une douleur dans les mains ou bras pendant que vous utilisez la manette sans fil. Si les symptômes persistent, consultez un médecin.
- Si vous rencontrez l'un des problèmes de santé suivants, arrêtez immédiatement d'utiliser le système. Si les symptômes persistent, consultez un médecin.
 - Vertiges, nausées, fatigue ou symptômes similaires au mal des transports
 - Sensation désagréable ou douleur dans une partie de votre corps, telle que les yeux, les mains ou les bras

- Maintenez le système et les accessoires, y compris les attaches de câbles et autres liens, hors de portée des jeunes enfants.
- Ne connectez pas de câbles autres qu'un câble USB lorsque le système est allumé (indicateur d'alimentation fixe au vert).
- Tout téléviseur ou appareil connecté au système doit fonctionner correctement et ne présenter aucun défaut. Si un téléviseur ou appareil connecté au système est défectueux ou fonctionne mal, ce dernier peut entraîner des dommages au téléviseur ou appareil, ou au système lui-même.
- Ne touchez ni le système, ni les câbles, ni les accessoires connectés pendant un orage.
- N'utilisez pas le système ou les accessoires à proximité d'une source d'eau.
- Ne laissez pas de liquide, de petites particules ou tout autre objet étranger s'introduire dans le système ou les accessoires.
- Ne touchez pas les connecteurs du système ou des accessoires.
- N'exposez pas le système à la poussière, à la fumée ou à la vapeur. Par ailleurs, ne placez pas le système dans une zone soumise à une poussière excessive ou à de la fumée de cigarette. L'accumulation de poussière ou les résidus de fumée de cigarette sur les composants internes (tels que les lentilles) peuvent entraîner un dysfonctionnement du système.
- N'exposez pas le système ou les accessoires à des températures élevées, à une humidité excessive ou aux rayons directs du soleil.
- Ne placez pas le système ou ses accessoires sur des surfaces instables, inclinées ou soumises à des vibrations.
- Le système ne peut être installé que verticalement ou horizontalement. Ne changez pas non plus la position du système lorsqu'il est mis sous tension.
- Soyez prudent lorsque vous portez le système. Si vous ne le saisissez pas fermement, le système risque de tomber et d'entraîner des dégâts ou blessures potentiels.
- Ne déplacez pas le système et ne changez pas sa position si un disque est inséré. Les vibrations risqueraient de rayer le disque ou le système.
- Ne mettez pas le système hors tension lorsque des données sont enregistrées ou chargées à partir du disque dur.
- Ne grimpez pas sur le système et ne posez aucun objet sur celui-ci. Veillez également à ne pas empiler d'autres périphériques par-dessus.
- Ne posez pas le système et les accessoires connectés sur le sol ou à un endroit où des personnes risqueraient de trébucher ou de chuter.

- En cours d'utilisation évitez tout contact corporel prolongé avec le système ou l'air qui s'échappe par ses grilles d'aération. Un contact prolongé dans ces conditions peut entraîner de légères brûlures.
- Lorsque vous connectez le système à un téléviseur à écran plasma ou à projection*, ne laissez pas une image fixe affichée pendant trop longtemps, car cela peut avoir un effet d'image rémanente sur l'écran.
*A l'exception des écrans de type LCD
- Les parents sont invités à surveiller leurs enfants lors des activités en ligne afin de garantir une utilisation sûre et responsable d'Internet.
- Lorsque vous utilisez la fonction détecteur de mouvement de la manette sans fil SIXAXIS™, soyez attentif aux points suivants. Si la manette heurte une personne ou un objet, cela risque de provoquer un accident, des blessures ou des dégâts.
 - Avant toute utilisation, vérifiez s'il y a assez d'espace autour de vous.
 - Lorsque vous utilisez la manette, tenez-la fermement et assurez-vous qu'elle ne risque pas de vous glisser de la main.
 - Si vous utilisez une manette connectée à un système PS3™ à l'aide d'un câble USB, veillez à ce qu'il y ait assez d'espace afin que le câble ne heurte aucune personne ou aucun objet. Veillez également à ne pas détacher le câble du système PS3™ en cours d'utilisation de la manette.

Grilles d'aération

Veillez à n'obstruer aucune grille d'aération. Pour assurer une ventilation optimale, respectez les points ci-après :

- Placez le système à 10 cm (4 po.) au moins d'une surface murale.
- Ne le placez pas sur un tapis ou une carpe à poils longs.
- Ne placez pas le système dans un endroit exigü.
- Ne le couvrez pas d'un tissu.
- Ne laissez pas la poussière s'accumuler sur les grilles d'aération.

Utilisation du cordon d'alimentation

- Afin d'éviter des dommages potentiels au système ou au téléviseur ou appareil connecté, le cordon d'alimentation doit être raccordé à une prise électrique à trois bornes respectant les polarités et comportant une mise à la terre dûment raccordée.

- Ne branchez pas le cordon d'alimentation du système dans une prise électrique avant d'avoir terminé toutes les autres connexions. Assurez-vous que le téléviseur ou autre appareil est débranché de la prise électrique avant de le connecter au système.
- Pour garantir une utilisation sûre, vérifiez régulièrement le cordon d'alimentation. S'il est endommagé, arrêtez immédiatement de l'utiliser et contactez le Service consommateurs SCEA au 1-800-345-7669.
- Utilisez uniquement le cordon d'alimentation fourni. Ne modifiez pas le cordon.
- Ne touchez pas la fiche du cordon d'alimentation avec des mains mouillées.
- Protégez le cordon d'alimentation en le plaçant à l'écart des lieux de passage et en évitant qu'il soit pincé, particulièrement au niveau des fiches, des prises et du point de sortie du système.
- Ne déposez pas d'objets lourds sur le cordon.
- Ne placez pas le cordon d'alimentation à proximité d'un appareil de chauffage et n'exposez pas le cordon à la chaleur.
- Débranchez le cordon d'alimentation de la prise électrique avant de nettoyer ou de déplacer le système, ou encore si vous n'avez pas l'intention de l'utiliser pendant une période prolongée. Quand vous déconnectez la fiche d'alimentation de la prise électrique, tirez-la en saisissant la fiche. Ne tirez jamais sur le cordon proprement dit et surtout pas de biais.
- Ne branchez pas le cordon d'alimentation sur un transformateur de tension ou un convertisseur. Le branchement du cordon d'alimentation sur un transformateur de tension pour les voyages à l'étranger ou sur un convertisseur destiné à une utilisation dans une voiture peut entraîner la production de chaleur dans le système et provoquer des brûlures ou un dysfonctionnement.

Ne désassemblez ou ne modifiez jamais le système ou les accessoires

Utilisez le système PS3™ et les accessoires conformément aux instructions de la documentation du produit. Aucune autorisation pour l'analyse ou la modification du système ou des accessoires, ou pour l'analyse et l'utilisation de ses circuits internes n'est fournie. Toute modification non autorisée du système en annule la garantie. Il n'existe aucun composant réparable par l'utilisateur à l'intérieur du système PS3™ (le disque dur fourni se retire, mais ne peut pas être désassemblé ou modifié). En outre, il existe un risque d'exposition à des radiations laser ainsi qu'à des chocs électriques.

Réseau

- La connexion à Internet requiert une connexion réseau à large bande. Veuillez noter que les connexions via modem ne sont pas prises en charge.
- L'utilisateur est responsable des frais des services Internet. Pour plus de détails, reportez-vous aux informations fournies dans votre contrat de service ou contactez votre fournisseur de services Internet.
- Utilisez uniquement un câble Ethernet compatible avec les réseaux 10BASE-T, 100BASE-TX ou 1000BASE-T. N'utilisez pas de cordon destiné à une ligne téléphonique résidentielle standard ou de câbles de types autres que ceux mentionnés ici. L'utilisation d'un type de cordon ou de câble incorrect peut entraîner la circulation d'une quantité de courant électrique excédentaire dans le connecteur LAN, ce qui est susceptible d'entraîner une accumulation de chaleur, un incendie ou un dysfonctionnement.

Fonction de réseau sans fil

- La plage d'ondes radio de 2,4 GHz utilisée par la fonction de réseau sans fil de ce produit est une plage partagée par différents périphériques. Ce produit est conçu pour minimiser l'effet des autres périphériques qui utilisent la même plage. Cependant, dans certains cas, des interférences provenant d'autres périphériques peuvent réduire la vitesse de connexion, raccourcir la plage du signal ou provoquer une interruption inattendue de la connexion.
- Lorsque vous utilisez la fonction Scan du système PS3™ pour sélectionner un point d'accès du LAN sans fil, des points d'accès destinés à une utilisation privée peuvent s'afficher. Établissez la connexion uniquement à un point d'accès que vous êtes autorisé à utiliser.

Condensation d'humidité

Si vous transportez le système ou le disque directement d'un endroit froid à un endroit chaud, de l'humidité risque de se condenser sur l'objectif situé à l'intérieur du système ou sur le disque. Si cela se produit, il se peut que le système ne fonctionne pas correctement. Dans ce cas, retirez le disque, puis mettez le système hors tension et débranchez-le. Ne réintroduisez pas le disque aussi longtemps que l'humidité ne s'est pas évaporée (plusieurs heures peuvent être nécessaires). Si le système ne

fonctionne toujours pas correctement, contactez notre ligne d'assistance technique au 1-800-345-7669.

Nettoyage

Pour des raisons de sécurité, avant de nettoyer le système ou les accessoires connectés, débranchez le cordon d'alimentation de la prise électrique.

Surfaces extérieures (couvercle en plastique du système et de la manette sans fil)

Conformez-vous aux instructions ci-dessous pour éviter toute détérioration ou décoloration de l'extérieur du produit.

- Essuyez à l'aide d'un chiffon doux et sec.
- Ne placez pas de matériaux en caoutchouc ou en vinyle sur l'extérieur du produit pendant une période prolongée.
- N'utilisez pas de solvants ou d'autres produits chimiques. N'essayez pas avec un chiffon de nettoyage traité chimiquement.

Grilles d'aération

Si de la poussière s'est accumulée dans les grilles d'aération du système, éliminez-la avec un aspirateur à basse puissance.

Sauvegarde des données

Il est recommandé de sauvegarder régulièrement les données du disque dur. Si, pour une quelconque raison, une perte ou une altération du logiciel ou encore de données se produit, il n'est généralement pas possible de les récupérer. Sony Computer Entertainment Inc. ainsi que ses filiales et ses membres ne peuvent être tenus responsables de tout dégât ou blessure découlant de la perte ou de l'altération des données.


Utilisation de l'utilitaire de sauvegarde

Vous pouvez sauvegarder, sur un périphérique de stockage de masse USB, les données stockées sur le disque dur et les restaurer. Sélectionnez "Utilitaire de sauvegarde" sous "Paramètres système" et suivez les instructions affichées pour mener à bien cette opération. Remarquez qu'en fonction des conditions d'utilisation

du système, il est possible que vous ne puissiez pas sauvegarder ou restaurer des données. Il est conseillé de créer préalablement une sauvegarde de réserve des données importantes en copiant ou déplaçant celles-ci sur le support de stockage de masse USB.

Pour plus de détails sur l'utilitaire de sauvegarde, reportez-vous au mode d'emploi (↔ page 31).


Copie/déplacement de fichiers

Les types de fichiers suivants, enregistrés sur le disque dur du système, peuvent être copiés ou déplacés vers un périphérique de stockage de masse USB. Sélectionnez le fichier, appuyez sur le bouton , puis sélectionnez "Copier" ou "Déplacer" dans le menu d'options. Il se peut que vous ne puissiez pas copier ou déplacer des fichiers contenant des données protégées par copyright.

Type de fichier	Destination de sauvegarde
Données de jeux enregistrées ; Fichiers vidéo, audio et image	Stockage de masse USB (lecteur flash USB, etc.)

Conseil

À l'aide d'un lecteur/enregistreur de carte (connecteur de type USB), vous pouvez sauvegarder des fichiers enregistrés sur le disque dur sur un support de stockage tel que Memory Stick™ ou SD Memory Card.

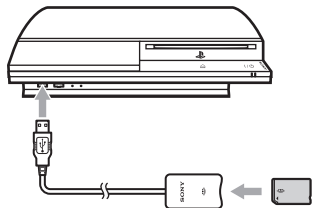

Disques

Remarque relative à la compatibilité

Certains supports peuvent posséder des restrictions régionales ou territoriales et ne pas fonctionner avec votre système. Pour plus de détails, reportez-vous à l'emballage du support.

Manipulation

- Ne touchez pas la surface du disque que vous manipulez, mais tenez-le par les bords.
- Ne collez aucun papier ou autocollant sur le disque et n'écrivez pas sur le disque.
- Les traces de doigt, poussières, saletés et rayures sur le disque peuvent déformer l'image ou réduire la qualité du son. Manipulez toujours les disques avec soin et assurez-vous de leur état de propreté avant utilisation.

Stockage

- N'exposez pas les disques à des températures élevées, à une humidité excessive ou aux rayons directs du soleil.
- Lorsque vous ne les utilisez pas pendant une période prolongée, rangez-les dans leur boîtier. Empiler des disques sans les ranger dans leur boîtier ou les ranger sur la tranche risque de les déformer.

Méthode de nettoyage

- Nettoyez les disques à l'aide d'un chiffon doux, en les essuyant délicatement du centre vers l'extérieur.
- N'utilisez aucun solvant, par exemple de la benzine, des diluants pour peinture, des produits de nettoyage pour disques ou un aérosol antistatique, car vous risqueriez d'endommager les disques.



Avant de porter l'appareil en réparation

Consultez cette section si vous rencontrez des difficultés lors de l'utilisation du système PS3™. Si le problème persiste, contactez le Service consommateurs SCEA au 1-800-345-7669. Pour plus d'informations relatives au support technique, visitez notre site Web <http://www.us.playstation.com>.

Alimentation

Le système ne se met pas sous tension.

- ➔ Vérifiez si l'interrupteur d'alimentation principal MAIN POWER à l'arrière du système est activé.
- ➔ Vérifiez si le cordon d'alimentation est correctement inséré dans le système et la prise électrique.

Image

Il n'y a pas d'image sur le téléviseur.

- ➔ Réglez la sortie vidéo du téléviseur pour qu'elle corresponde au connecteur d'entrée utilisé pour le raccordement au système PS3™.
- ➔ Vérifiez si le câble est correctement inséré. Essayez de débrancher le câble du système PS3™ ou du téléviseur, et de le rebrancher.
- ➔ Il se peut que le problème provienne du câble AV utilisé. Essayez d'utiliser un autre câble compatible avec le système PS3™.
- ➔ Si les paramètres de sortie vidéo du système ne correspondent pas à ceux du câble ou du téléviseur utilisé, il est possible que l'image ne s'affiche pas. Si l'écran se vide, mettez le système hors tension. Ensuite, lorsque le système et le téléviseur sont les seuls à être raccordés, appuyez sur la touche d'alimentation du système pendant plus de 5 secondes pour le remettre sous tension. Les paramètres de sortie vidéo sont automatiquement réinitialisés à la résolution standard.

- ➔ Si la résolution du contenu vidéo n'est pas prise en charge par le téléviseur utilisé, il se peut que l'écran reste vide au démarrage de la vidéo. Dans ce cas, accédez à l'écran de sélection de la résolution, dans les paramètres de sortie vidéo du système, puis sélectionnez toutes les résolutions prises en charge par le téléviseur.

Le Blu-ray Disc (BD) ou le DVD est illisible, ou l'image est déformée.

- ➔ Lorsque vous affichez le contenu d'un DVD ou des logiciels au format PLAYSTATION®3 en résolution SD, seuls les disques enregistrés selon la norme NTSC peuvent être lus.
- ➔ Si le système est connecté à un magnétoscope ou à un combiné téléviseur/magnétoscope, le codage de protection contre la copie de certains BD et DVD peut engendrer une distorsion de l'image, ou encore un assombrissement ou un éclaircissement de celle-ci. Dans ce cas, connectez directement le système au téléviseur.
- ➔ Si le BD ou le DVD ne correspond pas au code de région spécifié dans le système, il est illisible.
- ➔ Certains DVD sont prédéfinis avec des restrictions de contrôle parental. Entrez le mot de passe qui a été défini dans les "Paramètres sécurité" pour augmenter momentanément le niveau de restriction lié à l'âge de l'utilisateur.
- ➔ Certains BD sont prédéfinis avec des restrictions de contrôle parental. Entrez le mot de passe qui a été défini dans les "Paramètres sécurité" pour modifier le niveau de contrôle parental.
- ➔ Le BD a peut-être été verrouillé. Entrez le mot de passe spécifié lors de la création du disque.
- ➔ Voir aussi les avis sous "Disques compatibles" (↔ page 49).

Certains BD ne peuvent être lus.

- ➔ Pour lire les logiciels vidéo BD disponibles dans le commerce, il est parfois nécessaire de renouveler la clé de chiffrement de l'AACS (Advanced Access Control System). Il faut mettre à jour le logiciel système pour renouveler la clé de chiffrement.

La taille de l'image vidéo ne correspond pas à celle de l'écran du téléviseur.

- ➔ Vérifiez si les paramètres de sortie vidéo du système sont corrects.
- ➔ Vérifiez si les paramètres du téléviseur connecté sont corrects. Pour plus de détails, reportez-vous aux instructions qui accompagnent votre téléviseur.
- ➔ Avec certains contenus vidéo, la taille de l'écran ne peut pas être modifiée.

La couleur de l'écran ne semble pas exacte.

- ➔ Le fond d'écran du système change automatiquement avec l'heure du jour.

Audio

Aucun son n'est émis.

- ➔ Vérifiez si la fonction de désactivation du son du téléviseur ou des haut-parleurs est désactivée. Vérifiez également si le volume est réglé sur le niveau adéquat.
- ➔ Si un appareil audio est connecté, vérifiez les paramètres du périphérique. Pour plus de détails, reportez-vous aux instructions qui accompagnent l'appareil audio.
- ➔ Il se peut que le problème provienne du câble AV utilisé. Essayez d'utiliser un autre câble compatible avec le système PS3™.
- ➔ Certains logiciels ne prennent pas en charge la sortie audio numérique.
- ➔ Si les paramètres de sortie audio numérique du système ne correspondent pas au câble AV ou périphérique utilisé, il se peut que le système ne reproduise aucun son. Vérifiez si les paramètres de sortie audio du système sont corrects.
- ➔ Certains contenus prenant en charge les formats Dolby Digital, DTS et d'autres formats peuvent ne pas reproduire le son à partir de tous les canaux.

Impossible de lire les fichiers musicaux.

- ➔ Les pistes possédant une limite de temps ou un nombre limité de lectures ne peuvent pas être lues.
- ➔ Les méthodes de lecture peuvent être limitées pour certains fichiers musicaux distribués via Internet. Dans ce cas, il est possible que les données ne puissent pas être lues sur le système PS3™.

Vidéo

Même après avoir sélectionné un élément dans le panneau de commandes, l'opération souhaitée ne peut pas s'effectuer.

- ➔ Les conditions de lecture peuvent être déterminées préalablement par l'éditeur du logiciel. Dans ce cas, certaines options peuvent ne pas être disponibles, même si vous suivez les instructions de la documentation du produit.

Réseau

La connexion au réseau ne peut pas être établie.

- ➔ Vérifiez si le câble Ethernet est correctement connecté.
- ➔ Vérifiez si les paramètres réseau sont corrects. Pour définir les paramètres réseau adéquats, reportez-vous aux instructions de votre fournisseur de services Internet ou au manuel du logiciel.

La page Web ne s'affiche pas correctement.

- ➔ Selon le navigateur, certaines pages Web peuvent ne pas s'afficher correctement.

Disques et périphériques USB

Le système ne reconnaît pas le disque.

- ➔ Enlevez le disque, puis réinsérez-le.
- ➔ Si le disque possède une étiquette, insérez-le en orientant celle-ci vers le haut.
- ➔ Assurez-vous que le disque n'est pas sale ou griffé. S'il est sale, essayez-le délicatement à l'aide d'un chiffon doux.
- ➔ Voir aussi les avis sous "Disques compatibles" (➔ page 49).

Il est impossible de retirer le disque.

- ➔ Appuyez sur la touche éjection située à l'avant du système pendant 10 secondes ou plus pour forcer l'éjection du disque. Après avoir retiré et avant de réinsérer le disque, éteignez le système, puis rallumez le système pour continuer l'utilisation.

Le système ne reconnaît pas le périphérique USB ou le périphérique USB ne fonctionne pas correctement.

- ➔ Vérifiez que le périphérique est inséré correctement.
- ➔ Essayez de brancher un autre connecteur USB sur la prise. Il est possible que le périphérique ne soit pas reconnu, en fonction de la combinaison de connecteurs USB.
- ➔ Dans certains cas, il est possible que le système ne reconnaisse pas le périphérique si vous utilisez un concentrateur USB ou si vous raccordez un nombre de périphériques supérieur à ce qui est alloué. Essayez de retirer les périphériques inutilisés.
- ➔ Dans certains cas, le système pourrait ne pas reconnaître un support de stockage ou périphériques compatibles USB Mass Storage Class si plus que le nombre de supports ou périphériques permis sont branchés. Essayez de retirer les supports ou périphériques inutilisés.

En branchant un périphérique USB, le message "Un périphérique USB inconnu a été connecté." s'affiche.

- ➔ Le périphérique branché pourrait ne pas être utilisable avec le système.
- ➔ Le périphérique pourrait être compatible seulement au logiciel spécifique. Si le logiciel compatible avec le périphérique est lancé, le périphérique pourra être utilisé.
- ➔ Il pourrait y avoir trop de concentrateurs USB branchés. Essayez d'en retirer un.

Manette sans fil

La manette sans fil ne fonctionne pas.

- ➔ Lors de l'utilisation de la manette sans fil, si la manette et le système sont trop éloignés, vous ne pouvez pas utiliser le système efficacement.
- ➔ Lors de l'utilisation de la manette sans fil, vous devez l'associer au système et lui attribuer un numéro de manette. Une fois le système sous tension (indicateur d'alimentation à l'avant du système allumé en vert), connectez le système et la manette à l'aide du câble USB, puis appuyez sur la touche PS de la manette.
- ➔ Le numéro de la manette a peut-être été effacé. Appuyez sur la touche PS de la manette pour réaffecter le numéro.

- ➔ Vérifiez le niveau de charge de la batterie de la manette sans fil. Lorsque la manette est utilisée en mode sans fil, elle ne fonctionne pas si la batterie est complètement déchargée. Chargez la batterie en connectant la manette au système à l'aide du câble USB.
- ➔ Les manettes sans fil du système PS3™ ne sont pas dotées de la fonction de vibration et ne vibrent pas si vous utilisez un logiciel prenant en charge la fonction de vibration.
- ➔ Réinitialisez la manette sans fil en appuyant sur la touche de réinitialisation à l'arrière de la manette à l'aide d'un objet pointu tel qu'un stylo.



Touche de réinitialisation

La batterie ne se charge pas ou ne se recharge pas complètement.

- ➔ La batterie ne peut se charger que si le système est sous tension (l'indicateur d'alimentation situé à l'avant du système est allumé en vert fixe).
- ➔ Consultez la section "Batterie de la manette sans fil" (➔ page 46).

La charge de la batterie ne dure pas longtemps.

- ➔ La batterie est peut-être usée. L'autonomie de la batterie diminue au fil du temps, suite à son vieillissement et à son utilisation répétée. Consultez la section "Batterie de la manette sans fil" (➔ page 46).

La batterie se décharge même si elle n'est pas utilisée.

- ➔ La charge de la batterie est utilisée même si la manette sans fil ne l'est pas. Il est conseillé de charger fréquemment la batterie.

Autres problèmes

Le système est bruyant.

- ➔ Comme la lecture de certains disques est plus rapide, elle peut s'avérer plus bruyante.
- ➔ Lorsque vous utilisez le système dans un endroit où la chaleur risque de s'accumuler, notamment dans un meuble audio-vidéo fermé, le ventilateur tourne rapidement pour réduire la température interne du système, mais génère davantage de bruit. Déplacez le système jusqu'à un endroit bien ventilé.

Vous avez oublié votre code d'accès aux paramètres sécurité.

- ➔ Si vous initialisez le système via la commande "Paramètres système" ➔ "Rétablir les paramètres par défaut", votre code d'accès redevient "0000". Notez toutefois que tous les autres paramètres à l'exception du mot de passe sont également réinitialisés. Les paramètres réinitialisés ne peuvent pas être récupérés.

Le système est chaud.

- ➔ Pendant l'utilisation ou lorsque le système est mis sous tension, il peut devenir chaud. Ce phénomène est tout à fait normal.

L'écran est figé. Le système ne fonctionne pas.

- ➔ Redémarrez le système. Si vous appuyez sur la touche d'alimentation située à l'avant du système pendant au moins 10 secondes, cela entraîne son arrêt forcé. Une fois le système arrêté, remettez-le sous tension.

L'indicateur d'alimentation à l'avant du système clignote alternativement en rouge et en vert.

- ➔ L'intérieur du système est en surchauffe. Vérifiez si le système est utilisé dans un endroit chaud ou si les grilles d'aération sont bloquées. Si vous continuez à utiliser le système dans les conditions indiquées ci-dessus, il s'arrêtera de fonctionner. Eteindre le système et le laisser refroidir pendant un moment. Une fois le système refroidi, rallumez-le.

L'indicateur d'alimentation à l'avant du système clignote en rouge et le système ne fonctionne plus.

- ➔ La température à l'intérieur du système est devenue trop élevée. Assurez-vous que le système n'est pas utilisé dans un endroit trop chaud et vérifiez si les grilles d'aération ne sont pas entravées. Appuyez sur la touche d'alimentation située à l'avant du système pour arrêter le clignotement, puis cessez d'utiliser le système jusqu'à ce qu'il refroidisse. Une fois le système refroidi, remettez-le sous tension.

Le système ne reconnaît pas le contenu.

- ➔ Il est possible que le format du contenu ne soit pas pris en charge par le système. Certains types de contenu, non pris en charge par le système, ne seront pas reconnus. Pour plus d'informations sur les formats pris en charge, reportez-vous au Mode d'emploi (➔ page 31).

GARANTIE ET RESPONSABILITÉ LIMITÉE SUR LE MATÉRIEL

Sony Computer Entertainment America (SCEA) garantit à l'acheteur original que le matériel constituant le système PS3™ est exempt de tout défaut de fabrication pendant une période de un (1) an après la date d'achat (la "Période de garantie"). Si le produit est déterminé comme défectueux pendant la Période de garantie, votre seul recours et la responsabilité exclusive de SCEA se limite à la réparation ou au remplacement de ce produit par un produit neuf ou reconstitué, selon la décision de SCEA. Dans le cadre de cette garantie et responsabilité limitée sur le matériel, le terme "reconstitué" désigne un produit dont les caractéristiques d'origine ont été rétablies. Visitez <http://www.us.playstation.com> ou appelez le 1-800-345-7669 pour recevoir les instructions pour expédier le produit, fret payé, à un centre de service agréé.

CETTE GARANTIE NE S'APPLIQUE PAS SI CE PRODUIT : (A) EST UTILISÉ AVEC DES PRODUITS QUI NE SONT PAS COMPATIBLES AVEC CE PRODUIT ; (B) EST UTILISÉ À DES FINS COMMERCIALES (Y COMPRIS LA LOCATION) ; (C) A ÉTÉ MODIFIÉ OU FALSIFIÉ ; (D) EST ENDOMMAGÉ SUITE À UNE CATASTROPHE NATURELLE, UNE UTILISATION INCORRECTE, UN EMPLOI ABUSIF, UNE NÉGLIGENCE, UN ACCIDENT, L'USURE, UNE UTILISATION DÉRAISONNABLE OU PAR D'AUTRES CAUSES NON LIÉES À UN DÉFAUT DE MATÉRIEL OU DE FABRICATION ; (E) A SUBI LA MODIFICATION, LA DESTRUCTION OU LA SUPPRESSION DE SON NUMÉRO DE SÉRIE ; OU (F) A SUBI LA MODIFICATION, LA DESTRUCTION OU LA SUPPRESSION DU JOINT DE GARANTIE SITUÉ SUR LE SYSTÈME PS3™. CETTE GARANTIE NE COUVRE PAS LES PRODUITS VENDUS TELS QUELS OU AVEC TOUTS LEURS DÉFAUTS, OU ENCORE LES CONSOMMABLES (TELS QUE LES BATTERIES). LA GARANTIE POURRAIT ÉGALEMENT ÊTRE ANNULÉE PAR SCEA SI (1) SCEA CROIT RAISONNABLEMENT QUE LE MODE D'UTILISATION DU SYSTÈME PS3™ ENFREINT LES TERMES ET CONDITIONS LISTÉS SÉPARÉMENT DANS L'ACCORD DE LICENCE DU LOGICIEL SYSTÈME, OU (2) LE PRODUIT EST UTILISÉ AVEC DES

PRODUITS QUI NE SONT PAS VENDUS OU ACCORDES SOUS LICENCE PAR SCEA (Y COMPRIS, MAIS SANS S'Y LIMITER, LES DISPOSITIFS D'AMÉLIORATION DE JEUX SANS LICENCE, LES MANETTES, LES ADAPTATEURS ET LES DISPOSITIFS D'ALIMENTATION EN ÉNERGIE). VOUS ASSUMEZ TOUS LES RISQUES ET RESPONSABILITÉS ASSOCIÉS À L'UTILISATION DE PRODUITS DE TIERS. UNE PREUVE D'ACHAT SOUS LA FORME D'UN CONTRAT DE VENTE OU D'UNE FACTURE DÉMONTRANT QUE L'APPAREIL SE TROUVE DANS LA PÉRIODE DE GARANTIE DOIT ÊTRE PRÉSENTÉE AFIN D'OBTENIR LE SERVICE DE GARANTIE.

CE QUI PRÉCÈDE CONSTITUE LA SEULE GARANTIE ET EXCLUT TOUTE AUTRE GARANTIE, EXPRESSE OU IMPLICITE, Y COMPRIS MAIS SANS S'Y LIMITER, TOUTE GARANTIE IMPLICITE DE QUALITÉ MARCHANDE, DE NON-VIOLATION OU D'APTITUDE À DES FINS PARTICULIÈRES POUR LE SYSTÈME PS3™, QUI SONT ÉNONCÉES CI-DESSOUS. CÉPENDANT, SI CES GARANTIES SONT REQUISES PAR LA LOI, ELLES SERONT LIMITÉES À LA DURÉE DE LA PRÉSENTE GARANTIE.

LE SEUL RECOURS DU CLIENT DANS L'ÉVENTUALITÉ D'UNE INSATISFACTION OU DE DOMMAGES SURVENANT À LA SUITE DE L'UTILISATION DU MATÉRIEL PS3™ ET LA RESPONSABILITÉ MAXIMALE DE SCEA, EST LIMITÉ À LA RÉPARATION OU LE REMPLACEMENT DU SYSTÈME PS3™.

SAUF LES INDICATIONS PRÉCÉDENTES, SCEA EXCLUT TOUTE RESPONSABILITÉ LIÉE À LA PERTE DE DONNÉES, PERTE DE PROFIT OU TOUTE AUTRE PERTE OU DOMMAGES POUR LE CLIENT OU UN TIERS, QU'IL S'AGISSE DE DOMMAGES DIRECTS, INDUITS OU ACCIDENTELS, SOUS QUELQUE THÉORIE JURIDIQUE, RÉSULTANT DE L'UTILISATION DU MATÉRIEL PS3™. CERTAINS ÉTATS OU PROVINCES N'AUTORISENT PAS LES LIMITATIONS DE LA DURÉE D'UNE GARANTIE IMPLICITE ET CERTAINS ÉTATS N'AUTORISENT PAS L'EXCLUSION OU LES LIMITATIONS DES DOMMAGES INDUITS OU ACCIDENTELS. PAR CONSÉQUENT, IL SE PEUT QUE LES

LIMITATIONS ET EXCLUSIONS CI-DESSUS NE S'APPLIQUENT PAS À VOUS.

Cette garantie vous donne des droits légaux spécifiques. Vous pouvez aussi avoir d'autres droits, qui varient selon l'état ou la province. Cette garantie est valide uniquement aux Etats-Unis et au Canada. La garantie proposée par Sony Computer Entertainment America pour votre matériel PS3™ est identique, que vous enregistriez ou non votre produit.

Cette garantie ne s'applique pas aux logiciels système pré-installés sur le matériel PS3™, ou fournis à la suite de mises à jour successives. La licence de ce logiciel système vous est attribuée selon les termes et conditions d'utilisation listés séparément dans l'accord de licence à <http://www.scei.co.jp/ps3-eula/> et le logiciel est fourni selon sa propre garantie.

Stratégie de réparation

Vous comprenez et acceptez que chaque fois que SCEA répare votre système PS3™ (que ce soit pendant la Période de garantie ou dans le cadre d'une entente de réparation différente), il est possible que SCEA effectue certaines réparations nécessaires sur votre système PS3™ afin de s'assurer du bon fonctionnement du système en accord avec les règles de SCEA. Ces réparations peuvent comprendre des mises à jour de la dernière version, ou la réparation ou le remplacement du disque dur PS3™ ou du système PS3™ par un produit neuf ou reconstitué. Vous comprenez et acceptez que certaines réparations peuvent modifier les paramètres actuels, entraîner le retrait d'autocollants esthétiques ou skin, entraîner une perte de données ou de contenu, ou causer la perte de fonctionnalités. Il est nécessaire d'effectuer régulièrement des copies de sauvegarde de votre disque dur afin de prévenir toute perte ou modification de données bien que certains contenus ne peuvent être sauvegardés et que vous devrez réinstaller. Vous devriez retirer aussi tous périphériques, composants qui ne sont pas du système PS3™ et tout contenu que vous considérez breveté, privé ou confidentiel avant de faire réparer votre système PS3™. SCEA ne sera pas tenu responsable de tous dommages découlant de votre non-conformité aux termes de ce document et à toutes instructions fournies par SCEA. SCEA se réserve le droit de refuser toute réparation ou d'annuler la garantie de tout système PS3™ ayant été modifié.

A moins que la garantie et responsabilité de matériel limitées ci-dessus n'en dispose autrement, vous acceptez que (i) les réparations sont fournies "EN L'ETAT" sans aucune garantie express ou limitée ; et (ii) SCEA ne devrait pas

être tenu responsable des dommages direct ou indirects, accidentels ou non, y compris les dommages survenant de la perte de données ou de fonctionnalités. Les limitations précédentes s'appliqueront dans la mesure des lois en vigueur.