

Bluetooth Speaker 3521063-CBT



INSTRUCTION MANUAL
PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

Getting Started

- 1.Remove the device from the box.
- 2.Remove any packaging from the product.
- 3.Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

1. Bluetooth speaker with LED light
2. USB rechargeable cable
3. 3.5mm Auxiliary cable
4. Instruction Manual

Key Features

1. Bluetooth Speaker with LED light
2. Built-in LED Lantern
3. USB rechargeable battery

Specification

Speaker power	: 3 Watts
Play time	: 2 - 3 hours
Service time for LED lantern	: 7 - 8 hours
Charge Voltage	: DC5V (USB)
Bluetooth Range	: 10m


2

Features

- Button parts
1. Last/Volume decrease
 2. Pause/play/mode
 3. Next /Volume increase
 4. LED mode switch button
 5. Power switch
 6. U disk slot
 7. ON/OFF
 8. TF slot

TF player

Open the equipment power switch to the ON position (as shown in figure 2 (5) equipment).
By default, in the FM mode will copy have USB flash drive into the card slot(MP3 songs as shown in figure 2 end) device detection to insert USB flash drive,will automatically switch to optimal. Disk mode,play the songs in the USB flash drive.
A short press (shown in figure 1),(1) to switch song to a song
A short press (shown in figure 1),(2) you can pause/play
Long press (shown in figure 1),(3) to increase the volume
Long press (shown in figure 1),(3) to increase the volume
Long press (show in figure 1),(2) to switch to other mode.

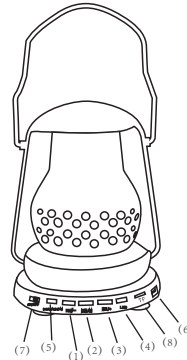

3

A short press (as shown in figure 1),(2) you can pause/play.
Long press (as shown in figure 1),(1) can reduce the volume.
Long press (as shown in figure 1),(3) to increase the volume.
Long press (as shown in figure 1),(2) to switch to other mode.

Udisk player

Open the equipment power switch to the ON position (as shown in figure 2(5) equipment).
By default, in the FM mode will copy have USB flash drive into the card slot(MP3 songs as shown in figure 2 end) device detection to insert USB flash drive,will automatically switch to optimal. Disk mode,play the songs in the USB flash drive.
A short press (shown in figure 1),(1) to switch song to a song
A short press (shown in figure 1),(2) you can pause/play
Long press (shown in figure 1),(3) to increase the volume
Long press (shown in figure 1),(3) to increase the volume
Long press (show in figure 1),(2) to switch to other mode.

FM model

Open the equipment power switch to the ON position (as shown in figure 2 (5) equipment).
Default in the FM mode, insert the machine configuration combined charging line, according to the following operation can listen to the radio.

4

Short press (as shown in figure 1),(2) the machine into the automatic machine, receiving station.
Automatically stored.

A short press (shown in figure 1),(1) to switch to a station.
A short press (shown in figure 1),(3) to switch to the next station.
Long press (shown in figure 1),(1) can reduce the volume.
Long press (shown in figure 1),(3) to increase the volume.
Long press (shown in figure 1),(2) to switch to other mode.

Note : closed front must be inserted into the seal charge line do radio antenna, receiving station.
Quantity affected by the local weather and geographical position.

AUX IN mode

Open the equipment power switch to the ON position (as shown in figure 2(5) equipment).
Default in the FM mode, insert the machine configuration (figure 3) of the dual function charging line, another section 3.5mm audio head insert audio equipment, long press to suspend play key switch .
To AUX in mode ,can play songs sound source .
Long press (shown in figure 1),(1) can reduce the volume,
Long press (show in figure 1),(3) to increase the volume,
Long press (show in figure 1),(2) to switch to other mode .

Bluetooth mode

Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth enabled

5

Turn on the speaker , your speaker is now on and is entering "pairing" mode. It will search for various devices. The pairing name of our Bluetooth Speaker is "17-B63U", pair it with this device.
If required, enter the password '0000' to confirm to finalize pairing.
Once paired successfully, you would hear a beep tone and the blue LED light will flash slowly. And you can start to enjoy your music now

TO Bluetooth mode ,can play songs sound source.
Long press (shown in figure 1),(1) can reduce the volume,
Long press (show in figure 1),(3) to increase the volume,
Long press (show in figure 1),(2) to switch to other mode

LED Dazzle color lamp

Open the equipment power switch to the ON position (as shown in figure 2 (5), the Machine LED flash light ,short press the LED button figure 1 (4) a variety of optional LED dazzle color mode ,long press the LED, closed dazzle color lamp shell

USB charging

Insert the MAC interface equipment ,then USB 5V insert the USB port on the other end of the belt .
The output of the charger of equipment ,can be charged .

6

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives.
Keep this unit away from wet or damp surroundings.

The crossed out wheelee bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way
USB charging
Insert the MAC interface equipment ,then USB 5V insert the USB port on the other end of the belt .
The output of the charger of equipment ,can be charged

when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.

Note: iPod and iPhone are trademarks of Apple Inc, registered in the US, and other countries.

6

Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Altavoz Bluetooth con luz LED 3521063-CBT



MANUAL DE INSTRUCCIONES
POR FAVOR LEA TODAS LAS INSTRUCCIONES
Y RETENER PARA USO EN EL FUTURO

Empezando

- Retire el dispositivo de la caja.
- Retire el embalaje del producto.
- Por favor, conserve todo el embalaje hasta que haya comprobado y se contaron todas las partes y el contenido contra la lista de piezas.

Contenidos del paquete

- Altavoz Bluetooth con luz LED
- Cable USB recargable
- Cable auxiliar de 3.5 mm
- Manual de instrucciones

Características principales

- Altavoz Bluetooth con luz LED
- incorporado LED linterna
- batería recargable USB

Especificación

Energía del altavoz: 3 vatios
El tiempo de juego: 2-3 horas
El tiempo de servicio de la linterna LED: 7-8 horas
Voltaje de carga: DC 5V (USB)
El alcance de Bluetooth: 10m


2

Características

- (Partes de botón)
1. Ultimo / Disminución de Volumen
 2. Pausa / Reproducción / Modo de
 3. A continuación/ Aumento de Volumen
 4. Botón conmutador de modo de LED
 5. Interruptor de Potencia
 6. Ranura del disco de U
 7. ON / OFF
 8. Ranura TE

El jugador del TF

Abrir el equipo.
Interruptor de encendido en la posición ON, como se muestra en la figura 2 (5).
El valor por defecto en el modo FM copiará canciones en MP3 a la tarjeta del TF en la ranura para tarjetas. (Como se muestra en la figura 2-mascota nombre de rubí) El dispositivo detectará la tarjeta del TF en equipo y cambiará automáticamente a TF. Modo de tarjeta canción, jugar la tarjeta del TF.
Una pulsación corta (como se muestra en la figura 1),(1) para conectar canción a una canción.
Una pulsación corta (como se muestra en la figura 1),(3) para pasar a la siguiente canción.
Una pulsación corta (como se muestra en la figura 1),(2) se puede hacer una pausa / reproducción.

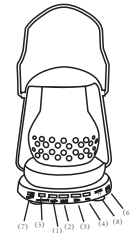

3

Pulsación larga (como se muestra en la figura 1),(1) puede reducir el volumen.
pulsación larga (como se muestra en la figura 1),(3) para aumentar el volumen.
pulsación larga (como se muestra en la figura 1),(2) para cambiar a otro modo.

El jugador Udisk

Abra el interruptor de alimentación de equipos en la posición ON (como se muestra en la figura 2 (5)).
Dispositivo estará en el modo FM de forma predeterminada. Inserte la unidad flash USB en la ranura USB y se copiará canciones en formato MP3 de forma automática y cambiar al modo óptimo.
el modo de disco, reproducir las canciones en la unidad flash USB.
Una pulsación corta (que se muestra en la figura 1),(1) para conectar canción a una canción
Una pulsación corta (que se muestra en la figura 1),(3) para pasar a la siguiente canción.
Una pulsación corta (que se muestra en la figura 1),(2) puede hacer una pausa / reproducción
Pulsación larga (que se muestra en la figura 1),(1) puede reducir el volumen
Pulsación larga (que se muestra en la figura 1),(3) para aumentar el volumen
pulsación larga (mostrar en la figura 1),(2) para cambiar a otro modo.

4

El modo FM

Abra el interruptor de alimentación de equipos en la posición ON (como se muestra en la figura 2 (5)).
Dispositivo estará en el modo FM de forma predeterminada, inserte la línea de carga combinada configuración de la máquina para escuchar la radio.
Pulsar la máquina una vez (como se muestra en la figura 1),(2) para encender en la máquina automática de la estación de recepción. almacenada automáticamente.
Una pulsación corta (que se muestra en la figura 1),(1) para conectar a una estación.
Una pulsación corta (que se muestra en la figura 1),(3) para pasar a la siguiente estación.
Pulsación larga (que se muestra en la figura 1),(1) puede reducir el volumen.
pulsación larga (que se muestra en la figura 1),(3) para aumentar el volumen.
pulsación larga (que se muestra en la figura 1),(2) para cambiar a otro modo,
Nota: Frontal cerrada debe ser insertada en la línea de carga de sellado hacer antena de la radio, la estación receptora.
Cantidad afectada por el clima local y la posición geográfica.

5

el modo AUX IN

Abra el interruptor de alimentación del equipo en la posición ON (como se muestra en la figura 2 (5) equipos).
Por defecto en el modo FM, inserte la configuración de la máquina (figura 3) de la línea de doble función de carga, otra cabeza de audio de 3,5 mm sección de insertar un equipo de audio, mantenga pulsado para suspender la llave de juego.
A AUX en el modo, puede reproducir canciones fuente de sonido.
Pulsación larga (que se muestra en la figura 1),(1) puede reducir el volumen,
pulsación larga (muestra en la figura 1),(3) para aumentar el volumen,
pulsación larga (mostrar en la figura 1),(2) para cambiar a otro modo.

El modo Bluetooth

Activar el altavoz y el dispositivo compatible con Bluetooth. Cambiar al modo Bluetooth en el dispositivo donde va a buscar el altavoz Bluetooth bajo "17-B63U". Si es necesario, introduzca la contraseña "0000" para confirmar para finalizar el emparejamiento. Una vez que el dispositivo se ha conectado correctamente, oír un pitido y ver la luz LED azul parpadea lentamente.
Pulsación larga (que se muestra en la figura 1),(1) puede reducir el volumen.
Pulsación larga (muestra en la figura 1),(3) para aumentar el volumen.
Pulsación larga (mostrar en la figura 1),(2) para cambiar a otro modo color de la lámpara LED deslumbra
Abra el interruptor de alimentación de equipos en la posición ON

6

(como se muestra en la figura 2 (5), el Máquina de la luz del flash de LED, pulse brevemente el botón de la figura 1 LED (4) una variedad de modo de color deslumbramiento LED opcional, pulsación larga del LED, cerrado deslumbra color de la cáscara de la lámpara.

la carga USB

Insertar el equipo de interfaz MAC, a continuación, USB 5V insertar el puerto USB en el otro extremo de la correa.
La salida del cargador de equipo, se puede cargar

Cuidado y mantenimiento

Limpie la unidad con un paño suave y húmedo. No utilice nunca productos químicos o discos abrasivos.
Mantenga esta unidad alejada de ambientes húmedos o mojados. El símbolo del contenedor con ruedas tachado en este artículo indica que este producto necesita ser eliminados de una manera ambientalmente amistosa. Póngase en contacto con las autoridades locales para obtener información sobre dónde llevar el artículo para su reciclaje.
Nota: iPod y iPhone son marcas comerciales de Apple Inc., registradas en los EE.UU. y otros países

6