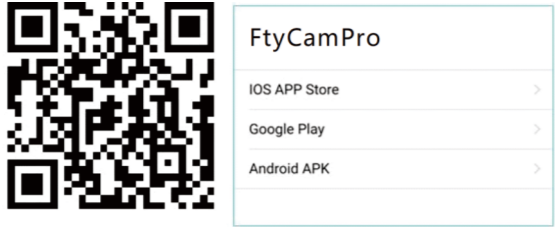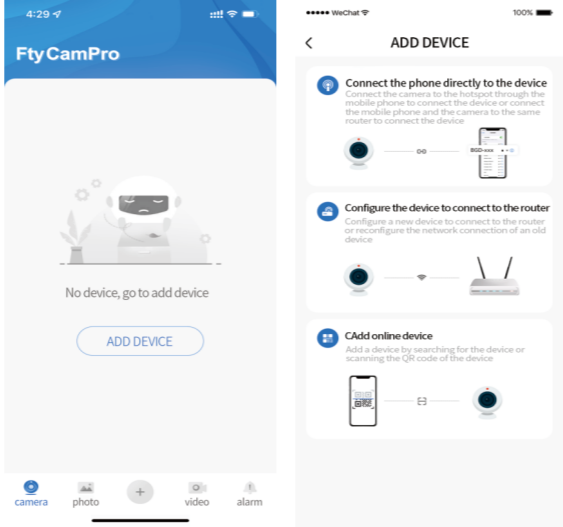# Manual of shaking head machine

1. Download and install FtyCamPro, IOS is downloaded from Apple Store, and Android system is searched on GooglePlay. For easy installation, please scan the QR code below to download FtyCamPro installation .

Note: It is recommended to use the browser's own or third-party QR code scanning software to scan and download the App. The We Chat scan function does not support direct download and installation of App files.

FtyCamPro
- IOS APP Store
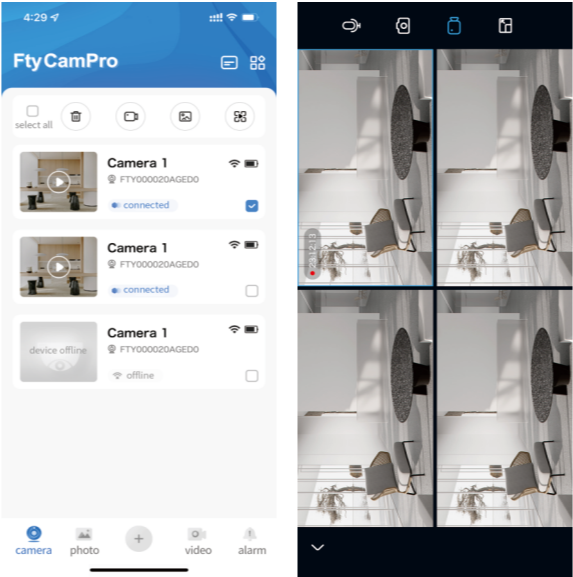- Google Play
- Android APK

2. When the camera is powered on, the PTZ will rotate and self-check during the startup process, and there will be a prompt sound during startup (if there is no prompt sound, you can reset and re-operate). Click "+"
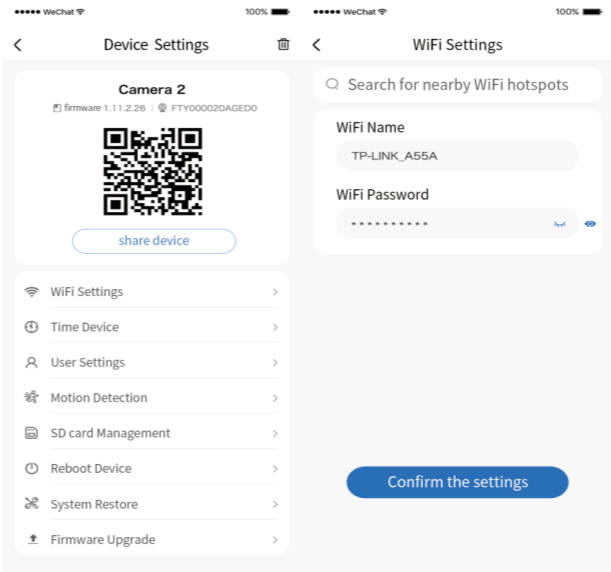
---

to add an activated camera.The connection method is mainly divided into "mobile phone". Directly connected device", "Network connected device" and "Add online device" to select the connection method you need.
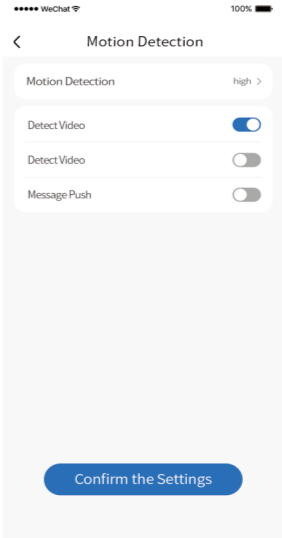

---

7. Click the icon in the upper right corner, the video interface you need to watch can watch multiple video interfaces at the same time
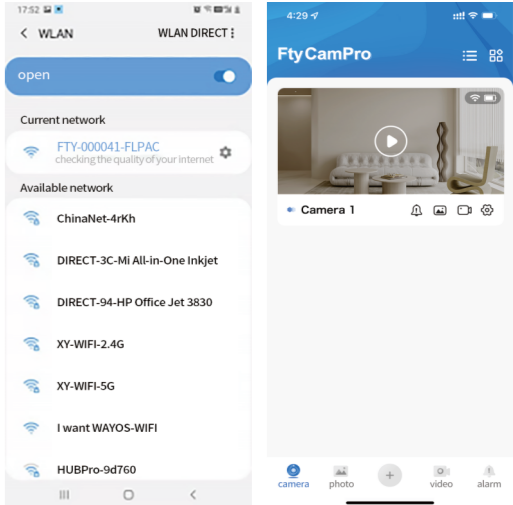

---

8. Product setting interface function: WiFi setting, the device can use WiFi connection in direct connection mode.

Motion detection function: When the motion detection function is turned on, the device will automatically take pictures when there is an abnormal dynamic picture in front of the camera.
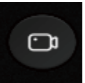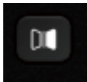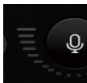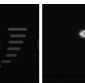

---

3. After jumping to the WiFi connection page, select the corresponding Wi-Fi hotspot and connect. After the connection is successful, return to the APP, and the device is added successfully. (If the APP does not automatically add a device, you can click Search to add the searched device).
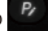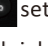

---

4. After the camera is displayed online, click the camera you just added to watch the real-time video, and you can control the device in the video interface.
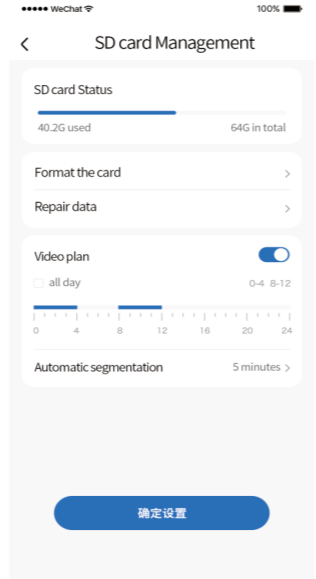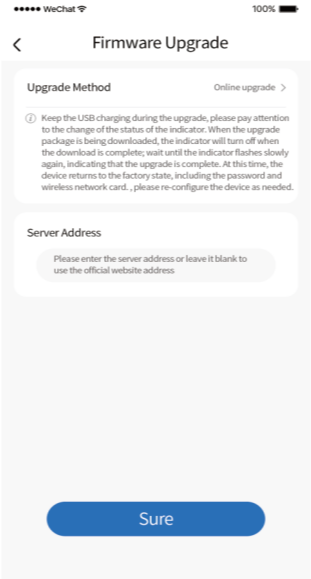

---

5. Icons and buttons of the video interface

	Take snapshots and record video files.
	Flip an image vertically and horizontally
	Voice function and PTZ setting interface
	Video parameters and audio controls

6. PTZ control settings, [ ] PTZ direction control, click to set preset positions, [ ] numbers 1-6 are preset positions that can be set, [ ] set preset positions, cruise photo, [ ] cruise left and right up and down, [CK] 360-degree all-round speed cruise, [ ]

SD card setting: When you need to save the video, open the SD card setting to set the allday recording, and you can set the recording time to save in segments

---

Firmware upgrade function: This function can be used to upgrade the firmware after the device optimization function

---

Note: If the application always fails, try checking the following:
A. The mobile phone is not connected to the AP of the camera. The configuration is to connect the mobile phone to the AP hotspot of the camera.
B. Common routers are supported. Public routes that require login page authentication are not supported for the time being.
C. Pay attention to the network name, network password and UID when configuring.
D. Currently, Chinese Wifi name and password and special symbols are not supported.
E. Wifi signal of 5G is not supported.

Common Problem
1. Why can't the APP search detect the camera/can't configure the network?
A: Please confirm that the device is connected normally, and check whether the APP usage permission is restricted.
2. Why does the camera always ask for a username and password, or rather, the incorrect user?
A: The default password of the camera is admin. If you forget the user name or password, you can restore the camera to the factory settings to obtain the default user name and password.
3. How can I restore the camera to factory settings?
A: Please press the reset button of the camera for about 5 seconds until the camera restarts.