




Parent's Guide

This guide contains important information. Please keep it for future reference. Ce guide contient des informations importantes. Veuillez le conserver pour toute référence future.

91-003700-003 (US)

LeapStart® Features

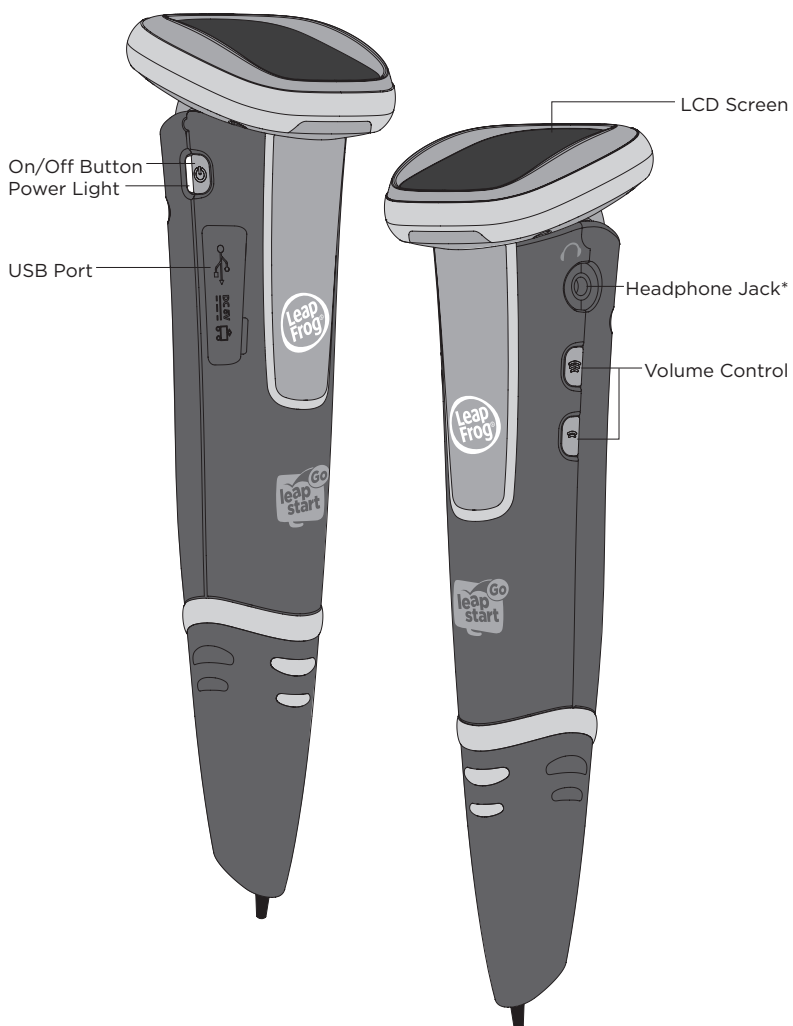


*Compatible with most headphones. Headphones not included.

What's Included



LeapStart® Go
Interactive Learning System

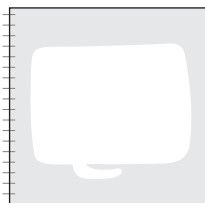

Sampler Book



USB Cable



Quick Start Guide

Get Started

1

Power Up

Charge your LeapStart® Go system by connecting it to your computer or outlet via the USB cable. Charge for at least one hour for optimal performance.

Your LeapStart® Go system is now ready to be used with the included Sampler Book!

2

Set Up

Download the LeapFrog® Connect application at leapfrog.com/connect and install it on your computer.

3

Register

Create a LeapFrog® parent account to have access to the full library of LeapStart® books!

4

Download

Download any additional books you have purchased.

5

Play & Learn

Your child is now ready to play, learn and explore with the LeapStart® Go system!

Please visit leapfrog.com/system-requirements for LeapFrog® Connect minimum system requirements.



Get Started With Your Sampler Book

- 1 **PRESS** the **On/Off Button** to begin. The green **Power Light** will shine when the LeapStart® Go system is on.
 - 2 **TOUCH** the tip of the stylus to any image or word on your **Sampler Book**.
-

Download Companion Audio and Video for Purchased LeapStart® Books

- 1 Turn on the LeapStart® system and touch a page.
 - 2 If you have not already done so, follow the instructions under Get Started to install the LeapFrog® Connect application.
 - 3 Follow the instructions in the LeapFrog® Connect application to set up your LeapStart® system and download companion audio and video for each of your books. The **Power Light** will flash in about one second intervals when content is downloading.
 - 4 Eject and disconnect the LeapStart® system from your computer.
 - 5 To begin playing, simply touch the tip of the LeapStart® stylus to any image or word in your LeapStart® activity book.
-

Automatic Shut Off

The system will turn off automatically if not used for several minutes.

Power Light Indication

The **Power Light** on the LeapStart® Go system has different behaviors in the circumstances below:

Circumstance	Power Light Behavior
System On	Green
Charging Status*	Amber
Charging Status (when connected to LeapFrog® Connect)	Red and amber flashing in about 1 second intervals
Charging Complete	Green
Charging Complete (when connected to LeapFrog® Connect)	Green flashing in about 1 second intervals
Bad Unit	Green, red or amber lights flashing rapidly

* If there is an issue charging the battery, such as the battery not getting enough power or being outside of the normal temperature range, the power light will show green.

Instructions for Care and Use

For indoor, dry-location use only. Do not use the product near a sink or other wet locations. Take care not to spill food or any kind of liquid on this product as it may render it inoperable and not serviceable. In case the unit does get wet, unplug all cables and turn it **OFF**. Allow to dry thoroughly before reusing. Do not attempt to dry with a hair dryer or other heat source.

Avoid prolonged exposure to extreme temperatures and direct sunlight. Operate in places with temperatures ranging from 5°C (40°F) to 38°C (100°F). Do not leave the product in your car as the temperatures in parked cars can exceed the acceptable storage temperature. Exposure to extreme temperatures can result in shortened battery life or cause the product to temporarily stop working.

Handle with care. To avoid injury, damage to this product or other property, avoid dropping and never disassemble, crush, puncture, microwave, incinerate, insert foreign objects or paint the product. Clean your hands before handling the product if they have been exposed to suntan lotions or other chemicals.

Cleaning. Disconnect all cords before cleaning. Clean the product with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry thoroughly before using again.

Repairing or Modifying LeapStart® Go System

Never attempt to repair or modify as the LeapStart® Go System does not contain any user-serviceable parts. Service should only be provided by LeapFrog® Enterprise, Inc. If the product has been in contact with liquids, punctured, or subjected to a severe impact or fall, immediately remove this product from use and contact LeapFrog® Consumer Services.

For service information, go to: www.leapfrog.com/support

Instructions opérationnelles

A utiliser uniquement en intérieur, dans un endroit sec.

Ne pas utiliser le produit près d'un lavabo ou autres sources d'eau. Faites attention à ne pas renverser de nourriture ou tout autre sorte de liquide sur ce produit car cela pourrait le rendre inopérant et inutilisable. Si vous renversez du liquide sur le produit, débranchez tous les câbles et éteignez-le. Laissez le produit sécher complètement avant de le réutiliser. N'essayez pas de le sécher avec un sèche-cheveux ou toutes autres sources de chaleur.

Évitez d'exposer le produit à des températures extrêmes ou aux rayons du soleil.

Utilisez le produit quand la température se trouve entre 5°C (40°F) et 38°C (100°F). Ne pas laisser le produit dans votre voiture car les voitures garées peuvent excéder les températures pour assurer le bon fonctionnement de votre produit. Exposer ce produit à des températures extrêmes peut diminuer la durée de vie des piles ou peut entraîner l'arrêt de votre produit.

A utiliser soigneusement.

Pour éviter toutes blessures, dommages ou autres, évitez de faire tomber le produit et ne jamais le démonter, casser, trouer, mettre au micro-ondes, bruler, casser ou peindre.

Pour nettoyer.

Nettoyez le produit avec un chiffon légèrement humide (eau froide). N'utilisez pas de savon, de lessive ou tout autre produit chimique. Ne jamais immerger le produit dans l'eau. Laissez sécher le produit avant de l'utiliser.

Réparer ou modifier le lecteur LeapStart® Go

N'essayez jamais de réparer ou modifier le lecteur LeapStart® Go - car celui-ci ne contient aucune pièce pouvant être réparée individuellement. Toutes réparations doivent être faites par LeapFrog® Entreprises, Inc. Si le produit a été en contact avec du liquide, troué, ou victime d'un impact fort ou est tombé, arrêtez son utilisation immédiatement et contactez le service client LeapFrog. Pour toute information, visitez www.leapfrog.com/support

Important Safety Instructions



Please read all the Important Safety Instructions prior to using the LeapStart® Go system. Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to the LeapStart® Go system or other property.



CAUTION: This product is not intended for children under 3 years old. Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.



WARNING: Cords are a strangulation hazard. Keep out of reach of children under 3 years of age. Children pulling on the cord could cause equipment to which the device is connected to fall with the possibility of property damage, serious personal injury or death. Adult supervision required during play.



PROTECT YOUR HEARING: Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss. When using headphones or ear buds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment; turn the volume down if you cannot hear people speaking near you. Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may

be affected. If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

Note: Maximum output voltage $\leq 150\text{mV}$

Accessories

Please read all safety instructions for any accessories or other products before using with the LeapStart® Go system. LeapFrog is not responsible for the operation of third-party accessories or their compliance with safety and regulatory standards.

Battery Replacement



WARNING: The lithium rechargeable battery cannot be removed from the product and should only be replaced by LeapFrog. For your safety, never try to remove the battery. For more information about battery replacement service, go to:

www.leapfrog.com/support



Charging the Battery

The LeapStart® Go device is equipped with a rechargeable lithium-polymer battery. It should be connected to an outlet with an AC Adapter or a computer via the USB cord for several hours prior to use. The Charge Status LED is located under power button on the side of the device. When the battery is charging, the charge indicator will display a amber light. When fully charged and connected via the USB port, the charge indicator light will turn green. The charge indicator will be OFF if not connected via USB and if not charging.

Battery Charging Instructions, Cautions & Warnings



WARNING: The adapter or USB cords could be a strangulation hazard. Not for children under 3 years.



WARNING: Not suitable for children under 3 years. Misuse of transformer can cause electric shock.



CAUTION: The battery is only to be charged by adults or children 8+ years of age under the full supervision of parents.



Optional AC Adapter Battery Charger

An optional AC Adapter can be used. Cautions & Warning apply. Please note that due to various compliance requirements, the word “transformer” is sometimes substituted for “AC Adapter.”

AC Adapter (Transformer) Battery Charger Safety

- Connection of the transformer to the wall outlet should be performed only by an adult or child 8+ years of age.
- The transformer is not intended to be used as a toy, and the use of the transformer shall be under the full supervision of parents.
- As with all electrical products, precautions should be observed during handling and use to prevent electrical shock.
- The AC Adapter may become warm during normal use. Always allow adequate ventilation and use care when handling the power adapter.
- Do not connect or disconnect with wet hands.
- The transformer should be periodically examined for conditions that may result in the risk of fire, electrical shock or injury to persons, such as damage to the cord, plug, blades, housing or other parts, and in the event of such conditions, the transformer must not be used until the damage is repaired. The cord of this transformer cannot be replaced; if the cord is damaged, dispose of the transformer in accordance with your local electrical product recycling regulations.



• **Unplug the AC Adapter (transformer) if any of the following conditions exist:**

- The power cord or plug, or the USB cord has become frayed or damaged.
 - The power adapter is exposed to rain, liquid, or excessive moisture.
 - The power adapter enclosure has become damaged.
 - You suspect the power adapter needs service or repair.
- To clean the transformer, disconnect it from the wall and clean with a slightly damp cloth. Do not immerse in water or use soap or other chemicals. Allow to dry before reusing. Do not connect to the AC outlet if wet or damaged.
- For Europe - The toy must be used with a transformer for toys.

USB Cable.

The USB cable provided with this product complies with FCC and other regulatory Emission limits. Using any other cable may exceed FCC and other regulatory emissions limits.

The USB cable is not a toy. Disconnect the toy from the USB connection before cleaning. USB connectors and cable used with the product must be regularly examined for damage to the cord, plug and other parts and, in the event of such damage, the cable must not be used until the damage has been repaired.

AC Adapter Electrical Ratings:

Input: - 120VAC, 60Hz (for US); - 230VAC, 50Hz (for UK or EU); - 240VAC, 50Hz (for AS/NZL)

Output: --- DC5V, 1.5A, 7.5VA or --- DC5V, 1A, 5VA

This product is not intended for children under 3 years old.

Informations importantes de sécurité :

Lisez les instructions de sécurité importantes avant d'utiliser le système LeapStart® Go. Si ces précautions ne sont pas respectées, cela pourrait provoquer un incendie, un choc électrique, d'autres blessures ou endommager le système LeapStart® Go ou d'autres biens.



ATTENTION : Ce produit ne convient pas aux enfants de 3 ans. Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.



ATTENTION : Les cordes sont un risque d'étranglement. Tenir hors de portée des enfants de moins de 3 ans. Les enfants qui tirent sur le cordon risquent de provoquer la chute des équipements auxquels l'appareil est connecté, ainsi que des dommages matériels, des blessures graves ou la mort. Surveillance par un adulte requise pendant le jeu.



PROTÉGEZ VOTRE OÛIE : Une exposition durable à des sonorités trop fortes peut entraîner une perte définitive de l'ouïe. Lorsque vous utilisez le casque ou les écouteurs bouton, il est conseillé de baisser le volume et réduire le temps d'écoute. Réglez le son lorsque vous êtes dans un endroit calme et baissez-le si vous n'entendez pas les personnes qui parlent autour de vous. Limitez le temps d'écoute à 90 minutes, puis accordez-vous un moment de tranquillité. Plus le volume est élevé, plus il y a de chances que votre ouïe soit rapidement touchée. En cas de bourdonnement dans les oreilles ou si vous entendez des voix sourdes, arrêtez immédiatement d'écouter ce produit et faites contrôler votre ouïe dans les plus brefs délais.



Accessoires :

Lisez les instructions pour les accessoires ou tout autre produit avant de les utiliser avec le LeapStart® Go. LeapFrog n'est pas responsable pour les accessoires vendus par d'autres fabricants et leurs standards de sécurité.

Remplacement des piles



ATTENTION : La pile rechargeable lithium ne peut être retirée de ce produit. Pour votre sécurité, n'essayez jamais de retirer la pile. Si vous avez des problèmes concernant la pile ou la batterie de votre produit, veuillez contacter le service client LeapFrog. Les coordonnées sont disponibles à leapfrog.com/support

Recharger les piles

Le lecteur LeapStart® Go est équipé d'une pile lithium-polymère. Il doit être connecté à un ordinateur avec un câble USB pour plusieurs heures avant d'être utilisé. L'indicateur LED du niveau de pile est situé près du connecteur USB au dos du produit. Quand la pile est en train de charger, l'indicateur est jaune et produit est chargé, l'indicateur deviant vert. L'indicateur sera éteint si le produit n'est pas connecté à un câble USB et ne charger pas.

Informations et sécurité de sécurité concernant la recharge des piles



ATTENTION : L'adaptateur et le cordon USB peuvent constituer un risque d'étranglement. Ils ne doivent pas être utilisés par les enfants de moins de 3 ans.



ATTENTION : Ne convient pas aux enfants de moins de 3 ans. Une utilisation inappropriée du transformateur (adaptateur) peut causer un risque d'électrocution.



ATTENTION : La pile ne doit être chargée que par un adulte ou endanta de plus de 8 ans sous la supervision d'un parent exclusivement.

Adaptateur AC - Option pour recharger le produit

Pour recharger votre pile rapidement, un adaptateur AC optionnel est disponible via LeapFrog. Le produit est un adaptateur AC équipé d'une prise USB spécifiquement adaptée aux produits LeapFrog. Si le chargeur de est utilisé, les instructions et conditions de sécurité suivantes doivent être appliquées. Notez que le mot transformateur est parfois remplacé par le terme adaptateur AC.

Sécurité concernant la recharge avec l'adaptateur AC

Utilisez uniquement l'adaptateur AC recommandé (transformateur) pour recharger la pile. Ce produit est un adaptateur AC personnalisé équipé d'une prise USB développé exclusivement pour recharger les produits LeapFrog. Recharger le produit via un ordinateur prend plus de temps et parfois peut ne pas fonctionner.

- L'adaptateur doit être branché à la prise murale par un adulte ou un enfant de plus de 8 ans uniquement.
- Ce transformateur n'est pas un jouet, et son utilisation doit être faite uniquement sous la présence d'un adulte.
- Comme avec tous produits électriques, des précautions doivent être utilisées pour éviter des électrocutions.
- Le transformateur peut chauffer pendant son utilisation normale. Vérifiez que la ventilation est adaptée et faites attention quand vous utilisez ce produit.
- Ne branchez ou débranchez pas le produit avec des mains mouillées.
- Le transformateur doit être vérifié régulièrement (les lames, la prise, la prise murale et tout autre pièce) car si celui-ci est endommagé, il peut être un risque d'incendie, d'électrocution ou autres blessures. Si celui-ci est abimé, arrêtez de l'utiliser immédiatement et attendez que celui-ci soit réparé avant de le réutiliser. Le câble de cet adaptateur ne peut pas être remplacé, si le câble est abimé, jetez le transformateur en suivant les règles de recyclage de votre région.

• **Débranchez l'adaptateur si :**

- Le câble, la prise ou le câble USB est abimé ou cassé.
- Le câble, la prise ou le câble USB sont exposés à la pluie, à du liquide ou une humidité excessive.
- La boîte de protection de l'adaptateur est abimée.
- Si vous pensez que l'adaptateur a besoin d'être réparé.



ATTENTION : Ne recharger pas des piles non-rechargeables.

Câble USB.

Le câble USB fourni avec ce produit respecte les normes de la FCC (Commission fédérale des communications) ainsi que les autres limites réglementaires en matière d'émission. L'utilisation d'un autre câble peut dépasser les limites de la FCC (Commission fédérale américaine des communications) et autres limites réglementaires en matière d'émission. Le câble USB n'est pas un jouet. Déconnectez le jouet du port USB avant d'entamer toute opération de nettoyage.

Ce produit ne convient pas aux enfants de 3 ans.

FCC Compliance Statement.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

The FCC Compliance Statement is accessible in the LeapStart® Go system. It is shown on the LCD screen by following the steps:

1. Turn on the LeapStart® Go system.
2. Use the tip of the stylus to touch the **FC** icon in the page below of the Sampler Book.

How It Works

LeapStart® Go works with all LeapStart® books

Invisible dots printed on every page help the stylus read the page. When the stylus touches the pages, LeapStart® Go plays voice, sounds and animation.



Download to Play

When you buy a new book, you have to download the book onto your device before your LeapStart® Go can recognize it. (The sampler book does not have to be downloaded.)

1

Connect LeapStart® Go to your computer with the included USB cable.

2

Download the book from the LeapFrog® Connect application.



Supplier's Declaration of Conformity	
Trade Name:	LeapFrog®
Model:	6059
Product name:	LeapStart® Go
Responsible Party:	LeapFrog Enterprises, Inc.
Address:	6401 Hollis Street, Suite 100, Emeryville, CA 94608
Website:	leapfrog.com

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution : Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

Environmental phenomena. ElectroStatic discharge may cause the LeapStart® Go to malfunction. In cases where the unit is malfunctioning due to ElectroStatic discharge, reset the unit by pressing and holding the Power button for 10 seconds. Or, if the static electricity malfunction occurred during the downloading process, disconnect the USB cable, then reset the unit as described above. Then reconnect the USB cable and restart the download process.

Impact de l'environnement. Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

Recycle. Find out how to recycle this product at leapfrog.com/recycle or call (800) 701-5327.

CUSTOMER SUPPORT

U.S. leapfrog.com/support
U.K. leapfrog.co.uk/support

Canada leapfrog.ca/support
Australia leapfrog.com.au/support

WARRANTY INFORMATION

Limited warranty. Visit our website at leapfrog.com for full details of the warranty provided in your country.

Garantie limitée. Veuillez consulter notre site Web à l'adresse leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays.

TM & © 2019 LeapFrog Enterprises, Inc. All rights reserved.

LeapStart®

For children ages 4-8 years. Convient aux enfants rises, Inc. 4-8 ans.



CLASS 1
LED PRODUCT



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

***Read our complete warranty policy
online at leapfrog.com/warranty.***

LeapFrog Enterprises, Inc.,
a subsidiary of VTech Holdings Limited.
TM & © 2019 LeapFrog Enterprises, Inc.
All rights reserved.
Printed in China.
91-003700-003 