

## QUICK START GUIDE

# ROKR Z1

RUGGED PORTABLE BLUETOOTH® SPEAKERS


**ZIZO** BUILT FOR ADVENTURE

## PACKAGE CONTENTS

**IN THE BOX**

|                       |                      |
|-----------------------|----------------------|
| 1x ROKR Z1 Speaker    | 1x Quick Start Guide |
| 1x USB Charging Cable | 1x Warranty Card     |
| 1x 3.5mm Audio Cable  | 1x Microphone        |
| 1x Remote Control     |                      |

## LAYOUT

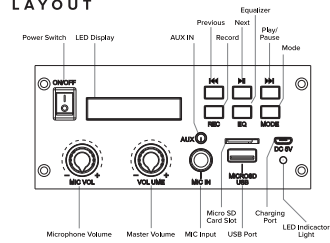

## REMOTE CONTROL

- POWER:** Short press for standby function. After entering the power saving standby mode, short press again to turn back to the current mode.
- ▶▶**
- ⏮**
- ⏪**
- Mode**
- ⏩** Fast backward & fast forward songs.
- Number keys 0-9:** In reading USB/Micro SD card status, if you want to listen the 12th song you can enter 1 and 2, wait for two seconds, and it will automatically jump to play the 12th song. Pay attention to the input device when entering the number. If number entered is more than the total number of songs, the number is invalid. If want to listen to 107.5MHz in FM mode, just directly enter 107.5.
- EQ:** The same function as the same key on the product.
- RPT:** In reading USB/Micro SD card status, short press is for switching the two cycle mode (PLAY ALL, PLAY ONE)
- M:** In Bluetooth / USB / Micro SD card / FM / mode / AUX mode / short press to mute.



**ZIZO**

JOIN THE ADVENTURE

ZIZOWIRELESS.COM @ZIZOWIRELESS

## GETTING STARTED

Before using your speakers the first time, fully charge the speaker.

## CHARGING

- Plug the charging cable into the speakers DC 5V charging jack with the included USB charging cable.
- Connect to any standard USB power adapter.


When the charging cable is inserted into the USB charger the LED Indicator Light will light up red. After charging is complete the red light turns off.

## POWER ON

Flip the switch to the ON position.

## BLUETOOTH® PAIRING

- Once powered on, press **Mode** to select Bluetooth®.
- Navigate to your device's Bluetooth® settings.
- Select "ZIZO ROKR Z1" from the available device list.

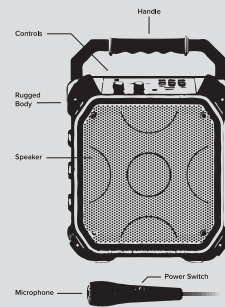

## ADDITIONAL FEATURES

### Drop Resistant Design

**Equalizer:** Short press EQ button to switch among 6 modes: NORMAL / POP / ROCK / JAZZ / CLASSIC / BASS.

**AUX Port:** Connect to audio from a smartphone, tablet, media player, laptop, PC, or other audio source with a 3.5 mm output. Plug one end of the auxiliary audio cable into the speaker and the other end into the audio device.

**Built-in MP3 Digital Decoder:** Play MP3 files straight from a Micro SD Card or USB flash drive.

**USB Port:** Supports USB flash drives and plays MP3 and WAV formats (FAT32).

**Micro SD Card Slot:** Supports up to 32GB USB Micro SD card and plays MP3 and WAV formats (FAT32).

**Headphone Input:** 3.5mm interface

**Charge Protection:** Equipped with charge and discharge protection for a safe music experience.

**Digital LED:** Displays the current Mode and status details.

**Handle:** Designed for maximum portability.

## TECHNICAL SPECIFICATIONS

### SPECIFICATIONS

Bluetooth Wireless  
Output Power: 15 W  
Speaker Size: 6.5 in  
SNR: ≥ 90 dB  
Playback Time: Up to 10 Hours  
Size: 9 x 6.3 x 12.8 in  
Transmission Distance: Up to 35 ft

### IMPORTANT SAFEGUARDS:

- Do not allow water to spill onto the surface or into the product.
- Children should be supervised while operating this device.
- If the product surface is damaged or if there is a mechanical or electrical malfunction, do not use the unit. Contact ZIZO customer support.
- Do not place the unit in water.
- Do not place the product in direct heat. This unit is to be placed in a dry and ventilated place.
- Do not place heavy objects on the unit.



## USING YOUR DEVICE

### MODE

Press **Mode** to cycle through Bluetooth®, Micro SD Card, USB, AUX Line in, and FM function. Long press to switch LED On/Off.

### MUSIC PLAY/ PAUSE

Press **▶▶** to play music. Press **⏮** again to pause music.

Press **⏪** to play the previous song, **⏩** to play the next.

Turn the **VOL** knob clockwise to increase the volume, lower the volume by turning counterclockwise.

### FM RADIO

Press the **Mode** button to switch to FM mode. Press and hold **▶▶** button for a few seconds then release it and press it again to start the auto search. The blue indicator light will flash once the search mode has completed. Press Next to scroll through the stations. Press the **Mode** button again to exit FM mode. Press the **⏪** to play the previous radio station, **⏩** to play the next. Automatically stores up to 30 radio stations.

## WARRANTY INFORMATION

At ZIZO, we are 100% committed to your satisfaction. We stand behind our products and offer a 1 year manufacturer warranty against defects in materials or workmanship of your new ZIZO speakers.

Should you find your item to be defective, simply visit [zizowireless.com/warranty](http://zizowireless.com/warranty) to submit a brief Warranty Service Request form. Warranty applies to products purchased from ZIZO Authorized resellers. International product registration is not available at this time. U.S. Customers Only.

## CONTACT US

### ZIZO CUSTOMER SERVICE

**EMAIL**  
[info@zizowireless.com](mailto:info@zizowireless.com)

**TELEPHONE**  
+1 (909) 444-7992 (English)

**WEBSITE**  
[zizowireless.com/support](http://zizowireless.com/support)

@ZIZOWIRELESS | | ZIZOWIRELESS.COM

© 2020 ZIZO. All Rights Reserved. The Bluetooth® word mark and logo are registered trademarks owned by Bluetooth SIG, Inc. and use of such marks by ZIZO. Trading In: is under Bose. Other trademarks and trade names are those of their respective owners.  
\*Images on package used for illustration purposes. Actual product may vary due to continuous refinements.

## RECORDING MICROPHONE FUNCTION

- Insert USB flash drive or Micro SD into the corresponding slot
- To begin recording: Press **REC**, the display will show time lapsed
- To end recording: Press **REC** again. The speaker will automatically playback the recorded audio file.

**Delete recording:** Press and hold **REC**.

**NOTE:** Records audio files in MP3 audio format. Maximum recording time depends on storage device capacity. DO NOT put the microphone too close to the product, as this may cause feedback noises.

**FCC Caution:** Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**IMPORTANT NOTE:** Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
—Reorient or relocate the receiving antenna.  
—Increase the separation between the equipment and receiver.  
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.  
FCC Radiation Exposure Statement:  
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

**BUILT FOR ADVENTURE**

## GUIDE DE DÉMARRAGE RAPIDE

# ROKR Z1


PORTABLE ROBUSTE BLUETOOTH® HAUT-PARLEUR



## CONTENU DU COLIS

**DANS LA BOITE** 1x ROKR Z1 Haut-parleurs 1x Guide de Démarrage Rapide  
1x USB-C Câble de Charge 1x Carte de Garantie  
1 x 3.5mm Câble Audio 1x Microphone  
1x Télécommande

## LAYOUT

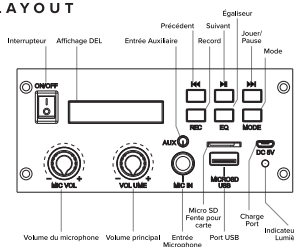

## TÉLÉCOMMANDE

**1. PUISSANCE:** Appui court pour la fonction de veille. Après être passé en mode veille, appuyez brièvement de nouveau sur pour revenir au mode actuel.

**2.**

**3.**

**4.**

**5. Mode**

**6.**  Chansons rapides en arrière et en avance rapide.

**7. Touches numériques 0-9:** Lors de la lecture de l'état de la carte USB / Micro SD, si vous souhaitez écouter la 12ème chanson, vous pouvez entrer 1 et 2, attendez deux secondes et la lecture de la 12ème chanson sera automatiquement effectuée. Faites attention au périphérique d'entrée lors de la saisie du numéro. Si le nombre entré est supérieur au nombre total de chansons, le nombre est invalide. Si vous voulez écouter 107.5MHz en mode FM, entrez directement 107.5.

**8. EQ:** La même fonction que la même clé sur le produit.

**9. RPT:** Lors de la lecture de l'état de la carte USB / Micro SD, appuyez brièvement sur cette touche pour passer du mode deux cycles (PLAY ALL, PLAY ONE).

**10.**  En Bluetooth / USB / carte Micro SD / FM / mode / mode AUX / appui bref pour couper le son.



## CARACTÉRISTIQUES SUPPLÉMENTAIRES

### Conception Résistante Aux Chutes

**Egaliseur:** Appuyez brièvement sur le bouton EQ pour basculer entre les 6 modes: NORMAL / POP / ROCK / JAZZ / CLASSIQUE / BASSE.

**Port AUX:** Connectez-vous à l'audio à partir d'un smartphone, d'une tablette, d'un lecteur multimédia, d'un ordinateur portable, d'un ordinateur ou de toute autre source audio avec une sortie de 3,5 mm. Branchez une extrémité du câble audio auxiliaire sur le haut-parleur et l'autre extrémité sur le périphérique audio.

**Décodeur Numérique MP3 Intégré:** Lisez des fichiers MP3 directement à partir d'une carte Micro SD ou d'un lecteur flash USB.

**Port USB:** Prend en charge clés USB et lit les formats MP3 et WAV (FAT32).

**Port De Carte Micro SD:** Prend en charge la carte Micro SD et lit les formats MP3 et WAV (FAT32).

**Entrée Casque:** Interface 3.5mm

**Protection De Charge:** Equipé d'une protection de charge et de décharge pour une expérience musicale sûre.

**LED Numérique:** Affiche les détails du mode et de l'état.

**Sangle Et Poignée:** Conçu pour une portabilité maximale.

## COMMENCER

Avant d'utiliser vos haut-parleurs pour la première fois, chargez-les complètement.

## CHARGE

1. Branchez le câble de charge sur la prise de charge DC 5V des haut-parleurs à l'aide du câble de charge USB fourni.
2. Connectez-vous à n'importe quel adaptateur secteur USB standard.

Lorsque le câble de charge est inséré dans le chargeur USB, le voyant LED s'allume en rouge. Une fois le chargement terminé, le voyant rouge s'éteint.

## ALLUMER

Basculez l'interrupteur en position ON.

## Bluetooth® Appariement

1. Une fois sous tension, appuyez sur **Mode** pour sélectionner Bluetooth®.
2. Accédez aux paramètres Bluetooth® de votre appareil.
3. Sélectionnez «ZIZO ROKR Z1» dans la liste des périphériques disponibles.

## SPÉCIFICATIONS TECHNIQUES

### CARACTÉRISTIQUES

Modèle: ROKR Z1

Bluetooth sans fil V5.0

Puissance de sortie: 15 W

Taille du haut-parleur: 16.61 cm

Capacité de la batterie: 2400 mAh batterie rechargeable

SNR: > 80 dB


Temps de lecture: Jusqu'à 10 heures

Taille: 33 x 22 x 17,5 cm

Distance de transmission: Jusqu'à 10 m

### GARANTIES IMPORTANTES:

1. Ne laissez pas l'eau se répandre sur la surface ou dans le produit.
2. Les enfants doivent être surveillés lors de l'utilisation de cet appareil.
3. Si la surface du produit est endommagée ou s'il existe un problème mécanique ou électrique, dysfonctionnement, n'utilisez pas l'appareil. Contactez le support client ZIZO.
4. Ne placez pas l'appareil dans l'eau.
5. Ne placez pas le produit à la chaleur directe. Cette unité doit être placée dans un endroit sec et endroit ventilé.
6. Ne placez pas d'objets lourds sur l'appareil.



## UTILISER VOTRE APPAREIL

### MODE

Appuyez sur **Mode** pour faire défiler Bluetooth®, Carte Micro SD, USB, Entrée ligne AUX et FM. Appuyez longuement pour allumer / éteindre la DEL.

### MUSIQUE JOUER / PAUSE

Appuyez sur  pour jouer de la musique. Appuyez à nouveau sur  pour mettre la musique en pause.

Appuyez sur  pour lire la chanson précédente,  pour lire la suivante.

Tournez le bouton **VOL** dans le sens des aiguilles d'une montre pour augmenter le volume; baissez le volume en tournant dans le sens contraire des aiguilles d'une montre.

### RADIO MF

Appuyez sur **Mode** pour passer en mode MF. Appuyez et maintenez  pendant quelques secondes, puis appuyez à nouveau pour lancer la recherche automatique. Le voyant bleu clignotera une fois le mode de recherche terminé. Appuyez sur  pour faire défiler les stations. Appuyez à nouveau sur **Mode** pour quitter le mode FM. Appuyez sur  pour écouter la station de radio précédente,  pour écouter la suivante. Stocke automatiquement jusqu'à 30 stations de radio.

## INFORMATIONS DE GARANTIE

Chez ZIZO, nous nous engageons à 100% pour votre satisfaction. Nous soutenons nos produits et offrons une garantie du fabricant d'un an contre les défauts de matériaux ou de fabrication de votre nouvelle enceinte ZIZO.

Si vous trouvez que votre article est défectueux, visitez simplement [zizowireless.com/warranty](http://zizowireless.com/warranty) pour envoyer un bref formulaire de demande de service de garantie. La garantie s'applique aux produits achetés auprès de revendeurs ZIZO agréés. L'enregistrement international du produit n'est pas disponible pour le moment. Clients américains uniquement.

## CONTACT US

### ZIZO CUSTOMER SERVICE

#### EMAIL

[info@zizowireless.com](mailto:info@zizowireless.com)

#### WEBSITE

[zizowireless.com/support](http://zizowireless.com/support)

@ZIZOWIRELESS | | ZIZOWIRELESS.COM

© 2020 ZIZO. Tous les droits sont réservés. La marque et le logo Bluetooth® sont des marques déposées appartenant à Bluetooth SIG, Inc. et sont utilisés de nos marques par DMI Tradings Inc. est soumise. Les autres marques et noms commerciaux appartenent à leurs propriétaires respectifs.

\*Images sur l'emballage et dans le manuel. Le produit réel peut varier en raison des améliorations continues.

## FONCTION DE MICROPHONE D'ENREGISTREMENT

1. Insérez une clé USB ou Micro SD dans le logement correspondant.
2. **Pour commencer l'enregistrement:** Appuyez sur **REC**, l'affichage indiquera le temps écoulé.
3. **Pour terminer l'enregistrement:** Appuyez à nouveau sur **REC**. Le haut-parleur lira automatiquement le fichier audio enregistré.

**Supprimer un enregistrement:** Maintenez enfoncée la touche **REC**.

### REMARQUE:

Enregistre des fichiers audio au format audio MP3. Pendant l'enregistrement, tournez le bouton **ECHO** au minimum. La durée maximale d'enregistrement dépend de la capacité du périphérique de stockage. NE PLACEZ PAS le microphone trop près du produit, car cela pourrait causer des bruits de retour.

**CONSTRUIT  
POUR AVENTURE**

REJOIGNEZ L'AVEVENTURE

ZIZOWIRELESS.COM @ZIZOWIRELESS