

GMTL2 LITHIUM BEARD/ MUSTACHE TRIMMER

Facial Hair Blade



Multi-Use Trimmer

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at:
www.conair.com/registration

©2015 Conair Corp.

Service Center

Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

15PG017305

IB-14017

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

Operating Instructions

- Remove the battery compartment cover by pushing in and down toward the bottom of the trimmer.
- Align the two lithium AAA batteries with the positive and negative positions indicated inside the battery compartment. Being careful not to bend the clips, insert the negative end of each battery first so it will slip easily into position.
- Return the battery cover to its original position by pushing it in and up until you hear a small click as it locks into place.
- To use your trimmer, push ON/OFF switch upward to ON position.
- After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from equipment that is not to be used for an extended period of time.
- Remove used batteries promptly.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium or nickel metal hydride) batteries.
- Never dispose of batteries in fire, except under conditions of controlled incineration. Failure to observe this precaution may result in an explosion. Never attempt to recharge primary battery as this may cause leakage, fire, or explosion.

USER MAINTENANCE INSTRUCTIONS

TAKING CARE OF YOUR TRIMMER

OILING THE BLADES

About once a month you should oil the trimmer blades. It is best to do this over a piece of newspaper. Turn the trimmer on and hold it so that the blades are pointed downward. Spread a few drops of oil across the blades, then turn the trimmer off and wipe away the excess oil with a soft cloth.

Be careful not to use too much oil and don't oil your trimmer more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.) After oiling the blades, return the trimmer to storage. **KEEP OIL OUT OF REACH OF CHILDREN.**

BLADE CARE

Because the trimmer blades are precision-made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take a cleaning brush and brush away any loose hair that has collected in the blades. Then store the trimmer to protect the blades until the next use.

Be especially careful when changing or adjusting the blades. When you have your trimmer serviced, be sure that both blades are sharpened or replaced at the same time.

To promote the long life of the trimmer, use it only for the purpose intended by the manufacturer – to trim your beard and mustache.

GROWING A BEARD AND MUSTACHE

There are three key factors that will determine which beard or mustache style is best for you:

- The shape and dimensions of your face.
- The natural growth of your beard/mustache.
- The thickness of your beard/mustache. If you are unsure about the type of beard or mustache that would most suit your face, speak with a professional hairstylist and ask for an opinion on what style would be best. Once your beard or mustache has been styled, it is essential that you maintain its appearance. To do this, use your trimmer to trim your beard/mustache weekly.

For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trimmer from removing more hair than desired.

TYPES OF BEARDS/MUSTACHES



GETTING STARTED

OUTLINING YOUR BEARD

- It is always best to begin with a clean, slightly damp beard.
- After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.
- Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.



BLD-161



6POS-GMTL2



3JAW-GMTL2



NOSE/EAR-GMTL2

CUT HERE

TRIMMER REPLACEMENT PARTS & ACCESSORIES ORDER FORM

Pricing in effect through June 1, 2018. Orders postmarked after this date will be accepted, and the customer will be notified if pricing has changed.

ITEM	PART #	PRICE	QUANTITY	AMOUNT
Trimmer Attachment Blade	BLD-161	\$6.50		
6-Position Comb Attachment	6POS-GMTL2	\$2.25		
Nose/Ear Trimmer	NOSE/EAR-GMTL2	\$5.50		
3 Jawline Combs	3JAW-GMTL2	\$5.50		

Subtotal	
Sales Tax*	
TOTAL	

Enclose check or money order made payable to Conair. (We cannot accept cash, stamps or C.O.D. orders.) *CT, IL, AZ, and PA residents should add applicable state sales tax. Minimum order of \$10.00 or a \$2.00 handling charge will be added to order.

All prices include handling and return postage. Prices are subject to change without notice. Prices are valid only for shipments within the continental United States. Please allow 4-6 weeks for delivery.

To avoid delays, please print clearly.

We must have a street address, as UPS cannot deliver to a P.O. box.

NAME _____

ADDRESS _____ APT. _____

CITY _____ STATE _____ ZIP _____

TELEPHONE () _____ (We call only if we have a question about your order.)

For information on other Conair® haircut kit parts call: 1-800-3-CONAIR.

Mail to:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

LITHIUM BEARD & MUSTACHE

TRIMMER • BATTERY OPERATED



Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

CONAIR®

Model GMTL2

TRIMMING YOUR MUSTACHE

- For best results, start with a clean, slightly damp mustache.
- Comb through your mustache in the direction it grows.
- Place the 6-position comb over the facial hair blade and snap it into position. It is a good idea to start with the longest trim setting adjustment. (You can always go back and cut your mustache more closely with a shorter setting.)



ALWAYS TRIM YOUR MUSTACHE FROM THE TOP DOWN

- After your mustache has been trimmed to the desired length, remove the 6-position comb and, using the blades only, define the outline of the bottom of your mustache.




TRIMMING YOUR BEARD

- The trimmer includes a 6-position comb for use with the hair trimming blade (4-18mm) which provides lengths of 4/25" (shortest) to 7/10" (longest).
- To use the 6-position comb, slide the unit over the trimmer blade and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)
- Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. (Never attempt to trim against the natural growth of your beard because the hair will be cut too short.)
- If you decide you want a closer trim, you can now adjust the 6-position comb attachment to a shorter setting (such as 4/25" or 6/25") and go over your beard again until you achieve the desired length.



BLENDING THE JAWLINE


- The three jawline comb attachments will help you to achieve a neat, finished trim under your chin. To use one of the attachment combs, press it down over the trimmer blades until it clicks into position.
- Hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.
- After your beard is blended, turn off the trimmer and remove the attachment comb by gently pulling up on tab.

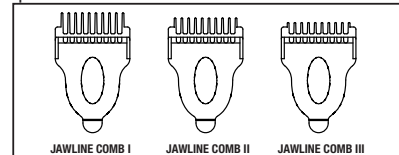

NOSE & EAR TRIMMER

For easy, safe grooming of long nose and ear hairs, attach the nose/ear trimmer and hold unit to areas that need trimming. Avoid inserting the trimmer more than 1/4" to ensure safe trimming.

- Make sure the trimmer On/Off switch is in the OFF position.
- Detach normal trimming blade (see Replacement (Removal) of Blade Set instructions).
- Installing the nose & ear trimmer:
 - Insert the pin of the trimmer body into the hexagonal hole of the trimmer head as shown in Fig. 1
 - Press and snap the trimmer head onto the body as shown in Fig. 2
- Detaching the nose & ear trimmer:
 - Hold the trimmer as shown in Fig. 3 with the thumb pressing the top front part of the trimmer head and snap it off.



ON/OFF SWITCH

To operate, simply slide switch toward blade. To stop, slide away from blade.

CARE OF YOUR TRIMMER REPLACEMENT (REMOVAL) OF BLADE SET

To remove the blade set from your trimmer, make sure the trimmer is in the OFF position. Remove the blade set by placing thumb against the smaller cutter and pushing forward, releasing the cutter assembly from the trimmer housing.



CORTADORA DE BARBA/BIGOTE CON PILAS DE LITIO GMTL2



GARANTÍA LIMITADA DE DOS AÑOS (VÁLIDA EN LOS EE.UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US\$3.00 por gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Para registrar su producto, visítenos en: www.conair.com/registration

©2015 Conair Corp.

Centro de servicio

Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

15PG017305

IB-14017



BLD-161



6POS-GMTL2



3JAW-GMTL2



NOSE/EAR-GMTL2

CONAIR
AVIL

FORMULARIO DE PEDIDO – PIEZAS DE REPUESTO Y ACCESORIOS

Precios válidos hasta el 1ero de junio de 2018. Aceptaremos los pedidos enviados después de esta fecha y le informaremos de cualquier cambio de precio.

DESCRIPCIÓN	MODELO	PRECIO	CANTIDAD	TOTAL
Cuchilla para barba/bigote	BLD-161	\$6.50		
Guía ajustable con 6 posiciones	6POS-GMTL2	\$2.25		
Recortador para nariz/orejas	NOSE/EAR-GMTL2	\$5.50		
3 guías para la quijada	3JAW-189	\$5.50		

Subtotal	
*Impuesto a la venta	
TOTAL	

Favor de incluir un cheque o giro postal a nombre de Conair. Sentimos no poder aceptar dinero en efectivo, estampillas, ni pedidos contra reembolso. Los residentes de CT, IL, AZ y PA deben sumar al subtotal el impuesto estatal a las ventas. Se requiere un pedido mínimo de \$10.00; de lo contrario se sumará \$2.00 al pedido por gastos administrativos.

Los precios incluyen gastos de manejo y envío. Los precios están sujetos a cambio sin previo aviso. Precios válidos únicamente para envíos en la parte continental de los EE.UU. La entrega demora entre 4 y 6 semanas.

Enviar a:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

Para evitar demoras, por favor escriba claramente.

Favor de incluir su dirección completa; UPS no puede hacer entregas a casillas postales.

NOMBRE _____

DIRECCIÓN _____

CIUDAD _____ ESTADO _____ CÓDIGO POSTAL _____

TELÉFONO () _____
(en caso de pregunta)

Para información sobre otras piezas de repuesto y accesorios, llame al: 1-800-3-CONAIR.

GUARDE ESTAS INSTRUCCIONES

PARA USO DOMÉSTICO SOLAMENTE

Instrucciones de operación

- Deslice la cubierta del compartimiento de la(s) pila(s) hacia abajo para abrirlo.
- Instale dos pilas AAA de litio, respetando los signos de polaridad. Introduzca el polo negativo primero, teniendo cuidado de no doblar las patas de contacto.
- Cierre la cubierta del compartimiento de la(s) pila(s), empujando hasta que haga clic.
- Para encender el aparato, deslice el interruptor hacia arriba (ON).
- Para apagar el aparato, deslice el interruptor hacia abajo (OFF).
- No utilice pilas que no sean del tamaño o de la potencia indicada para uso con este aparato.
- Cambie todas las pilas al mismo tiempo.
- Limpie los contactos del aparato y los de la(s) pila(s) antes de instalarla(s).
- Siempre respete los signos de polaridad (+/-) al instalar las pilas.
- Retire las pilas si no va a usar el aparato durante un período de tiempo largo.
- Retire las pilas gastadas lo antes posible.
- No junte pilas nuevas con pilas usadas.
- No junte pilas alcalinas con pilas regulares (carbono-zinc) o pilas/baterías recargables (NiCd o Ni-MH).
- Nunca tire las pilas al fuego, excepto mediante incineración controlada; esto podría causar una explosión. Nunca intente cargar una pila no recargable; esto podría presentar un riesgo de pérdida de electrolito, incendio o explosión.

INSTRUCCIONES DE MANTENIMIENTO

MANTENIMIENTO DE SU CORTADORA LUBRICACIÓN

Lubrique las cuchillas aproximadamente una vez al mes. Para no ensuciar, haga esto encima de un periódico. Sostenga el aparato al revés y enciéndalo. Coloque unas gotas de aceite sobre las cuchillas, apague el aparato y limpie el exceso de aceite con un paño suave.

No use demasiado aceite y no lubrique el aparato más de lo necesario; esto podría dañar el motor. Tampoco intente lubricar las piezas del motor, las cuales están lubricadas de por vida. Después de lubricar las cuchillas, guarde el aparato. **MANTENGA EL ACEITE FUERA DEL ALCANCE DE LOS NIÑOS.**

LIMPIEZA DE LAS CUCHILLAS

Las cuchillas de su aparato fueron diseñadas con precisión para un uso específico, y deben recibir un cuidado muy especial. Limpie las cuchillas después de cada uso con el cepillo de limpieza provisto. Guarde el aparato hasta el próximo uso para proteger las cuchillas.

Tenga cuidado cuando sea necesario cambiar o ajustar las cuchillas. Asegúrese de que ambas cuchillas siempre se cambien o afilen al mismo tiempo.

Para seguir disfrutando de su aparato durante mucho tiempo, utilícelo únicamente con el propósito para el cual fue diseñado: cortar la barba y el bigote.

BARBAS Y BIGOTES

El tipo de barba o de bigote que más conviene a una persona depende de:

- La forma y el tamaño de su rostro.
- La forma del crecimiento natural de su barba o de su bigote.
- El espesor de su barba o de su bigote. Si no está seguro del tipo de barba o bigote que le conviene, pida consejo a un barbero. Después de dar forma a su barba o a su bigote, deberá mantener su aspecto, usando la cortadora una vez por semana.

Para lograr resultados óptimos, humedadza ligeramente su barba antes de recortarla (NO LA MOJE). Esto evitará cortar demasiado pelo.

TIPOS DE BARBAS Y BIGOTES



FUNCIONAMIENTO BÁSICO

EL CONTORNEO

- Se le hará más fácil cortar la barba si está limpia y ligeramente humedecida.
- Peine la barba la dirección del crecimiento natural del pelo antes de empezar a darle forma.
- Dele forma a su barba empezando por debajo de la quijada y subiendo hacia la oreja, en cada lado del rostro. Siga dando forma al área de la mejilla, a las patillas y a la línea de nacimiento del cabello.



CÓMO CORTAR SU BARBA

- Su cortadora incluye una guía ajustable con 6 posiciones para uso con la cuchilla para barba/bigote, y que corta el pelo de 4 mm (4/25 pulgada) a 18 mm (7/10 pulgada).


2. Instale la guía ajustable con 6 posiciones encima de la cuchilla de corte. Le recomendamos que utilice el ajuste más largo para empezar (siempre podrá volver a acortar la barba).

3. Empiece a cortar su barba usando pasadas suaves y regulares, desde las patillas hasta la quijada. Nunca corte en dirección contraria al crecimiento natural del pelo; el pelo resultaría demasiado corto.

4. Si desea un recorte aún más corto, elija una longitud de corte más corta, como 4 mm (4/25 pulgada) o 6 mm (6/25 pulgada), y siga acortando su barba hasta conseguir el resultado deseado.

IGUALAR LA QUIJADA

- Las guías para la quijada le permitirán obtener un recorte limpio y preciso. Instale la guía encima de la cuchilla para barba/bigote.
- Sostenga la cortadora recta y corte el pelo usando pequeños movimientos uniformes.
- Después de terminar, apague el aparato y retire el accesorio.

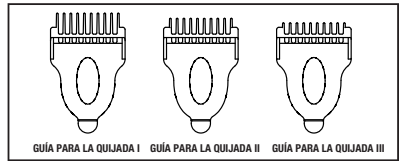

CÓMO CORTAR SU BIGOTE

- Se le hará más fácil cortar su bigote si está limpio y ligeramente humedecido.
- Peine su bigote en dirección del crecimiento natural del pelo.
- Instale la guía ajustable con 6 posiciones sobre la cuchilla de corte. Empiece con la posición más larga (siempre podrá volver a acortar el bigote).


SIEMPRE CORTE SU BIGOTE DE ARRIBA HACIA ABAJO

- Después de terminar, retire la guía y dele forma a la parte inferior de su bigote.

RECORTADOR PARA NARIZ/ OREJAS

Para cortar el pelo largo en la nariz y las orejas de manera segura, instale el recortador sobre el cabezal y acerque la punta giratoria a la nariz o las orejas. Nunca inserte el cabezal más de ¼ pulgada (5 mm) dentro de la nariz.

- Asegúrese de que el aparato esté apagado (OFF).
- Retire el juego de cuchillas (véase la sección "Cambio del juego de cuchillas").
- Para instalar el recortador para nariz/orejas:
 - Haga coincidir el árbol del motor de la cortadora con el orificio hexagonal en el recortador para nariz/orejas (Fig. 1).
 - Presione el recortador para sujetarlo al cabezal (Fig. 2).
- Para retirar el recortador para nariz/orejas:
 - Sostenga el aparato según se indica (Fig. 3) y empuje el recortador hacia arriba.



BOTÓN DE ENCENDIDO/APAGADO

Para encender el aparato, deslice el botón de encendido/apagado hacia las cuchillas. Para apagarlo, deslícelo hacia atrás.

CORTADORA DE BARBA/BIGOTE CON PILAS DE LITIO

INALÁMBRICA • A PILAS



Manual de instrucciones

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

CONAIR

Modelo GMTL2

MANTENIMIENTO DE SU CORTADORA CAMBIO DEL JUEGO DE CUCHILLAS

Para retirar el juego de cuchillas, asegúrese de que el aparato esté apagado. Sostenga el aparato con el botón de encendido/apagado frente su cuerpo y empuje la cuchilla pequeña con el pulgar para desencajar el juego de cuchillas.

