

使用前須知事項

關於安全

- ## 使用與保管

- 清潔

保管條件

- 充電

-
- The diagram illustrates the connection of an AC power adapter. On the left, a device with a multi-pin connector is shown. A cable with a circular DC connector is plugged into the 'DC IN 端子' (DC IN terminal) of the device. This cable is connected to an '交流電轉換器' (AC power adapter). The adapter has an '交流電源線' (AC power cord) attached to it, which is shown with an arrow pointing towards the '至電源插座' (to power outlet).

-
- Diagram illustrating the location of the light bar and charging terminals on the PS4 DualShock 4 controller. The light bar is located on the top edge of the controller. The charging terminals are located on the bottom edge of the controller, near the USB port.
- 光條
 - 充電用端子
 - 充電用端子

請往上拉起控制器，自充電座拔除。

DualSense™ 充電座 / DualSense™ 充电座

Instruction Manual / 使用說明書 / 使用说明书

CFI-ZDS1



EN

Precautions

Safety

- ## Use and handling

- ## Cleaning

Storage conditions

- Do not expose the product to high temperatures, high humidity or direct sunlight during operation, transportation and storage.
- Do not leave the product in a car with the windows closed, particularly in hot weather.
- Do not expose the product to dust, smoke or steam.

-
- Diagram illustrating the connection of an AC power cord to a DC IN connector. The diagram shows a laptop on the left, connected to a DC IN connector. The DC IN connector is connected to an AC adaptor, which is then connected to an AC power cord. The AC power cord is plugged into an electrical outlet on the right.

-
- Diagram illustrating the components of the PS4 DualShock 4 controller:
- Light bar
 - Charging terminals
 - Charging connector

To remove the controller

Lift the controller out of the charging station to remove it.

Charging time

It takes approximately 3 hours to charge the controller when the battery has no remaining charge.

Specifications

Charging Station	input 5.1 V 
AC adaptor	input 100-240 V ~ 0.4 A 50/60 Hz output 5.1 V  2.8 A
External dimensions	Approx. 52 x 62 x 159 mm (w x h x d)
Mass	Approx. 180 g
Operating temperature	5 °C to 35 °C

Design and specifications are subject to change without notice.

使用前须知事项

使用本产品前，请先仔细阅读本说明书以及硬件所对应的说明书，阅读后请妥善保管，以便将来参考之用。

关于安全

- 请使用本产品随附的交流电源转接器与交流电源线。使用其他非指定的交流电源转接器，可能导致火灾，触电或故障。
- 请勿将交流电源线插入变压器或反相器。将交流电源线插入海外旅行者使用的变压器或汽车专用反相器，可能会导致交流电源转接器发热，并造成灼伤或故障。
- 清洁前或者当您打算长时间不使用本产品时，请从电源插座中拔出交流电源线。
- 请将本产品放在儿童拿不到的地方保管。儿童可能会吞下小零件或用连接线缠绕自己，从而造成身体伤害或导致意外发生、机器故障。

使用与保管

- 请勿挥动充电座，交流电源转接器或交流电源线。
- 请勿让液体或小颗粒掉入本产品中。遇此情形时，请停止使用本产品，并立即从电源插座拔除连接线。
- 请勿使用湿手触摸本产品。
- 请勿投掷或掉落本产品，或使其受到强烈的外力撞击。
- 请勿站立在本产品上或在本产品上放置重物。
- 请勿触摸端口或将异物插入到本产品中。
- 请勿让金属物品碰触连接端口部位。
- 切勿分解、改造本产品。
- 请勿将本产品放置于不稳定的场所或放置在地面上。
- 本产品由金属或塑料等材质制成。废弃本产品时，请遵循当地法律正确处理。

清洁

请遵循以下使用说明，以避免产品外壳变形或变色。


- 使用干净软布轻揉擦拭。
- 请勿使用杀虫剂或其他挥发性物质。
- 切勿在产品外壳上长时间放置任何橡胶或乙烯基材质。
- 切勿使用溶剂或其他化学药剂。切勿使用经化学处理的布擦拭。
- 如果端口上有灰尘或异物，请在连接前用干布擦拭。

存储条件


- 在操作、运输和存储期间，请勿将本产品放在高温、湿气极重或受日光直射的地方。
- 炎热天气下请勿将本产品放在窗户密闭的车内。
- 请勿将本产品暴露在灰尘，烟雾或蒸汽中。

充电

- 1 将随附的交流电源线连接到随附的交流电源转接器。然后，将交流电源转接器连接到充电座的DC IN接口。
- 在将交流电源线插入电源插座之前，请先连接好所有线缆。

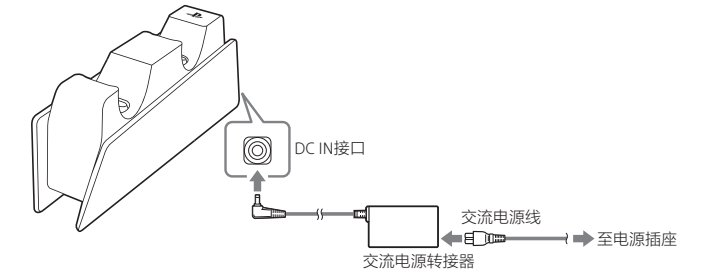

- 2 将无线控制器装置在充电座上。
- 请将控制器的充电接口对准充电座的充电用接口。压下控制器直至发出咔嚓声。当控制器的光条缓慢闪烁橙色，即表示开始充电。控制器充电完成后，光条会熄灭。

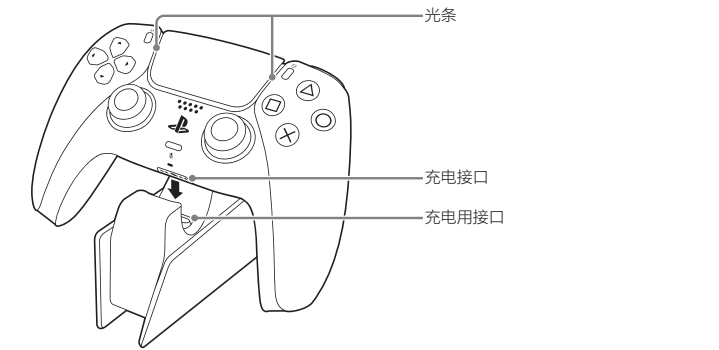

拔除控制器时

请往上拉起控制器，从充电座拔除。

充电时间

电池电力耗尽的状态下，控制器大约需3小时可完成充电。

规格

额定电压/额定输入电流	
• 充电座	输入 5.1 V
• 交流电源转接器	输入 100~240 V ~ 0.4 A 50/60 Hz 输出 5.1 V 2.8 A
外观尺寸	约52 × 62 × 159 mm （宽 × 高 × 深）
重量	约180 g
操作温度	5 ℃ ~ 35 ℃

本公司保留在没有事先通知的情况下，变更设计或规格的权利。

商品名稱：充電座

製造年月：請見產品本體標示

製造號碼：請見產品本體標示

"", "PlayStation" and "DualSense" are registered trademarks or trademarks of Sony Interactive Entertainment Inc.
"SONY" and " " are registered trademarks or trademarks of Sony Corporation.

""、"PlayStation" 和 "DualSense" 為 Sony Interactive Entertainment Inc. 之註冊商標或商標。
"SONY" 和 " " 為 Sony Corporation 之註冊商標或商標。

""、“PlayStation” 和 “DualSense” 为 Sony Interactive Entertainment Inc. 的注册商标或商标。
“SONY” 和 “ ” 为 Sony Corporation 的注册商标或商标。

