
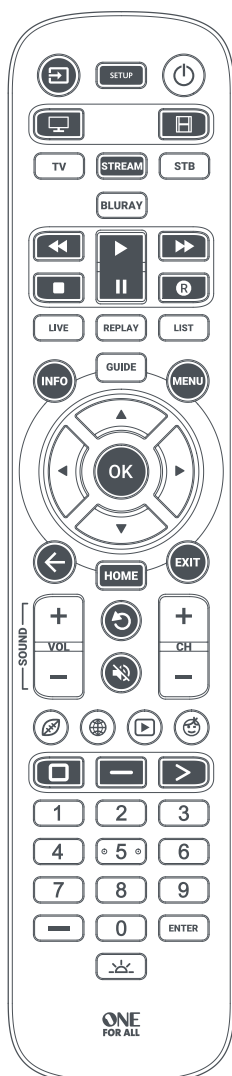
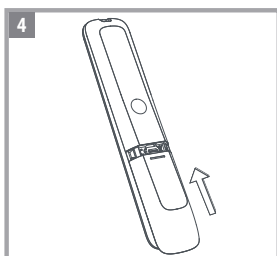
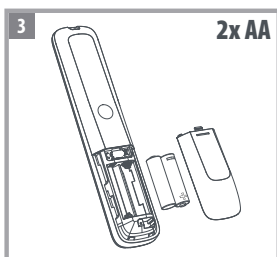
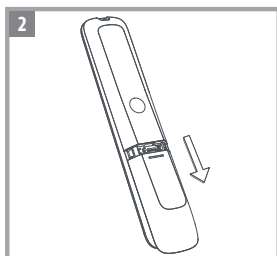


ONE[®]
FOR ALL

Essential 4 Device Universal Remote Control URC3640

ENGLISH 2
FRANÇAIS 15
CODE LIST 28

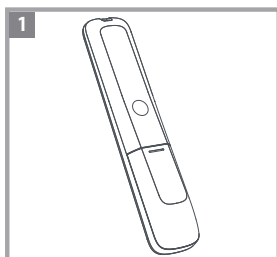

INTRODUCTION





Thank you for purchasing the One For All Essential 4 Universal Remote Control. The remote can be used to control up to 4 Audio Video Devices such as a TV, Set Top Box, Blu-ray Player, Streaming Device and/or Sound Bar and boasts multiple extra features to make the most of your living room experience.

The remote also features a backlight for easy control in a darkened room.

This manual will help you to set up the Essential 4 to control all of your devices and take advantage of its features.

BATTERIES


Your remote requires 2 x AA / LR6 batteries (not Included). Please insert them as shown below. Alkaline batteries are recommended.

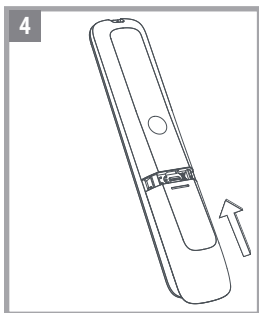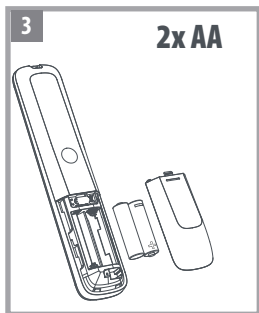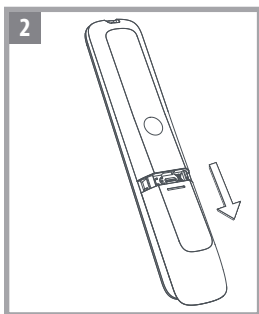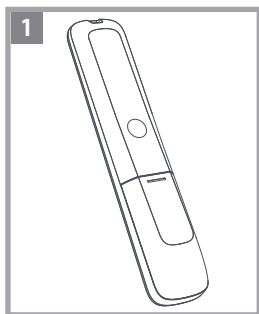

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Use quality Alkaline batteries.



KEY DESCRIPTIONS

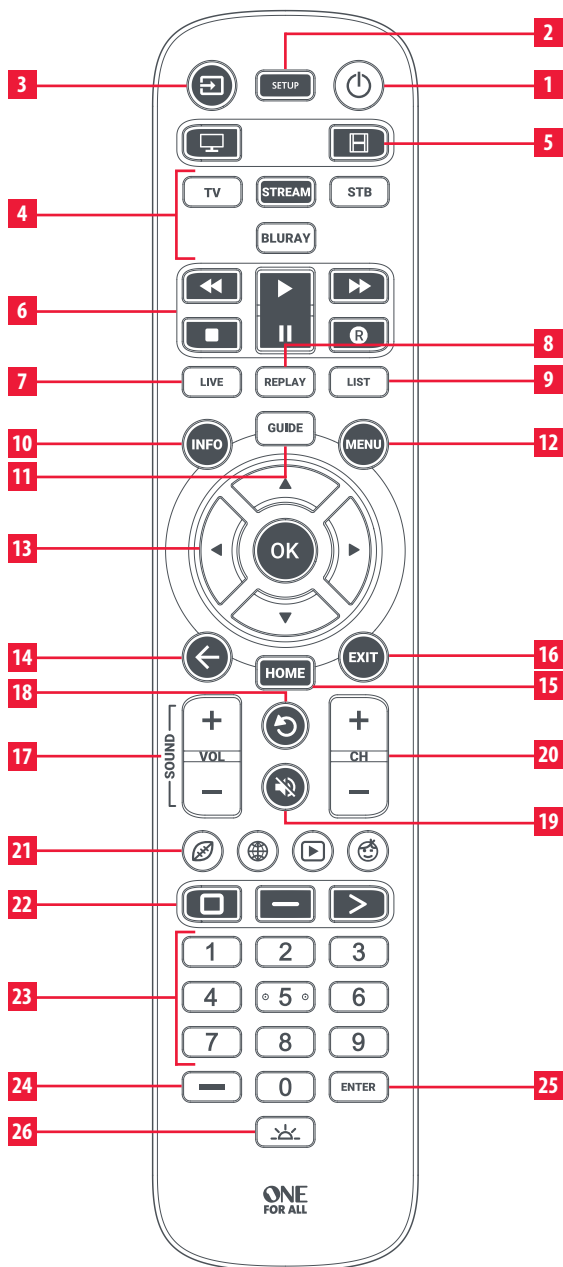

KEY DESCRIPTIONS

- 1 Power** Switches your devices on and off
- 2 Setup** This key is used to set up the Essential remote
- 3 Input** Used to select Input on devices
- 4 Device keys** These keys are used to select which device the Essential 4 currently controls. After pressing the TV key, the remote will control your TV. To switch to controlling another device, simply press the appropriate key. The devices that can be programmed to each key are as follows:
TV: All televisions such as LED, LCD, Plasma, OLED etc.
STREAM: Streaming devices such as an Apple TV, Roku Box etc. Also works Xbox 360 and Xbox One.
STB: Set Top Boxes, including Satellite, Cable and DTV.
BLURAY: Blu-ray Players and DVD Players / Recorders
- 5 Activities** Control up to 3 of your devices in one mode Watch TV and Watch Movie – See “Activities” for how to set up and use
- 6 Playback Keys** Control the playback of movies, music and TV
- 7 Live** Return to live TV from Timeshift or recording
- 8 Replay** Replay last 30 seconds
- 9 List** Show list of recordings
- 10 Info** Displays information about the current shows or channel
- 11 Guide** TV Guide
- 12 Menu** Access the installation menu of the current device
- 13 Menu Directions and OK** Control the menu of the current device
- 14 Back** Back one step in the Menu
- 15 Home** Displays the Home Menu
- 16 Exit** Exits the menu
- 17 Volume Up and Down** Control the volume of the current device. You can also set up these keys to always control one device. For details see the Volume Lock feature.
- 18 Last Channel** Changes to the last channel viewed.
- 19 Mute** Mutes the volume of the current device. You can also set up this key to always control one device. For details see the Volume Lock feature.
- 20 Channel Up & Down** Change channels on the current device.
- 21 RGYB keys** Quick access buttons for the menu of the current device. They can also be programmed to select your favourite channels. See the Favourite Channel Macros feature for details
- 22 App Shortcut Keys** Keys for starting streaming apps. See the App Shortcut Keys section for details.
- 23 Digits** Select channels on the current device. On Audio devices, these keys will select individual inputs.
- 24 Delimiter “Dash” key** Selects sub channels such as local news and extra functions in the Menu mode of your Set Top Box
- 25 Channel Enter** On some devices press this key after using the digit keys to enter your channel number
- 26 Backlight On / Off** Turns the backlight on or off. When on, any key press will activate the backlight for 10 seconds. Press this key to turn the backlight off and again to turn back on.

SETUP

The Essential 4 remote is pre-programmed to control some of the most popular devices out of the box. If you have one of the following devices try the putting the batteries in and pressing the device key, and then press a few keys to see if the remote works your device:

Device Key To Press



TV
STREAM
STB
BLURAY

Device controlled

Samsung TV
Roku Streaming Box
Bell Set top box
Samsung Blu-ray Player

If your device is not one of those listed above, or you have extra devices to set up, there are 3 ways to do this. The easiest is SimpleSet which is used for the common brands and devices.

SIMPLESET

If the brand of your device is shown in the SimpleSet List next to a digit key, you can use the SimpleSet system described in this section, please locate the brand of your device and note the key associated with it.

TV

1	Element
2	Insignia
3	LG
4	Philips, Magnavox
5	Samsung, Panasonic, Sceptre
6	Sharp, Hisense
7	Sony, Sanyo
8	TCL, RCA
9	Toshiba, Westinghouse
0	VIZIO



STREAM

1	AirTV, Sling TV
2	Apple
3	Microsoft
4	Netgear
5	NVIDIA
6	Popcorn Hour
7	Roku
8	Sony
9	Western Digital
0	Xiaomi



SETUP

SIMPLESET

STB

1
7
8

Bell
Rogers
Shaw

1 2 3
4 5 6
7 8 9
- 0 ENTER

BLURAY

1
2
3
4
5
6
7
8
9
0

Insignia
LG, Sharp
Panasonic
Philips, Magnavox
Pioneer
Samsung
Sony
Toshiba
VIZIO, RCA
Yamaha

1 2 3
4 5 6
7 8 9
- 0 ENTER

To set up your device:

1. Turn on your device (not on standby) and point the Essential remote towards it. If you are setting up a Streaming device, make sure a movie or TV show is playing.
2.  Press the Device key you wish to set up (for example TV).
3.  Hold down the SETUP key until the LED under the Device key blinks twice
4.  Hold down the digit key for your brand and device as listed in the tables above - e.g. 3 for an LG TV.
5. The remote will send a Power command every 3 seconds, but if your device does not have a Power function (for example a streaming box like Apple TV) the remote will send the Play/Pause function.
6. As soon as your device reacts by turning off or Pausing (Streaming box only) release the digit.
7. The LED will blink twice and the remote should now operate your device.

• If you find one or more keys do not work as you expect, start again at step 2 – the remote will start with the next code in the memory.

SETUP

SETUP BY CODE

If the brand of your device is not listed in the SimpleSet feature, you can set up by trying codes individually. To do this, firstly locate your brand in the Code List. Codes are listed by brand and device, and in order of popularity.

1. Turn on your device (not on standby) and point the Essential remote towards it.
2.  Press the Device key you wish to set up (for example TV)
3.  Hold down the SETUP key until the LED under the Device key blinks twice
4.  Enter the first 4 digit code listed for your brand (e.g. 1840 for LG).
5. The LED will blink twice on the last digit of the code.
6.  Now aim the remote towards your device and press the Power key.*
7. If the device turns off your remote is ready to use. If not, repeat steps 2-6 with the next code in the list.

* Note: If your original remote did not have a Power key, try testing with a different key at step 6. For example try pressing Play or Pause when setting up a streaming box and see if the box responds.


SETUP

LEARNING

Your Essential remote control can learn any function from any other working remote control. This is a quick and easy one-time setup that allows you to control any infrared controlled device you have in your living room. It also allows you to add a key or keys that may be missing to a spare key on the Essential.

To do this, firstly make sure you have all your original remote controls to hand, and that they have working batteries in.

To learn functions, the original remote should be approximately 2-5 cm from the Essential remote, pointing towards it:

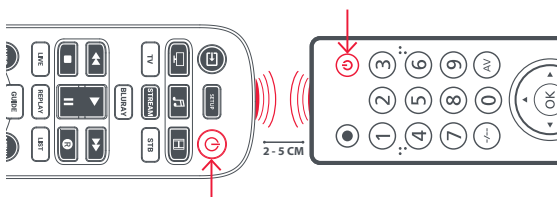

-  Press the Device key for the device you want to learn functions onto (e.g. TV).
-  Hold down the SETUP key until the LED under the Device key blinks twice.
-  Press 975 – the LED should blink twice.
-  Press and release the key you want to learn a function onto (for example the Power key) – the LED will begin to flash rapidly.
-  Press and release* the corresponding key on the original remote, for example Power.
- The LED will blink twice to indicate the key has been learned correctly.
- Repeat steps 4 and 5 for each key you want to learn – remember you can learn from multiple remotes, but only one function per key.
-  When you have learned all the functions you require, press and hold the SETUP key until the LED blinks twice.

* Some remotes send commands differently. If you find a function cannot be learned, try holding down the key on the original remote instead of pressing and releasing.

Hints:

- If the LED shows one long blink at step 5, the function was not learned correctly, please try again from step 4.
- If you find one or more keys don't work properly after set up, you can re-enter the learning mode at any time by repeating the procedure from step 1.
- If one or more of your original remotes aren't working, you can still set up the Essential remote by SimpleSet or Code Set Up.

SETUP

Deleting a learned function

If you want to delete a learned function and return that key to its original state, you can use the following procedure:

1. Press the Device key for the device your learned function operates
2.  Hold down the SETUP key until the LED under the Device key blinks twice
3.  Press 976 – the LED should blink twice
4. Press the key you want to reset twice – the LED should blink twice and the learned function has been deleted.

VOLUME LOCK

If you primarily use one device for controlling sound, for example your TV, it's possible to program your Essential remote to only control that device when you use the Volume Up, Down and Mute keys. To do this:

1.  Hold down the SETUP key until the LED under the Device key blinks twice.
2.  Press 993 – the LED should blink twice.
3.  Press the device key for the device to always control sound – for example TV.
4. The LED will blink twice.

From now on, pressing the Volume Up, Down or Mute keys will always control the TV, no matter what device you are controlling.

To unlock the volume, and return the remote to controlling each device's volume individually, the procedure is:

1.  Hold down the SETUP key until the LED under the Device key blinks twice
2.  Press 993 – the LED should blink twice
3.  Press VOLUME DOWN – the LED will blink four times and Volume is now unlocked.

SOUND BAR / AUDIO RECEIVER VOLUME CONTROL

If you have your TV connected to a Sound Bar or Audio Receiver, it's possible to set up your One For All remote to control the Volume and Mute of this device. There are two ways to do this:

AUDIO SIMPLESET

If you have a Sound Bar or Audio Device from one of the brands listed in the table below, you can use the SimpleSet method to program your remote to control it. If you do not have one of the below brands, please proceed to the next section.

- | | |
|---|-----------------|
| 1 | Bose |
| 2 | Denon |
| 3 | Harman/Kardon |
| 4 | JBL, Polk Audio |
| 5 | LG |
| 6 | Onkyo |
| 7 | Samsung |
| 8 | Sonos, VIZIO |
| 9 | Sony |
| 0 | Yamaha |



Note that each of the brands has a digit associated with it, for example 5 for LG.

To set up your remote to control your sound bar / audio device, first make sure your TV and sound bar / audio device are both powered on, and that there is something playing that you can hear (this procedure will test the Mute function). Next:

1.   Hold down the SETUP and VOLUME UP buttons together until the LED under the TV key blinks twice.
2.  Now point the remote towards your sound bar / audio device and hold down the digit key for your brand (for example 5 for LG). The remote will send the Mute command to your device every 3 seconds.
3. As soon as your sound bar / audio device mutes the volume, release the digit key. The LED under the TV key will blink twice. The remote has now found the correct code for your Audio Device.
4.   Next, hold down the SETUP and VOLUME DOWN keys until the LED blinks twice. The volume up, down and Mute keys should now control your Audio Device.

AUDIO CODE SETUP

If your Sound Bar / Audio Device is not one of the brands listed above, you can also set up the remote to control it by entering a 4 digit code. The codes are listed in the Audio Codelist section of this manual, and are listed by brand and then popularity. Locate the brand of your sound bar / audio system in this code list and then the procedure is:

1.   Hold down the Setup and Volume Down keys until the TV key blinks twice.
2.   Next, hold down the Setup and Volume Up keys until the TV key blinks twice.

The remote is now ready to be programmed and, at this point, the TV key will not blink when the Volume up or down keys are pressed.
3. Enter the first 4 digit code for your sound bar / audio device. The LED should blink twice on the last digit.
4.  Now try the Volume Up, Down and Mute and see they control your sound bar or audio device.

5. If they work, your remote is set up. If not try again from step 1 using the next code in the list.

RESET VOLUME CONTROL

To reset the volume control to the original setting:



Hold down SETUP and VOLUME DOWN keys until the LED blinks 4 times. Volume control is now reset.

If you have set up your remote to control the Volume of a Sound Bar or Audio Device, the Watch TV and Watch Movie Activity will automatically control the volume of this device.

CHANNEL SHORTCUT MACROS



As well as their normal functionality, the Red, Green, Yellow and Blue keys can be reprogrammed to select your favourite channels by genre. If you press and release each of these keys, they will perform exactly the same function as your original remote.

However they can be reprogrammed so that when they are held down for 3 seconds they will send a channel number, then when held down again for 3 seconds, they will send a different channel number. You can group these channels by genre such as Sports, News, Movies and Kids.

The procedure to program is as follows: Say for example, the first 3 Sports channels are on channels 200, 201 and 239, you can assign shortcuts to these channels on the Red (Sports) key. To do this: Firstly select the device you use to watch live TV. For example if you are a Bell subscriber and you have set up your Set Top Box on the STB key, press STB. Now you can program the channel shortcuts.

1. Hold down the SETUP key and the Red key until the LED blinks twice
2. Enter the first channel number (200)
3. Press and release the Red key
4. Enter the next channel number (in this example 201)
5. Repeat Steps 3 and 4 for each channel shortcut you want to add
6. After entering the last channel number you want, press and hold the SETUP key.

The LED will blink twice and the shortcuts are now programmed. When watching live TV, simply hold down the Red key for 3 seconds, and the first Channel Shortcut will be sent (in this example channel 200). The next time you hold down the Red Key, the shortcut for the next Channel Shortcut will be sent (in this case channel 201).

You can reprogram each of the different colour keys with different lists of channel numbers, by holding down the Setup and a different coloured key at step 1, and pressing and releasing the same key at step 3. Each coloured key has a different icon to help you remember the channels that you have stored there. You can program up to 10 different channel numbers per key.

If you wish to reset the key to default, the procedure is as follows:

1.  Press the device key you have programmed the shortcuts on (for example STB).
2.  Hold down the SETUP key and the key you wish to reset (for example the Green key) until the LED blinks twice.
3.  Press and release the key to reset (for example the Green key).
4.  Hold down the SETUP key until the LED blinks twice.

The key is now reset.

APP SHORTCUT KEYS



The Essential remote features three App Shortcut Keys which can be used to open apps on your Smart Devices. If your original remote control has a Netflix, Amazon Prime Video or YouTube key, these keys will perform the same function.

However if you did not have a key like this, but still had the ability to watch a streaming service, you can use this key as a shortcut by programming a macro on it. Most AV devices which are connected to the internet, such as Smart TVs or streaming Set Top Boxes have one or more applications they can run to access TV viewing via the internet. Examples of these would be Netflix, YouTube, Amazon Prime or similar.

To program the macro, you first need to know the device you use to access the service, and then the sequence of keys you need to press to always bring up the service you prefer, For example, some Panasonic TVs will start Netflix by pressing the Apps key, then Menu Down Twice, and finally the OK key. Or on an Apple TV, the sequence is Menu, Menu Down and OK.

Once you have determined the sequence for your device, follow these steps:

1. Sit in front of your device with it switched on (not on standby)
2.  Hold down the App Shortcut key until the LED blinks twice.
3.  Press the device key for the device you want to use for the macro (e.g. Stream)
4. Now perform the sequence of keys exactly as you would normally to start your streaming service. The remote will operate your device and the macro is recorded in real time - so if it normally takes a few seconds for your device to react don't worry.
5.  Once you have finished the sequence - and the Streaming Service has started on your device - hold down the App Shortcut key until the LED blinks twice and goes out. The macro is now stored.

Tips

- Make sure the Essential remote is operating the device in question before programming
- If you find the Macro doesn't work as expected, you can just repeat the same sequence to reprogram
- When programming, wait for your device to respond first, the remote will remember the timing
- The App Shortcut macro is tied to one device, remember to make sure you are watching the correct device

ACTIVITIES



An Activity is a combination of devices being controlled as if they were one.

On a standard universal remote control if you want to control different devices you need to swap between them using the device keys. So, if you wanted to control the input of your TV, the channels and guide of your Bell Set Top Box and the volume of your sound bar, you would need to swap between these by pressing the TV and STB keys.

On the Essential remote these devices can be grouped into one Activity mode, so after pressing watch TV, the Input key will control the TV, the Volume Up, Down and Mute will control the Sound Bar and the other keys will control the Bell Set Top Box. The Essential remote has 2 Activity modes, specifically, Watch TV and Watch Movie.

Each of these modes has a choice of devices to combine.

These are:



Watch TV

- 1 Combination 1 – TV + STB + AUDIO (default)
- 2 Combination 2 – TV + STB
- 3 Combination 3 – TV + AUDIO



Watch Movie

- 1 Combination 1 – TV + STREAM + AUDIO (default)
- 2 Combination 2 – TV + STREAM
- 3 Combination 3 – TV + BLU
- 4 Combination 4 – TV + BLU + AUDIO

If you setup the default devices for any Activity on the remote (for example a TV, STB and Audio for Watch TV) that Activity will be set up automatically on the remote.

If you have set up your remote to control the Volume of a Sound Bar or Audio Device (see SOUND BAR / AUDIO RECEIVER VOLUME CONTROL), the Watch TV and Watch Movie Activity will automatically control the volume of this device.

If you would like to change to a different combination, the procedure is as follows:

1.



Hold down SETUP key until the LED under the device blinks twice. The LED under the current device will stay lit.

2.  Press the Activity key you want to set up (e.g. Watch TV).
3.  Press the number of the combination you want to set – e.g 3 For TV + AUD in Watch TV.
4. The LED will blink twice and go out.

To access the Activities, simply press the ACTIVITY key. You can return to controlling by device by using any Device key.

AV SHIFT

As the AV key is intended to select the input on your TV and most TVs use a menu to select from a list of inputs, when the AV key is pressed in an Activity, the Menu, Up, Down, Left, Right and OK keys temporarily control the TV. If the OK key is pressed, or no key is pressed for ten seconds, these keys will revert to controlling the relevant device for the Activity (e.g. STB in Watch TV Mode).

POWER MACRO

If you hold down the Power key for 2 seconds in any Activity, the remote will send the Power function for each device contained within that Activity. So for example, holding Power in the default setting for Watch TV will turn both the TV and Set Top Box on or off.



Connect with us on Facebook.
Rejoignez-nous sur Facebook.
facebook.com/oneforallworldwide



Connect with us on Instagram.
Rejoignez-nous sur Instagram.
[@oneforall.worldwide](https://www.instagram.com/oneforall.worldwide)



Connect with us on LinkedIn.
Rejoignez-nous sur LinkedIn.
linkedin.com/company/one-for-all-worldwide



Visit our YouTube channel.
Visitez notre chaîne youtube.
youtube.com/user/oneforallproducts

INTRODUCTION





Merci d'avoir acheté la télécommande universelle Essential 6 One For All. Elle peut contrôler jusqu'à 4 appareils audio-vidéo tels qu'un téléviseur, un décodeur, un lecteur Blu-ray ou une barre de son et offre de nombreuses fonctionnalités supplémentaires qui permettent à l'utilisateur de tirer le meilleur parti de sa salle de séjour.

La télécommande dispose également d'un rétroéclairage, ce qui la rend facile à utiliser dans une pièce sombre.

Ce manuel vous aidera à configurer la télécommande Essential 6 pour commander tous vos appareils et profiter de ses fonctionnalités.

PILES


La télécommande requiert 2 piles AA / LR6. Veuillez les insérer comme indiqué ci-dessous. Des piles alcalines sont recommandées.

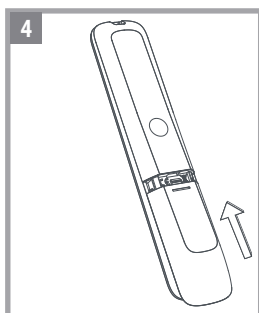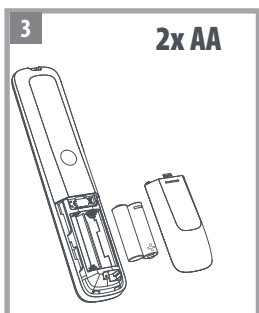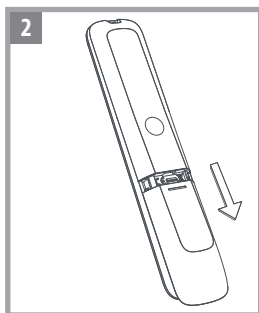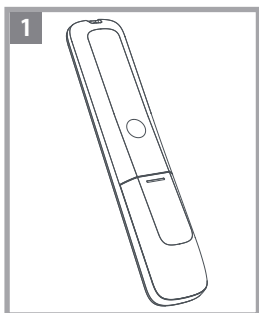

ATTENTION: Risque d'explosion si les piles sont remplacées par un mauvais type de piles. Utilisez des piles alcalines / de qualité.



PRINCIPALES DESCRIPTIONS

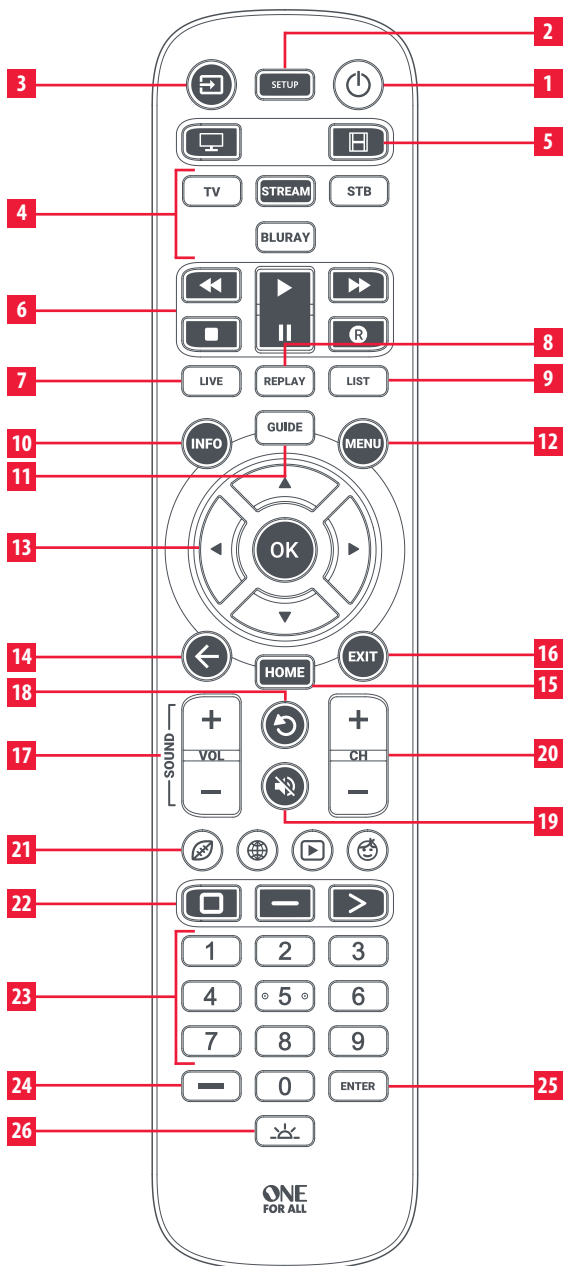

PRINCIPALES DESCRIPTIONS

- 1 Marche/Arrêt** Allume et éteint les appareils.
- 2 Configuration** Cette touche sert à configurer la télécommande Essential.
- 3 Entrée** Sert à sélectionner l'entrée des appareils.
- 4 Touches du dispositif** Ces touches servent à sélectionner le périphérique que la télécommande Essential 6 commande actuellement. Si l'utilisateur appuie sur la touche correspondant au téléviseur, la télécommande commande le téléviseur. Pour commander un autre appareil, il faut simplement appuyer sur la touche appropriée. Les appareils pouvant être assignés aux touches sont les suivants :
- TV:** TÉLÉVISEUR : Tous les téléviseurs sont compatibles, tels que les téléviseurs DEL, ACL, plasma, DELO, etc.
- STREAM:** PÉRIPHÉRIQUE DE DIFFUSION EN CONTINU : Les périphériques de diffusion en continu, comme Apple TV, Roku Box, etc., mais aussi Xbox 360 et Xbox One.
- STB:** DÉCODEUR (STB) : Les décodeurs, y compris ceux pour satellite, câblodistribution et Freeview.
- BLURAY:** BLU-RAY : Les lecteurs Blu-ray et les lecteurs / enregistreurs DVD.
- 5 Activités** Commandez jusqu'à 3 appareils en un seul mode pour regarder la télévision et visionner des films. Reportez-vous à la rubrique « Activités » pour connaître la configuration et l'utilisation.
- 6 Touches de lecture** Commande la lecture de films, de musique et du téléviseur.
- 7 Live** En direct Revient à la télévision en direct à partir du décalage ou d'un enregistrement.
- 8 Replay** Relecture Relit les 30 dernières secondes.
- 9 List** Liste: Affiche la liste des enregistrements.
- 10 Info** Affiche des renseignements sur l'émission ou la chaîne actuelle.
- 11 Guide** Guide TV.
- 12 Menu** Lance le menu d'installation de l'appareil actuel.
- 13 Directions du menu et OK** Commande le menu de l'appareil actuel.
- 14 Précédent** Revient à l'étape précédente du menu.
- 15 Home** Accueil: Affiche le menu d'accueil.
- 16 Exit** Quitter: Ferme le menu.
- 17 Hausse et baisse du volume** Controla el volumen del dispositivo actual. También puede configurar estas teclas para controlar siempre un dispositivo. Para obtener más detalles, consulte la función Bloqueo de volumen.
- 18 Dernière chaîne** Affiche la dernière chaîne visionnée.
- 19 Sourdine** Désactive le son de l'appareil actuel. Cette touche peut aussi être configurée pour toujours commander le même appareil. Pour obtenir plus de détails, reportez-vous à la fonction de verrouillage du volume.
- 20 Chaîne suivante et précédente** Modifie les chaînes affichées par l'appareil actuel.
- 21 Touches RGYB** Touches d'accès rapide au menu de l'appareil actuel. Elles peuvent également être configurées pour sélectionner vos chaînes préférées. Reportez-vous à la fonction Macros de chaînes favorites pour obtenir plus de détails.
- 22 Touches de raccourci vers les applications** Touches permettant de lancer des applications de diffusion en continu. Reportez-vous à la section Touches de raccourci vers les applications pour obtenir plus de détails.
- 23 Chiffres** Sélectionne les chaînes depuis l'appareil actuel. S'il s'agit d'un appareil audio, ces touches sélectionnent des entrées individuelles.
- 24 Touche de délimitation « tiret »** Sélectionne des sous-chaînes, comme les actualités locales et des fonctions supplémentaires du mode Menu du décodeur.
- 25 Entrée de chaîne** Avec certains appareils, vous devez appuyer sur cette touche après avoir saisi un numéro de chaîne à l'aide des touches numériques.
- 26 Rétroéclairage activé / désactivé** Active ou désactive le rétroéclairage. Lorsque cette option est activée, le rétroéclairage s'allume pendant 10 secondes si une touche est enfoncée. Appuyez sur cette touche pour désactiver le rétroéclairage et appuyez dessus de nouveau pour le réactiver.

CONFIGURATION

La télécommande Essential 6 est préprogrammée pour être prête à l'emploi et commander certains des appareils les plus populaires. Si vous possédez l'un des appareils suivants, vérifiez si la télécommande commande cet appareil en insérant les piles dans la télécommande et en appuyant sur la touche associée à cet appareil :

Appareil Touche à enfoncer



TV
STREAM
STB
BLURAY

Appareil commandé

Samsung TV
Roku Streaming Box
Bell Set top box
Lecteur Blu-ray Samsung

Si votre appareil n'est pas répertorié ci-dessus, ou si vous devez configurer d'autres appareils, vous pouvez procéder de 3 façons. L'option la plus simple est SimpleSet, qui est utilisé pour les marques et les appareils courants.

SIMPLESET

Si la marque de votre appareil est indiquée dans l'image SimpleSet pointant vers une touche, vous pouvez utiliser l'outil SimpleSet décrit dans cette section. Trouvez la marque de votre appareil et prenez en note la touche qui lui est associée.

TV

1	Element
2	Insignia
3	LG
4	Philips, Magnavox
◦ 5 ◦	Samsung, Panasonic, Sceptre
6	Sharp, Hisense
7	Sony, Sanyo
8	TCL, RCA
9	Toshiba, Westinghouse
0	VIZIO



STREAM

1	AirTV, Sling TV
2	Apple
3	Microsoft
4	Netgear
◦ 5 ◦	NVIDIA
6	Popcorn Hour
7	Roku
8	Sony
9	Western Digital
0	Xiaomi



SETUP

SIMPLESET

STB

1	Bell
7	Rogers
8	Shaw

1	2	3
4	◦ 5 ◦	6
7	8	9
—	0	ENTER

BLURAY

1	Insignia
2	LG, Sharp
3	Panasonic
4	Philips, Magnavox
◦ 5 ◦	Pioneer
6	Samsung
7	Sony
8	Toshiba
9	VIZIO, RCA
0	Yamaha

1	2	3
4	◦ 5 ◦	6
7	8	9
—	0	ENTER

Pour configurer votre appareil :

1. Allumez l'appareil (assurez-vous qu'il n'est pas en veille) et orientez la télécommande Essential vers l'appareil. Si vous configurez un périphérique de diffusion en continu, assurez-vous qu'un film ou une émission de télévision est en cours de lecture.
2.  Appuyez sur la touche correspondant à l'appareil que vous souhaitez configurer (par exemple, TV).
3.  Maintenez enfoncé le bouton Configuration jusqu'à ce que le voyant DEL sous la touche de l'appareil clignote deux fois.
4.  Maintenez enfoncé le chiffre correspondant à la marque et au type d'appareil, comme indiqué dans les tableaux ci-dessus, soit le 3 pour un téléviseur LG, par exemple.
5. La télécommande envoie le signal d'alimentation toutes les 3 secondes, mais si l'appareil n'a pas de fonction d'alimentation (par exemple, un périphérique de diffusion en continu comme Apple TV), la télécommande envoie le signal de lecture / pause.

SETUP

SIMPLESET

6. Dès que l'appareil s'éteint ou se met en pause (périphérique de diffusion en continu uniquement), relâchez la touche de chiffre.
 7. Le voyant DEL clignotera deux fois et la télécommande devrait alors commander l'appareil.
- Si une ou plusieurs touches ne fonctionnent pas comme prévu, recommencez à partir de l'étape 2. La télécommande est alors lancée avec le code suivant en mémoire.

CONFIGURATION PAR CODE


Si la marque de votre appareil n'est pas prise en charge par la fonction SimpleSet, vous pouvez effectuer la configuration en essayant les codes individuellement. Pour ce faire, repérez d'abord la marque de votre appareil dans la liste de codes. Les codes sont répertoriés par marque et par type d'appareil, et par ordre de popularité.

1. Allumez l'appareil (assurez-vous qu'il n'est pas en veille) et orientez la télécommande Essential vers l'appareil.
2.  Appuyez sur la touche correspondant à l'appareil que vous souhaitez configurer (par exemple, TV).
3.  Maintenez enfoncé le bouton Configuration jusqu'à ce que le voyant DEL sous la touche de l'appareil clignote deux fois.
4.  Entrez le premier code à 4 chiffres indiqué pour votre marque (par exemple, 1840 pour LG).
5. Le voyant DEL clignote deux fois après la saisie du dernier chiffre du code.
6.  Orientez alors la télécommande vers votre appareil et appuyez sur la touche Marche / Arrêt.*
7. Si l'appareil s'éteint, la télécommande est prête à être utilisée. Sinon, répétez les étapes 2 à 6 avec le prochain code de la liste.

* Remarque : Si la télécommande d'origine n'a pas de touche marche/arrêt, faites un test avec une autre touche à l'étape 6. Par exemple, essayez d'appuyer sur Lecture ou Pause lors de la configuration d'un périphérique de diffusion en continu et voyez si l'appareil répond.

APPRENTISSAGE

Pour que la télécommande Essential puisse apprendre une fonction, la télécommande d'origine doit être orientée vers elle et être à environ 2 pouces :

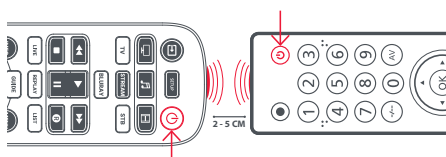

-  Appuyez sur la touche correspondant à l'appareil duquel vous souhaitez apprendre une fonction (par exemple, le téléviseur).
-  Maintenez enfoncé le bouton Configuration jusqu'à ce que le voyant DEL sous la touche de l'appareil clignote deux fois.
-  Entrez la série 975; le voyant DEL devrait clignoter deux fois.
-  Appuyez sur la touche à laquelle vous souhaitez apprendre une fonction (par exemple, la touche d'alimentation du téléviseur) et relâchez-la; le voyant DEL se met alors à clignoter rapidement.
-  Appuyez sur la touche correspondante de la télécommande d'origine et relâchez-la*, par exemple la touche Marche/Arrêt.
- Le voyant DEL clignote deux fois pour indiquer que la fonction de la touche a été apprise correctement.
- Répétez les étapes 4 et 5 pour chaque fonction qui doit être apprise. N'oubliez pas que l'apprentissage peut être fait depuis plusieurs télécommandes, mais qu'il ne peut y avoir qu'une seule fonction par touche.
-  Lorsque toutes les fonctions requises ont été apprises, maintenez enfoncée la touche Configuration jusqu'à ce que le voyant DEL clignote deux fois.

* Certaines télécommandes transmettent les commandes différemment. Si vous constatez qu'une fonction ne peut pas être apprise, essayez de maintenir enfoncée la touche de la télécommande d'origine au lieu d'appuyer sur celle-ci, puis de la relâcher.

- Si le voyant DEL clignote longuement une seule fois lors de l'étape 5, la fonction n'a pas été apprise correctement. Recommencez la procédure à partir de l'étape 4.
- Si vous constatez qu'une ou plusieurs touches ne fonctionnent pas correctement après la configuration, vous pouvez relancer le mode d'apprentissage à tout moment en répétant la procédure à partir de l'étape 1.
- Si une ou plusieurs de vos télécommandes d'origine ne fonctionnent pas, vous pouvez configurer la télécommande Essential par SimpleSet ou par code.

Suppression d'une fonction apprise

Si vous souhaitez supprimer une fonction apprise et rétablir l'état d'origine d'une touche, utilisez la procédure suivante:

1. Appuyez sur la touche correspondant à l'appareil duquel vous souhaitez apprendre une fonction.
2.  Maintenez enfoncé le bouton Configuration jusqu'à ce que le voyant DEL sous la touche de l'appareil clignote deux fois.
3.  Entrez la série 976; le voyant DEL devrait clignoter deux fois.
4. Appuyez deux fois sur la touche que vous souhaitez réinitialiser; le voyant DEL devrait clignoter deux fois, indiquant que la fonction apprise a été supprimée.

VERROUILLAGE DU VOLUME

Si vous utilisez principalement un appareil pour commander le volume, comme une barre de son ou un récepteur audio-vidéo, il est possible de programmer la télécommande Essential pour qu'elle commande uniquement cet appareil lorsque les touches de mise en sourdine ainsi que de hausse et de baisse du volume sont enfoncées. Pour ce faire :

1.  Maintenez enfoncé le bouton Configuration jusqu'à ce que le voyant DEL sous la touche de l'appareil clignote deux fois.
2.  Entrez la série 993; le voyant DEL devrait clignoter deux fois.
3.  Appuyez sur la touche correspondant à l'appareil duquel vous souhaitez commander le volume (par exemple, le téléviseur).
4. Le voyant DEL clignote deux fois.

Dorénavant, les touches de mise en sourdine ainsi que de hausse et de baisse du volume commanderont le périphérique audio, indépendamment de l'appareil que vous utilisez.

Pour déverrouiller le volume et faire en sorte que la télécommande commande individuellement le volume des appareils, utilisez la procédure suivante:

1.  Maintenez enfoncé le bouton Configuration jusqu'à ce que le voyant DEL sous la touche de l'appareil clignote deux fois.
2.  Entrez la série 993; le voyant DEL devrait clignoter deux fois.
3.  Appuyez sur VOLUME DOWN - la LED clignotera quatre fois et le volume est maintenant déverrouillé.

CONTRÔLE DU VOLUME DE LA BARRE DE SON / RÉCEPTEUR AUDIO

Si votre téléviseur est connecté à une barre de son ou à un récepteur audio, il est possible de configurer votre télécommande One For All pour contrôler le volume et la mise en sourdine de cet appareil. Il y a deux façons de faire cela:

SIMPLESET AUDIO

Si vous possédez une barre de son ou un appareil audio de l'une des marques répertoriées dans le tableau ci-dessous, vous pouvez utiliser la méthode SimpleSet pour programmer votre télécommande afin de la contrôler. Si vous ne possédez pas l'une des marques ci-dessous, veuillez passer à la partie suivante.

1	Bose	1	2	3
2	Denon	4	5	6
3	Harman/Kardon	7	8	9
4	JBL, Polk Audio	—	0	ENTER
5	LG			
6	Onkyo			
7	Samsung			
8	Sonos, VIZIO			
9	Sony			
0	Yamaha			

Notez que chacune des marques est associée à un chiffre, par exemple 5 pour LG.

Afin de configurer votre télécommande pour contrôler votre barre de son / appareil audio, assurez-vous d'abord que votre téléviseur et votre barre de son / appareil audio sont tous les deux allumés et qu'il y a quelque chose qui se joue que vous pouvez entendre (cette procédure testera la fonction Sourdine). Ensuite:

-   Maintenez simultanément les touches SETUP et VOLUME HAUT enfoncées jusqu'à ce que la LED sous la touche TV clignote deux fois
-  Pointez maintenant la télécommande vers votre barre de son / appareil audio et maintenez la touche numérique correspondant à votre marque (par exemple 5 pour LG). La télécommande enverra la fonction Sourdine à votre appareil toutes les 3 secondes
- Dès que votre barre de son / appareil audio se met en sourdine, relâchez la touche numérique. La LED sous la touche TV clignotera deux fois. La télécommande a maintenant trouvé le code correct pour votre appareil audio.
-   Ensuite, maintenez les touches SETUP et VOLUME BAS enfoncées jusqu'à ce que la LED clignote deux fois. Les touches d'augmentation, de diminution du volume et de sourdine doivent maintenant contrôler votre périphérique audio

CONFIGURATION DU CODE AUDIO

Si votre barre de son / appareil audio ne fait pas partie des marques répertoriées ci-dessus, vous pouvez également configurer la télécommande pour la contrôler en entrant un code à 4 chiffres. Les codes sont répertoriés dans la section « Liste des codes audio » de ce manuel, et ils sont classés par marque et par popularité. Localisez la marque de votre barre de son / appareil audio dans cette liste de codes, puis la procédure est la suivante:

-   Maintenez les touches SETUP et VOLUME BAS enfoncées jusqu'à ce que la LED sous la touche TV clignote deux fois. La télécommande est maintenant prête à être programmée avec un code.

Notez que lorsque vous appuyez sur les touches d'augmentation et de diminution du volume, la LED du téléviseur ne s'allume plus.

-   Ensuite, maintenez les touches SETUP et VOLUME HAUT enfoncées jusqu'à ce que la LED sous la touche TV clignote deux fois.
- Entrez le premier code à 4 chiffres de votre barre de son / appareil audio. La LED doit clignoter deux fois sur le dernier chiffre.
-  Maintenant, essayez le volume haut, bas et muet et voyez qu'ils contrôlent votre barre de son ou appareil audio.
- S'ils fonctionnent, votre télécommande est configurée. Sinon, réessayez à partir de l'étape 1 en utilisant le code suivant dans la liste.

RÉINITIALISER LE CONTRÔLE DU VOLUME

Pour réinitialiser le contrôle du volume au réglage d'origine,

- 
- 
- maintenez les touches SETUP et VOLUME BAS enfoncées jusqu'à ce que la LED clignote 4 fois. Le contrôle du volume est maintenant réinitialisé.

Si vous avez configuré votre télécommande pour contrôler le volume d'une barre de son ou d'un appareil audio les activités « regarder la télévision » et « regarder un film » contrôleront automatiquement le volume de cet appareil.

MACROS DE RACCOURCI VERS LES CHÂÎNES



En plus de leurs fonctions normales, les touches rouge, verte, jaune et bleue peuvent être reprogrammées de manière à sélectionner vos chaînes préférées par genre. Si vous appuyez sur chacune de ces touches et vous les relâchez, elles exécuteront exactement la même fonction que votre télécommande d'origine.

Cependant, elles peuvent être reprogrammées afin de transmettre un numéro de chaîne lorsqu'elles sont maintenues enfoncées pendant 3 secondes, puis transmettre un numéro de chaîne différente si elles sont de nouveau maintenues enfoncées durant 3 secondes. Vous pouvez regrouper ces chaînes par genre, comme les sports, les actualités, les films et les émissions pour enfants.

La programmation se fait comme suit : La programmation se fait comme suit : Supposons que les 3 premières chaînes sportives sont diffusées au 200, 201 et 239. Vous pouvez créer des raccourcis vers ces chaînes à l'aide de la touche rouge (sports). Pour ce faire : Sélectionnez d'abord l'appareil que vous utilisez pour regarder la télévision en direct. Par exemple, si vous êtes abonné à Bell et que la touche STB est attribuée au décodeur, appuyez sur STB. Vous pouvez maintenant programmer les raccourcis des chaînes.

-   Maintenez enfoncées la touche Configuration et la touche Rouge jusqu'à ce que le voyant DEL clignote deux fois.



2.  Entrez le numéro de la première chaîne (200).
3.  Appuyez sur la touche rouge et relâchez-la.
4.  Entrez le numéro de la chaîne suivante (dans cet exemple, 201).
5. Répétez les étapes 3 et 4 pour chaque raccourci que vous souhaitez ajouter.
6.  Après avoir entré le numéro de la dernière chaîne souhaitée, appuyez sur la touche SETUP et maintenez-la enfoncée.

Le voyant DEL clignote deux fois, indiquant que les raccourcis sont programmés. Lorsque vous regardez la télévision en direct, maintenez simplement la touche rouge enfoncée pendant 3 secondes pour activer le raccourci vers la première chaîne (dans cet exemple, la chaîne 200). Si vous appuyez de nouveau sur la touche rouge et la maintenez enfoncée, vous activez le raccourci vers la prochaine chaîne (dans cet exemple, la chaîne 201). Vous pouvez attribuer à chaque touche de couleur divers numéros de chaînes. Pour ce faire, maintenez enfoncées la touche Configuration et l'une des touches de couleur différente de celle utilisée à l'étape 1, puis appuyez sur cette même touche de couleur avant de la relâcher, comme indiqué à l'étape 3. Chaque touche de couleur a une icône différente pour vous aider à mémoriser les chaînes que vous y avez attribuées. Vous pouvez programmer jusqu'à 10 numéros de chaînes par touche.

Si vous souhaitez réinitialiser la touche à sa valeur par défaut, la procédure est la suivante :

1.  Appuyez sur la touche correspondant à l'appareil auquel vous avez attribué des raccourcis (par exemple, STB).
2.  Maintenez enfoncées la touche Configuration et la touche que vous souhaitez réinitialiser (par exemple, la touche verte) jusqu'à ce que le voyant DEL clignote deux fois.
3.  Appuyez sur la touche et relâchez-la pour la réinitialiser (par exemple, la touche verte).
4.  Maintenez enfoncée la touche SETUP jusqu'à ce que le voyant DEL clignote deux fois.

La touche est alors réinitialisée.

TOUCHES DE RACCOURCI VERS LES APPLICATIONS ■



La télécommande Essential comprend trois touches de raccourci qui peuvent servir à lancer des applications installées dans vos appareils intelligents. Si votre télécommande d'origine a une touche Netflix, Amazon Prime Video ou YouTube, ces touches assurent la même fonction.

Cependant, si vous n'avez pas une telle touche, mais que vous pouvez regarder du contenu transmis par un service de diffusion en continu, vous pouvez utiliser l'une de ces touches pour créer un raccourci vers l'application de ce service en lui attribuant une macro. La plupart des appareils audiovisuels connectés à Internet, tels que les téléviseurs intelligents ou les périphériques de diffusion en continu, disposent d'une ou de plusieurs applications exécutables pour accéder à du contenu télévisé par l'entremise d'Internet. Netflix, YouTube, Amazon Prime, Hulu et autres sont de bons exemples.

Pour programmer une telle macro, vous devez d'abord déterminer quel appareil vous permet d'accéder au service de diffusion en continu souhaité. Ensuite, vous devez déterminer la séquence de touches que vous devez





enfoncer pour afficher ce service. Par exemple, certains téléviseurs Panasonic lancent l'application Netflix en appuyant sur les touches Applications, puis Menu/Bas deux fois, et enfin sur la touche OK. Depuis un appareil Apple TV, la séquence est Menu, Menu/Bas, Menu/OK. Depuis un appareil Apple TV, la séquence est Menu, Menu/Bas, Menu/OK.

Une fois que vous avez déterminé la séquence de votre appareil, procédez comme suit :

1. Placez-vous devant l'appareil alors qu'il est allumé (assurez-vous qu'il n'est pas en veille).
2.  Maintenez enfoncée la touche de raccourci vers l'application jusqu'à ce que le voyant DEL clignote deux fois et demeure allumé.
3.  Appuyez sur la touche correspondant à l'appareil avec lequel vous souhaitez utiliser la macro (par exemple, le périphérique de diffusion en continu).
4. Reproduisez ensuite la séquence requise en appuyant tour à tour sur les diverses touches, comme vous le faites normalement. La télécommande commande alors l'appareil comme d'habitude et enregistre la macro en temps réel. Il se peut donc que l'appareil ait besoin de quelques secondes pour réagir, selon le cas.
5.  Une fois que vous avez terminé la séquence et que votre appareil a lancé le service de diffusion en continu, maintenez enfoncée la touche de raccourci en question jusqu'à ce que le voyant DEL clignote deux fois et s'éteigne. La macro est alors enregistrée.

Conseils pratiques

- Assurez-vous que la télécommande Essential commande l'appareil en question avant d'effectuer la programmation.
- Si vous constatez que la macro ne fonctionne pas comme prévu, vous n'avez qu'à répéter les étapes de programmation.
- Attendez que l'appareil réponde lorsque vous réalisez les étapes de programmation, car la télécommande mémorise les délais d'exécution.
- La macro de raccourci qui lance une application est liée à un appareil précis; la télécommande doit donc commander cet appareil pour que la macro fonctionne.

ACTIVITÉS



Une activité est une combinaison d'appareils.

Si vous disposez d'une télécommande universelle standard et souhaitez commander différents appareils, vous devez les activer et les désactiver tour à tour à l'aide des touches de la télécommande. Supposons que vous souhaitez commander l'entrée du téléviseur, les chaînes et le guide du service le décodeur Bell ainsi que le volume de la barre de son, vous devez activer et désactiver tour à tour chacun de ces appareils à l'aide des touches TV, STB et Audio de la télécommande.

Avec une télécommande Essential, toutefois, ces appareils peuvent être regroupés en un seul mode d'activité. Cela signifie qu'après avoir sélectionné l'activité Regarder la télévision, la touche d'entrée commande le téléviseur, les touches de mise en sourdine ainsi que de hausse et de baisse du volume commandent la barre de son, et les autres touches commandent le décodeur Bell.

La télécommande Essential propose 3 modes d'activité, soit Regarder la télévision, Écouter de la musique et Visionner un film.

Chacun de ces modes permet de regrouper des appareils sélectionnés.

Il s'agit de :



Regarder la télévision

- 1 Combinaison 1 - TÉLÉVISEUR + DÉCODEUR + AUDIO (par défaut)
- 2 Combinaison 2 - TÉLÉVISEUR + DÉCODEUR
- 3 Combinaison 3 - TÉLÉVISEUR + AUDIO





Visionner un film

- 1 Combinaison 1 - TÉLÉVISEUR + PÉRIPHÉRIQUE DE DIFFUSION EN CONTINU + AUDIO (par défaut)
- 2 Combinaison 2 - TÉLÉVISEUR + PÉRIPHÉRIQUE DE DIFFUSION EN CONTINU
- 3 Combinaison 3 - TÉLÉVISEUR + BLU-RAY
- 4 Combinaison 4 - TÉLÉVISEUR + BLU-RAY + AUDIO

Si vous définissez les périphériques par défaut pour une activité à l'aide de la télécommande (par exemple, l'activité Regarder la télévision commande le téléviseur, le décodeur et le contenu audio), cette activité sera configurée automatiquement depuis la télécommande.

Si vous avez configuré votre télécommande pour contrôler le volume d'une barre de son ou d'un appareil audio (voir CONTRÔLE DU VOLUME DE LA BARRE DE SON / RÉCEPTEUR AUDIO), les activités « regarder la télévision » et « regarder un film » contrôleront automatiquement le volume de cet appareil.

Si vous souhaitez créer une combinaison différente, la procédure est la suivante :

1.  Maintenez enfoncé le bouton Configuration jusqu'à ce que le voyant DEL sous la touche de l'appareil clignote deux fois. Le voyant DEL sous la touche de l'appareil actuel demeure allumé.
2.  Appuyez sur la touche d'activité que vous souhaitez configurer (par exemple, Regarder la télévision).
3.  Appuyez sur le numéro de la combinaison que vous souhaitez définir (par exemple, 3 pour TÉLÉVISEUR + AUDIO pour l'activité Regarder la télévision).
4. Le voyant DEL clignote deux fois et s'éteint.

Pour accéder aux activités, appuyez simplement sur la touche Activité. Vous pouvez rétablir la fonction de commande par appareil à l'aide de n'importe quelle touche correspondant à un appareil.

TRANSFERT AV

La touche AV est destinée à sélectionner l'entrée sur votre téléviseur. Comme la plupart des téléviseurs disposent d'un menu permettant de faire une sélection depuis une liste d'entrées, le fait d'appuyer sur la touche AV dans une activité permet temporairement aux touches Haut, Bas, Gauche, Droite du menu de même qu'à la touche OK de commander le téléviseur. Si la touche OK est enfoncée, ou si aucune touche n'est enfoncée pendant dix secondes, ces touches recommenceront à commander l'appareil approprié en fonction de l'activité (par exemple, le décodeur en mode Regarder la télévision).

MACRO DE ENCENDIDO

Si vous maintenez enfoncée la touche marche/arrêt pendant 2 secondes dans une activité, la télécommande envoie la commande de marche/arrêt à chaque appareil inclus dans cette activité. Ainsi, si vous maintenez enfoncée la touche marche/arrêt alors que vous êtes dans les paramètres par défaut de l'activité Regarder la télévision, le téléviseur et le décodeur s'allument ou s'éteignent.



Connect with us on Facebook.
Rejoignez-nous sur Facebook.
facebook.com/oneforallworldwide



Connect with us on Instagram.
Rejoignez-nous sur Instagram.
@oneforall.worldwide



Connect with us on LinkedIn.
Rejoignez-nous sur LinkedIn.
linkedin.com/company/one-for-all-worldwide



Visit our YouTube channel.
Visitez notre chaîne youtube.
youtube.com/user/oneforallproducts

CODE LIST

TV

Acer	4143
Admiral	3879
Affinity	3717, 3870, 3577, 3716
Aiwa	1362
Akai	1675
Akura	1687
AOC	3720, 2691, 1365, 2014, 2087
Apex Digital	2397, 4347, 4350
Ario	2397
Asus	3340
Asustek	3340
Atvio	3638, 3636, 3879
Atyme	2746
Audiosonic	1675
Audiovox	1564, 1276, 1769, 2121
Auria	4748, 2087, 2014, 2277
Avera	2397, 2049
Avol	2735, 4367, 3382, 3118, 1709
Axen	1709
Axess	3593
BenQ	1756
Blu:sens	2735
Bolva	2397
Broksonic	1892
Calypso	4748
Champion	1362
Changhong	4629
Coby	3627
Commercial Solutions	1447
Conia	1687
Contex	4053, 4280
Craig	3423
Crosley	3115
Curtis	3577, 2855, 2466, 3895, 2352, 2397, 3939, 4035, 3636, 3382, 3717
Curtis Mathes	1661
Daewoo	1661, 3115, 3879
Digitrex	4207
Disney	1892
DNS	3879
Durabrand	1463, 1595, 3879
Dynex	2049, 2184, 1780, 1463
Electrograph	1755
Electrohome	1670
Electron	2466, 2855
Element	3559, 1687, 2183, 2964, 4635, 5173, 4910, 4398, 1886, 4217, 4740
Elite	1457
Emerson	1864, 1963, 1394, 1886, 1595, 3623, 1661, 2183, 3559
Envision	1365, 2087, 2014
Epworth	1362
EQD	2014, 2087, 2277
EQD Auria	2014, 2087, 2277
ESA	1595, 1963
eTec	2397
Exorvision	3953
Favi	3382
Fisher	1362
Fluid	2964
Fujimaro	1687
Funai	1595, 1864, 1394, 1963
Furion	3332, 4093
Gateway	1755, 1756
GE	1447
General Electric	1447
GFM	1886, 1963, 1864
GPX	3980, 3977
Haier	2309, 1749, 1748, 3382, 1753, 3429, 2293, 4398, 2214
Hannspree	1348, 2786

Hisense	3519, 4740, 4618, 2183, 5185, 1660, 3382, 4398
Hitachi	1643, 4398, 5102, 4455, 3382, 0679
Hiteker	3118
HKPro	3879, 2434
Hyundai	4618
iLo	1463, 1394
Insignia	2049, 1780, 4487, 3227, 1564, 1641, 2184, 1892, 1423, 1660, 1963, 1463
iSymphony	3382, 3429, 3118, 3094
JVC	1774, 1601, 3393, 2321, 2271, 4107, 4398, 5182, 4105, 4053, 1670, 1892, 4280, 4367
KC	4182
KDS	1687
LeEco	4007
Legend	2397, 2352, 1749, 2309
Lexus	3638
LG	1840, 2731, 1423, 1860, 2358, 4397, 3401, 4398, 0017
Liberton	3183
Lloyd's	3382
LXI	0017
MAG	1687
Magnavox	3623, 1866, 2372, 1454, 1455, 1963, 1365, 1755, 1867, 4740, 1394, 4398
Marantz	1454
Maxent	1755
Memorex	4686, 1892, 1670, 1687
Mitsubishi	1250, 1797
Mitsubishi Electric	1250, 1797
Mitsui	1123, 3638, 3673
Mx Onda	1687
Mystery	3879
Naxa	4093, 2104, 2735, 3382, 3423
NEC	3257, 1797, 3000, 2293
NetTV	1755
Nexus	1564, 3519, 2183
Nexus Electronics	2183
Nikko	0017
Nimbro	2104
Norcent	1365
NuVision	2158, 1657, 4347
oCOSMO	3899, 4139
Ölevia	1610
Onn	4398, 1709, 3024, 3078, 5118
Optimus	0679
Orion	1463, 1892, 3540
Otic	1687
Panasonic	1291, 1480
PARK	2104
Philco	1963, 1394
Philips	1867, 1455, 2372, 1454, 3069, 3623, 1866, 3396, 1744, 0017, 2800, 4398, 1755, 1963, 1365, 1394, 4740
Philips Magnavox	3396, 1866, 3623
Pioneer	0679, 1260, 1457
Planar	0679
Polaroid	1523, 1769, 4035, 1687, 1276, 1767, 3942, 2121, 3382, 2434, 3118
Portland	1661
Prima	1753, 1749
Proscan	1447, 3577, 3382, 2183, 3717, 3332, 3636, 4494, 3895, 3953, 4495, 4035, 4053, 4491, 3939, 4483, 4375, 4500, 2746, 3429, 4093

TV

Proview	1687
Pulsar	0017
Pyle	2196
Pyle Home	2196
QFX	3593
QuantumFX	3593
Quasar	1291, 4207, 3899, 4367, 3382
RCA	1447, 2434, 2247, 2746, 4214, 3577, 1781, 3382, 4740, 3332, 3717, 2932, 3895, 2187, 2183, 4494, 3636, 3939, 4488, 3953, 4053, 2855, 4491, 4627, 0679, 4035, 4483, 4495, 4623, 4625, 1661, 3519, 4629, 3938, 4093, 1670
Roku	4398
Runco	0017
Sampo	1755
Samsung	2051, 1632
Sansui	1892, 3540, 1670, 1463, 4053, 3564, 4280, 3559
Sanyo	1142, 1362, 4168, 4740, 4667, 3488, 2049, 1480, 1564
Sceptre	3899, 2528, 4886, 4139
Seiki	3953, 4635, 2964, 3559, 3560, 4794, 3382, 4217
Sens	1749
Seura	4751
Sharp	2360, 3519, 3394, 4618, 4740, 1659, 4507, 4398
Sigmac	3477, 3423
Silo	3899, 3477, 4182
Silo Digital	3899, 3477, 4182
SkyVue	4135, 2360
Solé	4549
Sony	0810, 4448, 4189
Spectroniq	1687
Speler	4105, 4041, 2434
SunBriteTV	2528, 1610
Sungpo	2360, 3519, 3394, 4618, 4740, 1659, 4507, 4398
Supersonic	3593, 2104, 1753
SVA	1963
Sylvania	1864, 1963, 1886, 1394, 1595, 3332, 4053
Symphonic	1595, 1963, 1394
Syntax	1610
Tatung	1756
TCL	4398, 2434, 3183, 3879
Technics	0017
TNCI	0017
Toshiba	2724, 3945, 4885
U-max	4629
Upstar	4182, 4405, 3899
Vidao	2397
Viewsonic	2014, 3706, 2087, 2277, 1755, 2049, 1564, 1365
Viore	3382, 2352, 3118, 2104, 3429, 3094
VisionQuest	1687
VIZIO	1758, 3758, 4905, 2707, 4723, 2757, 1756, 3415, 2512
W Box	4686
W Box Technologies	4686
Wards	0017
Westinghouse	1712, 4797, 3382, 4910, 5173, 2293, 3559, 2397, 3908, 4635
White Westinghouse	1661
Wyse	1365
Xiahua	1753, 1749
Xococo	1753, 1749
Zenith	0017, 1423, 1661, 2731, 1365, 2358, 3401, 1463

STREAM

STREAM

ABS	1272
AirTV	5295
Alienware	1272
Amlogic	4899
Apple	2615
Armada	4899
Beelink	5123
Boxee	3693
Ceton	1272
Cloud Media	2260
CyberPower	1272
Dell	1272
DishTV	5295
D-Link	3671, 3693
Echostar	5295
Funai	3339
Gateway	1272
G-Box Midnight	4440
Geniatech	4339
Hewlett Packard	1272
Howard Computers	1272
HP	1272
Hush	1272
iBUYPOWER	1272
Imega	2558
Kollins	4339
LG	3373
Linksys	1272
Logitech	3272
Magnavox	3339
Matricom	4440, 4899
Media Center PC	1272
Mi	3982
Micca	3850
Microsoft	4000, 1272, 2049
Millet	3982
Mind	1272
Minix	4413, 3884
MyGica	4339
Netgear	3324, 2036, 4401, 3292
NiveusMedia	1272
Northgate	1272
NVIDIA	4918
Ortek	3122
Panasonic	3760
PDP	5724
Pivos	4339
Popcorn Hour	2260
R-Box	5540
RCA	3335
Ricavision	1272
Roku	3061
Seagate	2698
Sling Media	5295, 3778
Sony	5724, 2713, 1272
Stack 9	1272
Systemax	1272
Tagar Systems	1272
Technicolor	5295
Tibo	4339
Toshiba	1272
Touch	1272
Vensmile	4899
Viewsonic	1272
VIZIO	3670
Voodoo	1272
Western Digital	2558
Xbox	4000, 2049, 1272
Xiaomi	3982
ZT Group	1272

STB

STB

Bell	0775, 1998, 5537, 1877, 5097
Rogers	1877, 1376, 5484, 2826, 3294, 4537
Vidéotron	2947, 1877, 1376
Shaw	1376, 1982, 2187, 1877, 4537
TELUS	5912, 3028, 5942, 0775
SaskTel	1998
Cogeco	1376, 1982, 3560, 4537
EastLink	1376, 2187
Cable Axion Digitel	1376

3 Rivers Telephone Cooperative	1376, 4437
702 Communications	0775
Accelplus	1376, 1877, 1982
Access Cable Television	1376, 1877, 1982
Access Communications	1376, 2187, 4537
Access Montana	1998, 2254, 3028, 3426, 3605
Ace Communications	2254
Acira	3605, 1376, 1877, 1982
ACME Communications	2254
ACTV Cablevision	1376, 1877, 1982
Adak Cablevision	1376, 1877, 1982
Adams Cable TV	1376, 4079
AdamsWells	4437
ADB	2586, 2254, 1481, 1998, 2302, 3028
Advanced Broadband	1376, 1877, 1982
Advanced Cable Communications	4079
Advanced Telemedia	1376, 1877, 1982
Advocate Communications	1376, 1982
AEBC	1998, 2254, 3028, 3426, 3605
Airwave Networks	1376, 1877, 1982
Alabama Broadband	1376
Algona Municipal Utilities	1376, 1877, 1982
All West Communications	1376
Alleghany Cablevision	1376, 1877, 1982
Allegiance Communications	1376
Alliance Communications	1376
Allied Telesis	1376, 1877, 1982
Allo Communications	1481, 1998, 2302, 2482, 3028
Alma Municipal Cable	1376, 1877, 1982
Almega Cable	1376, 1877, 1982
Alpine Cable	1376, 1877, 1982
Alsea River Cable	1376, 1877, 1982
Alta Utilities	1877
Altatec	1877
Alternative Cable	1376, 1877, 1982
Altice USA	1376, 1877, 3885, 3560, 1982
Altitude Communications	1376
American Broadband	1376, 1877, 1982
American Broadband Missouri	1376, 1877, 1982
American Entertainment Network	1376, 1877, 1982
American Telecasting	1376, 1877, 1982
American Warrior Networks	1376, 1877, 1982
Amherst Telephone	1376, 1877, 1982
Amino	1615, 1481, 1898, 3605, 2482, 2302, 1998, 3028, 3426, 4437
Andrew Telephone	1998, 2254, 3028, 3426, 3605
Anne Arundel Broadband	1376, 3560
Antenne TV de St-Zacharie	1376

Antietam Cable	1376, 1877, 1982
Arc One	1376, 1877, 1982
Arctic Cooperatives	1376, 1877, 1982
Argent Communications	1376, 1877, 1982
Arialink Broadband	1376, 1877, 1982
Arkwest	1481, 2482, 1998, 2302, 3028
Arledge Electronics	1376, 0775
Arlington TV Cooperative	1376, 1877, 1982
Armstrong	1376, 3560
Arris	1376, 2378, 1982, 1998, 2187, 5912, 0869, 1877, 5097, 0858, 5537, 5942
Arthur Mutual Telephone	1376, 1877, 1982, 1998, 2254, 3028, 3426, 3605
Arvig Communication Systems	1376, 1982, 1998, 2345
Ashland Home Net	1376, 1877, 1982
Askivision Systems	1376, 1877, 1982
Astrea	1376, 1877, 1982
AT&T	1377, 0858
AT&T U-verse	0858
ATC Communications	1376, 1951, 3560
ATI Networks	1376, 1877, 1982
Atlantic Broadband	1376, 1877, 1982, 3560, 4079
ATMC	1376, 1982, 3028, 1998
Atwood Cable	1376, 1877, 1982
Aurora by Hickory Telephone	1998, 2254, 3028, 3426, 3605
Aurora Cable TV	1376, 1877, 1982
Axtel	4458
Ayersville Communications	1998, 2254, 3028, 3426, 3605
Ayrshire Communications	1376, 1877, 1982
B & C Cablevision	1376, 1877, 1982
B & L Technologies	1376, 1877, 1982
Bagley Cable TV	1376, 1877, 1982
Bailey Cable TV	1376, 1877, 1982
Baldwin County Internet	1376, 1877, 1982
Baldwin Lightstream	1877, 3560
Baldwin Telecom	1877, 3560
Ballard Rural Telephone Cooperative	0775, 2302, 2586
Barbourville Utility Commission	1376, 1877, 1982
Bardstown Cable	1376, 1877, 1982
Bascom Communications	1376, 1877, 1982
Base Cablevision	1376, 1877, 1982
Bay Cablevision	1376, 1877, 1982
Bay City Cablevision	1376, 1877, 1982
Bay Country Communications	1376, 1877, 1982
Bay Creek Communications	1376
Bayland Communications	2586
Bayou Cable	1376, 1877, 1982
Beamspeed	1376, 1877, 1982
Beaver Creek Telephone	1877, 1982
Beaver Valley Cable	1951, 1376, 1877, 1982
Beck's Cable Systems	1376, 1877, 1982
Bee Line Cable	1376
Beehive Broadband	1376, 1481, 1982, 1998, 2302, 2482, 3028
BEK Communications	2254, 2302
BELD Broadband	1376, 1877, 1982
Belhaven Cable TV	1376, 1877, 1982
Bell	0775, 1998, 5537, 1877, 5097
Bell Aliant	1998
Bell Fibe TV	1998, 5097, 5537
Bell MTS	1998, 5097, 5537, 1951
Bell Satellite TV	0775
Bellaire Cable	1376, 1877, 1982
Bellevue Cable	1376, 1877, 1982

STB

Belzoni Cable	1376, 1877, 1982	Butler Bremer Mutual Telephone	1898
Ben Lomand TV	2254, 2302	BVU Optinet	1376, 1877, 1982, 1998, 2254, 3028, 3426, 3605
Bend Broadband	1376, 2187, 4079	BWTelecom	1376, 1982
Bentleyville Cable	1376, 1877, 1982	Byron Cable TV	1376, 1877, 1982
Benton Cooperative Telephone	1376, 1877, 1982	C & W Cable	1376, 1877, 1982
Benton County Cable	1376, 1877, 1982	C Spire	3605
Beresford Cablevision	1376, 1877, 1982	C.L. Davis Cable Services	1376, 1877, 1982
Berkshire Cable Corp	1376, 1877, 1982	Cable & Communications	1376
Bernard Telephone & Communications	2254	Cable America	1376
Beulah Cable TV	1376, 1877, 1982	Cable Amos	1376
Bevcomm	1951, 1898, 1615	Cable Axion Digitel	1376
Beyond Communications	1376, 1877, 1982	Cable Cable	1877
BGTCO	1898, 3605	Cable Communications of Willsboro	1376, 1877, 1982
Big Sandy Broadband	1376, 1877, 1982	Cable Cooperative	1376, 1877, 1982
Biltmore Communications	1376, 1877, 1982	Cable Development Corporation	1376, 1877, 1982
Blakely Cable Television	1376, 1877, 1982	Cable Management Association	1376, 1877, 1982
Bledsoe Telephone Cooperative	1481, 1998, 2254, 2302, 2482, 3028	Cable Montana	1376, 1877, 1982
Block Communications	1376	Cable Nebraska	1376, 1877, 1982
Bloom Broadband	0775	Cable Of The Carolinas	1376, 1877, 1982
Bloomingdale Communications	1481, 1998, 2302, 2482, 3028	Cable One	1376, 3560, 1877
Blue Mountain TV Cable	1376, 1877, 1982	Cable Plus	1376, 1877, 1982
Blue Ridge Communications	1877, 3560	Cable Suite	1376
Blue Sky Cable	1376, 1877, 1982	Cable Systems of Nevada	3605
Blue Stream	1376, 3560	Cable Tech Cable TV	1376, 1877, 1982
Blue Valley Telecommunications	1898, 3605	Cable TV of Camrose	1376
BlueBridge Media	1376, 1982	Cable TV of East Alabama	1376, 1877, 1982
Bluewave Communications	3426	Cable TV of Slave Lake	1376, 1877, 1982
Bobcaygeon Cable	1376, 1877, 1982	Cable TV of St. Paul	1376, 1877, 1982
BOLT Fiber Optic Services	1998, 2254, 3028, 3426, 3605	Cablecom Mexico	1376
Booher Brothers Cable	1376, 1877, 1982	Cablemás	1376, 1877
Bowen Cablevision	1376, 1877, 1982	Cablenet	1376, 1877, 1982
Bowling Cable TV	1376, 1982	CableSouth Media	1376, 1877, 1982
Boycom Cablevision	1376	Cableview Communications	1376, 1877, 1982
Branch Cable	1376, 1877, 1982	Cablevision	3885, 1376
Brandenburg Telecom	1481, 1998, 2302, 2482, 3028	Cablevision du Nord	1376
Brandywine Cablevision	1376, 1877, 1982	Cablevision of Marion County	1376
Brantley Telephone Company	1898	Cablevision T.R.P.	1376, 1877, 1982
Bresnan	1376, 1877	Cablevision Victoria	1376, 4375, 4537
Briand et Moreau Cable	1376, 1877, 1982	Cablevisión Mexico	1376, 4375, 4537
Bridger Cable TV	1376, 1877, 1982	CalNeva Broadband	1376, 1877, 1982
Bright Green Communications	1376, 1877, 1982	CalTel Connections	2254, 2586
Bright House	1877, 1376, 3294, 4537	Camellia Communications	1376, 1877, 1982
Bright House Networks	1877, 1376, 3294, 4537	Cameron Communications	1376, 1877, 1982
Bristol Tennessee Essential Services	1877, 1998, 2378	CAMS Cable	1376, 1877, 1982
Bristol Virginia Utilities	1376, 1877, 1982	Canaan Cable	1376, 1877, 1982
British-American Cable	1376, 1877, 1982	Canadian Valley Telephone	1998, 2254, 3028, 3426, 3605
Broadstar Communications	1376, 1877, 1982	Canby Telcom	1481, 2302
Broadstripe	1376, 3560	Cannon Valley Cablevision	1481, 1998, 2302, 2482, 3028
Brockway Television	1376, 1877, 1982	Caprock TV	1376, 1877, 1982
Broken Bow Cable TV	1376, 1877, 1982	Cardinal Cable Stanford	1376, 1877, 1982
Brooke Telecom	3426, 1898, 3605	Carnegie Cable	1376, 1877, 1982
Brooks Bay Cable	1376, 1877, 1982	Carolina Mountain Cable	1376, 1877, 1982
Brownwood TV Cable Service	1376, 1877, 1982	Carr Communications	1376, 1877, 1982
Bruce Telecom	3426	Carrell Communications	1376, 1877, 1982
Bryan Municipal Utilities	1376, 1877, 1982	CAS Cable	1376
BTC Broadband	2254, 2586	Cascade Communications	1376, 1877, 1982
Buckeye Broadband	1376, 1877, 2187, 4079	Cascade Networks	1998, 2254, 3028, 3426, 3605
Buckeye Cable System	1376, 1877, 2187, 4079	Casey Cable	1376, 1877, 1982
Buckland Telephone Company Communications	1998, 2254, 3028, 3426, 3605	Caspian Community TV	1376, 1877, 1982
Buford Media Group	1376, 1982	Cass Cable	1376
Bulldog Cable	1376, 1877, 1982	Castle Cable Service	1376, 1877, 1982
Bulloch Telephone Cooperative	1376, 1877, 1982	Catalina Cable	1376, 1877, 1982
Burgeo Broadcasting System	1376, 1877	Catawba Services	1376, 1877, 1982
Burke's Garden Telephone Company	1898, 3605	CATC	1376, 1877, 1982
Burlington Telecom	1481, 1615	CBN	1376, 1877, 1982
		CBPU Cable	1376, 1877, 1982
		CC Communications	1998, 2254, 3028, 3426, 3605
		CCAP	1877
		CDE Lightband	1998, 0858, 1615, 2254, 2586
		Cedar Falls Utilities	1376, 1951

STB

Celect Communications	1376, 1877, 1982	Clear Creek Communications	1376
Cellcom	1376, 1481, 1982, 1998, 2302, 2482, 3028	ClearChoice Communications	1376, 1982
Cencom	1376, 1877, 1982	Clearview Cable	1376, 1877, 1982
CentraCom Interactive	1376, 1877, 1982	Clearview Partners	1376, 1877, 1982
Central Arkansas Telephone Cooperation	3605	Clearview TV Cable	1376, 1877, 1982
Central Arkansas Telephone Cooperative	1376, 1877, 1982	Clearvision Cable TV	1376, 1877, 1982
Central Scott Telephone	1376, 1877, 1982, 1998, 2254, 3028, 3426, 3605	Click Network	1376, 1982
Central Texas Communications	1376, 1877, 1982	ClickOne	1376, 1877, 1982
Central TV & Internet	1376, 1877, 1982	Clinton Cable	1376, 1877, 1982
Central Valley Cable	1376, 1877, 1982	CLT Communications	1376, 1877, 1982
Centre TV Cable	1376, 1877, 1982	CLTel	1376, 1877, 1982
Centrovision	1376, 1877, 1982	CMA Communications	1376
Century Communications	1376, 1877, 1982	CML Telephone Cooperative	1376, 1877, 1982
Century Telephone	1376, 1877, 1982	CNS Television	1376, 1877, 1982
CenturyLink	1998, 0858	Co-Mo Connect	3426
CenturyTel TeleVideo	1376, 1877, 1982	Coast Cable Communications	1376, 2187
Chambers Cable	1376	Coast Cablevision	1376, 1877, 1982
Champion Broadband	1376, 1877, 1982	Coast Communications	1376
Channel Master	3118	Coastal Link	1376
Chaparral Cablevision	1376, 1877, 1982	Coaxial Cable TV	1376, 1877, 1982
Chariton Valley Communications	1376, 1877, 1982	Cobalt TV	1898
Charter	1877, 1376, 2187, 3560, 3294, 4537	Cobridge	1376
Charter Spectrum	1877, 1376, 2187, 3560, 3294, 4537	Cobridge Communications	1376
Chatmoss Cablevision	1376, 1877, 1982	Cochrane Co-op Telephone	1998, 2254, 3028, 3426, 3605
Chequamegon Telephone Cooperative	1898, 1615, 2254, 2302	CochraneTel	3426, 4437
Cherokee Broadband	1376, 1877, 1982	Cogeco	1376, 1982, 3560, 4537
Chesnee Communications	1376, 1877, 1982	Colane Cable TV	1376, 1877, 1982
Chester Telephone	1376	Coldwater Board of Public Utilities	1376, 1877, 1982
Chickamauga Telephone Corporation	1998, 2254, 3028, 3426, 3605	Colfax Highline Cable	1376, 1877, 1982
Chinook Progressive Club TV	1376, 1877, 1982	Collinsville Cable	1376, 1877, 1982
Chippewa Valley Cable	1376, 1877, 1982	Colonial Cablevision	1376, 1877, 1982
Choice Cable TV	1376, 1877, 1982	ColtonTel	1376, 2378
Choice Communications	1376, 1877, 1982	Columbia Power and Water	1376, 1877
Choice Television	1376, 1877, 1982	Columbus Telephone	1376
Christy Cablevision	1376, 1877, 1982	Com-Link	1376, 1877, 1982
CimTel	1376, 1951	Comcast	1982, 1376, 1877, 3560, 2187, 4079, 4443, 4537
Cincinnati Bell	1376, 1877	CommStream	1998, 2254, 3028, 3426, 3605
CIPI Cable	1376	Communication 1 Cablevision	2302
Circle Bar Cable Television	1376, 1877, 1982	Communication Services	1376, 1877, 1982
Cisco	1877, 1982, 2947, 0858, 3028, 2345, 2378, 5912, 1998, 4315, 3294, 4374, 5484, 2826, 4450, 4514, 5942	Communication Stratford	1376
Citizens Cable	1376, 1481, 2254, 2482	Commicomm	1376, 1877, 1982
Citizens Cable TV	1376	Community Antenna Service	1376, 1877, 1982
Citizens Cablevision	1481, 2482	Community Antenna System	1376, 1877, 1982
Citizens Fiber	1376, 1877, 1982	Community Cable & Broadband	1376
Citizens Mutual Telephone	1376, 1877, 1982	Community Cable Service	1376, 1877, 1982
Citizens Telecom	1376, 1877, 1982	Community Communications	1376, 1877, 1982
Citizens Telephone	2254, 2586	Community Fiber Solutions	1998, 2254, 3028, 3426, 3605
City Cablevision	1376, 1877, 1982	Community Telecom	1376, 1877, 1982
City of Barnesville Cable	1376, 1877, 1982	Community Telecom Services	1376, 1877, 1982
City of Baxter Springs Cable	1376, 1877, 1982	Community Television	1376, 1877
City of Bellevue Cable	1376, 1877, 1982	CommZoom	1376, 1877, 1982
City of Cawker City Cable	0775	Compagnie de Téléphone de Saint-Victor	3605
City of Fort Yukon Cable	1376, 1877, 1982	Compas Cable	1376, 1877, 1982
City of Hawarden Cable	1376, 1877, 1982	Complete Communication Services	1376, 1877, 1982
City of Norway Cable	1376, 1877, 1982	Comporium	1877, 3560, 2187
City of Quitman Cable	1376, 1877, 1982	Compton Communications	1376
City Of Salisaw	1376	Conserv	1376, 1877, 1982
City of Sumas TV Cable System	1376, 1877, 1982	ComSouth	1376, 1877, 1982
City West	1376	ComSpan Communications	1481, 1898
Clarence Telephone	1376, 1877, 1982	Comstar Cable TV	1376, 1877, 1982
		Concept Communications Corporation	1376, 1877, 1982, 1998, 2254, 3028, 3426, 3605
		Consolidated Cable	1376, 1877, 1982

STB

Consolidated Communications	1877, 1998, 2187, 1376, 3426, 3605, 0858, 1481, 1898, 1951, 2254, 2302, 2482, 2586	Dalton Utilities	1877, 1982
Consolidated Telcom	1376	Darien Communications	1376, 1982
Consolidated Telecommunications Company	1376, 1998, 3028	Davis Communications	1376, 1877, 1982
Continuum	1376, 1877, 1982, 2187	Dawson City Television	1376, 1877, 1982
Conuma Cable Systems	1376, 1877, 1982	DCA Cablevision	1376, 1877, 1982
Conway Corporation Cable TV	1376, 1877, 1982, 2187	DDD Cablevision	1376, 1877, 1982
Connxus	1376, 1877, 1982	Dean Hill Cable	1376, 1877, 1982
Coon Creek Telephone	1376, 1951, 2254, 3118	Dean's Cablevision	1376, 1877, 1982
Coon Rapids Municipal Utilities	1376, 1877, 1982	Decca Cable	1376, 1877, 1982
Coon Valley Telephone	2254, 3118	Deffner Cable TV	1376, 1877, 1982
Coop Câble Leeds	1376, 1877	Delcambre Communications	1898, 3605
Coop Câblodistribution de L'Isle-aux-Coudres	1376	Delhi Telephone	1376, 1877, 1982
Coop de Câblodistribution Sainte-Agathe	1376	Delta Cable	1376
Coop de Câblodistribution Ste-Catherine-Fossambault	1376	Demopolis CATV	1376, 1877, 1982
Cooperative Television Godahl	1376, 1877, 1982	Denali TV	1376, 1877, 1982
Coopérative Câblodistribution Notre-Dame-des-Monts	1376	Dery Telecom	1376, 1877
Coosa Cable	1376	DiamondNet	1376
Copper Mountain Metropolitan	1376, 1877, 1982	Dickey Rural Networks	1376, 1877, 1982
Corn Belt Telephone	1376, 1982	Diffusion Ferment	1376
Country Cable	1376, 1877, 1982	Digeo	2187
Country Cable TV	1376, 1877, 1982	Diode Communications	1376, 1877, 1982
Country Cablevision	1376	DirectLink	3605, 1481, 2302
Country Cablevision Ltd.	1376	DIRECTV	1377, 3724, 6268
Country Vision Cable	0775, 0869	DISH	0775
Cowley Telecable	1376, 1877, 1982	DISH Network	0775
Cox	1376, 1982, 1877, 4315, 3774, 3560	Dishpro	0775
Cox Communications	1376, 1982, 1877, 4315, 3774, 3560	Diverse Communications	1898, 1982
CP-Tel	1615, 1898, 2254	Dixie Cable TV	1376, 1877, 1982
CPWS	1376, 1877	Dixon Telephone	1376, 1877, 1982
Craig Cable TV	1376, 1877, 1982	DMS Cable	1376, 1877, 1982
Craw-Kan Telephone Cooperative	2254, 2586	Docomo Pacific	3560
Crestview Cable	1376, 1877, 1982	Downsville Community Antenna	1376, 1877, 1982
Cross Country TV	1376, 1877, 1982	Doylestown Cable TV	1376, 1877, 1982
Cross Telephone	1998, 2254, 3028, 3426, 3605	Drummond Cable TV	1376, 1877, 1982
Crosslake Communications	1376, 1877, 1982	DTC	1376, 1877, 1982
Crossman Cable	1376, 1982	Dumont Telephone	1376, 1877, 1982
Crow Cable TV	1376, 1877, 1982	Duncan Cable TV	1376, 1877, 1982
CRRS-TV	1376	Dunkerton Communications	1998, 2254, 3028, 3426, 3605
CRST Telephone Authority	1481, 1998, 2254, 2302, 2482, 3028	Duo County Telecom	2254
Crystal Broadband Networks	1376, 1877, 1982	E+ Broadband	1376, 1877, 1982
Crystal Cable TV	1376, 1877, 1982	E.Com	1376, 1877, 1982
CSI Cable	1376, 1877, 1982	Eagle Broadband	1481, 1998, 2254, 2302, 2482, 3028
CT & R Cable	1376, 1877, 1982	Eagle Cablevision	1376, 1877, 1982
CTC	1376, 1998, 3028	Eagle Communications	1376, 2187
CTV Beam	1376, 1877, 1982	Eagle Valley Telephone	1481, 1998, 2302, 2482, 3028
CumbyTel	1998, 2254, 3028, 3426, 3605	EagleVision Wireless TV Services	1376, 1877, 1982
Cunningham Telephone & Cable	1376, 1951, 2187	East Arkansas Video	1376
Curtis Cable TV	1376, 1877, 1982	East Cleveland Cable	1376, 1877, 1982
Custer Telephone Cooperative	1376, 1877, 1982	East Texas Cable	1376, 1877, 1982
CUTV	1376, 1877, 1982	Eastern Cable	1376, 1877, 1982
CWA Cable	1376, 1877, 1982	EastLink	1376, 2187
Cable F.B.	1376, 1877	EasyTEL	1481, 1998, 2302, 2482, 3028
Câblodistribution Ste-Hedwidge	1376, 1877	EATEL	1877, 3028
Câblodistribution Warwick	1877, 2947	Echostar	0775
D & D Cable Systems	1376, 1877, 1982	ElbertonNet	1376, 1877, 1982
D & P Communications	1376, 1951	Electron Enterprises	1376, 1877, 1982
Dairyland Cable Systems	1376, 1877, 1982	Elk River Cable TV	1376, 1877, 1982
Dais Digital Cable	1376, 1877, 1982	Elkhart TV Cable	1376, 1877, 1982
Dakota Central		Ellsworth Cooperative	
Telecommunications	2345	Telephone Association	3605
Dalton Cable Television	1877, 1982	Emery Telcom Video	1376, 1877, 1982
		Emily Coop Telephone	1481, 1615, 3605
		Empire Access	1898, 4437
		Endeavor Communications	2254, 2586, 3426
		Enhanced Telecommunications	1376, 2254
		Entone	3426, 2302, 1615, 1898, 4437
		EnTouch	1376
		EPB of Chattanooga	0858
		EPlus Broadband	1376, 1877, 1982
		Escape Broadband	1376, 1877, 1982
		Eston CATV Cooperative	1376, 1877, 1982
		ETAN Industries	1376, 1877, 1982
		ETC Communications	1376

STB

Etex 2586, 2302
 Evertex 2302
 Evolution 2479, 4079, 2746, 4315, 3560
 Evolution Digital 2479, 4079, 2746, 4315, 3560
 ExecuLink Telecom 1376, 3426
 Eyecom 1376, 1877, 1982
 F & B Communications 2254, 2586
 F & B Telephone 2254, 2586
 FairPoint Communications 1376, 1982
 Falcon Broadband 1376, 1877, 1982
 Falls Earth Station 1376, 1877, 1982
 FamilyView Cablevision 1376, 1877, 1982
 Fannettsburg Cable TV 1376, 1877, 1982
 Farmer & Merchant Mutual 1376, 1877, 1982
 Farmer's Telephone Cooperative 1998, 3028
 Farmers Cooperative Telephone Company 1376, 1877, 1982
 Farmers Independent Telephone 1376, 1877, 1982
 Farmers Mutual Telephone 3605, 1376, 1877, 1982
 Farmers Telecommunications Cooperative 3028
 Farmtel Communications 1376, 1877, 1982
 FCNQ 1376
 Federated Telephone 1376
 Fenton Cablevision 1376, 1877, 1982
 FiberCast Cable Communications 1376, 1877, 1982
 FiberFlex Media 2254, 3605
 FiberNet Monticello 1376, 1877, 1982
 Fibrant 1376, 1877, 1982
 Fidelity Communications 1376
 First Cable Of Missouri 1376, 1877, 1982
 FirstMile 1376, 1877, 1982
 FirstMile Technologies 1376, 1877, 1982
 Flint Cable TV 1376, 1877, 1982
 Florida Cable 1376, 1877
 Foothills Broadband 1877
 Foresite Wireless 1376, 1982
 Forsyth CableNet 1376, 1877, 1982
 Fort Jennings Communications 2586
 Fort Randall Telephone Company 1376, 1982
 Fort Townson Cable 1376, 1877, 1982
 Fosston Cable TV 1376, 1877, 1982
 Foster Communications 1376, 1877, 1982
 Frank Howard TV Cable 1376, 1877, 1982
 Frankfort Plant Board Cable 1376
 Franklin Telephone Company 1376, 1877, 1982
 Frontier 2378, 1998, 3560, 0775
 Frontier Communications 2378, 1998, 3560, 0775
 FTC 1982, 1376, 1877
 Full Channel TV 1376, 1877, 1982
 Full Choice Communications 1376, 1877, 1982
 Fusion Broadband 1376, 1877, 1982
 Futuristic Cablevision 1376, 1877, 1982
 Fédération des coopératives du Nouveau-Québec 1376
 Gainesboro CATV 1376, 1877, 1982
 Galaxy American Communication 1376, 1877, 1982
 Galaxy Cable 1376, 1877, 1982
 Gamewood 2254, 3605
 Garden Valley Technologies 1376, 1877, 1982
 Garden Valley Telephone 2302
 Gardonville Cooperative Telephone 0775, 1998, 2302
 Gatehouse Networks 1376, 1877, 1982
 Gauthier Cablevision & Electric 1376, 1877, 1982
 GCI 3560, 1376, 1877
 General Communications 3560, 1376, 1877
 Genext 1376, 1877, 1982
 Genuine Telecom 2254
 Geraldine Cable TV 1376, 1877, 1982
 Get Real Cable 1376, 1877, 1982
 GEUS 1376, 1877, 1982, 3560, 4079

Giant Communications 1376, 1877, 1982
 GiCable 1376
 Gigabit Minnesota 1998, 2254, 3028, 3426, 3605
 Giles-Craig Communications 1376, 1877, 1982
 Gilmer Cable Television 1376, 1877, 1982
 Glandorf Telephone 1481, 1615, 1898, 2254, 2586
 Glasgow Electric Plant Board 1376, 1877, 1982
 Glass Antenna Systems 1376, 1877, 1982
 Glenwood Telecommunications 1376
 Glide Cablevision 1376, 1877, 1982
 Globalcom 1376, 1877, 1982
 Golden Belt Telephone 2254, 2586
 Golden Communications 1376, 1877, 1982
 Golden Rain Foundation 1376, 1877, 1982
 Golden Valley Cable 1376, 1877, 1982
 Golden West Telecommunications 1376, 1877, 1982
 Goldfield Communications 1376, 1877, 1982
 Google 3666
 Google Fiber 3666
 Gorge Networks 1376, 1877, 1982
 Gorham Communications 1481, 2482
 Gosfield North Communications 1998, 2254, 3028, 3426, 3605
 Gowrie Cablevision 1376, 1877, 1982
 Grafton Cable Communications 1376, 1877, 1982
 Grand Mound Cooperative Tel 1998, 2254, 3028, 3426, 3605
 Grand River Cable 1376, 1877, 1982
 Grande Communications 1877, 3560, 1376
 Grantsburg Telcom 1376, 1877, 1982
 Great Plains Communications 1376
 GreatWave Communications 1376, 1877, 1982
 Green Hills Communications 1376, 1877, 1982
 Greene County Cable TV 1376, 1877, 1982
 Greenfield Communications 1376, 1982, 0775
 Greenlight Community Broadband 1376, 1877, 1982
 Gridley Cable 1376, 1877, 1982
 Griswold Cooperative Telephone 1481, 1998, 2254, 2302, 2482, 3028
 Grove Cable 1376, 1877, 1982
 Grundy Center Utilities 1376, 1877
 GTA Digital TV 2345
 GTel 1898, 3605
 GTI 1481, 1998, 2302, 2482, 3028
 Guadalupe Valley 1877, 2187
 Guy Chouinard Cable/TV 1376
 GVTC 1877, 2187
 H & B Cable Service 2482
 Haefele TV 1376, 1877, 1982
 Haines Cable TV 1376, 1877, 1982
 Hall Beach Cooperative 1376, 1877, 1982
 Halstad Telephone Company 3028
 Hamilton County Cable TV 1982, 1376, 1877
 Hancel 1376, 1877, 1982
 Hancock Telecom 2254
 Hanson Communications 1376, 1877, 1982
 Hardy Telecommunications 3605
 Hardy TV 3605
 Hargray 1877, 1376, 1982
 Harlan Community TV 1376
 Harlan Municipal Utilities 1376
 Harmony Cable TV 1376, 1877, 1982
 Harris Broadband 1376
 Harrisonville Telephone 2254, 2586
 Harron Metrocast 1376, 1877
 Hart Cable 1376, 1877, 1982
 Hart Electric 1376, 1877, 1982
 Hart Telephone Company 1376
 Hartelco 1376, 1877, 1982
 Hastings Cable Vision 1376, 1877, 1982
 Hawaiian Telcom 3028
 Hawarden HITEC Cable 1376, 1877, 1982

STB

Hawkeye Telephone Company 1376, 1877, 1982,
1998, 2254, 3028,
3426, 3605
Hay Communications 3426
Hayneville Telephone Company 1998, 2254, 3028,
3426, 3605
HBC 1376, 1877, 1982
HBL Communications 1376, 1877, 1982
HCS 1376, 1877, 1982
Healthcare Cable Systems 1376, 1877, 1982
Heart of Iowa Communications 1376, 1877, 1982
Heartland Cable 1376, 1877, 1982
Heartland Technology 1376, 1877, 1982
Heartland Wireless
Communications 1376, 1877, 1982
Heck's TV & Cable 1376, 1877, 1982
Henderson Telephone 1376, 1877, 1982
Hermosa Cablevision 1376, 1877, 1982
Herr Cable 1376, 1877, 1982
HFU Television 1376, 1877, 1982
Hiawatha Broadband 1376, 1877, 1982
HickoryTech 1898, 1951, 2302
High Plains Cablevision 1376, 1877, 1982
Highland 1877, 1376, 1982
Highland Telephone Cooperative 1877, 1376, 1982
Hightong 1376
Hill Top Communications 1376, 1877, 1982
Hillsboro Telephone 1998, 2254, 3028,
3426, 3605
Hinton CATV 1376, 1877, 1982
HLM Cable Corp 1376, 1877, 1982
Home Communications 1376, 1877, 1982
Home Telecom 1376, 3426, 4437
HomeTel 1376
Hometown Cable 1376, 1877, 1982
Hometown Utilicom 1376, 1877, 1982
Hood Canal Cablevision 1376
Hoonah Community Television 1376, 1877, 1982
Hooper Telephone 1376, 1877, 1982
Horizon Cable TV 1376, 2254, 2586
Horizon Telecom 2254, 2586
Horry Telephone Cooperative 1376, 1877, 1982
Hospers Telephone 1376, 1877, 1982
HOT - Homeland Optical
Technology 1376, 1877, 1982
Hotwire 2254, 2586
Houston Cable 1376, 1877, 1982
HTC Communications 1481, 1998, 2302,
2482, 3028
HTC Services 1376, 1877, 1982
HTS 0775
Huawei 4589, 1982, 4883
Hughes Network Systems 1377
Humax 1377, 1877, 3560
HunTel Systems 1376
HuronTel 3426, 1898, 3605
Huxley Communications 1376, 1877, 1982
Hydaburg Cable TV 1376, 1877, 1982
HYDE County Cablevision 1376, 1877, 1982
I-Speed 1376, 1877, 1982
I3 Broadband 1376, 1877, 1982
ICE Cable Holdings 1376, 1951
ICS Communications 1376, 1877, 1982
ICSI Cable 1376
iFiber Communications 2254
IHR Telecom 3426, 4437
Ile-a-la-Crosse
Communications Society Inc. 1376
Illini Cablevision Of Illinois 1376, 1877, 1982
ImOn Communications 1877
Indco Cable TV 1376, 1877, 1982
Independence County Cable 1376, 1877, 1982
Independence Light & Power 1376, 1877, 1982
Independence Telecom Utility 1376, 1982
Independent Cable Systems
of Idaho 1376, 1877, 1982
Indevideo 1376, 1877, 1982
Index Cable TV 1376, 1877, 1982

IndyTel 1376, 1877, 1982
Innovative Cable TV 1376
Innovative Systems 1376, 1898
Inside Connect Cable 1376
Integra Telecom 2345
Intelliwave 1998, 2254, 3028,
3426, 3605
Inter Mountain Cable 1877, 2479, 4079,
2826, 3294
Inter-County Cable 1376, 1877, 1982
Interstate Cablevision 1481, 1998, 2254,
2302, 2482, 3028
Interstate Telecommunications
Cooperative 2254, 2302
Intertech Private Cable 1376, 1877, 1982
Infouch 1998, 2254, 3028,
3426, 3605
Iowa Network Services 2302
Iron River Cooperative TV 1376, 1877, 1982
Irvine Community TV 1376, 1877, 1982
Izzi Mexico 1376, 6195, 4375,
4537
Izzi Telecom 1376, 6195, 4375,
4537
J & L Cable 1376, 1877, 1982
J & N Cable 1376, 1877, 1982
Jack McClanahan Cable TV 1376, 1877, 1982
Jackson Energy Authority 1376, 1877, 1982
Jaguar Communications 1376, 1877, 1982
James Cable Partners 1376, 1877, 1982
James Valley Cooperative
Telephone 2254, 2586
Jayroc Cablevision 1376, 1877, 1982
Jefferson County Cable 1376, 1877, 1982
Jefferson Telecom 1376, 1877, 1982
Jeffersonville Cable TV 1376, 1877, 1982
Jerrold 0869
Jet Broadband 1376
Johnston County Cable 1376, 1877, 1982
Journeyvision Cable 1376, 1877, 1982
JVC 0775
K-Communications 1376, 1877, 1982
K2 Communications 3560
Kalida Telephone 1376, 1877, 1982,
2254
Kalona Cooperative Telephone 2254, 2586
Kaltelco 1481, 1998, 2302,
2482, 3028
Kaon 2746, 4458
Kaon Media 2746, 4458
Kaplan Telephone 2254, 2586
Karban TV Systems 1376, 1877, 1982
KAS Cable TV 1376, 1877, 1982
Kaslo Cable 1376, 1877, 1982
Kawartha Cable 1376, 1998, 2254,
3028, 3426, 3605
KBS Cable TV 1376
Keene Valley Video 1376, 1877, 1982
Kelley Communications 1376, 1877, 1982
Kennebec Telephone 1376, 1877, 1982
Kennedy Cablevision 1376, 1877, 1982
Kentucky Ridge Country
Communications 1376, 1877, 1982
Keta Cable 1376, 1877, 1982
KFW Communications 1376, 1877, 1982
Kincardine Cable TV 1376
Kings Bay Communications 1376, 1877, 1982
KLiP 1376, 1877, 1982
KM Telecom 1481
KoolConnect 1481
Koomiut Cooperative 1376, 1877, 1982
KPU Telecommunications 1615, 1898, 2302,
3426, 3605
Kraus Electronic Systems 1376, 1877, 1982
Kudzu Cable TV 1376, 1877, 1982
Kugluktuk Cooperative 1376, 1877, 1982
Kuhn Communications 1376, 1877
L & J Cable 1376, 1877, 1982

STB

La Harpe Communications 1376, 1877, 1982
 La Harpe Video and Data Services 1376, 1877
 Lafayette Utilities System 1376, 1951, 1998
 Laguna Serrano Cable 1376, 1877, 1982
 Lake Cable 1376, 1877, 1982
 Lake Connections 1898, 3605
 Lake Las Vegas Communications 1376, 1877, 1982
 Lake Livingston Telephone 1998, 2254, 3028, 3426, 3605
 Lake Region Technology & Communications 3426, 4437
 Lakeland Cablevision 1376, 1481, 1877, 1982, 1998, 2254, 2302, 2482
 Lakeland Telecom 1481, 1998, 2254, 2302, 2482, 3028
 Lakeview Cable 1376, 1877, 1982
 Lamont Digital Systems 1376, 1877, 1982
 LaMotte 1998, 2254, 3028, 3426, 3605
 Lang 1376, 1877, 1982
 Lansdowne Telephone 1998, 2254, 3028, 3426, 3605
 Laurel Highland 1376, 1877, 1982, 2187
 Laurens Municipal Cable TV 1376, 1877, 1982
 LaValle Telephone Cooperative 2254, 2586
 Layer3 TV 5370, 1998
 LB Cable 1376, 1877, 1982
 Lehigh Valley Cooperative Telephone 1376, 1877, 1982
 Lemonweir Valley Telephone 1481, 1998, 2302, 2482, 3028
 Lenox Municipal Cable 1376, 1877, 1982
 Levan Town Cablesystems 1376, 1877, 1982
 Lewiston Communications 1376, 1877, 1982
 Lexcom Cable Services 1376, 1877, 1982
 LG 1377
 LHTC 1376, 1877, 1982, 2187
 LHTC Broadband 1998, 2254, 3028, 3426, 3605
 Liberty Cablevision 1376
 Liberty Communications 1481, 2254, 2302, 2586, 3605
 Lighthouse.Net 1376, 1877, 1982
 LightStream 1998, 2254, 3028, 3426, 3605
 LigTel 1998, 2254, 3028, 3426, 3605
 Limestone Cablevision 1376, 1877, 1982
 Lincoln Cable Television 1376
 Lincolnville 1376
 Lindsey Communications 1376, 1877, 1982
 LISCO 1376, 1877, 1982
 Litestream Holdings 1376, 1877, 1982
 LivCom 1998, 2254, 3028, 3426, 3605
 Livingston Communications 1998, 2254, 3028, 3426, 3605
 LNE Communications 1376, 1877, 1982, 3605
 LNE Telco 1376, 1877, 1982, 3605
 Localtel 1376, 1877, 1982
 Lockesburg Cablevision 1376, 1877
 LodgeNet 1376, 1877
 Lodgenet Entertainment 1376, 1877
 Lone Pine Cable TV 1376, 1877, 1982
 Longview Communications 1376, 1877, 1982, 4079
 Lonsdale Video Ventures 1481, 1998, 2254, 2302, 2482, 3028
 Loretel Cablevision 1376, 1877, 1982
 Loretel Systems 1376
 Lost Island Cable TV 1376, 1877, 1982
 LPC Connect 1898

Lucas Valley Cable 3560
 Lumos Networks 1998, 3028
 LUS Fiber 1998, 3028
 Lycom Communications 1376, 1877, 1982
 M-Tek Systems 1376, 1877, 1982
 M.T.C. Cable 1376, 1877, 1982
 Maddock Cable TV 1376, 1877, 1982
 Madison Communications 1376, 1982
 Madison County Cable 1376, 1877, 1982
 Mahaska Communications 1376, 1877, 1982
 Mainstreet Communications 1376, 1877, 1982
 Maitland Cable TV 1376, 1877, 1982
 Mallard Cable 1376, 1877, 1982
 Manawa Telecom 2254, 2586
 Manning Municipal Utilities 1376, 1877, 1982
 Manti Telecom 1481, 1998, 2254, 2302, 2482, 3028
 Mapleton Communications 1376, 1877, 1982
 Marco Island Cable 1376, 1877, 1982
 Markdale Cable TV 1376
 Marne & Elk Horn Telephone 1376, 1877, 1982
 Marquette-Adams Telephone 1376, 1877, 1982
 Martell Cable 1376, 1877, 1982
 Martelle Communications 1376, 1877, 1982
 Cooperative 1376, 1877, 1982
 Mascon Cable 1376
 Maskatel 1898, 3605
 Masset-Haida TV Society 1376, 1877, 1982
 Massillon Cable 1376, 2187
 Master Vision Cable 1376, 1877, 1982
 Matanuska Telephone Association 1481, 2254, 2482, 2586
 Matrix Cablevision 1376, 1877, 1982
 Mattawamkeag Cablevision 1376, 1877, 1982
 Maxcom 1998
 MaxSouth 1376
 McDonough Telephone 1376, 1877, 1982
 Cooperative 1376, 1877, 1982
 McKee TV Enterprises 1376, 1877, 1982
 McNabb Cable 1376, 1877, 1982
 MCTV 1376, 2187
 McVillie Cable System 1376, 1877, 1982
 Mechanicsville Telephone Company 1376, 1877, 1982
 Media Cast 1376, 1982
 Media One 1376, 1877, 1982
 Mediacom 1376, 3560, 1982, 1877
 Mediapolis Telephone 1376, 1982
 Mediastream 1376
 Megacable 1376, 4374, 4450, 4514, 4375, 4537, 4883
 Merrimac Communications 1376
 Metlakatla Indian Community TV 1376, 1877
 Metro Loop 3605
 MetroNet 1998, 0858
 Metropolitan Cable 1376, 1877, 1982
 MGS Cablevision 1376, 1877, 1982
 MHTC 1481, 1998, 2254, 2302, 2482, 3028
 Mi-Connection 1877
 Mlcom 1376, 1877, 1982
 Microwave Satellite Technologies 1481, 1998, 2254, 2302, 2482, 3028
 Mid Century Telecom 1481, 1615
 Mid Missouri Broadband & Cable 1376, 1877, 1982
 Mid Missouri Telephone 1376, 1877, 1982
 Mid-Coast Cablevision 1376, 1877, 1982
 Mid-Hudson Cable 1376
 Mid-Plains Rural Telephone Cooperative 3028
 Mid-Rivers Communications 1376
 Mid-South Cablevision 1376, 1877, 1982
 Mid-State Community TV 3560
 Midamerican Cable Systems 1376, 1877, 1982

STB

Midco	1376, 1982, 3560, 2826, 4079	NEMR Telecom	1898
Midcontinent Communications	1376, 1982, 3560, 2826, 4079	NEOTech	4596
Midstate Communications	1376, 1877, 1982	New Century Communication	1376, 1877, 1982
Midtel Cable TV	1376, 1877, 1982	New Day Broadband	1376, 1877, 1982
Milaca Local Link	1376, 1877, 1982	New England Cable	1376, 1877, 1982
Milcom Cable	1376, 1877, 1982	New Hope Telephone	2302
Milestone Communications	1982, 0775	New Jersey Broadband	1376, 1877, 1982
Milford Cable TV	1376, 1877, 1982	New Knoxville Cable Systems	1376, 1877, 1982
Milford Communications	1376, 1877, 1982	New Lisbon Broadband and Communications	1998, 2254, 3028, 3426, 3605
Milk River Cable Club	1376, 1877, 1982	New North Networks	1376, 1877, 1982
Millennium Telecom	1481, 1998, 2302, 2482, 3028	New Paris Quality Cablevision	1376, 1877, 1982
Millheim TV Transmission	1376, 1877, 1982	New Visions Communications	1376, 1877, 1982
Millington CATV	1376, 1877, 1982	New Windsor Telephone	1376, 1877, 1982, 2302
Minburn Communications	1481, 1998, 2302, 2482, 3028	Newcastle Cablevision	1376, 1877, 1982
Minerva Networks	3118	NewDawn Fiber	1998, 2254, 3028, 3426, 3605
Minerva Valley Cable	1376, 1877, 1982	Newpath Communications	1877, 1982
MINET	1877	NewWave Communications	1376, 2187
Minford Telephone Company	3426, 3605	Nex-Tech	2482
Mitchell Telecom	1898, 2254, 2586, 3605	NexGen	1376, 1877, 1982
MLGC	1376	NexHorizon Communications	1376, 1877, 1982
MLGC Cable TV	1376, 1877, 1982	Nexicom Communications	1376, 1877, 1982
MM&G Enterprises	1481, 1998, 2302, 2482, 3028	NextGen Communications	1376
MMDS Wireless East	1376, 1877, 1982	NfinityLink Communications	1376, 1982
Mobius Communications	1376, 1877, 1982	NFTC	1998, 2254, 3028, 3426, 3605
Monroe Cablevision	1376, 1877, 1982	Niagara Community TV Cooperative	1376, 1877, 1982
Monroe Utilities	1376, 1877, 1982	NICP	1998, 2254, 3028, 3426, 3605
Montana Opticom	1376, 1877, 1982	Nimpkish Valley Communications	1376, 1877, 1982
Montana Sky Networks	0775	NineStar Connect	2254, 3426, 4437
Moosehead Enterprises	1376, 1877, 1982	Nittany Media	1376, 1951
Mornington Communications	3426	NKTelco	3426, 1615, 1898, 1376
Morris Broadband	1376	Nor-Cal Cable Systems	1376, 1877, 1982
Morristown Utility Systems	1877	Nor-Del Cablevision	3560, 2479
Mosaic Telecom	1376, 2586	Nortex Communications	1376, 1877, 1982
Motorola	1376, 0869, 2378, 1998, 1951, 0858, 1982, 4375, 5097, 3469	North American Communications	1376, 1877, 1982
Moultrie Telecommunications	1376, 1877, 1982	North Central Telephone	2302, 2345
Mountain Shadows Cable TV	1376, 1877, 1982	North Crossroads Communications	1376, 1877, 1982
Mountain Telecommunications	1376, 1877, 1982, 3426, 4437	North Dakota Telephone	2586
Mountain Telephone	1376, 1877, 1982	North Eastern Penn Telephone	2302
Mountain Zone TV	1376, 1877, 1982	North Frontenac Telephone Company	1998, 2254, 3028, 3426, 3605
Moxi	2187	North Nova Cable	1877, 1982
Mt. Baker Cable	1376, 1877, 1982	North Star Cablevision	1376, 1877, 1982
MTA	1481, 2254, 2482, 2586	North State Communications	0858, 3028
MTC Communications	1376, 1982	North Texas Broadband	1376, 1877, 1982
MTC Mutual	2482	North Yellowstone Cable TV	1376, 1877, 1982
MTC Technologies	1376, 1982	Northeast Nebraska Telephone Company	1898, 3605
MTCO Communications	2254	Northern Cable Holdings	1376, 1877, 1982
Mulberry Telecommunications	2254, 3426	Northern Lakes Cable TV	1376, 1877, 1982
Multiband Cable	1376, 1877, 1982	Northerntel	0775
Municipality Cable Operator	1376, 1877, 1982	Northland Cable TV	3560
Murphy Cable	1376, 1877	Northland Communications	1376
Murray Electric System	1376, 1877, 1982	Northpenn	2254, 2586
Muscatine Power & Water	1376, 3426, 3605, 4375	Northside TV	1376, 1877, 1982
N.W. Communications	1376, 1877, 1982	Northstar Broadband	1376, 1877, 1982
Natco Communications	1998, 2254, 3028, 3426, 3605	Northwest Communications	1376, 1877, 1982
National Cable	1376, 1877, 1982	Northwest Community	1877
Naujat Cooperative	1376, 1877, 1982	Northwest Telephone Cooperative	1376, 1877, 1982
NDTC	1481, 1998, 2302, 2482, 3028	NorthwestTel	1376
Nebraska Central Telecom	1376, 1877, 1982	Norvado	2254, 2302, 2586
NEC	1377	Norwood Light Broadband	1376
NEIT	1376, 1877, 1982	Nova Cable Management	1376, 1877, 1982
Nelson County Cablevision	1376, 1877, 1982, 3560	Nova Cablevision	1376, 1877, 1982
Nelsonville TV Cable	1376, 1877, 1982	Novus	1376, 1877
Nemont Communications	1376, 1877	NPG Cable	1376

STB

Nsight	2254, 2302, 2345, 2586	Paul Communications	1376, 1877
NTC Cable Services	1376, 1877, 1982	PBT Cable Services	1376, 1877, 1982
nTelos	1998	PC One Cable	1376, 1877, 1982
NTS Communications	1376, 1877, 1982	PDQ Cable TV	1376, 1877, 1982
NU Telecom	1998, 3028	PEC Cablevision	1376, 1877, 1982
NuLink	1376, 1877, 1982	Pegasus Communications	1376, 1877, 1982
Nushagak Cooperative	1376, 1877, 1982	Pembroke Advanced Communications	1998, 2254, 3028, 3426, 3605
Nuvera	1998, 3028	PennVideo Network	3560
NuVisions	0775	Peoples CATV	1376, 1877, 1982
NVC	2254	Peoples Rural Telephone Cooperative	1376
O-Net	1898, 3426, 3605	Persona Communications	1376, 1877, 1982
Oak Cable Systems Of Iowa	1376, 1877, 1982	PES Energize	4437
Oak Hill Cablevision	1376, 1877, 1982	Philippi Communications	1376, 1877, 1982
Oakview Cable	1376, 1982	Philips	1377, 2619, 2378, 3560, 3469
Oasis Communications	1376, 1877, 1982	Phoenix	1376
Ogden Telephone	1998, 2254, 3028, 3426, 3605	Phoenix Cable	1376, 1877, 1982
Olin-Morley Telephone Company	1376, 1877, 1982	Phonoscope Communications	1376, 1877, 1982
Omni III Cable TV	1376, 1877, 1982	Pickwick Cablevision	1376, 1877, 1982
OmniTel Communications	1376, 1877, 1982, 1998, 2254, 3028, 3426, 3605	Piedmont Cable Services	1376, 1877, 1982
Oneida Cablevision	1376, 1877, 1982	Pine Belt Communications	1376, 1877, 1982
OneLink	1376, 1877, 1982	Pine Bluff Cable	1376
OneSource Communications	1376	Pine Island Telephone	1481, 1998, 2254, 2302, 2482, 3028
Opelika Power Services	1998, 2254, 3028, 3426, 3605	Pine River Cable	1376, 1877, 1982
OpenBand of Virginia	1998, 2254, 3028, 3426, 3605	Pine Tree Cablevision	1376, 1877, 1982
Opp Cablevision	1376, 1877, 1982	Pineland Telephone Cooperative	1898, 1481, 1615, 2254, 2586
Optic Communications	1376, 1877, 1982	Pineville Communication Systems	2254
OptiLink	1877	Pinpoint Communications	1376, 1877, 1982
Optimum	3885, 1376	Pioneer	1877
Orbital Communications	1376	Pioneer Broadband	1376, 1877, 1982
Oregon Cable Group	1376, 1877, 1982	Pioneer Cable	1376, 1877, 1982
Orion Broadband	1376, 1877, 1982	Pioneer Communications	1376, 1877, 1982
Orion Cablesystems	1376, 1877, 1982	Pioneer Long Distance	1898, 2302
Osage Municipal Utilities	1376, 1877, 1982	Pioneer Telephone	2254, 2302
Otec Communication	1376, 1877, 1982, 1998, 2254, 3028, 3426, 3605	Pitcairn Community Cable TV	1376, 1877, 1982
OTEC Communications	2254, 2586	Plant Communication	1376, 1877, 1982
Otelco	2302	Plantation Cable System	1376, 1877, 1982
OTZ Telecom	1998, 2254, 3028, 3426, 3605	Plateau	3028
OTZ Telephone Cooperative Inc	1998, 2254, 3028, 3426, 3605	Pleasant Vision	1376, 1877, 1982
Our Cable	1376, 1877, 1982	Polar Communications	2254, 2586
Overton County Cable	1376, 1877, 1982	Polaris Cable	1376, 1877, 1982
Oxford Networks	1376, 1877, 1982	Ponderosa Cablevision	1376, 1877, 1982
Ozarks Go	1998	Poplar Bluff Municipal Utilities	1481, 1998, 2302, 2482, 3028
Ozona Cable & Broadband	1376, 1982	Portal Cablevision	1376, 1877, 1982
Pace	1982, 1376, 1377, 1877, 3469, 3560, 1998, 0858, 6195, 4537, 5370	Post Cablevision	1376, 1877, 1982
Packerland Broadband	1376	Potelco	1998
Paleajook Cooperative	1376, 1877, 1982	Pottawatomie Telephone Company	1998
Palmer Mutual Telephone	1376, 1877, 1982	Premier Communications	1376
Palmetto Rural Telephone Cooperative	0858	Price County Telephone	1481, 1998, 2254, 2302, 2482, 3028
Palo Cooperative Telephone Association	3426, 4437	Prime Cable Corporation	1376, 1877, 1982
Panasonic	1982	Prime Time Cable	1376, 1877, 1982
Pangnirtung Cooperative	1376, 1877, 1982	Princetown Cable	1376, 1877, 1982
Panhandle Telephone	1376	Private Cable Systems	1376, 1877, 1982
Panora Telecommunications	1481, 2482	Private Network Cable Systems	1376, 1877, 1982
Paragould Light & Water	1376, 1877, 1982	Progressive Rural Telephone	1376, 1877, 1982
Parish Communications	1376, 1877, 1982	Project Mutual Telephone	1481, 1898, 1998, 2302, 2482, 3028, 3605, 4437
Park Region Mutual Telephone	1481, 1998, 2302, 2345, 3028	Project Services	1376, 1877, 1982
Park TV & Electronics	1376, 1877, 1982	Provincial Cable	1376, 1982
Partner Communications	1376, 1877, 1982	PSC	1481, 1998, 2302, 2482, 3028
Passcom Cable	1376, 1877, 1982	PTCI	1376
Pathway Com-Tel	1376, 1877, 1982	PVT Networks	1376, 1877, 1982
Patterson Cable TV	1376, 1877, 1982	Quadro Communications Cooperative	1376
Paul Bunyan Communications	2254, 2586	Quality Cable TV	1376, 1877, 1982, 2482

STB

Quality One Technologies	1481, 1998, 2302, 2482, 3028	Royal Telephone	1376, 1877, 1982
QuantumVu	1376, 1877, 1982, 1998, 2254, 3028, 3426, 3605	Royal Telephone Company	1998, 2254, 3028, 3426, 3605, 1376, 1877, 1982
Quinter Cable	1376, 1877, 1982	RS Fiber	1998, 2254, 3028, 3426, 3605
Qwest	1377	RTC	1376, 1877, 1982
R & R Cable	1376	RTEC Communications	1376, 1877, 1982
R Tec Communications	1376, 1877, 1982, 1998, 2254, 3028, 3426, 3605	RTI Telecom	1376
Radcliffe Telephone	1376, 1877, 1982	Runestone Telcom	1376, 1877, 1982
Raftview Communications	1376, 1877, 1982	Rural Route Video	1376, 1877, 1982
Rainbow Cable	1376, 1877, 1982	Rural Telephone Company	1376
Rainbow Communications	1376, 1877, 1982	RuralWave	1376, 1998, 2254, 3028, 3426, 3605
Rainbow Lake Cable TV	1376, 1877, 1982	RuralWest	1376, 1877, 1982
Rainier Connect	1376, 1877, 1982	Russell Municipal Cable TV	1376, 1877, 1982
Ramapo Cable	1376, 1877, 1982	Russellville Electric Plant Board	2586
Rancho Murieta Association	1376	S & K TV Systems	1376, 1877, 1982
Randolph Communications	2254, 4437	S & T Communications	1376, 1877, 1982
Randolph Telephone	2254, 2586	S-GO Video	1877, 1982
Rapid Communications	1376, 1877, 1982	S.Bryer Cable TV	1376, 1877, 1982
RC Communications	1376, 1877, 1982	Sac County Mutual Telephone	1376, 1982
RC Technologies	1376, 1877, 1982	Sagemcom	3885
RCN	1376, 3560, 1877	Salem Cable Vision	1376, 1877, 1982
Reach Broadband	1376, 1877, 1982	Sallisaw Municipal Authority	1376, 1877, 1982
Readlyn Telephone	2586	Salsgiver Communications	1998, 2254, 3028, 3426, 3605
Rebeltec Communications	1376, 1877, 1982	Samsung	1377, 1877, 1982, 2947, 3928, 6268
Red River Cable	1376, 1877, 1982	San Bruno Municipal Cable TV	1376, 1877, 1982
Red River Communications	1998, 2254, 3028, 3426, 3605, 1376, 1877, 1982	San Carlos Cablevision	1376, 1877, 1982
Reds Cable TV	1376, 1877, 1982	San Juan Cable	1376, 1877, 1982
Regional Cable TV	1376, 1877, 1982	San Simeon Community Cable	1376, 1877, 1982
Reinbeck Telecommunications	1376, 1877, 1982	Sand Creek Communications	1998, 2254, 3028, 3426, 3605
Reliance	1376, 1877	Sandhill Telephone Coop	1998, 2254, 3028, 3426, 3605
Reliance Connects	1376, 1877, 1982	Santa Rosa Telephone	1998, 2254, 3028, 3426, 3605
Reliant Communications	4437	Santel Comm Cooperative	1376, 1877, 1982
Reservation Telephone	1376, 1998, 2345	SaskTel	1998
Reserve Long Distance	1376, 1877, 1982	Satco Cable TV	1376, 1877, 1982
Resnet Communications	1376, 1877, 1982	Satellite Cable Services	1376, 1877, 1982
Resort Cable	1376	Satellite Operations	0775
Reveille Broadband	1376, 1877, 1982	Satellite TV Systems	0775
Revelstoke Cable	1376	Satview Broadband	1376, 1877, 1982
Reynolds Cable	1376, 1877, 1982	Saugeen Telecable	1376, 1877, 1982
Reynolds Telephone Company	1998, 2254, 3028, 3426, 3605	Savage Communications	1376, 1877, 1982
RGA Cable	1376, 1877, 1982	Sayward Valley Communications	1376, 1877, 1982
Richland Grant Telephone Cooperative	1376, 1877, 1982	Schindler Cable TV	1376, 1877, 1982
Ridgeville Telephone Company	1376, 1877, 1982, 1998, 2254, 3028, 3426, 3605	Schurz Communications	1376, 1982
Ridgewood Cablevision	1376, 1877, 1982	SCI Cable	1376, 1877, 1982
Ringgold Telephone	1376, 1877, 1982	Scientific Atlanta	1877, 0858, 1982, 2345, 3028, 2378, 2826
Ringfel Communications	1376, 1877, 1982, 1998, 2254, 3028, 3426, 3605	Scio Cablevision	1376, 1877, 1982
Rio Virgin Telephone	1376, 1877, 1982	Scott County Telephone Cooperative	1376, 1877, 1982
Riondel Community Cable Society	1376, 1877, 1982	Scott Telecom And Electronics	1376, 1877, 1982
Ripley Video Cable	1376, 1877, 1982	Scottsboro Cable TV	1376, 1877, 1982
Ritter Cable	1376, 1877, 1982	Scranton Telephone Company	1998, 2254, 3028, 3426, 3605
River Road Cable	1376, 1877, 1982	Sea Island	1877
River Valley Cable TV	1376, 1877, 1982	Seaside Cable TV	1376, 1877, 1982
River Valley Telecommunications	1481, 1998, 2254, 2302, 2482, 3028, 1376, 1877, 1982	Seaview Communications	1376, 1877, 1982
Riverside Cablevision	1376, 1877, 1982	SecureVision	1376, 1877, 1982
Riviera Cable TV	1376, 1877, 1982	SEI Robotics	1376
Robins Cable TV	1376, 1877, 1982	Selco	1376, 1877, 2826, 3560
Rock Port Cablevision	1376, 1877, 1982	Semo Communications	1376, 1877, 1982
Rockwell Cooperative Telephone Association	1376, 1877, 1982	Senior TV	1376, 1877, 1982
Rocky Mountain Cable Systems	1376, 1877, 1982	Service Electric	1376, 1982, 1877, 2187
Rogers	1877, 1376, 5484, 2826, 3294, 4537	Service One Cable	1376, 1877, 1982
Roome Telecommunications	1376, 1877, 1982	Shannon Vision	1376, 1877, 1982
		Sharon Telephone Company	1376, 1877, 1982, 0775

STB

Shaw 1376, 1982, 2187,
1877, 4537
Shaw Direct 0869
Shawano Municipal Utilities 1376, 1877, 1982
Shellsburg Cablevision 1376, 1877, 1982
Shen-Heights TV 1376, 1877, 1982
Shenandoah Cable 1376, 1877, 1982
Shenandoah
Telecommunications 1376, 1877, 1982
Shentel 1376, 1877, 1982,
2187
Sherburne Cable 1376, 1877, 1982
Sherman Cablevision 1376, 1877, 1982
Shrewsbury Electric & Cable 1376, 1877, 2826,
3560
Silver Star Communications 1481, 1998, 2302,
2482, 3028
Simpson Country Cable TV 1376, 1877, 1982
Siren Telephone Company 1998, 2254, 3028,
3426, 3605
Siskiyow Cablevision 1376, 1877, 1982
Sister Lakes Cable 1376, 1877, 1982
Sjoberg's Cable TV 1376
Skisat 1376, 1877, 1982
SKT 1376, 1877, 1982
Sky Cablevision 1376, 1877, 1982
Sky Mexico 3469, 2619, 1377
SkyBest TV 2586
SkyFiNet 1998, 2254, 3028,
3426, 3605
Skyline Cable 2254, 2586
SkyLine TMC 2586
SkyPix 1481, 1998, 2302,
2482, 3028
Skyworth 1376
Sleepy Eye Telephone 2345
Slic Network 3426, 4437
Small Town Cable 1376, 1877, 1982
Smithville 2586
Socket TV 1898, 3426, 3605
Sogetel 1998, 2482
Solarus 3028
Somerfield Cable TV 1376, 1877, 1982
Source Cable 1376
South Benton Cablevision 1376, 1877, 1982
South Central Communications 1376, 1877, 1982
South Central RTC 1951
South Holt Cablevision 1376, 1877, 1982
South Island Cable 1376
South Kountry Cable 1376
South Slope Communications 1376, 1877, 1982
Southeast Cable TV 1376, 1877, 1982
Southeast Nebraska
Communications 3605
Southern Cayuga County Cable 1376, 1877, 1982
Southern Coastal Cable 1376, 1877, 1982
Southern Kansas Telephone 1376
Southern Montana Telephone 1998, 2254, 3028,
3426, 3605
Southern Plains Cable 1376, 1877, 1982
Southern Vermont Cable 1376, 1982
Southey Cable 1376, 1877, 1982
Southside TV 1376, 1877, 1982
Southwest MN Broadband 1376, 1877, 1982
Southwestern Bell Video Services 1376, 1877, 1982
Spanish Fork 1376, 1877, 1982
Sparklight 1376, 3560, 1877
Spectrum 1877, 1376, 2187,
3560, 3294, 4537
Spencer Municipal Utilities 1376, 1877, 1982
Spillway Cablevision 1376, 1877, 1982
Spirit Broadband 1376, 1877, 1982
Spring City Cable 1376, 1877, 1982
Spring Creek Cable 1376, 1877, 1982
Spring Grove Communications 2254
Springcom 1376, 1877, 1982
Springfield Cablevision 1376, 1877, 1982
Springville Cable 1376, 1877, 1982

Spruce Knob Seneca Rocks
Telephone 1998, 2254, 3028,
3426, 3605
SRT Communications 1376, 1998
ST 0775
St. George Island Cable 1376, 1877, 1982
St. John Cable 1376, 1877, 1982
Stanley Cablevision 1376, 1877, 1982
Stanton Telecom 1376, 1877, 1982
Star Cablevision 1376, 1877, 1982
Star Choice 0869
Star Communications 2254, 3426, 4437
Starkville Cablevision 1376, 1877, 1982
Starlight Communications 1376, 1877, 1982
Starview Cable of Delaware 1376, 1877, 1982
StarVision 1376, 1877, 1982
Starwest 1376, 1877, 1982
Stellar Communications 1376, 1877, 1982
Stellar Private Cable Systems 1376, 1877, 1982
Sterling Cable 1376, 1982
STMicroelectronics 0775
Stowe Cablevision 1376, 1877, 1982
Strata Networks 1376, 1877, 3560
Strategic Technologies 1376, 1877, 1982
Stratford Mutual Telephone 1376, 1982
Stubbs Communications 1376, 1877, 1982
Suddenlink 1877, 1376, 3560,
3885, 1982
Summit Broadband 1376, 1877, 1982
Summit Communications 1376, 1877, 1982
Summer Cable TV 1376, 1877, 1982
Sun Country Cable 1376
Sunrise Communications 1376, 1877, 1982
Sunset Digital Communications 1998, 2254, 3028,
3426, 3605
Superior Cable & Data 1376, 1877, 1982
Supervision Cable TV 1376, 1877, 1982
Surry Telephone 2254, 2586
SWAT Cooperative 1481, 1998, 2302,
2482, 3028
Swayzee Communications 1376, 1877, 1982
Sweetwater Cable TV 1376, 1877, 1982
Swiftel 2302, 3426, 3605,
4437
Swisher Telephone 2345
Sycamore Telephone Company 1998, 2254, 3028,
3426, 3605
TA Communications 1376, 1877, 1982
Taloga Cable 1376, 1877, 1982
TAT Cablevision 1376, 1877, 1982
Tbaytel 1998
TCSI Huntsville 1376, 1877, 1982
TCT 1376, 1877, 1982
TDS 1376, 1877, 1982
TDS Telecom 0775, 1376, 3028,
1877, 1982
Technicolor 1377, 1877, 1982,
5912, 2947, 5484,
3469, 6195
Tekstar Cablevision 1376, 1877, 1982
Tel-Star Cablevision 1376, 1877, 1982
Tele-Media 1376, 1877, 1982
Tele-Services 1376, 1877, 1982
TeleCable 1376
Telecom Cable 1376, 1877, 1982
Telepak Networks 1376, 1877, 1982
TelePartners 1376, 1877, 1982
Telephone de Courcelles 3605
Telarent Leasing Corporation 1376, 1877, 1982
Telestar Systems 1376, 1877, 1982
Televue Communications 0775
Telsat Systems 1376, 1877, 1982
TELUS 5912, 3028, 5942,
0775
Templeton Telephone 1376, 1877, 1982
Tesco Cable TV 1376, 1877, 1982
Texas Mid-Gulf Cablevision 1376
Thames Valley Communications 1376, 1877, 1982

STB

The Community Agency 1376
The Town of Mountain Village
Cable 1376, 1877, 1982
Thomson 1982, 3469, 2619,
1377
Three River Digital Cable 1376, 1877, 1982
Throckmorton Cablevision 1376, 1877, 1982
TiftNet 1376, 1877, 1982
Time Warner 1877, 1376, 3294,
2187, 4537
Time Warner Cable 1877, 1376, 3294,
2187, 4537
Tip-Top Communications 1376, 1877, 1982
Titonka Burt Communications 2254
Tivo 3560, 3724
Tobacco Valley Communications 1376, 1877, 1982
Tongue River Cable TV 1376, 1877, 1982
Topsham Communications 1898, 3605
Total Cable Service 1376
Totalplay 4589
Touchet Valley Television 1376, 1877, 1982
Town of Imperial Cable Systems 1376, 1877
Town of Mountain Village 1376, 1877, 1982
Toxaway Cable 1376, 1982
Trans-Video 1376, 1877, 1982
TransVision Cookshire 1376, 1877
Trappers Loop Communications 1376, 1877, 1982
Trenton Cable 1376, 1877, 1982
Tri-County Cable TV 1376
Tri-County Communications 1376, 2254
Tri-County Telephone Association 2302
Triangle Communication System 0775
TrioTel Communications 1376, 1877, 1982
Troy Cablevision 1376
Trust Cable TV 1376, 1877, 1982
TruVista 1376, 1877, 1982
TSC Communications 2302
Tuckersmith Communications
Cooperative 1376, 3426, 3605
Tudjaat Cooperative 1376, 1877, 1982
Tulalip Broadband 1376, 1877, 1982
Tullahoma Utilities 2586
Tulugak Cooperative 1376, 1877, 1982
Turquoise Turtle TV 1376, 1877, 1982
Turtle Mountain
Communications 1998, 2254, 3028,
3426, 3605
TV Association of Republic 1376, 1877, 1982
TV Cable Company of Andalusia 1376
TV Cable of Rensselaer 3560
TV Cable of Winamac 1376, 1877, 1982
TV Northeast 1481, 1998, 2302,
2482, 3028
TV Service 1376, 1877, 1982
TVC 1376, 1877, 1982
TVision 1376, 1877, 1982
TVision Home 5370, 1998
TVMAX 1376, 1877, 1982
TVN 2254, 3605
TVS Cable 1376, 1877, 1982
TWC 1877, 1376, 3294,
2187, 4537
Twin Lakes Communications 3426, 4437
Twin Valley Communications 2254, 2586
Two Creeks Cable 1376, 1877, 1982
Télécablé St-Hilarion 1376, 1877
Téléphone de Lambton 1998
Téléphone Saint-Ephrem 3605
Téléphone Upton 3605
U-verse 0858
Ucluelet Video 1376, 1877, 1982
Uintah Basin Electronic Telecom 1376, 1877, 1982
UMBC 1376, 1877, 1982
Union Telephone 1376, 1877, 1982
Unitah-Strata Networks 1376
United Communications 1376, 3426
United Fiber 4437
United Satellite America 0775

United States Gypsum 1376, 1877, 1982
United States Wireless 0775
United Telephone 1376, 2254, 2586
Universal Cablevision 1376, 1877, 1982
Universal Satellite Cable 1376, 1877, 1982
Upper Peninsula Communications
1376, 1877, 1982
US Online 1376, 1877, 1982
US Sonet 1376, 1877, 1982
USA Cablesystems 1376, 1877, 1982
USA Communications 1376
USA Companies 1376, 1877, 1982
USA Wireless Satellite TV 0775
Utica Cablevision 1376, 1877, 1982
Utilities Board City of Foley 1376
Utility Systems Development 1376, 1877, 1982
Uwharrie Communications 2254, 2586
Valley Cable & Satellite
Communications 1376, 1877, 1982
Valley Cable TV 1376, 1877, 1982
Valley Telecom 2302, 2482
Valparaiso Communications 1376
ValuNet Fiber 3605
Van Horne Cablevision 1376, 1877, 1982
Vast Broadband 1877, 1376
Vaughnsville Communications 1998, 2254, 3028,
3426, 3605
Venture Communications
Cooperative 1481, 1998, 2302,
2482, 3028
Venus Telephone Cooperative 1376, 1898
Veracity Communications 1376, 1877, 1982
Verizon 2378
Verneau Networks 1998, 2254, 3028,
3426, 3605
Vernon Telephone Cooperative 2586
Vianet TV 1898, 3605, 3118
Vicksburg Video 1376
Vidia Communications 1376, 1877, 1982
Vidion Cable 1376, 1877, 1982
Vidéotron 2947, 1877, 1376
Village Cable 1376, 1982
Viola Communications 1376, 1877, 1982
Viola Home Telephone 1998, 2254, 3028,
3426, 3605
Vision Communications 1376
Vision Systems 1376, 1982
VisionComm 1376, 1877, 1982
Vista III Media 1376, 1982
Vital Communications 1376, 1877, 1982
Viya 1376, 1877, 1982
VMedia 4596
VNET Fiber 1998, 2254, 3028,
3426, 3605
Vogtmann Engineering 1376, 1877, 1982
Volcano Vision 1376
Voom 0869
Vtel 3028
VTX Communications 2254, 3426
Vyve Broadband 1376, 1982, 1877,
4079
W.D.B. Communications 1376, 1877, 1982
Wabash Independent Networks 1376, 1877, 1982
Wabash Mutual Telephone
Company 1615, 1898
Wadsworth Cable TV 1376
Waitsfield Cable 1376
Walnut Communications 1376, 1982
Walnut Grove Cable TV 1376, 1877, 1982
Ward Communications 1376, 1877, 1982
Warwick Valley Telephone 1376, 1877, 1982
Washington Cable 3560
Washington County Rural
Telephone Cooperative 1376, 1877, 1982
Watch TV 1481, 1998, 2302,
2482, 3028
Waterville Cable TV 0775, 1376, 1877,
1982

AUDIO / SOUNDBAR

Watson Cable 1376, 1877, 1982
Wave Broadband 1376, 1877, 4079, 2479, 3560, 2187
Wave Wireless 1376, 1877, 1982
Waverly Communications Utility 3426
WC Tel 3028
WCTA 1376, 1877, 1982
Webster-Calhoun Cooperative Telephone Association 2254
WEHCO Video 1376
Weiss Lake Cable 1376, 1877
Wellman Cooperative Telephone Association 3605
West Alabama TV Cable 1376, 1877, 1982
West Carolina Telephone 3028
West Central Telephone 1376, 1877, 1982
West Lake Cablevision 1376, 1877, 1982
West River Cable Television 1376, 1877, 1982
West-Tex Telecommunications 1998, 2254, 3028, 3426, 3605
WesTel Systems 1376, 1877, 1982
Western Broadband 1376, 1877, 1982
Western Cable Service 1376, 1877, 1982
Western Iowa Networks 1376, 1877, 1982
Western Iowa Telecom 1376, 1877, 1982
Western Iowa Telephone 1877
Western Montana CommunityTel 1376, 1982
Western Telephone Company 1376, 1877, 1982
Western Wisconsin Communications 1376, 2586
WesTex Telephone Cooperative 1998, 2254, 3028, 3426, 3605
Westman Communications 1376, 2187
Westpa.net 1376, 1877, 1982
Westphalia Broadband 2254, 2586
Wetherell Satellite Cable TV 1376, 1877, 1982
WFL Cable Television 1376, 1877, 1982
Wheat State Telephone 3426, 3605, 4437
Whidbey Telecom 1998
White County Video 1376
WiaTel 1877
WiConnect Wireless 1376, 1877, 1982
WideOpenWest 1376, 2187
Wightman 1898, 3426, 4437
Wikstrom Systems 1376, 1877, 1982
Wilco Electronic Systems 1376, 1877, 1982
Wilcop Cable 1376, 1877, 1982
Wilkes Telecommunications 1481, 1998, 2302, 2482, 3028
Willamette Broadband 1376
Williamstown Cable 1376, 3560
Windbreak Cable TV 1376, 1877, 1982
Windjammer Cable 1376, 1877
Windstream 1376, 1982, 0775
Winslow Communications 1376, 1877, 1982
Wire Tele-View 1376, 1877, 1982
Wireless One 1376, 1877, 1982
Wistron NeWeb 3118, 6268
Wittenberg Telephone 1376, 1877, 1982
WK&T Telecommunications 2254, 2302
Wood County Telephone 1376, 1877, 1982
Woodsfield Municipal Cable 1376, 1877, 1982
World Satellite Cable Systems 0775
Worth Cable TV 1376, 1877, 1982
WOW! 1877, 1376, 2187, 2479, 3560, 2826, 3294
WT Services 1376, 1877, 1982
WTC Communications 1376, 1877, 1982, 1998
WTCI Cable 1376, 1877, 1982
Wyandotte Municipal 1376, 1982
Xfinity 1982, 1376, 1877, 3560, 2187, 4079, 4443, 4537
XIT Communications 2302
Xittel Telecommunications 3605

Xtream 1376, 3560, 1982, 1877
Yadkin Valley Telecom 2345
Yadtel Telecom 4437
Ycom Networks 1376, 1877, 1982
Yelcot Video Group 1376, 1877, 1982
Yelo 1376
Ygnition 1376, 1877, 1982
Yondoo 3426
Youngsville TV 1376, 1877, 1982
Yucca Telecom 1998, 2254, 3028, 3426, 3605
Zampelli Electronics 1376, 1877, 1982
Zazeen 3426, 3118
Zenith 3469
Zito Media 1376, 1877, 1982
Zoom Media 1376, 1877, 1982

AUDIO SOUNDBAR

Acoustic Audio 4683
Aiwa 0158
Altec Lansing 4609
AMC 1077
Apex Digital 4334
Arcam 2241
AudioSource 3721
Aura 4293
Axess 4095
Axiim 4951
Bestisan 5271
Bose 1933, 1629, 3959, 4307, 3708, 4024, 3706, 3832
Boston Acoustics 3698
BÖHM 4280
Coby 3654
Craig 4466
Curtis 3942
Definitive Technology 4415, 3645, 4984
Denon 2857, 3347, 2516, 3380, 2502, 4025
Dynavox 3231
DyneX 2971, 3951
Emotiva 3763
Enclave Audio 4800
Epworth 0158
Focal 4021
Gateway 1567
GE 3297
General Electric 3297
Haier 3516
Harman/Kardon 2241, 0110, 1304, 2443, 3418, 4186, 3756, 3320, 3517, 3391
iLive 3175
Inkel 3770, 4090, 3793
Insignia 3951, 2472, 2169, 2966, 3770, 4424, 1077
Integra 1805, 3860, 2730, 4023, 4014, 2503, 3992
JBL 3756, 2241, 3391, 3535, 5132, 0110
JVC 1676, 2040, 2331, 3049
Kenwood 1570, 1293
Klipsch 4941, 4198, 4200
LG 2676, 2197, 3509, 3217, 3996, 4043, 1293
Logitech 1408
Magnavox 1831, 1269, 3282
Marantz 1289, 2114, 3772, 3347, 1269
Martin Logan 3526
McIntosh 1289
Megacra 5271
Monoprice 4505
Monster Cable 4987

BLURAY / DVD

Onkyo	1805, 2730, 3860, 4023, 2503, 4041, 4014, 3984, 3992, 5094
Onn	5042, 5041
Optimus	1023
Panasonic	2967, 3309, 3323, 3055, 2452, 3767, 1676
Paradigm	4536, 3526, 4846
Philco	1831
Philips	1269, 1831, 2459, 4105, 3379, 2311, 3776, 3652, 3801, 3282, 2675, 4012
Pinnacle Speakers	3774, 3728
Pioneer	1935, 3057, 2432, 1023, 3956
Polk Audio	1289, 4431
Proficient	3661
Pyle	4333
RCA	2041, 2611, 3297, 2719, 2655, 3969, 1023, 2544
Samsung	2660, 1868, 2809, 3320, 3382, 3154, 2137, 1304
Samsung Harman/Kardon	3320
Sanyo	4176, 3282
Sharp	3736, 3097, 3929
Sherbourn	3763
Sherwood	1077, 1567, 3136, 3120, 2169, 3793, 4090, 3770
Sherwood Newcastle	1567, 2169
Sonos	3919
Sony	0158, 1622, 1759, 2172, 2475, 1822, 2522, 1758, 3700, 4315, 3257, 2582, 3487, 4366, 2610, 4457, 4285
SpeakerCraft	3661
Sungpo	3736, 3097, 3929
TaoTronics	4672
TCL	4672
Toshiba	3627
VIZIO	2454, 3935, 5095, 4911
Wards	0158
Yamaha	0176, 3580, 2467, 3030, 2116, 2458, 3325, 3917, 4269, 2021
Zenith	1293, 2197
ZVOX	2332, 3913, 2334

BLURAY DVD

Accurian	0675
Akai	0675
Bel Canto Design	1571
California Audio Labs	0490
Cambridge Audio	2808
Citizen	2213
Coby	2494
Contel	2331
Curtis	3052
Curtis Mathes	2331
Denon	1634, 2258, 0490, 2748, 3851
Digix	2464, 3850
Disney	0675
Durabrand	0675, 3464

Dynex	2596
Emerson	0675, 2213
Funai	0675
GE	0522
General Electric	0522
GFM	0675
Go Video	1075, 0741
Goldmund	2545
GoldStar	0741
Grundig	0539
Harman/Kardon	3228, 2927
Hitachi	0573, 0675
Insignia	2095, 2596, 2428, 0675, 0741
Integra	0627, 2147, 1769, 1634, 3787
JVC	0623, 1550, 1602, 2365, 2855
Kenwood	0534, 0490
LG	0741, 1602, 4091
Magnavox	0675, 3488, 0503, 0539
Marantz	2481, 0539, 2414, 3444
Memorex	2213, 3031, 2331
Microsoft	0522
NAD	0741
New Acoustic Dimension	0741
Ölevia	2331
Onkyo	0627, 2147, 0503, 1769, 2562, 3787
Oppo	2545
Panasonic	0490, 1641, 1579, 3641, 0503
Philco	0675
Philips	2434, 2056, 2789, 0675, 0539, 3488, 0503, 3274, 2084
Philips Magnavox	0503, 0675
Pioneer	1571, 2854, 2442, 0142, 2847
Polk Audio	0539
Presidian	0675
Proscan	0522
RCA	0522, 2213, 2532, 3464, 1769
Rotel	0623
Samsung	0199, 0573, 1075, 1573, 2069, 2113, 2843, 2329, 2269, 2556, 4108, 0490
Sanyo	0675
Seiki	2912
Sharp	2250, 0675, 2652
Sherwood	0741, 3052, 3837
Sony	1633, 1516, 1033, 1070, 0864, 4009
Sungpo	2250, 0675, 2652
SV2000	0675
Sylvania	0675
Symphonic	0675
Technics	0490
Toshiba	0503, 2277, 2006, 3857, 1769, 3157, 3957
VIZIO	2563
Yamaha	0539, 2298, 0490, 3320, 3995, 3837
Zenith	0741, 0503

WARRANTY / GUARANTEE

WARRANTY / GUARANTEE INFORMATION

Terms and Conditions for "100% Guaranteed To Work" policy, and the separate 1 Year Limited Warranty against defects in material and workmanship can be found at www.oneforall.com/remoteguarantee, or you may request hard copies via mail to UEI Technical Support Service, Suite 301, 26250 Euclid Ave., Euclid, OH 44132. Please include your full name, product information, and contact information in your request communication.

www.oneforall.com

GARANTIE / INFORMATIONS SUR LA GARANTIE

GARANTIE / INFORMATIONS SUR LA GARANTIE

Les conditions et modalités relatives aux règles "Fonctionnement garanti à 100%" et la garantie limitée de 1 an contre tout défaut de matériaux et de main-d'œuvre peuvent être consultés sur www.oneforall.com/remoteguarantee, ou vous pouvez demander une copie papier en composant, ou par courrier électronique au service d'assistance technique UEI, Suite 301, 26250 Euclid Ave., Euclid, OH 44132. Veuillez inclure votre nom complet, les informations sur votre produit et vos coordonnées dans votre demande de communication.

www.oneforall.com



Connect with us on Facebook.
Rejoignez-nous sur Facebook.
facebook.com/oneforallworldwide



Connect with us on Instagram.
Rejoignez-nous sur Instagram.
[@oneforall.worldwide](https://www.instagram.com/oneforall.worldwide)



Connect with us on LinkedIn.
Rejoignez-nous sur LinkedIn.
linkedin.com/company/one-for-all-worldwide



Visit our YouTube channel.
Visitez notre chaîne youtube.
youtube.com/user/oneforallproducts

Customer Support:
Service client:
www.oneforall-canada.ca

OFA warranty / terms & conditions:
Garantie OFA / termes et conditions:
www.oneforall-canada.ca

Imported into Canada by:
Importé au Canada par:
Universal Electronics BV –
Europe & International
P.O. Box 3332, 7500 DH Enschede
The Netherlands
www.oneforall.com

One For All is a registered trademark of Universal Electronics BV
One For All est une marque déposée de Universal Electronics BV

Industry Canada Regulatory Information
CAN ICES-3 (B)/NMB-3 (B)
Avis d'Industrie Canada CAN ICES-3 (B)/NMB-3 (B)

712832
RDN 1111220