# Size: 124x215mm,157g双铜,印色: 4C,双面印刷,装订成册



## PLEASE READ THE USER MANUAL THOROUGHLY. lure to follow the basic instructions and safety precautions listed in user manual can lead to damage to your device, other property damage, serious bodily injury, and even death.

all instructions carefully before using and retain this manual for future This manual applies to the Hover-1 H1 Scooter.

In order to avoid dangers that are caused by collisions, falls, and loss of control, please learn how to ride the H1 safely.

users must read it carefully and follow the instructions. All users are responsible for any consequences caused by violating warning contents or prompt operations. Hype™ can not be held

 Use only the supplied charger with this scooter. Charger Manufacturer: IENZHEN FUYUANDIAN POWER CO LTD

The operating temperature range of the charger is 50° F-77° F

1. The operating temperature range of the Hover-1 is 32-113° F (0-45 4. Do not ride on icy or slippery surfaces. Read the user manual and warning labels before riding.

. When transporting the H1, avoid violent crashes or impact. blease call Hover-1 at 844--348-2620

6. Store the H1 in a dry, ventilated environment.

w temperature will affect the lubrication of moving parts inside the H1 scooter, increasing internal resistance. At the same time, in low temperatures, the discharge capacity and the capacity itself of the

Doing so may increase the risk of mechanical failures of the scooter, which may lead to damage to your device, other property damage, serious bodily injury and even death.

 Keep the device away from heat sources, direct sunlight, humidity or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the device.

Do not puncture or harm the exterior surface of the product in any

Persons shall be advised not to allow hands, feet, hair, body parts,

clothing or similar articles to come in contact with moving parts,

excessive heat, such as direct sunlight, or open flame.

wheels or drivetrain, while the engine is running.

 Do not use the device if it has been dropped or damaged in a • Repairs to electrical equipment should only be performed by qualified electrician. Improper repairs may place the user at serious In this manual, the above symbol with the word "CAUTION" indicates

Keep the device free from dust, lint, etc. purpose. Doing so may damage the device. This product is not a toy. Keep out of reach of childrer Do not expose batteries, battery pack, or batteries installed

ase call Hover-1 at 844--348-2620

INTRODUCTION The owner shall allow the use and operation of the unit after a components of the unit before use. production processes are developed with strict testing for each

Do not use if you have heart conditions such as congiestive heart failure, too low heart rate, or others. If you are unsure, please check with your doctor before use.

 Persons with head, back, or neck ailments or prior surgeries to those areas of the body are not recommended to use this device. them suceptible to injury or impair thir physical dexterityor mental capabilities to recognize, understand and perform all of the safety instructions and to be able to assume the hazards inher-

In this manual, the above symbol with the word "NOTES" indicates instructions or relevant facts the user should remember prior to using

In this manual, the above symbol with the word "WARNING" indicates a hazardous situation which, if not avoided, can cause

a hazardous situation which, if not avoided, can cause minor or

Please keep your serial number on file for warranty claims as well as Left Foot Mat proof of purchase. Your serial number can be found at the base of LED Status Indicator your H1 scooter above the holographic UL sticker 4. Power/Battery Indicator 9. Power Button (Located in rear)

not step on if the Running Indicator is red.

property damage, serious injuries or even death.

feet off your device while driving is dangerous.

arrested for driving under the influence.

bodily injury or death.

Hover-1 scooter. Driving without following the contents of this manual

safe operation and maintenance of your new H1. Please read it

6. Path Illuminating Lights

Charge Port (Located in rear)

Protective Chassis Casing

may lead to damage to your device, or may cause bodily injury.

#### The device uses digital electronic gyroscopes and acceleratio sensors to control balance and motion, depending on the user's center of gravity. The device also uses a control system to drive the

motors that are located within the wheels. The device has a built-in inertia dynamic stabilization system that can help assist with balance when moving forward and backwards, but not while turning. TIP – To increase your stability, you must shift your weight in order to overcome the centrifugal force during turns, especially when entering a turn at higher speeds.

H1 scooter that does not nd fall. Inspect the entire de oroughly before every ride, and ride it until any problems ha een corrected.

44-265 lbs (20-120 kg) The display board is located in the middle of the H1 scooter. Up to 10 mph (16.1 km/h) Max Distance Range: Up to 9 miles (14.48 km) Max Incline Angle: Minimum Turning Radius: Battery Type: Battery Voltage: Battery Capacity: AC 100-240V, 50-60 Hz Power Requirement: 6.5 Inches (16.51 cm) Non-Pneumatic Solid Tire Up to 33ft V4.0 with stereo sound quali Bluetooth Speaker:

UL 2272 approved

### CONTROLS AND DISPLAY PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY

ower On: Take your device out of the box and place it flat on a le surface. Press the power button (located on the rear of your device) once. Check the battery LED indicator (located in the center of you device). The battery indicator light should be lit, indicating the device

Power Off: Press the power button once. here are four sensors under the foot mats on your H1 scooter. Wher the user steps off the scooter mats, it will automatically initiat

When riding the scooter, you must ensure you are stepping on the fo mats. Do not step or stand on any other area of your scooter. and increase the probability of collision and cause injury to people iders, or damage the device. BATTERY INDICATOR

Green LED light indicates the device is charged above 50 percent Yellow LED light indicates the power is under 50 percent. Red LED light indicates the power is down to 20 percent or lower When the LED light turns red, please recharge the device. When the operator triggers the foot mats, the LED Status Indicator w

turn red (for more details see SAFETY ALERTS).

and ensure safety of yourself and others.

HOVER-1"

## devices. You must download the Hover-1 app in order to change certain features of your H1 such as headlight colors and skill mode.

the App from the Google Play Store.

SMARTPHONE APP

Please note, we encourage you to register your H1 scooter. For this purpose, the intro page will continue to show every time the App launched if registration has not been completed. Once registration is completed, the App will open directly to the dashboard. Complete the form by entering your information to register your H Fields marked with a "\*" are required fields and the form cannot be submitted without this information. Once you submit the registration

form, the safety, legal and privacy disclaimers will need to be

HOVER-1"

aunch the app from your device, you will be directed to the intro

age. You may register your H1 by pressing the "Registration". Yo


may continue to the dashboard by pressing "Skip".

reviewed and accepted before moving on to the dashboard. Once accepted, press "Next."

light up, which indicates that the Hover-1 is now ready for use. When the system has an error during operation, the status LED light v

For Returns, Exchanges or Service blease call Hover-1 at 844--348-2620

## pop-up for 3 seconds. Please review the safety notes in this screen while the dashboard loads. The dashboard will appear as shown

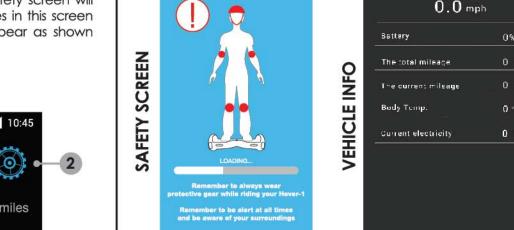

Connect Your H1 - To connect to your H1 through Bluetooth on you nart phone, press "Connect". If your H1 is already paired, this part of he screen will show "Connected" in blue. Settings - Press the gear icon to adjust settings

. Speed - The digital spedometer displays your speed in miles pe

Change Mode - Change safety/skill levels and H1 sensitivity. Battery - The percentage displays the remaining battery life of your 5. Standby Mode - Put your H1 into a low-power mode when not in

8. Vehicle - Displays the name assigned to your H1. Vehicle Info - Swipe up from the bottom of your screen to dis nore information about your H1 in real time. GPS Tracking - View GPS & tracking to see where you have ride our hH1 and display your real time location.


or Returns, Exchanges or Service lease call Hover-1 at 844--348-2620

Bluetooth must be enabled. If your Bluetooth is not enabled on your your H1 scooter. pair until your H1 is paired.

nart phone, the App will remind you to enable it. nce scanning is complete, all detected Hover-1 scooters will display in a list. Press the select button to pair with a scooter and use the PIN "000000". If multiple Hover-1 scooters appear, continue attempting t

Press "Connect" to have the App begin scanning for any Hover-1

Once paired, the dashboard will display "Connected" in blue. You may now begin using the App with your H1.

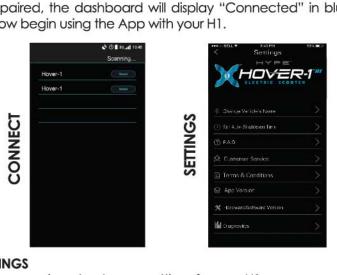

Press the gear icon to change settings for your H

Change Vehicle's Name - Customize the name for your H1 here. This name change will reflect in the dashboard and connect pages. Set Auto Shutdown Time - This setting allows you to set a time for you H1 to shutdown automatically. Customize Headlights - Change the colors and brightness of you F.A.Q. - Frequently asked questions and answers are shown here such as basic instructions and troubleshooting Customer Service - View contact information for the Hover-1

> Terms & Conditions - Safety, legal and privacy disclaimers are here App Version - Display the current App version and check for a

devices. Your H1 must be powered on and your smart phone's versions of your H1. These fields will only appear when connected to Diganostics - Run a diganostic check on your H1 and stay informed

Hardware/Software Version - Display the hardware and software

of any hardware, software and electrical issues that may need to be Cycle between 3 different skill modes. Each mode has a different top

speed and sensitivity. The mode will only change if you are not using scooter users. In this mode, the sensitivity and top speed are very low Intermediate Mode - This mode is recommended for users that are comfortable using Hover-1 scooters but are not ready for full speed and extra sensitive controls. In this mode, the sensitivity and top speed


• Expert Mode - This mode is recommended for everyday Hover-1 scooter users. In this mode, the sensitivity and top speed are set to the

IOTE: Skill and safety mode must be selected. The Hover-1 will default o "Beginner" mode if another mode is not selected. tandby Mode" allows you to put your H1 into a low-power standby state. Your H1 cannot be used while in standby. You must disable

standby mode before you can ride the H1. When in standby mode,

the button will say "Power On". Press "Power On" to disable the

Please note, if you have your "Auto Shutdown Time" set, your H1 will turn off completely at the specified time. You will be unable to power back on from the App. You will have to physicially press the power

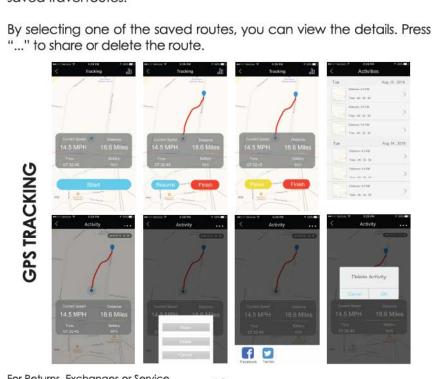

Press "Headlights" to set a custom color and brightness for your H1

Path Illumination Lights. Simply choose your desired color from the

color wheel. Slide the "Brightness" bar to adjust brightness. For you

ress "GPS" to open a navigation screen that pin-points your exact

ocation. From the moment you press "Start", it begins recording you

travel route. Once you press "Finish", your route is saved in the App

Press the bar icon, in the top right corner of your screen, to view al

convenience, 4 basic colors have also been set as presets below th

Always wear a properly fitted helmet tha

complies with CPSC or CE safety standard

Make sure your helmet

covers your forehead.

when you ride your bicycle.

lease call Hover-1 at 844--348-2620

PAIRING THE SPEAKER 1. Ensure your H1 is turned off. If it is not, please turn off your Hover-1 first 2. Turn on your H1 and the speakers will annouce that it's waiting for a Bluetooth® connection. This will indicate your H1 speaker is now in 3. Place the H1 and the Bluetooth® device to which you would like to pair it within the operating distance. We recommend keeping the tw devices no further than 3 feet apart during pairing. 4. Ensure Bluetooth® is enabled on your phone or music device. Refer to manufacturer's instructions for how to enable Bluetooth® on your 5. Once you have activated Bluetooth® on your device, select the option "HY-H1-Speaker" from the list of available Bluetooth® devices. 6. If required, enter the PIN code "000000" and confirm the entry. 7. Please note, pairing mode on the Hover-1 will last for two minutes. If no devices are paired after two minutes, the H1 speaker will automatically return to standby mode.

8. If pairing is unsuccessful, turn off the H1 first and re-pair following the aforementioned steps. NOTE: Once you have paired the H1 speaker with a device, the the device's Bluetooth® is activated and in range. You do not need to please contact our Customer Support Center. re-pair any previously connected devices. Your H1 can pair up to two multi-point devices. You can reconnect a previously paired device without going through the pairing or PIN

LISTENING TO MUSIC Once the H1 speakers are paired to your device, you can stream music wirelessly to them. Select the track you wish to listen to on your device to listen via the speakers. All volume and track controls will be made using your music device. Should you encounter any problems while streaming, please refer to your device's user manual.

process on up to two devices.

For Returns, Exchanges or Service please call Hover-1 at 844-348-2620

The H1 has powerful built-in wireless speakers so you can play your Ideal for both indoor and outdoor use, the H1 scooter features a splashing water. This ensures that the high-quality tech within the H1 is protected while riding around outdoors & indoors, or at beaches, poolside bashes and getting caught in the rain.

#### NOTE: The H1 scooter should not be subject to prolonged exposure to water or submerged. Doing so will damage your H1 scooter and

It is important that you fully understand all elements of your H1 scooter. If these elements are not used correctly, you will not have full control of your H1. Before you ride, or ride outside of a controlled

PRE-RIDE CHECKLIST Ensure that your H1 scooter is in proper working order each and every speaker will remember this device and will pair automatically when time you ride. If a part of the scooter does not function correctly,

> nv H1 that does not work properly c cause you to lose control and fall. not ride an H1 scooter with a part the s damaged; replace the damaged

If the H1 is not to be used for an extended period of time, you may

For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

## invalidate the manufacturer's warranty. BEFORE RIDING

environment, learn the functions of the various mechanisms on your Practice using these elements of your H1 at slower speeds in a flat, open area before taking the device out in public areas.

• Ensure the battery is fully charged before riding your scooter.

need to recharge the battery every 2 months to maintain the battery Ensure that the screws on the front and back tires are locked firmly before each ride.

Please wear all appropriate safety and protective gear as previously mentioned in the User Manual before operating your Make sure to wear comfortable clothes and flat closed-toe shoes

## SAFETY PRECAUTIONS The first rule in safe riding is to use common sense. An scooter is

pitch you over the front wheel. It does not have bumpers or airbags as a car does. This section is a guide of safe riding practices for on and off-road operation. Make sure you are using your H1 scooter properly. Different localities and countries have different laws governing riding on public roads, and you should check with local officials to ensure you are complying with these laws.

vulnerable; it cannot protect you in a crash, against impact, or loss of

control the way driving a car can. A scooter can tip over sideways or

 For your safety, always wear a helmet that meets CPSC or CE safety

SAFETY CHECKLIST standards. In the event of an accident, a helmet can protect you from serious injury and in some cases, even death. Obey all local traffic laws. Obey red and green lights, one-way streets, stop signs, pedestrian crosswalks, etc.

 Ride with the traffic, not against it. If riding with friends and multiple H1 scooterss, ride in a single file in a Ride defensively; expect the unexpected.

Give pedestrians the right-of-way.

For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

Do not ride too close to pedestrians and alert them if you intend to

Your Hover-1 is not equipped with reflectors. It is not recommended ground, the power is on, and the Running Indicator light is green. Do that you ride your bike in conditions of low visibility. Please carefully read the User Manual, which will assist in explaining the basic working principles and provide tips on how to best enjoy

### Vhen you ride in low-visibility condition ch as fog, dusk, or night, you migh cult to see, which could lea sion. In addition to keepir eadlight on, wear bright, refle clothing when riding in poor lighting

Think about safety when you ride. You can prevent many accidents -type is not liable for tickets or violations given to riders who do not 📗 if you think about safety. Below is a helpful checklist for Compact

> • Do not ride "double" with more than one adult rider on the scooter. in a skate park, empty pool, or in any way similar to a skateboard or Avoid riding in large groups, as this can force you to ride too close to other riders, making it difficult to see other vehicles and road • Do not continuously spin in place, it will cause dizziness and you will

Do not ride above your skill level. Ensure you have had enough • Do not abuse your device, doing so can damage your unit and practice with all functions and features of your Hover-1. Do not ride too fast -- with increased speed comes increased risk. If

• Do not drive in or near puddles of water, mud, sand, stones, gravel, you are moving at a higher speed, small bumps can turn into large debris or near rough and rugged terrain. impacts, leading to a higher risk of injury if an accident occurs.

**UL Certification:** 

• If you are in an accident while driving your device, contact | • Do not ride in inclement weather: snow, rain, hail, sleek, on icy roads | without proper instruction and supervision. Before stepping on your device, make sure it is placed flat on level
 Do not ride in or near pools or other large bodies of water.

Bend your knees when riding on bumpy or uneven pavement to

absorb the shock and vibration and help you keep your balance. • If If you are riding your scooter in low-visibility conditions, ensure your • Do not try to open or modify your device, as doing manufacturer you are unsure if you can safely ride on a specific terrain, step off and LED lights are turned on, and that you are wearing bright, reflective warranty, and may cause failure to your device leading to serious carry your device. ALWAYS BE ON THE SIDE OF CAUTION. Do not attempt to ride over bumps or objects greater then ½ inch Do not use the device to place yourself or anyone else and their even when prepared and bending your knees. PAY ATTENTION - look at where you are riding and be conscious of • If you and your friend(s) are driving H1 scooters together, be sure to the road conditions, people, places, property and objects around

> Do not operate the device in crowded areas. Operate your device with extreme caution when indoors, especially around people, property, and narrow spaces like doorways and other narrow spaces.

Do not climb or travel down steep hills with your device.

attempt to operate the device with two or more people.

Do not carry anything while riding the device.

For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

The device is intended for use by a single individual, DO NOT

Individuals with lack of balance should not attempt to operate the

 Operate your device with extreme consideration for people and property at all times. • Do not operate the device while talking, texting, or looking at your Do not ride your device where it is not permitted.

 Do not ride your device off of curbs, ramps, or attempt to operate Do not ride your device near motor vehicles or on public roads. scooter. The H1 IS NOT A SKATEBOARD. fall and injure yourself.

keep a safe distance between each other to prevent collisions, you.

Be sure to keep you feet on the pedals at all times. Moving your

Do not operate the device while under the influence of drugs

and/or alcohol. It is dangerous and illegal. You can and will be

Use your best judgment to keep yourself out of dangerous situations

Do not operate the device when you are restless or sleepy.

cause failure to the operating system leading to injury. • The device can be used on paved roads that are flat and even. If Pregnant women and women who plan on being pregnant should you encounter uneven pavement, please lift your Hover-1 over and not operate the device.

Young children and the elderly should not operate the device

 DO NOT step forward off of your device. Do not attempt to jump on or off your device.

At higher speeds, always take into consideration longer stopping

Do not attempt any stunts or tricks with your device. **OPERATING YOUR DEVICE** Make sure the device is fully charged before your initial use. For Do not ride the device in dark or poorly lit areas. charging instructions, please follow details under CHARGING YOUR Do not ride the device near or over potholes, cracks or unever Stand directly behind your device and place one foot on the pavement or surfaces.

 Do not operate your device off-road. Keep in mind that you are 4.5 inches (11.43 cm) taller when operating the device. Make sure to go through doorways safely. Do not turn sharply, especially at high speeds.

 Do not exceed the maximum or minimum weight limits. Do not step on the fenders of the device. Avoid driving the device in unsafe places, including near areas with

explosion accidents.

For Returns, Exchanges or Service please call Hover-1 at 844-348-2620

flammable gas, steam, liquid, dust, fiber, which could cause fire and

ce your feet are even. Find your center of gravity. If your weight is distributed correctly on the foot mats and your center of gravity is level, you should be able to stand on your device just as if you were standing on the ground. On average, it takes 3-5 minutes just to get comfortable standing of

quickly and evenly (as described in the diagram below).

#### device; it senses even the slightest bit of motion, so having any anxiety or reservation about stepping on may cause you to panic FAILURE TO FOLLOW ANY OF THE FOLLOWING SAFETY PRECAUTIONS and trigger unwanted movement. CAN AND MAY LEAD TO DAMAGE TO YOUR DEVICE, VOID YOUR When you first begin using your device, the fastest way to move in

SERIOUS BODILY INJURY, AND CAN LEAD TO DEATH. Before using your device, be sure to familiarize yourself the operating procedures so that you can keep your device in the best condition direction.

> Your center of gravity determines which direction you move, direction you wish to move.

corresponding foot mat (as described in the diagram below). Keep all your weight on your back foot still on the ground, otherwise you device will begin to move, making it difficult to step on evenly with your other foot. When you are ready, shift your weight to the foot already placed on the device and step on with your second foot

> weight to overcome the centrifugal force. For bumps or uneven roads, bend your knees.

☑ NOTES: ay relaxed and step on qui stairs, one foot, then the other. Look up

your device and maintaining proper balance. Having a spotter will For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

your desired direction is to focus in that direction. You will notice that

Do not turn sharply or at high speeds avoid danger. Do not tum or ride quicl along slopes, as it may cause injury.

Move Backward Stop Move Forward For Returns, Exchanges or Service please call Hover-1 at 844-348-2620

### our center of gravity to maintain Dismounting your device can be one of the easiest steps, yet when done incorrectly, may cause you to fall. To properly dismount, from a stopped position, lift one leg up and set your foot back down on the

just thinking about which way you would like to go will shift your center of gravity, and that subtle movement will propel you in that

accelerate, decelerate, and come to a complete stop. As described in the diagram below, tilt your center of gravity in the To turn, focus on the direction you wish to turn and stay relaxed.

The more comfortable you get on the device, the easier you will maneuver. Remember at higher speeds, it is necessary to shift your

# Overweight exertion on the device n

ground (STEPPING BACK). Then step off completely as described in

oot mat to clear the device wh

so may send the Hover-1 into

☑ NOTES:

alam will sound and the warning indic

ace the H1 on a level surface and try ridi

Speed and weight limits are set for your own safety. Please do

will light up and prevent the H1 from ma

WEIGHT AND SPEED LIMITATIONS

Maximum Weight: 264 lbs

Minimum Weight: 44 lbs

Maximum Speed: 10 mph

For Returns, Exchanges or Service please call Hover-1 at 844-348-2620

exceed the limits listed here in the manual.

☑ NOTES:

steps to calibrate it.

scooter buzzes.

• Weight: The weight of the user can affect driving distance, a lighter user will have further range than a heavier user. Ambient temperature: Please ride and store the device under recommended temperatures, which will increase driving distance; battery life, and overall performance of your device. Maintenance: Reasonable battery charging and maintenance will increase the distance. Overcharging the battery can reduce range.

acceleration and deceleration will reduce your overall distance.

BALANCE & CALIBRATION

The red LED light on the deck will first start blinking and later stay on

for a few seconds more, after that lights will turn off automatically, at

this point please press the ON/OFF button to completely switch off

point, the calibration process will be complete.

to run out of power). If the platform is tilted forward or backward more than 15 degrees,

device engine will power off after 15 seconds.

rt, all operation systems will h when the system initiates a stop. T our Hover-1 off and back on to unloc om a Safety Lock.

 The device is still charging. During operation, the platform self initiates to tilt due to excess

The device has been rocking back and forth over 30 seconds. System enters protection mode, the alarm indicator will light up and buzzer will alarm (this typically occurs when the battery is about

 If any or both tires are blocked, the device will stop after 2 seconds. When the battery level has depleted below protection mode, the

For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

## CHARGING YOUR H1

 Ensure that the charging port is clean and dry. Open the charging port on your H1 scooter. Make sure that there is no dust, debris or dirt inside the port. Plug the charger into a grounded wall outlet. Ensure the light on the charger is lit GREEN. The charging indicator light should change to RED, indicating that

When the RED indicator light on your charger turns to GREEN, then

# and from the power outlet.

your device is fully charged.

your device is now being charged.

A full charge may take up to 2 hours.

BATTERY SPECIFICATIONS Battery Type: Rechargeable lithium-ion battery Charge Time: Up to 2 hours Voltage: 36V Initial Capacity: 4.3 AH Working Temperature: 32°F - 113°F Charging Temperature: 50°F - 77°F Storage Time: 1 year

BATTERY MAINTENANCE

The lithium-ion battery is built into the device. Do not disassemble the device to remove the battery or attempt to separate it from the When charging the device, please use the enclosed 3-pin

 Do not connect or attach the device or the battery to a power supply plug or directly to a car's cigarette lighter. • Do not place the device or batteries near a fire, or into direct sunlight. Heating the device and/or the battery can cause additional heating, breaking, or ignition of the battery inside the device. For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

charging cable or otherwise ensure that the battery charging

Do not continue charging the battery if it does not recharge within the specified charging time. Doing so may cause the battery to

To preserve natural resources, please recycle or dispose of batteries harmful interference, and (2) this device must accept any properly. This product contains lithium-ion batteries. Local, state, or federal laws may prohibit disposal of lithium-ion batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.

Failure to follow the safety precaution: isted below could lead to serious bodily injury and/or death.

After fully charging your H1, unplug the charger from your device

• Do not attempt to modify, change, or replace your battery. • Do not use your device if the battery begins to emit odor, overheats, or begins to leak. Do not touch any leaking materials or breathe fumes emitted. Do not allow children and animals to touch the battery.

> Please only use the charger provided by Hype™. Do not attempt to charge the device if the battery has discharge or emits any substances. In that case, immediately distance yourself from the battery in case of fire or explosion. Lithium-ion batteries are considered to be hazardous materials. Please follow all local, state and federal laws in regards to recycling.

The battery contains dangerous substances, do not open the

battery, or insert anything into the battery.

handling and disposing of Lithium-ion batteries.

For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

EK IMMEDIATE MEDICAL ASSISTANCE DU ARE EXPOSED TO ANY SUBSTAN HAT IS EMITTED FROM THE BATTERY.

This device complies with part 15 of the FCC Rules. Operation is

authority to operate the equipment.

that to which the receiver is connected.

For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

subject to the following two conditions: (1) This device may not cause damage to the product's internal circuitry. interference received, including interference that may cause undesired operation. Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the the store where it was purchased. equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Consult the dealer or an experienced radio/TV technician for help.

Connect the equipment into an outlet on a circuit different from

# Do not expose the device to liquid, moisture, or humidity to avoid

For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

Do not expose the device to extremely high or low temperatures of this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts. Do not dispose of the device in fire as it may explode or combust.

Do not expose the device to contact with sharp objects as this will

Do not let the device fall from high places, as doing so may damage the internal circuitry. Do not attempt to disassemble the device. n the event that the device does not function properly, return it to

oid using water or other liquid

aning. If water or other liquids

ne H1, it will cause perman

For Returns, Exchanges or Service please call Hover-1 at 844–348-2620 30

damage to the internal componer lsers who disassemble the H1 scoo without permission will void

Hype™ offers a 120 day limited warranty covering the hardware of Hover-1™ H1 Electric Scooter (referred to as "Product" here on out), limited to those residing in the 50 US States and Canada. This warranty gives you specific legal rights and you may also have (A) Damage that is caused by conditions, malfunctions, or

other rights which vary from state to state. Hype<sup>TM</sup> warrants the Product to be free from defects in materials accidents, and improper operation or maintenance; and workmanship under normal use for 120 days, as sold to the hardware defect arises and a valid claim is received within the product; warranty period, at its option and to the extent permitted by law,

within a reasonable time or at a reasonable cost. This warranty is for replacement for like-items only and does not cover items out of production if the company no longer stocks them. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Hype™ property. warranty is not assignable or transferable.

or replacement). by HypeTM should perform service on this Product. This warranty only covers technical hardware defectiveness (I) Fraud, theft, misplacement, unexplained disappearance, or during the warranty period and under normal use conditions.

For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

number at 1-844-348-2620 or send an email to

end-user purchaser will have the remaining warranty under the

## pe™ does not augrantee uninterrupted or error-free operation of this Product. This Warranty does not apply to damages or circumstances, such as, but not limited to:

These conditions include, but are not limited to, road hazard,

product that is new or refurbished, that is substantially equivalent change in color, texture or finish, wear and tear, scrapes, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. AS PERMITTED BY 1) To make use of the warranty service for hardware issues, you www.Hover-1.com to the original product if the product sent in cannot be repaired scratches, dents, cracks, or gradual deterioration, provided there APPLICABLE LAW, HYPETM SPECIFICALLY DISCLAIMS ANY AND ALL must contact the HypeTM Service Center by phone at Hype Wireless is no obligatory legal liability; (E) Over-charging, or damages due to improper maintenance of PARTICULAR PURPOSE, AND WARRANTIES AGAINST HIDDEN OR 2) Hype™ will try to diagnose and solve your problem. If it is Requests cannot be made for repairs to be carried out on site. This (F) Damage to the Product caused by war, terrorism, fire, water, PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN the product to Hype<sup>TM</sup>.

replacement or repair of a Product under warranty, the original fault, surge, or any electrical anomaly; original warranty period (without any postponement during repair (H) Any contamination, condition or other circumstance, which HypeTM, in its sole discretion, considers a danger to health and safety, including, but not limited to any contact EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE MAXIMUM Center specifies otherwise. radiation, or other;

nd workmanship provided these have a negligible effect on the Product's fitness for use.

warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts damage not resulting in from defects in material or workmanship. installed ends with the warranty period for the entire product.

refurbished parts that are equivalent to new in performance and | meaning damage that does not impact the operation and | REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL

LOSS OF GOODWILL: LOSS OF REPUTATION:

For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

ON CONTRACTS); LOSS OF THE USE OF MONEY; LOSS OF Y 4) Please enclose a check for \$49.99 made payable to "Hype ANTICIPATED SAVINGS; LOSS OF BUSINESS; LOSS OF OPPORTUNITY; Wireless" for return shipping. LOSS OF, DAMAGE TO, COMPROMISE, OR CORRUPTION OFDATA; 5) Once Hype™ has received the product, it will meet its warranty

EQUIPMENT AND PROPERTY, ANY COSTS OF RECOVERING, paid. PROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH THE PRODUCT AND ANY FAILURE TO SERVICE OUTSIDE OF WARRANTY MAINTAIN THE CONFIDENTIALITY OF DATA STORED ON THE Hype™ can refuse any service claim made that is not covered by PRODUCT. THE FOREGOING LIMITATION SHALL NOT APPLY TO | the warranty. If HypeTM agrees to provide a service outside the DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY warranty, the customer will be invoiced for all repair and transport FOR INTENTIONAL AND GROSS NEGLIGENT ACTS AND/OR | costs. Hype™ will not accept any packages that have not first OMISSIONS. HYPETM DISCLAIMS ANY

1) Send the product suitably packaged with carriage and insurance paid. Do not enclose any accessories with the product (cables, chargers, manuals, etc.) unless the HypeTM Service

For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

HOWSOEVER CAUSED INCLUDING THE REPLACEMENT OF return the product to the sender with carriage and insurance

Contact us with questions at: support@Hover-1.com

☑ NOTES: To prevent injury, when max speed reached, the H1 will beep to alert the use d tilt the rider slowly back.

Please notice the H1 can travel a distance up to 12 miles on a fully charged battery in ideal conditions. The following are some of the major factors that will affect the operating range of your device. Terrain: A smooth, flat surface will increase your driving distance, while driving uphill, as well as rough or uneven terrain will reduce your

 Speed and Driving Style: Maintaining a moderate speed will increase your distance; while traveling at high speeds for extended speed. periods, frequent starts, stops, idling, along with frequent

If the scooter is found to be unbalanced, you can follow the below In order for the balance calibration system to work properly, please place the scooter on a flat horizontal surface. Press and hold the ON/OFF button for at least 5 seconds until the device will power off. The LED light on the deck will begin flashing red.

• Press the ON/OFF button the switch the scooter on again. At this For Returns, Exchanges or Service please call Hover-1 at 844–348-2620

action should be taken to correct any illegal operation, failure or

become hot, rupture, or ignite. Connect the cable with the power supply (100V ~ 240V; 50, 60 Hz). Align and connect the 3-pin charging cable into the charging port

BATTERY CARE / MAINTENANCE

Storage Temperature: -4°F - 77°F Storage Humidity: 5% - 95%

**⚠ WARNING** 

Do not use abrasive cleaning solvents to clean the device.

cause scratches and damage.

(1) repair the hardware defect (free of charge) by using new or CD) Damage (accidental or other) to the Product that is cosmetic, CD THE EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE

the lithium battery installed in the Product; The original purchaser may call the Hover-1™ customer service use under abnormal conditions, accidental drops;

> (J) Marginal differences compared to the target appearance (INCLUDING LOSS OF PROFITS For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

Warranties that have not been activated do not cause the

In no event shall Hype™ be liable for any incidental, indirect, original purchaser, from the date of retail purchase by the original (B) Product has been tampered with, repaired, modified by special or consequential damages or liabilities (including, but not end-user purchaser. A copy of the sales receipt from the date of non-authorized personnel and/or if the product is equipped with limited to incidental or consequential damages for loss of time, original purchase of the Product will be required for validity. If a additional parts or accessories that are not approved for the inconvenience, loss of use of product, or any other consequential or incidental loss) in connection with the purchase, use, or operation of the product. Hype™ is not liable for property REPRESENTATION THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT Authorization). damage, personal injury, or death.

reliability; or (2) exchange the product (free of charge) with a functioning of the Product, such as without limitation to rust, OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, ASSERTING A WARRANTY CLAIM STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT 1-844-348-2620 or email at support@Hover-1.com. LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A LATENT DEFECTS. IF HYPETM CANNOT LAWFULLY DISCLAIM determined that a warranty claim exists, you will be given an RMA Affix Serial Number Label Here: STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT | number (Return Material Authorization) and will be asked to send chemical, electrochemical, accident, natural disaster, intentional DURATION TO THE DURATION OF THE EXPRESS WARRANTY AND TO or accidental misuse, abuse, neglect or improper maintenance, THE REPAIR OR REPLACEMENT SERVICE AS DETERMINED BY HYPETM IMPORTANT: Hype<sup>TM</sup> will only accept parcels that have an RMA IN ITS SOLE DISCRETION. NO RESELLER, AGENT, OR EMPLOYEE IS number. AUTHORIZED TO MAKE ANY MODIFICATION, EXTENSION, OR support@Hover-1.com for service request. Upon Hype™ \'s (G) Damage to the Product caused by an external electrical ADDITION TO THIS WARRANTY. IF ANY TERM(S) IS HELD ILLEGAL OR Please observe the following when sending the product: UNENFORCEABLE, THE LEGALITY AND ENFORCEABILITY OF THE REMAINING TERMS SHALL NOT BE AFFECTED OR

Important: Do not disassemble the Product. Disassembling the between the Product and a biohazard, bodily fluids, infectious EXTENT PERMITTED BY LAW, HYPETM IS NOT RESPONSIBLE FOR Product will void this warranty. Only Hype™ or a party authorized materials/substance, chemicals, hazardous substances, diseases, DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL 2) Mark the RMA number on the outside of the package in such a DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR way that it is visible and clearly legible. CONDITION OR PERFORMANCE OF THE PRODUCT, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOSS OF

3) You must enclose a copy of the sales receipt as proof of USE; LOSS OF REVENUE; LOSS OF ACTUAL OR ANTICIPATED PROFITS purchase.

OR ANY INDIRECT OR CONSEQUENTIAL LOSS OR DAMAGE | obligations in accordance with the warranty conditions and will

been approved by Hype™ by means of an RMA (Return Material UNDER THIS WARRANTY OR MAKE A PRODUCT EXCHANGE, AND IS UNABLE TO RECOVER ANY USER SOFTWARE OR DATA ON THE

> Edison, NJ 08837 844-348-2620

For Returns, Exchanges or Service please call Hover-1 at 844--348-2620

While riding your H1 scooter, if there is a system error or illegal self-balancing mode, so the device will prompt the user in a variety of You will notice the Running Indicator Light will turn RED and you will hear a beep sound alerting you to take precaution and cease The following are common occurrences where you will hear the Safety Alerts. These notices should not be ignored, but appropriate

 Prohibited riding surfaces (uneven, too steep, unsafe, etc.) When you step on the device, if the platform is tilted more than 10 degrees forward or backward. Battery voltage is too low.

Overheating, or motor temperature is too high.