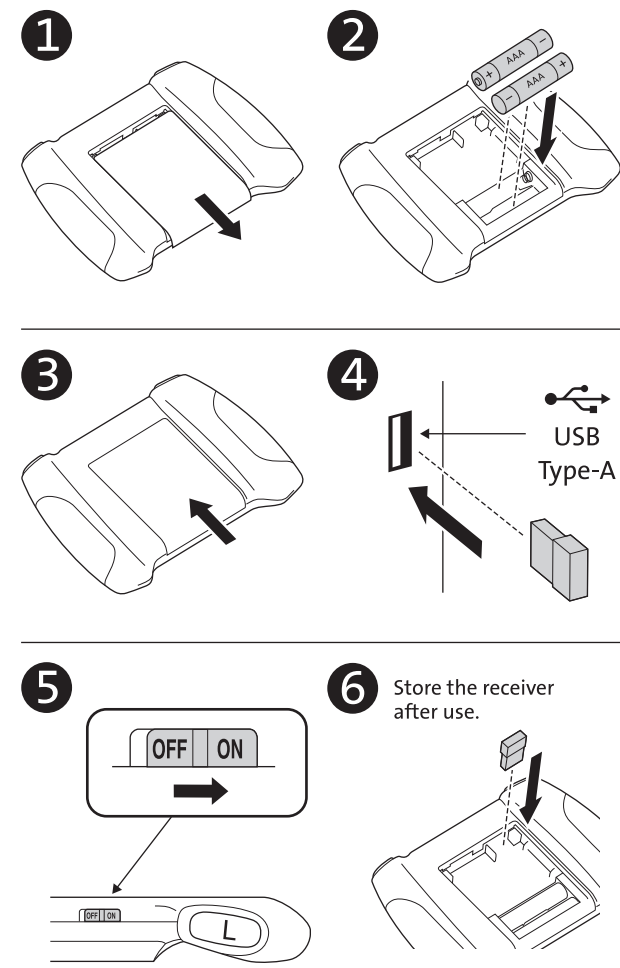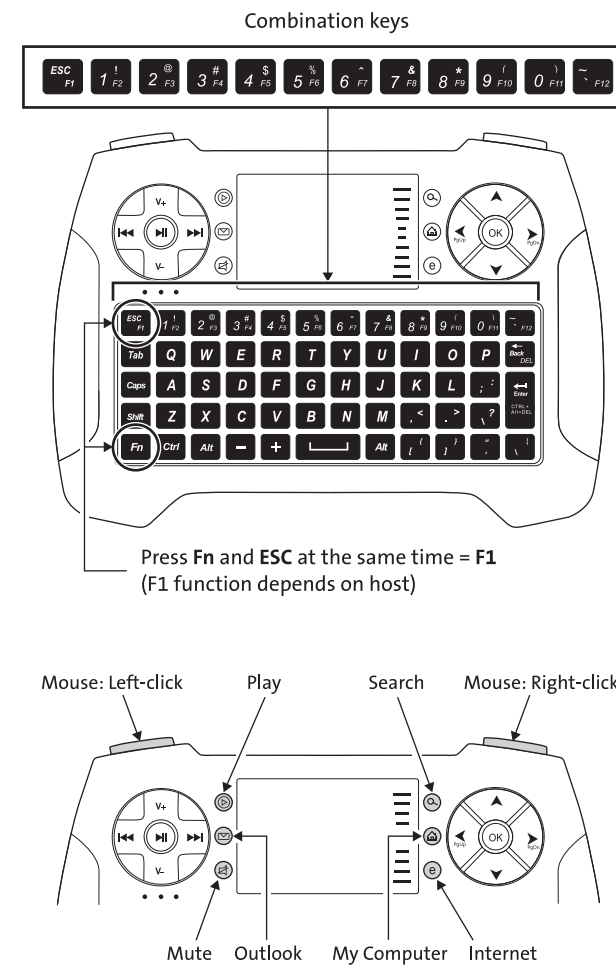Handheld Wireless Keyboard
Folded size: 95 mm X 140 mm
Trim size: 475 mm X 140 mm
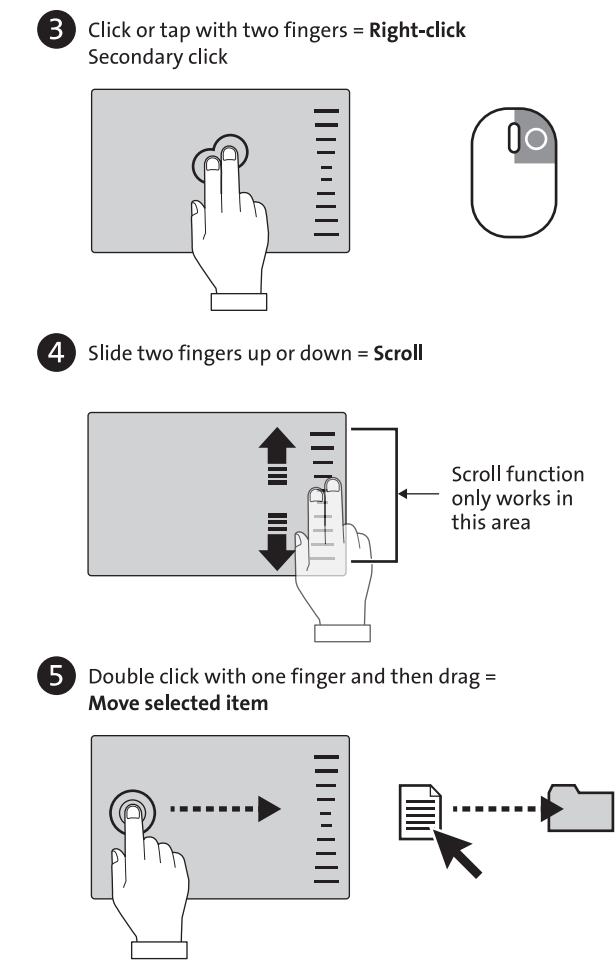
Function Keys

Includes 16 Function keys

Combination Key	Support Host Function	Remark
Fn + Esc	F1	
Fn + 1	F2	
Fn + 2	F3	
Fn + 3	F4	
Fn + 4	F5	
Fn + 5	F6	
Fn + 6	F7	
Fn + 7	F8	
Fn + 8	F9	
Fn + 9	F10	
Fn + 0	F11	
Fn + ˜	F12	
Fn + Space	Switch Touchpad DPI	
Fn + Back	Delete	
Fn + Enter	CTRL + Alt + DEL	
Fn + ▲	Switch backlight	▲

Combination keys

Press **Fn** and **ESC** at the same time = **F1**
(F1 function depends on host)

Mouse: Left-click   Play   Search   Mouse: Right-click

Mute   Outlook   My Computer   Internet

Touchpad Gestures: 5 Actions

Touchpad function area

1 Drag with one finger = **Move cursor**

2 Click with one finger = **Left-click**

3 Click or tap with two fingers = **Right-click**
Secondary click

4 Slide two fingers up or down = **Scroll**

Scroll function only works in this area

5 Double click with one finger and then drag =
Move selected item

USB Type-A

Store the receiver after use.

OFF ON
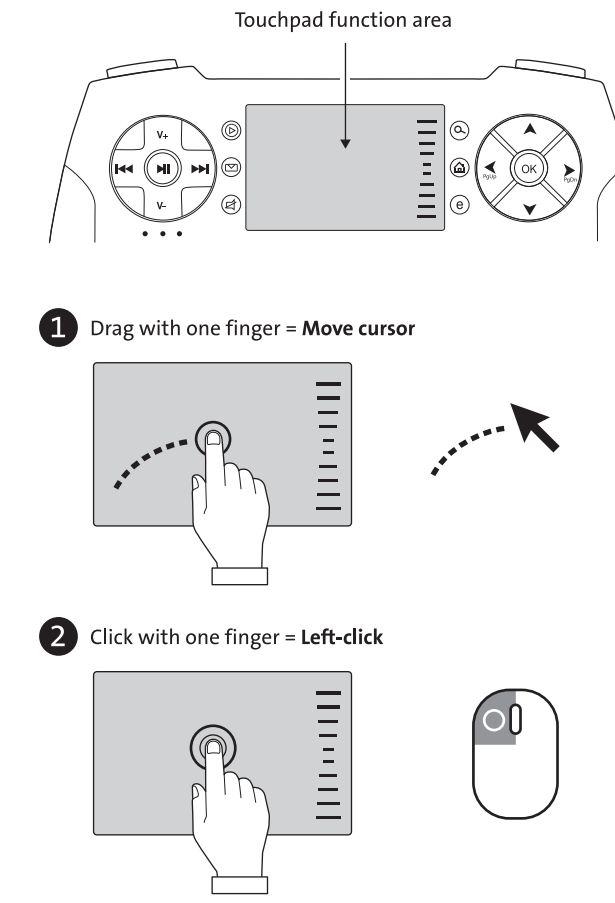
LED behavior

LED (orange)	Status
On	Low battery indicator (When voltage is under 2.0V)
Flashes 3X	When waking up from sleep mode (Press any key)
	Power off (After one hour of low battery indication)

LED (blue)	Status
On	Power on and stays on during use

Media Player Function Keys

Rewind   Play/Pause   Fast Forward
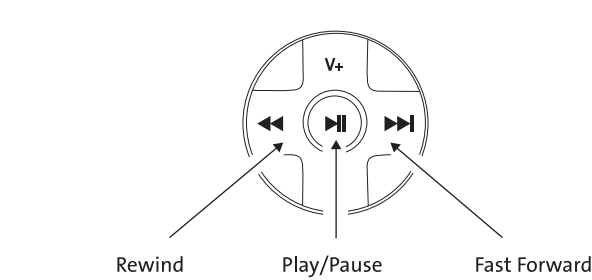
Windows® 7 and Windows 8.1 (Windows Media Player)
• The three buttons need to be manually activated before use,
(Reason: Default application is Windows Media Player).
To activate:
1 Run WMP on your computer
2 Activate the three buttons

Windows® 10 (Groove)
• Default functions
• No activation is needed before use

Troubleshooting – Connect to Receiver

No response (Wireless Keyboard cannot connect to receiver)
• Check dongle/receiver and ensure it is inserted correctly
• Receiver pairing:
1 Unplug the receiver from your computer.
2 Press **Fn + F1**.
3 Blue LED starts flashing.
4 Plug receiver into the host again firmly and securely.
(Keep Wireless Keyboard close to the host)
5 Blue LED turns on.
6 Paired successfully.

www.kensington.com/support

Australia	1300 881 931	México	55 15 00 57 00
België / Belgique	02 401 2395	Nederland	010 713 1882
Brasil	14 3235-4003	New Zealand	0800 539 26273
Canada	1 800 268 3447	Norway	80017520
中国	400 0684 219	Österreich	0800 677 873
Denmark	80 250966	Polska	22 570 18 00
Deutschland	0692 222 3654	Portugal	800855802
España	911 146 735	Россия	007 495 933 5163
Finland	0800 9 15697	Schweiz / Suisse	044 580 6667
France	01 7671 0404	Singapore	+65-6776-0195
Hong Kong	00852 2823 5130	Sweden	08 5033 6577
Hungary	06 20 9430 612	United Kingdom	0203 364 5390
Ireland	01 431 1395	United States	1 800 535 4242
Italia	02 3604 7030	International Toll	+31 53 484 9135
Japan	+81 04-7129-2135		

Kensington®

Handheld Wireless Keyboard

AAA
AAA

kensington.com/register

K75390   www.kensington.com   901-9656-00