Searching by Phone Number

1. Press ⚪(MENU) , [1] (Phonebook), [1](Search), [2](Number).

2. Enter all or part of the number you remember and
   press ⚪(STORE) .

3. The phone displays the memory location and names which
   contain your entry.

NOTE: "NO NUMBER MATCHES" appears when there is no
number matching your entry.

4. Press ⚪ (or [＊],[#]) to search for the name you're
   looking for and press ⚪(STORE) to display the number   .

NOTE: "ENTER LOCK CODE" appears when you try to access
secretly saved number. Enter the lock code and press ⚪(STORE) .

5. Press ⚪(REDIAL) to dial the number displayed.

Searching by Memory Location

1. Press ⚪(MENU) , [1] (Phonebook),[1] (Search),[3](Memory).

2. Enter the two-digit memory location. The phone displays the
   information of the memory location.

NOTE: "EMPTY LOCATION!" displays when you enter
location number that is empty.

3. Press ⚪(STORE) to display the number.

NOTE: "ENTER LOCK CODE" appears when you try to
access secretly saved number.
Enter the lock code and press ⚪(STORE) .

4. Press ⚪(REDIAL) to dial the number displayed.

axess•tel

ERASING AN ENTRY IN PHONEBOOK

To Erase a Specific Number

1. Press ⊙ , [1] (Phonebook) and [3] (Erase).

2. Press one of search options, [1] (Name), [2] (Number) or [3] (Memory).

3. Enter name, address, or phone number according to search option.

4. Select an item to erase by pressing ⊙ (or [✱] , [#]) and pressing ⊙ .

   NOTE: "ENTER LOCK CODE" appears when you try to access a secretly saved number. Enter the lock code and press ⊙ .

5. Press ⊙ again to erase.

6. Press ⊙ again to confirm. To cancel, press ⊙ .

📶 MENU 📖   **NAME?**   _
📶 MENU 📖   ► 01 : **AMIT**   03 : **SUNNY**
📶 MENU 📖   **AMIT**   **SUNNY**
📶 MENU 📖   **ERASE?** #01   **02255558282**
📶 MENU 📖   - **ERASED** -
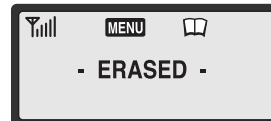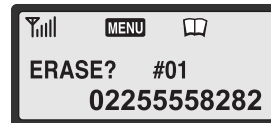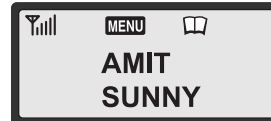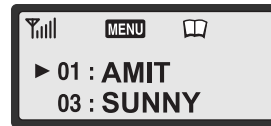
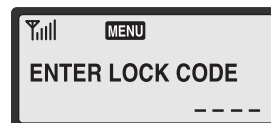# **E**RASING ALL ENTRIES IN PHONEBOOK

To Erase All Numbers in Phonebook

1. Press ⊙ , [7] (Security)

2. Enter lock code.

   NOTE: Default Lock code is last 4 digits of your phone number. To change lock code, see page 33.

3. Press [6] (Erase Names).

4. Press ⊙ to confirm.

📶 MENU   **ENTER LOCK CODE**   _ _ _ _
📶 MENU   **CLEAR MEMORY**   ► YES

axess•tel

ONE-TOUCH DIALING

Memory locations 01 ~ 09 are special one-touch dialing locations. You can dial the numbers stored in 01~09 by pressing just one key.

1. Pick up the handset or press 🔊 .
2. Press and hold the number of the location (1~9)
   containing the number to be called for a moment.
3. The name and the phone number displays and dials
   automatically.

NOTE: Location 1 may be preprogrammed as emergency
number or voice mail. Please check with your
service provider.

```
▁▂▃▄                                   ✆
MEMORY 1
AMIT
```

```
▁▂▃▄                                   ✆
CALLING...
     02255558282
```

TWO-TOUCH DIALING

Memory locations 10 ~ 99 are two-touch dialing locations. You can dial the numbers stored in 10~99 by pressing the first digit and pressing and holding the second digit.

1. Pick up the handset or press 🔊 .

2. Briefly press the first digit of the memory location
   number, then press the second digit and hold it
   down for a moment.

Example) To dial location 23, briefly press the 2 ,
then press 3 and hold for a moment.

3. The phone number stored displays and dials automatically.

```
▁▂▃▄                                   ✆
MEMORY 23
SUNNY
```

```
▁▂▃▄                                   ✆
CALLING...
     02255558282
```

NOTE1: When you try one-touch or two-touch dialing for the
number secretly saved, the phone will prompt for
Lock code entry. Enter the lock code to make a call.
NOTE2: "EMPTY LOCATION" displays when you try one-touch
or two-touch dialing with empty location number.

axess•tel
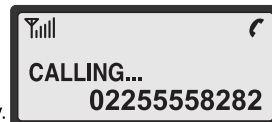
Useful Features

Call History
Displaying Your Phone Number
Mute
Selecting Time Mode
Setting the Alarm
Checking and Clearing Call Times
Setting Warning Alerts

C ALL HISTORY

Your phone stores the last 30 outgoing calls, incoming, and missed calls combined (only when Caller ID function is activated).
**You can display and redial these numbers.**

Redialing Outgoing Calls

1. Press (MENU) , [3] (Call History), [3] (Outgoing).

NOTE: If there's no outgoing call history,
"OUTGOING CALL MEMORY EMPTY!" displays.

2. Press 〇 or [∗],[#] to select number to redial.

3. Press 〇 (REDIAL) to redial the number.

NOTE1: Press 〇 (STORE) to see time and date of the call made. Then press 〇 (REDIAL) to redial the number or press 〇 (STORE) again to save the number in memory.

NOTE2: To redial the last number called, just pick up the handset or press 🔊 and 〇 (REDIAL) .
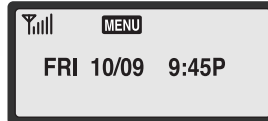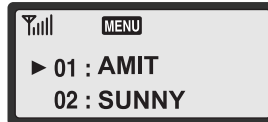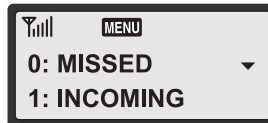
Returning Incoming Calls

1. Press 〇 (MENU) , [3] (Call History), [2] (Incoming).

NOTE: If there's no incoming call record,
"INCOMING CALL MEMORY EMPTY!" displays.

2. Press 〇 or ([∗] , [#]) to select number to redial.

3. Press 〇 (MENU) to call back the number.

NOTE1: Press 〇 (STORE) to see time and date of the call arrival. Then press 〇 (REDIAL) to redial the number or press 〇 (STORE) again to save the number in memory.

NOTE2: Incoming history is available only when caller ID is activated.
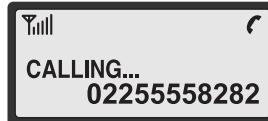
Redialing missed Calls

To display a list of missed received calls.

1. Press 〇 (MENU) , [3] (Call History), [1] (Missed).

NOTE: If there's no missed call record, 'MISSED CALL MEMORY EMPTY!' displays.

2. Press 〇 or ([∗] , [#]) to select number to redial.

3. Press 〇 (MENU) to call back the number .

NOTE1: Press 〇 (STORE) to see time and date of the call arrival. Then press 〇 (REDIAL) to redial the number or press 〇 (STORE) again to save the number in memory.

NOTE2: Missed history is available only when caller ID is activated.

Display
▼▬ll (MENU)
0: MISSED ▼
1: INCOMING

Display
▼▬ll (MENU)
▶ **01 : AMIT**
02 : SUNNY

Display
▼▬ll (MENU)
FRI 10/09 9:45P

Display
▼▬ll 📞
CALLING...
02255558282

Erasing Call History

1. Press ⭕(MENU) , [7] (Security)
2. Enter lock code.
   NOTE: Default Lock code is last 4 digits of your phone number. To change lock code, see page 33.
3. Press [5] (Erase Logs).
4. Press ⭕(STORE) to confirm.

```
Yⁿⁿll        MENU
     ENTER LOCK CODE
            _ _ _ _
```
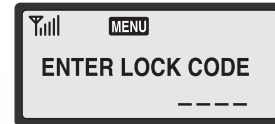
Call Timer Display

1. Toggle Call Timer Display
2. Press ⭕(MENU). Press [6] (Configuration).
3. Press [1] (Call Timer).
4. Scroll to select ON or OFF.
5. Press ⭕(STORE) to confirm.

```
Yⁿⁿll        MENU
     ERASE CALL LOGS
                YES?
```

DISPLAYING YOUR PHONE NUMBER

Displaying Your Phone Number

1. Press ⭕(MENU) , [6] (Configuration).
2. Press [3] (My Phone Number).

```
Yⁿⁿll        MENU
   MY PHONE NUMBER
       02255558282
```
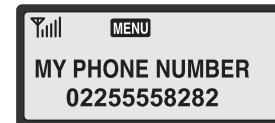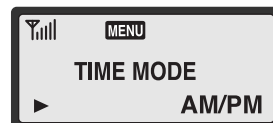
MUTE

This feature lets you mute the microphone, so that the other party cannot hear your voice or the sound of your surroundings. This function is available only during conversation.

1. Press ⭕(MENU), [1] (Mute) during conversation.
   The message 'MUTE' blinks to indicate the function Is working. The other party can no longer hear you, but you can hear them.
2. Press ⭕(MENU), [1] again to resume the conversation.

```
Yⁿⁿll              📞
   MUTE
       02255558282
```

25
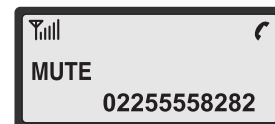
SELECTING TIME MODE

1. Press ⭕(MENU), [4](Time), [5] (Time Mode).
2. Select the time display mode by pressing
   ⭕ (or [✳], [#]).
   AM/PM: Display 0~12 hours with A or P indicator
   24 Hour: Display 00~24 hours
3. Press ⭕(STORE) to save the change.

```
┌──────────────────────────┐
│ Y.ıll      MENU          │
│                          │
│      TIME MODE           │
│ ►              AM/PM     │
└──────────────────────────┘
```

S ETTING THE ALARM

You can set the alarm sound daily or one time only.

1. Press 🔘(MENU) , [4] (Time), [1] (Alarm).
2. Select "SET" by pressing 🔘 (or [✳], [#]) and
   press 🔘(STORE) .

3. Enter alarm time and press 🔘(STORE) .

4. Select alarm mode by pressing 🔘 (or [✳], [#])
   and press 🔘(STORE) .
      Daily: Alarm sounds daily.
      One time: Alarm sounds once.
5. Enter the duration of the alarm by pressing
      🔘 (or [✳], [#]) and press 🔘(STORE) .
   A bell icon (🔔) appears in icon line.
   At alarm time, the icon and "ALARM TIME"
   message blinks and alarm goes off.
   Press any key to stop the alarm.

```
┌─────────────────────────┐
│ ▼ᵢₗₗ    [MENU]          │
│        ALARM            │
│ ►                SET    │
└─────────────────────────┘

┌─────────────────────────┐
│ ▼ᵢₗₗ    [MENU] 🔔       │
│        07 : 00am        │
│        22 : 32pm        │
└─────────────────────────┘

┌─────────────────────────┐
│ ▼ᵢₗₗ    [MENU] 🔔       │
│      ALARM MODE         │
│ ►              DAILY    │
└─────────────────────────┘

┌─────────────────────────┐
│ ▼ᵢₗₗ    [MENU] 🔔       │
│    ALARM SOUND TIME     │
│            1 MINUTE     │
└─────────────────────────┘

┌─────────────────────────┐
│ ▼ᵢₗₗ    [MENU] 🔔       │
│      ALARM TIME         │
│                         │
└─────────────────────────┘
```
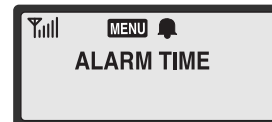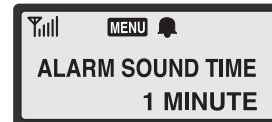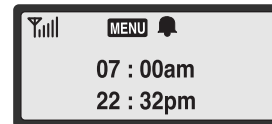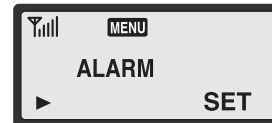
Canceling the Alarm Time

1. Press 🔘(MENU) , [4] (Time), [1] (Alarm).
2. Select "RELEASE" by pressing 🔘 (or 🔘, 🔘) and
   press 🔘(STORE) to cancel the alarm.

axess•tel

CHECKING AND CLEARING CALL TIMES

Checking the Last Call Time
1. Press ○ (MENU), [4] (Time), [2] (Last Call).
2. Press ○ (MENU) to clear the display.

```
📶    MENU

    LAST CALL TIME
              3:25
```
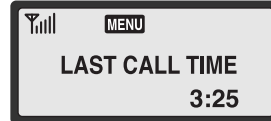
Checking Accumulated Incoming Call Time
1. Press ○ (MENU), [4] (Time), [3] (Total Time),
   [1] (Incoming).
2. Press ○ (CLEAR) to clear the display.

```
📶    MENU

    INCOMING CALL
              3:25
```
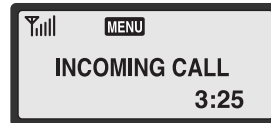
Checking Accumulated Outgoing Call Air Time
1. Press ○ (MENU), [4] (Time), [3] (Total Time),
   [2] (Outgoing).
2. Press ○ (CLEAR) to clear the display.

```
📶    MENU

    OUTGOING CALL
          12:26:32
```
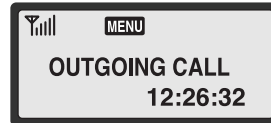
Reset Accumulated Call Time
1. Press ○ (MENU), [4] (Time), [4] (Clear Call Time).
2. Press ○ (STORE) .

```
📶    MENU

    CLEAR CALL TIME
          ►YES
```

S ETTING WARNING ALERTS

You can set your phone to sound warning beeps that indicate:
 - each minute you are on a phone call
 - when you are out of the service area

Setting/Releasing 1 Minute Alert

1. Press ^{MENU} ◯ , 5 (Sound), 4 (1 Min Alert).
2. Select ON or OFF by pressing ◯ (or ✳ , #).
3. Press ^{STORE} ◯ .

NOTE: When 1 minute alert is set, the phone gives alert
 sound each minute while you are on a phone call.

```
▼ill        MENU
        1 MINUTE ALERT
        ►            OFF
```

Setting/Releasing Service Alert

1. Press ^{MENU} ◯ , 5 (Sound), 5 (Service Alert).
2. Select ON or OFF by pressing ◯ (or ✳ , #).
3. Press ^{STORE} ◯ .

NOTE: When service alert is set, the phone gives alert
 sound when the phone is acquiring or loses the
 service signal.

```
▼ill        MENU
        SERVICE ALERT
        ►            OFF
```

Setting/Releasing Connection Alert

1. Press ^{MENU} ◯ , 5 (Sound), 7 (Connect Alert).
2. Select ON or OFF by pressing ◯ (or ✳ , #).
3. Press ^{STORE} ◯ .

NOTE: When connection alert is set, the phone gives
 alert sound when the call has been connected to the
 number dialed.

```
▼ill        MENU
        CONNECT ALERT
        ►            ON
```

Setting/Releasing Voice Privacy Alert

1. Press ^{MENU} ◯ , 5 (Sound), 8 (Voice Privacy Alert).
2. Select ON or OFF by pressing ◯ (or ✳ , #).
3. Press ^{STORE} ◯ .

NOTE: When voice privacy alert is set, the phone gives
 alert sound when the voice privacy is on.

```
▼ill        MENU
        VOX PRIV ALERT
        ►            ON
```

29

axess•tel