Swimmer Jr. Quick Start Guide

Date	11 April 2015
Drawing #	HBP3408
File Name	
Scale	Full Scale
Drawn By	JMowatt
Color	4 color CMYK
Emboss Ht.	n/a
Deboss Depth	n/a
Finish	n/a
Process	
Notes	Accordion fold DO NOT PRINT DIELINES 60 lb. text matte paper Dieline may not be symmetrical please correct as necessary to ensure propoer alignment when folded
Artwork	Digital File

Revision	Date	Description
A	7/8/15	updated Chinese translations

57.46 mm (2.255 in)

Factory Reset
8 Second Hold

Nächster/voriger Titel
8 Sekunden gedrückt halten

Brano successivo / precedente
Tenere premuto per 8 secondi

恢复出厂设定
按住8秒

回復出廠設定
按住8秒

Avancer/Revenir en arrière
Maintenir enfoncé pendant 8 secondes

Avance de pista y retroceso de pista
Mantener oprimido durante 8 segundos

Avançar/Voltar
Manter pressionado por 8 segundos

Having issues with your BOOM Product?
We want to hear about it.
For more warranty info, visit polkaudio.com

Avez-vous des problèmes avec votre produit BOOM ?
Nous aimerions en être informés. Pour plus d'informations sur la garantie, consultez polkaudio.com

¿Tiene problemas con su producto BOOM? Queremos saberlo.
Hay más información sobre la garantía en polkaudio.com

Hai dei problemi con il tuo prodotto BOOM ?
Vogliamo saperne di più. Per maggiori informazioni sulla garanzia, visita polkaudio.com

Haben Sie Probleme mit Ihrem BOOM-Produkt?
Dann wollen wir von Ihnen hören. Weitere Informationen zur Garantie finden Sie unter polkaudio.com

Você está tendo problemas com seu produto BOOM?
Queremos ser informados. Para obter informações sobre a garantia, acesse polkaudio.com

您的 BOOM 产品有问题吗？我们洗耳恭听。欲了解更多质保信息，请访问 polkaudio.com

您的 BOOM 產品有問題嗎？我們洗耳恭聽。欲瞭解更多質保資訊，請訪問 polkaudio.com

Designed to California, Made in China. The Bluetooth word make and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by BOOM is under license. Other trademarks or trade names are those of their respective owners.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This symbol on our electrical products or their packaging indicates that it is forbidden in Europe to discard the product in question as domestic waste. In order to ensure that you dispose of the products correctly, please dispose of the products according to local laws and regulations on the disposal of electrical and electronic equipment. In doing so you are contributing to the retention of natural resources and to the promotion of environmental protection by the treatment and disposal of electronic waste.

Dieses Symbol auf unseren Elektroprodukten oder deren Verpackungen weist darauf hin, dass das entsprechende Produkt in Europa nicht als Hausmüll entsorgt werden darf. Um die ordnungsgemäße Entsorgung sicherzustellen, entsorgen Sie die Produkte bitte gemäß den örtlichen Gesetzen und Verordnungen für die Entsorgung von Elektro- und Elektronikalgeräten. Dadurch tragen Sie zur Erhaltung der natürlichen Ressourcen und zur Förderung des Umweltschutzes bei der Behandlung und Entsorgung von Elektronikschroft bei.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

型号
制造商: Polk Audio, Inc

中国制造

注意
如果电池更换不当会有爆炸危险
只能用同样类型或等效类型的电池来更换

电池（电池包或组合电池）不得暴露在诸如日照，火烤或类似过热环境中的警告

HBP3408A

Polk Audio
1 Viper Way, Vista, California USA 92081
Authorized Representative: Sound United
Wormser Strasse 6 D-58091 Hagen

polk BOOM SWIMMER Jr.

QUICK START GUIDE

580 mm (22.8 in)

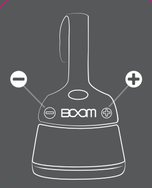

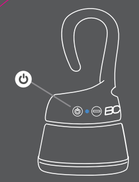

Power On/Off
2 Second Hold

Ein-/Ausschalten
2 Sekunden gedrückt halten

Allumer/Éteindre
Maintenir enfoncé pendant 2 secondes

Acceso/Spento
Tenere premuto per 2 secondi

Encendido y apagado del dispositivo
Mantener oprimido durante 2 segundos

开／关机
按住2秒

開/關機
按住2秒

Ligar/Desligar
Manter pressionado por 2 segundos

Bluetooth Pair
Automatically Engages with Power On

Bluetooth-Pair
Automatisch wenn eingeschaltet

Association Bluetooth
S'active automatiquement quand le haut-parleur est allumé

Associazione Bluetooth
Si attiva automaticamente all'accensione

Sincronización Bluetooth
Activación automática al encender el dispositivo

开机后蓝牙自动配对

開機後藍牙自動配對

Pareamento Bluetooth
Acionado automaticamente com a energia ligada

Play/Pause
Tap buttons simultaneously

Wiedergabe/Pause
Tasten gleichzeitig antippen

Lecture/Pause
Appuyez sur les boutons simultanément

Riproduzione / Pausa
Tocar nos botões simultaneamente

Reproducción y pausa
Pulsar los botones juntos

播放/暂停
同时轻按按钮

播放/暂停
同時輕按按鈕

Reproduzir/Pausar
Toccare i pulsanti simultaneamente

Volume Up/Down
Tap Button

Lauter/leiser
Taste antippen

Volume haut / bas
Appuyer sur le bouton

Aumento / riduzione volume
Toccare il pulsante

Subida y bajada de volumen
Dar un apretoncito al botón

音量+/-
点击按钮

音量+/-
點擊按鈕

Aumentar/diminuir o volume
Tocar no botão

Track Forward/Track Back
2 Second Hold

Nächster/voriger Titel
2 Sekunden gedrückt halten

Avancer/Revenir en arrière
Maintenir enfoncé pendant 2 secondes

Brano successivo / precedente
Tenere premuto per 2 secondi

Avance de pista y retroceso de pista
Mantener oprimido durante 2 segundos

上一曲／下一曲
按住2秒

上一首/下一首
按住2秒

Avançar/Voltar
Manter pressionado por 2 segundos

Answer/ Hang Up Phone
Tap + to answer / Hold - 2 seconds to hang up

Répondre à un appel téléphonique /Raccrocher
Appuyez sur + pour répondre / Maintenez - enfoncé pendant 2 secondes pour raccrocher

Responder y colgar el teléfono
Para responder, dar un apretoncito al botón + /
Para colgar, mantener oprimido el botón – durante 2 segundos

Atender/Desligar telefone
Toccare + per rispondere / Tenere premuto – per 2 secondi per riagganciare

Anrufe beantworten/beenden
Zum Beantworten + antippen / Zum Auflegen – 2 Sekunden gedrückt halten

Per rispondere a una chiamata / Riattaccare
Toque no botão + para atender / Mantenha o botão – pressionado por 2 segundos para desligar

接/挂电话
按"+"（加）按钮接听来电。/按住"–"（减）按钮2秒挂断电话。

接聽/掛斷電話
輕按+(加號)按鈕接聽來電。/按-(減號)按鈕兩秒鐘掛斷

READY 4 ANYTHING