Model: H2O/WIFI

SMART WATER SENSOR

IMPORTANT SAFETY INSTRUCTIONS AND INSTALLATION GUIDE

Works with
Feit Electric app

WiFi
Only supports
2.4GHz Wi-Fi
Networks

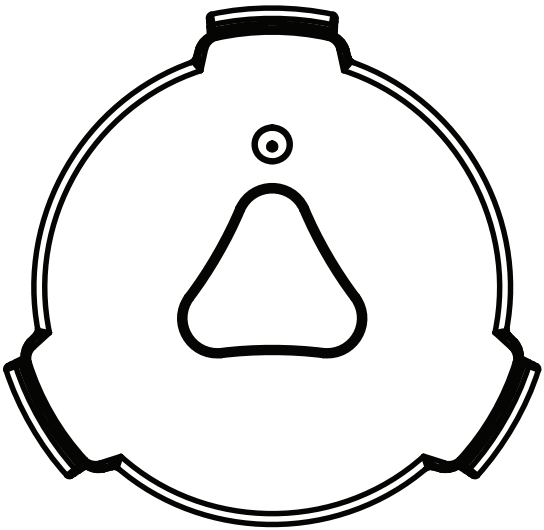

READ BEFORE INSTALLATION
SAVE THESE INSTRUCTIONS

Questions, problems, missing parts? Before returning to the store,
call Feit Electric Customer Service
8 a.m. - 5 p.m., PST, Monday - Friday

1-866-326-BULB (2852)

FEIT.COM

We appreciate the trust and confidence you have placed in Feit Electric through the purchase of this Smart Water Sensor. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.
Thank you for choosing Feit Electric.

REV005

Table of Contents

Table of Contents 2
Safety Information 2
Warranty 2
FCC Statement 2
Pre-Installation 3
Description 3
Screw Installation 4
Adhesive Installation 5
App Setup 6
Need Help? 6
Troubleshooting 6

Safety Information

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS:

ALWAYS FOLLOW BASIC SAFETY PRECAUTIONS WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT.

CAUTION: Please read all information carefully before installation.

CAUTION: Intended for indoor use.

CAUTION: This product is NOT a toy.

CAUTION: Do not install directly on or near any metal objects that may weaken the Wi-Fi signal strength.

CAUTION: Place the leak sensor where leaks are likely to occur. The top or bottom metal contacts can easily detect a pool of water forming. Do not install in an area where water is already present.

Limited Warranty

This product is warrantied to be free from defects in workmanship and materials for up to 1 year from date of purchase. If the product fails within the warranty period, please contact Feit Electric at info@feit.com, visit feit.com/contact-us or call 1-866-326-BULB (2852) for instructions on replacement or refund. REPLACEMENT OR REFUND IS YOUR SOLE REMEDY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED. Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement
The device can be used in mobile (min 7.87 in.) exposure condition without restriction.

Supplier's Declaration of Conformity:
47 CFR § 2.1077 Compliance Information
Responsible Party:
Feit Electric Company
4901 Gregg Road,
Pico Rivera, CA 90660, USA
562-463-2852
Unique Identifier:
H2O/WIFI

WiFi
Only supports 2.4GHz Wi-Fi Networks

Works with Feit Electric app

Pre-Installation

TOOLS REQUIRED TO MOUNT SENSOR



PHILLIPS SCREWDRIVER

PENCIL

POWER DRILL

HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.

Part	Description	Quantity
AA	Water Sensor	1
BB	Leak Sensor	1
CC	Mounting Bracket	1
DD	Double-Sided Tape	1
EE	3.0V CR2 Lithium Battery	1
FF	Mounting Screw	1
GG	Mounting Anchor	1

Description

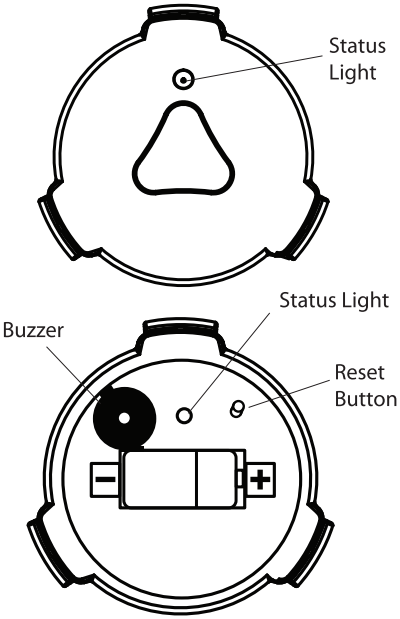

Water Sensor Inside View

ITEM	DESCRIPTION
Status Light	• Blinking BLUE: Pairing Mode • Blinking BLUE 3 Times: Water Detected • Blinking RED Slowly: Low Battery
Built-in Buzzer	3 quick beeps continually when water is detected and sends a notification in-app.
Reset Button	Press and hold for 5 seconds to reset the sensor.
Leak Sensor Cable	4FT

1 Remove Mounting Bracket from Water Sensor

- Remove the Mounting Bracket (CC) from the Water Sensor (AA) by gently pulling on the Mounting Bracket (CC) until it completely detaches from the Water Sensor (AA).

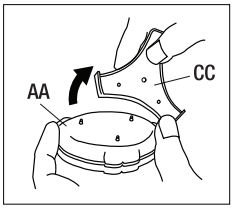

2 Install Mounting Bracket with Screws

- Allow enough distance from the ground to give room for the Leak Sensor (BB) to lay on the floor where water may leak.
- Position the Mounting Bracket (CC) against a wall. Mark screw position with a pencil.

NOTE: You can skip this next step if installing on wood or siding.

- Drill a hole at the marked point if installing on surface such as concrete, brick or drywall. Insert Mounting Anchor (GG) into hole.
- Position the Leak Sensor Port to point down.
- Use the Mounting Screw (FF) to attach the Mounting Bracket (CC) to the wall.

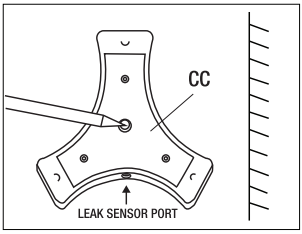

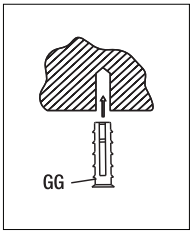

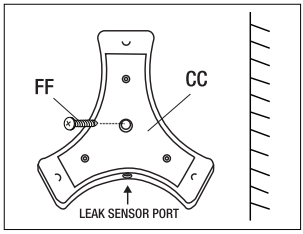

3 Insert Battery or Remove Tag

- Remove the Water Sensor (AA) lid by turning it counterclockwise. Lift lid open to access battery compartment.
- Insert 3.0V CR2 Lithium Battery (EE) or remove tag if 3.0V CR2 Lithium Battery (EE) is already present.
- Turn on the Water Sensor (AA) by pushing on the RESET button.
- Follow the steps in the APP Setup on page 6.
- Place the lid back on the Water Sensor (AA) aligning the assembly marks together. Close lid by turning it clockwise.

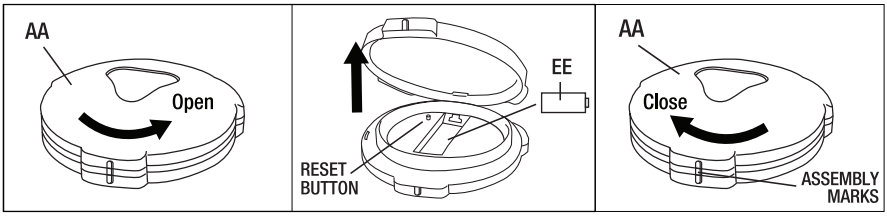

4 Attach Leak Sensor and Water Sensor to Mounting Bracket

- Attach the Leak Sensor (BB) plug to the Mounting Bracket (CC) port.
- Attach the Water Sensor (AA) to the Mounting Bracket (CC) by aligning the Water Sensor (AA) pins with the Mounting Brackets (CC) contacts and gently pushing the Water Sensor (AA) until it locks in place.
- Place the Leak Sensor (BB) flat on the ground to detect leaks.

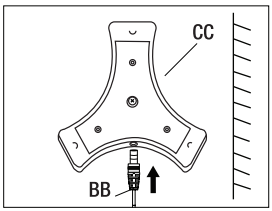

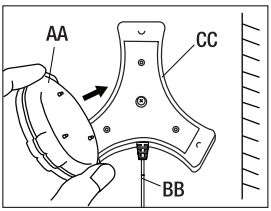

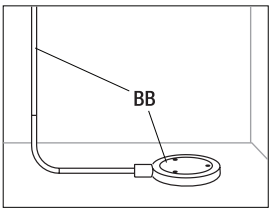

1 Remove Mounting Bracket from Water Sensor

- Remove the Mounting Bracket (CC) from the Water Sensor (AA) by gently pulling on the Mounting Bracket (CC) until it completely detaches from the Water Sensor (AA).

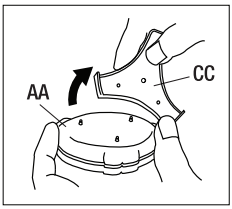

2 Install Mounting Bracket with Double-Sided Tape

- Clean the mounting area thoroughly (surface must be free of dust, dirt or grease).
- Stick Double-Sided Tape (DD) to the backside of the Mounting Bracket (CC).
- Allow enough distance from the ground to give room for the Leak Sensor (BB) to lay on the floor where water may leak.
- Position the Leak Sensor port to point down.
- Peel the Double-Sided Tape (DD) and place the Mounting Bracket (CC) on a flat surface.

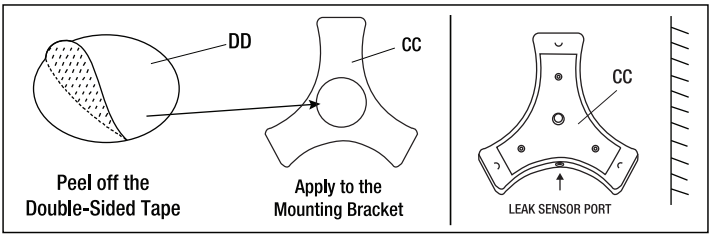

3 Insert Battery or Remove Tag

- Remove the Water Sensor (AA) lid by turning it counterclockwise. Lift lid open to access battery compartment.
- Insert 3.0V CR2 Lithium Battery (EE) or remove tag if 3.0V CR2 Lithium Battery (EE) is already present.
- Turn on the Water Sensor (AA) by pushing on the RESET button.
- Follow the steps in the APP Setup on page 6.
- Place the lid back on the Water Sensor (AA) aligning the the assembly marks together. Close lid by turning it clockwise.

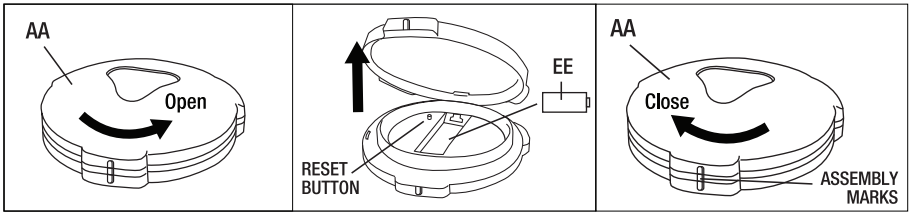

4 Attach Leak Sensor and Water Sensor to Mounting Bracket

- Attach the Leak Sensor (BB) plug to the Mounting Bracket (CC) port.
- Attach the Water Sensor (AA) to the Mounting Bracket (CC) by aligning the Water Sensor (AA) pins with the Mounting Brackets (CC) contacts and gently pushing the Water Sensor (AA) until it locks in place.
- Place the Leak Sensor (BB) flat on the ground to detect leaks.

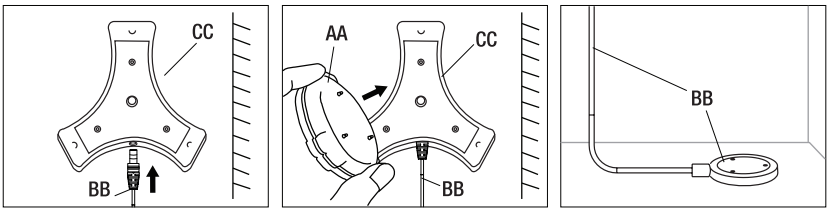

APP Setup

Download and install the Feit Electric app

- Search for the Feit Electric app in the App Store or Google Play Store.
- Download and install the Feit Electric app on your smart device.

Feit Electric App

Set up the smart water sensor using the Feit Electric app

Check to be sure the Sensor is in pairing mode. The BLUE indicator light must be blinking rapidly to connect. If not already blinking, press and hold the Reset button for five seconds. Use the Feit Electric app to complete the set up.

- Tap Add Device or the + sign, then select Sensor and confirm. You will be prompted to enter your Wi-Fi network and password.

Be sure to connect to a 2.4 GHz Wi-Fi network that covers your installation location.

Need Help?

FAQs and the latest versions of user guides can be found at **feit.com/help** and **feit.com/smart.**

To reach customer support please visit **feit.com/contact-us**

Troubleshooting Tips

If you are having difficulty connecting:

- Make sure the Wi-Fi network is a 2.4 GHz network. Smart Water Sensor will not connect to a 5 GHz network.
- Test your Wi-Fi network with other devices such as your phone to make sure it is operating properly.
- The Wi-Fi connection may not have good coverage during set up. Try moving the Smart Water Sensor closer to your Wi-Fi router.
- Your Wi-Fi network password is case sensitive, make sure you are entering it correctly.

Please also check the App User Guide for more information.