JBL
HARMAN

JBL Bar 2.1

2.1-Channel Soundbar with Wireless Subwoofer

Quick Start Guide

Bluetooth DOLBY AUDIO HDMI

Note: For complete information about using all of your JBL Bar 2.1, download the full Owner's Manual from www.jbl.com. For more product information, please visit www.jbl.com/bar21support

1 What's in the box

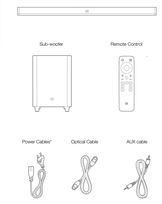

* Power cable numbers varied by regions

2 Place your soundbar

2a. Place the Soundbar on the table

Use tape to stick the wall-mounted paper guide on the wall, push a pen tip through the center to mark the wall-mounted bracket location and remove the paper.

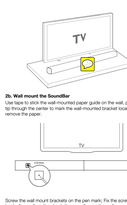

2b. Wall mount the Soundbar

Use tape to stick the wall-mounted paper guide on the wall, push a pen tip through the center to mark the wall-mounted bracket location and remove the paper.



Screw the wall mount brackets on the pen mark; Fix the screw at the back of soundbar; then hook the soundbar on the wall.

3 Connect your soundbar

3a. Connect to your TV

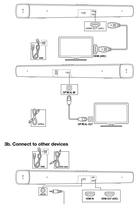

3b. Connect to other devices

4 Power your system

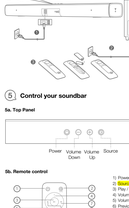

5 Control your soundbar

5a. Top Panel



5b. Remote control

6 Bluetooth® connection

6a. Press RC Bluetooth button to enter Bluetooth source

6b.

Remark: Press and hold Remote control Bluetooth button for 3 seconds if you want to pair another mobile device

7 JBL SoundShift®

Press RC Soundshift button to enable Soundshift feature.

While Soundshift is on, play and pause your music source to enjoy auto-switch between your mobile devices (A) and TV (B).

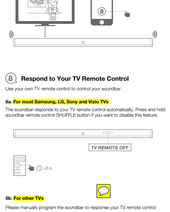

Follow the same procedure for VOLUME - and VOLUME +. For mute, press both VOLUME + and VOLUME - button on soundbar and press MUTE button on RC simultaneously.

Press and hold VOLUME+ and SOURCE button on soundbar again and now your soundbar response to your TV remote control.

8 Respond to Your TV Remote Control

Use your own TV remote control to control your soundbar

8a. For most Samsung, LG, Sony and Vizio TVs

The soundbar responds to your TV remote control automatically. Press and hold soundbar remote control SHUFFLE button if you need to disable this feature.

8b. For other TVs

Please manually program the soundbar to response your TV remote control step by step; First, press and hold VOLUME+ and SOURCE button to enter learning mode.

Then, press POWER button on the soundbar and press POWER button on the TV remote control

9 Product Specifications

Total Maximum Power	300W
Max SPL	99dB
Frequency Response	40Hz to 20kHz
HDMI Video Inputs	1
HDMI Video Output (with Audio Return Channel)	1
Bluetooth Version	5.0
Max Bluetooth Range	up to 10m
Bluetooth Frequency Range	2402MHz-2480MHz
Max Transmitting power	4dbm (EIRP)
Soundbar Maximum Power	100W
Soundbar Transducer Size	4 x 4.25" racetrack drivers 2 x 0.75" tweeter
Soundbar Dimensions (W x H x D)	965 x 58 x 69mm / 38" x 2.3" x 2.7"
Soundbar Weight	2.3kg
Soundbar Power Consumption (standby)	<0.5W
Soundbar Power Consumption (max)	60W
Subwoofer Maximum Power	200W
Subwoofer Transducer Size 8" (200mm)	6.5"
SJ01 Wireless Frequency Range	5742MHz-5843MHz
Subwoofer Dimensions (W x H x D)	225 x 370 x 235mm / 8.9" x 14.6" x 9.9
Subwoofer Weight	5.5kg
Subwoofer Power Consumption (standby)	<0.5W
Subwoofer Power Consumption (max)	60W
Packaging Dimensions (W x H x D)	1070 x 378 x 363mm
Packaging Weight (Gross)	9.85kg

CAUTION:

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

WARNING:

Risk of battery fire, battery, Chemical Burn Hazard

(The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CAUTION:

Risk of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

There are no restrictions in use in EU.

Este equipamento cumpre com cartão Classe II ou duplo isolado. Foi concebido de forma a que não requeira uma ligação de segurança à terra.

ATENÇÃO:

Risco de explosão da bateria, Perigo de Queimadura Química

(O controlo remoto fornecido com) Este produto contém uma bateria de moeda/botão. Se a bateria de moeda/botão for engolida, pode causar queimaduras internas graves em apenas 2 horas e pode levar à morte.

Mantenha as baterias novas e usadas afastadas das crianças.

Se o compartimento da bateria não fechar bem, pare de utilizar o produto e mantenha-o afastado das crianças.

Se pensar que as baterias podem ter sido engolidas ou colocadas dentro de qualquer parte do corpo, procure assistência médica imediatamente.

ATENÇÃO:

Risco de explosão se a bateria for substituída incorretamente. Substitua apenas por um tipo igual ou equivalente.

Não existem restrições de utilização na UE.

Tipo de fonte de alimentação: CA
Fonte de alimentação: Equipamento de alimentação de modo comutado
Fabricante: Shenzhen Honor Electronic Co., Ltd.
Endereço: Honor Industrial Park, Nº 3 Xiangshan Road, Nanshan District, Shenzhen, China
Número de telefone: +86 755 3695 7777
Modelo: ADS-65LSI-19-1-090100
Entrada: 100-240 V, 50/60 Hz, 1,5 A
Saída: 9 V, 5 A, 45 W

Tipo de fonte de alimentação: CA
Fonte de alimentação: Equipamento de alimentação de modo comutado
Fabricante: Shenzhen Honor Electronic Co., Ltd.
Endereço: Honor Industrial Park, Nº 3 Xiangshan Road, Nanshan District, Shenzhen, China
Número de telefone: +86 755 3695 7777
Modelo: ADS-65LSI-19-1-090100
Entrada: 100-240 V, 50/60 Hz, 1,5 A
Saída: 9 V, 5 A, 45 W

Este equipamento está em conformidade com os requisitos essenciais e outras disposições relevantes da Diretiva 2014/53/UE. Pode encontrar a declaração de conformidade completa em www.harman.com/CE. Este equipamento pode ser operado em todos os países da UE.

Esta gama de frequências é utilizada pelos sistemas de comunicação de área local sem fios (RLAN) com uma potência de transmissão máxima inferior ou igual a 20 dBm EIRP.

Para mais informações, consulte o site da ANATEL - www.anatel.gov.br

TRX4334_A

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by HARMAN International Industries, Incorporated is under license. Other trademarks and trade names are those of their respective owners.

The terms HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.

FR Guide de démarrage rapide

Note: For complete information about using all of your JBL Bar 2.1, download the full Owner's Manual from www.jbl.com. For more product information, please visit www.jbl.com/bar21support

1 Contenu de la boîte
Soundbar, Sub-woofer, Remote Control, Power Cables*, Optical Cable, AUX cable, Wall-Mount Brackets, Product Information & Wall-mounted guide
* Les numéros de câble d'alimentation varient selon les régions

2 Place your soundbar
2a. Placez la Soundbar sur la table
Utilisez du ruban adhésif pour fixer le guide de montage mural en papier sur le mur, faites passer la pointe d'un stylo à travers le centre pour marquer l'emplacement du support mural et retirez le papier.
2b. Montez la Soundbar au mur
Utilisez du ruban adhésif pour fixer le guide de montage mural en papier sur le mur, faites passer la pointe d'un stylo à travers le centre pour marquer l'emplacement du support mural et retirez le papier.
Vissez les supports muraux sur la marque du stylo ; Fixez la vis à l'arrière de la barre de son ; puis accrochez la barre de son au mur.

3 Connect your soundbar
3a. Connectez à votre TV
3b. Connectez à d'autres appareils

4 Power your system

5 Control your soundbar
5a. Top Panel
Power, Volume Down, Volume Up, Source
5b. Remote control
1) Power 2) Source 3) Play / Pause 4) Volume + 5) Volume - 6) Previous 7) Next 8) Audio Sync + 9) Audio Sync - 10) Mute 11) Bass + 12) Bass - 13) Sound mode 14) Soundshift On / off 15) Shuffle / Repeat 16) Surround On / off 17) Night mode On / off 18) Dim display 19) Bluetooth

6 Bluetooth connection
6a. Press RC Bluetooth button to enter Bluetooth source
6b.
Remark: Press and hold Remote control Bluetooth button for 3 seconds if you want to pair another mobile device

7 JBL SoundShift®
Appuyez sur le bouton Soundshift de la télécommande pour activer la fonction Soundshift.
Lorsque Soundshift est activé, lancez et mettez en pause votre source audio pour profiter de l'auto-commutation entre vos appareils mobiles (A) et la TV (B).

8 TV Remote response
Use your own TV remote control to control your soundbar
8a. For most Samsung, LG, Sony and Vizio TVs
The soundbar responds to your TV remote control automatically. Press and hold soundbar remote control SHUFFLE button if you need to disable this feature.
8b. For other TVs
Veuillez programmer manuellement le caisson de graves pour répondre à la télécommande de votre TV étape par étape ; Tout d'abord, appuyez sur VOLUME+ et SOURCE pour entrer en mode d'apprentissage.
Ensuite, appuyez sur VOLUME+ et SOURCE sur la barre de son à nouveau et maintenez-les enfoncés pour activer votre barre de son pour répondre à votre télécommande TV.
Enfin, appuyez sur POWER sur la barre de son et appuyez sur POWER sur la télécommande de votre TV.

9 Product Specifications
Total Maximum Power : 300W
Max SPL : 99dB
Frequency Response : 40Hz to 20kHz
HDMI Video Inputs : 1
HDMI Video Output (with Audio Return Channel) : 1
Bluetooth Version : 5.0
Max Bluetooth Range : up to 10m
Bluetooth Frequency Range : 2402MHz-2480MHz
Max Transmitting power : 4dbm (EIRP)
Soundbar Maximum Power : 100W
Soundbar Transducer Size : 4 x 4.25" racetrack drivers / 2 x 0.75" tweeter
Soundbar Dimensions (W x H x D) : 965 x 58 x 69mm / 38" x 2.3" x 2.7"
Soundbar Weight : 2.3kg
Soundbar Power Consumption (standby) : <0.5W
Soundbar Power Consumption (max) : 60W
Subwoofer Maximum Power : 200W
Subwoofer Transducer Size 8" (200mm) : 6.5"
SJ01 Wireless Frequency Range : 5742MHz-5843MHz
Subwoofer Dimensions (W x H x D) : 225 x 370 x 235mm / 8.9" x 14.6" x 9.9
Subwoofer Weight : 5.5kg
Subwoofer Power Consumption (standby) : <0.5W
Subwoofer Power Consumption (max) : 60W
Packaging Dimensions (W x H x D) : 1070 x 378 x 363mm
Packaging Weight (Gross) : 9.85kg

ES Guía de inicio rápido

Note: For complete information about using all of your JBL Bar 2.1, download the full Owner's Manual from www.jbl.com. For more product information, please visit www.jbl.com/bar21support

1 Contenido de la caja
Soundbar, Sub-woofer, Remote Control, Power Cables*, Optical Cable, AUX cable, Wall-Mount Brackets, Product Information & Wall-mounted guide
* El número de cables varía según la región

2 Place your soundbar
2a. Coloque la Soundbar en la mesa
2b. Wall mount the Soundbar

3 Connect your soundbar
3a. Connect to your TV
3b. Connect to other devices

4 Power your system

5 Control your soundbar
5a. Top Panel
Power, Volume Down, Volume Up, Source
5b. Remote control
1) Power 2) Source 3) Play / Pause 4) Volume + 5) Volume - 6) Previous 7) Next 8) Audio Sync + 9) Audio Sync - 10) Mute 11) Bass + 12) Bass - 13) Sound mode 14) Soundshift On / off 15) Shuffle / Repeat 16) Surround On / off 17) Night mode On / off 18) Dim display 19) Bluetooth

6 Bluetooth connection
6a. Press RC Bluetooth button to enter Bluetooth source
6b.
Remark: Press and hold Remote control Bluetooth button for 3 seconds if you want to pair another mobile device

7 JBL SoundShift®
Pulse el botón Soundshift del mando a distancia para activar la función Soundshift.
Con Soundshift activado, reproduzca y pause su fuente de audio para disfrutar de la conmutación automática entre sus dispositivos móviles (A) y la TV (B).

8 TV Remote response
Use your own TV remote control to control your soundbar
8a. For most Samsung, LG, Sony and Vizio TVs
The soundbar responds to your TV remote control automatically. Press and hold soundbar remote control SHUFFLE button if you need to disable this feature.
8b. For other TVs
Programe manualmente el subwoofer para que responda al mando a distancia de su TV paso a paso; En primer lugar, pulse y mantenga pulsados VOLUME+ y SOURCE para entrar en el modo de aprendizaje.
A continuación, pulse VOLUME+ y SOURCE en la barra de sonido de nuevo y mantenga pulsados para activar la barra de sonido para responder a su mando a distancia de TV.
Por último, pulse POWER en la barra de sonido y pulse POWER en el mando a distancia de su TV.

9 Product Specifications
Total Maximum Power : 300W
Max SPL : 99dB
Frequency Response : 40Hz to 20kHz
HDMI Video Inputs : 1
HDMI Video Output (with Audio Return Channel) : 1
Bluetooth Version : 5.0
Max Bluetooth Range : up to 10m
Bluetooth Frequency Range : 2402MHz-2480MHz
Max Transmitting power : 4dbm (EIRP)
Soundbar Maximum Power : 100W
Soundbar Transducer Size : 4 x 4.25" racetrack drivers / 2 x 0.75" tweeter
Soundbar Dimensions (W x H x D) : 965 x 58 x 69mm / 38" x 2.3" x 2.7"
Soundbar Weight : 2.3kg
Soundbar Power Consumption (standby) : <0.5W
Soundbar Power Consumption (max) : 60W
Subwoofer Maximum Power : 200W
Subwoofer Transducer Size 8" (200mm) : 6.5"
SJ01 Wireless Frequency Range : 5742MHz-5843MHz
Subwoofer Dimensions (W x H x D) : 225 x 370 x 235mm / 8.9" x 14.6" x 9.9
Subwoofer Weight : 5.5kg
Subwoofer Power Consumption (standby) : <0.5W
Subwoofer Power Consumption (max) : 60W
Packaging Dimensions (W x H x D) : 1070 x 378 x 363mm
Packaging Weight (Gross) : 9.85kg

PT Guia de Início Rápido

Note: For complete information about using all of your JBL Bar 2.1, download the full Owner's Manual from www.jbl.com. For more product information, please visit www.jbl.com/bar21support

1 Conteúdo da caixa
Soundbar, Sub-woofer, Remote Control, Power Cables*, Optical Cable, AUX cable, Wall-Mount Brackets, Product Information & Wall-mounted guide
* O número de cabos de alimentação varia consoante as regiões

2 Place your soundbar
2a. Coloque a Soundbar na mesa
2b. Wall mount the Soundbar

3 Connect your soundbar
3a. Connect to your TV
3b. Connect to other devices

4 Power your system

5 Control your soundbar
5a. Top Panel
Power, Volume Down, Volume Up, Source
5b. Remote control
1) Power 2) Source 3) Play / Pause 4) Volume + 5) Volume - 6) Previous 7) Next 8) Audio Sync + 9) Audio Sync - 10) Mute 11) Bass + 12) Bass - 13) Sound mode 14) Soundshift On / off 15) Shuffle / Repeat 16) Surround On / off 17) Night mode On / off 18) Dim display 19) Bluetooth

6 Bluetooth connection
6a. Press RC Bluetooth button to enter Bluetooth source
6b.
Remark: Press and hold Remote control Bluetooth button for 3 seconds if you want to pair another mobile device

7 JBL SoundShift®
Prima o botão Soundshift no controlo remoto para ativar a função Soundshift.
Com o Soundshift ativado, inicie e coloque em pausa a sua fonte de áudio para desfrutar da comutação automática entre os seus dispositivos móveis (A) e a TV (B).

8 TV Remote response
Use your own TV remote control to control your soundbar
8a. For most Samsung, LG, Sony and Vizio TVs
The soundbar responds to your TV remote control automatically. Press and hold soundbar remote control SHUFFLE button if you need to disable this feature.
8b. For other TVs
Programe manualmente o subwoofer para responder ao controlo remoto da sua TV passo a passo; Em primeiro lugar, prima e mantenha premidos VOLUME+ e SOURCE para entrar no modo de aprendizagem.
Em seguida, prima VOLUME+ e SOURCE na barra de som novamente e mantenha-os premidos para ativar a barra de som para responder ao controlo remoto da TV.
Por último, prima POWER na barra de som e prima POWER no controlo remoto da TV.

9 Product Specifications
Total Maximum Power : 300W
Max SPL : 99dB
Frequency Response : 40Hz to 20kHz
HDMI Video Inputs : 1
HDMI Video Output (with Audio Return Channel) : 1
Bluetooth Version : 5.0
Max Bluetooth Range : up to 10m
Bluetooth Frequency Range : 2402MHz-2480MHz
Max Transmitting power : 4dbm (EIRP)
Soundbar Maximum Power : 100W
Soundbar Transducer Size : 4 x 4.25" racetrack drivers / 2 x 0.75" tweeter
Soundbar Dimensions (W x H x D) : 965 x 58 x 69mm / 38" x 2.3" x 2.7"
Soundbar Weight : 2.3kg
Soundbar Power Consumption (standby) : <0.5W
Soundbar Power Consumption (max) : 60W
Subwoofer Maximum Power : 200W
Subwoofer Transducer Size 8" (200mm) : 6.5"
SJ01 Wireless Frequency Range : 5742MHz-5843MHz
Subwoofer Dimensions (W x H x D) : 225 x 370 x 235mm / 8.9" x 14.6" x 9.9
Subwoofer Weight : 5.5kg
Subwoofer Power Consumption (standby) : <0.5W
Subwoofer Power Consumption (max) : 60W
Packaging Dimensions (W x H x D) : 1070 x 378 x 363mm
Packaging Weight (Gross) : 9.85kg

DE Kurzanleitung

Note: For complete information about using all of your JBL Bar 2.1, download the full Owner's Manual from www.jbl.com. For more product information, please visit www.jbl.com/bar21support

1 Verpackungsinhalt
Soundbar, Sub-woofer, Remote Control, Power Cables*, Optical Cable, AUX cable, Wall-Mount Brackets, Product Information & Wall-mounted guide
* Die Anzahl der Netzkabel variiert je nach Region

2 Place your soundbar
2a. Platzieren Sie die Soundbar auf dem Tisch
2b. Wall mount the Soundbar

3 Connect your soundbar
3a. Connect to your TV
3b. Connect to other devices

4 Power your system

5 Control your soundbar
5a. Top Panel
Power, Volume Down, Volume Up, Source
5b. Remote control
1) Power 2) Source 3) Play / Pause 4) Volume + 5) Volume - 6) Previous 7) Next 8) Audio Sync + 9) Audio Sync - 10) Mute 11) Bass + 12) Bass - 13) Sound mode 14) Soundshift On / off 15) Shuffle / Repeat 16) Surround On / off 17) Night mode On / off 18) Dim display 19) Bluetooth

6 Bluetooth connection
6a. Press RC Bluetooth button to enter Bluetooth source
6b.
Remark: Press and hold Remote control Bluetooth button for 3 seconds if you want to pair another mobile device

7 JBL SoundShift®
Drücken Sie die Soundshift-Taste auf der Fernbedienung, um die Soundshift-Funktion zu aktivieren.
Wenn Soundshift aktiviert ist, starten und pausieren Sie Ihre Audioquelle, um die automatische Umschaltung zwischen Ihren Mobilgeräten (A) und dem TV (B) zu genießen.

8 TV Remote response
Use your own TV remote control to control your soundbar
8a. For most Samsung, LG, Sony and Vizio TVs
The soundbar responds to your TV remote control automatically. Press and hold soundbar remote control SHUFFLE button if you need to disable this feature.
8b. For other TVs
Programmieren Sie den Subwoofer manuell, um die Fernbedienung Ihres TV Schritt für Schritt zu reagieren; Drücken Sie zunächst VOLUME+ und SOURCE, um in den Lernmodus zu gelangen.
Drücken Sie dann VOLUME+ und SOURCE erneut auf der Soundbar und halten Sie sie gedrückt, um Ihre Soundbar zu aktivieren, um auf Ihre TV-Fernbedienung zu reagieren.
Drücken Sie schließlich POWER auf der Soundbar und drücken Sie POWER auf der Fernbedienung Ihres TV.

9 Product Specifications
Total Maximum Power : 300W
Max SPL : 99dB
Frequency Response : 40Hz to 20kHz
HDMI Video Inputs : 1
HDMI Video Output (with Audio Return Channel) : 1
Bluetooth Version : 5.0
Max Bluetooth Range : up to 10m
Bluetooth Frequency Range : 2402MHz-2480MHz
Max Transmitting power : 4dbm (EIRP)
Soundbar Maximum Power : 100W
Soundbar Transducer Size : 4 x 4.25" racetrack drivers / 2 x 0.75" tweeter
Soundbar Dimensions (W x H x D) : 965 x 58 x 69mm / 38" x 2.3" x 2.7"
Soundbar Weight : 2.3kg
Soundbar Power Consumption (standby) : <0.5W
Soundbar Power Consumption (max) : 60W
Subwoofer Maximum Power : 200W
Subwoofer Transducer Size 8" (200mm) : 6.5"
SJ01 Wireless Frequency Range : 5742MHz-5843MHz
Subwoofer Dimensions (W x H x D) : 225 x 370 x 235mm / 8.9" x 14.6" x 9.9
Subwoofer Weight : 5.5kg
Subwoofer Power Consumption (standby) : <0.5W
Subwoofer Power Consumption (max) : 60W
Packaging Dimensions (W x H x D) : 1070 x 378 x 363mm
Packaging Weight (Gross) : 9.85kg

IT Guida di avvio rapido

Note: For complete information about using all of your JBL Bar 2.1, download the full Owner's Manual from www.jbl.com. For more product information, please visit www.jbl.com/bar21support

1 Contenuto della confezione
Soundbar, Sub-woofer, Remote Control, Power Cables*, Optical Cable, AUX cable, Wall-Mount Brackets, Product Information & Wall-mounted guide
* Il numero di cavi di alimentazione varia a seconda delle regioni

2 Place your soundbar
2a. Posizionare la Soundbar sul tavolo
2b. Wall mount the Soundbar

3 Connect your soundbar
3a. Connessione alla TV
3b. Connessione ad altri dispositivi

4 Power your system

5 Control your soundbar
5a. Top Panel
Power, Volume Down, Volume Up, Source
5b. Remote control
1) Power 2) Source 3) Play / Pause 4) Volume + 5) Volume - 6) Previous 7) Next 8) Audio Sync + 9) Audio Sync - 10) Mute 11) Bass + 12) Bass - 13) Sound mode 14) Soundshift On / off 15) Shuffle / Repeat 16) Surround On / off 17) Night mode On / off 18) Dim display 19) Bluetooth

6 Bluetooth connection
6a. Press RC Bluetooth button to enter Bluetooth source
6b.
Remark: Press and hold Remote control Bluetooth button for 3 seconds if you want to pair another mobile device

7 JBL SoundShift®
Premere il pulsante Soundshift del telecomando per attivare la funzione Soundshift.
Con Soundshift attivo, riproduci e metti in pausa la tua sorgente audio per godere della commutazione automatica tra i tuoi dispositivi mobili (A) e TV (B).

8 TV Remote response
Use your own TV remote control to control your soundbar
8a. For most Samsung, LG, Sony and Vizio TVs
The soundbar responds to your TV remote control automatically. Press and hold soundbar remote control SHUFFLE button if you need to disable this feature.
8b. For other TVs
Programmare manualmente il subwoofer per rispondere al telecomando della TV passo dopo passo; Per prima cosa, premere e tenere premuti VOLUME+ e SOURCE per entrare in modalità di apprendimento.
Quindi, premere VOLUME+ e SOURCE sulla barra del suono di nuovo e tenerli premuti per attivare la barra del suono per rispondere al telecomando della TV.
Infine, premere POWER sulla barra del suono e premere POWER sul telecomando della TV.

9 Product Specifications
Total Maximum Power : 300W
Max SPL : 99dB
Frequency Response : 40Hz to 20kHz
HDMI Video Inputs : 1
HDMI Video Output (with Audio Return Channel) : 1
Bluetooth Version : 5.0
Max Bluetooth Range : up to 10m
Bluetooth Frequency Range : 2402MHz-2480MHz
Max Transmitting power : 4dbm (EIRP)
Soundbar Maximum Power : 100W
Soundbar Transducer Size : 4 x 4.25" racetrack drivers / 2 x 0.75" tweeter
Soundbar Dimensions (W x H x D) : 965 x 58 x 69mm / 38" x 2.3" x 2.7"
Soundbar Weight : 2.3kg
Soundbar Power Consumption (standby) : <0.5W
Soundbar Power Consumption (max) : 60W
Subwoofer Maximum Power : 200W
Subwoofer Transducer Size 8" (200mm) : 6.5"
SJ01 Wireless Frequency Range : 5742MHz-5843MHz
Subwoofer Dimensions (W x H x D) : 225 x 370 x 235mm / 8.9" x 14.6" x 9.9
Subwoofer Weight : 5.5kg
Subwoofer Power Consumption (standby) : <0.5W
Subwoofer Power Consumption (max) : 60W
Packaging Dimensions (W x H x D) : 1070 x 378 x 363mm
Packaging Weight (Gross) : 9.85kg

NL Snelstartgids

Note: For complete information about using all of your JBL Bar 2.1, download the full Owner's Manual from www.jbl.com. For more product information, please visit www.jbl.com/bar21support

1 Verpakkingsinhoud
Soundbar, Sub-woofer, Remote Control, Power Cables*, Optical Cable, AUX cable, Wall-Mount Brackets, Product Information & Wall-mounted guide
* Het aantal netsnoeren varieert per regio

2 Place your soundbar
2a. Plaats de Soundbar op de tafel
2b. Wall mount the Soundbar

3 Connect your soundbar
3a. Connect to your TV
3b. Connect to other devices

4 Power your system

5 Control your soundbar
5a. Top Panel
Power, Volume Down, Volume Up, Source
5b. Remote control
1) Power 2) Source 3) Play / Pause 4) Volume + 5) Volume - 6) Previous 7) Next 8) Audio Sync + 9) Audio Sync - 10) Mute 11) Bass + 12) Bass - 13) Sound mode 14) Soundshift On / off 15) Shuffle / Repeat 16) Surround On / off 17) Night mode On / off 18) Dim display 19) Bluetooth

6 Bluetooth connection
6a. Press RC Bluetooth button to enter Bluetooth source
6b.
Remark: Press and hold Remote control Bluetooth button for 3 seconds if you want to pair another mobile device

7 JBL SoundShift®
Druk op de Soundshift-knop op de afstandsbediening om de Soundshift-functie in te schakelen.
Als Soundshift is ingeschakeld, speelt u uw muziekbron af en pauzeert u deze om te genieten van automatisch schakelen tussen uw mobiele apparaten (A) en de TV (B).

8 TV Remote response
Use your own TV remote control to control your soundbar
8a. For most Samsung, LG, Sony and Vizio TVs
The soundbar responds to your TV remote control automatically. Press and hold soundbar remote control SHUFFLE button if you need to disable this feature.
8b. For other TVs
Programmeer de subwoofer handmatig om stap voor stap te reageren op de afstandsbediening van uw TV; Druk eerst op VOLUME+ en SOURCE om de leermodus te openen.
Druk vervolgens op VOLUME+ en SOURCE op de soundbar en houd ze ingedrukt om uw soundbar te activeren om te reageren op uw TV-afstandsbediening.
Druk ten slotte op POWER op de soundbar en druk op POWER op de afstandsbediening van uw TV.

9 Product Specifications
Total Maximum Power : 300W
Max SPL : 99dB
Frequency Response : 40Hz to 20kHz
HDMI Video Inputs : 1
HDMI Video Output (with Audio Return Channel) : 1
Bluetooth Version : 5.0
Max Bluetooth Range : up to 10m
Bluetooth Frequency Range : 2402MHz-2480MHz
Max Transmitting power : 4dbm (EIRP)
Soundbar Maximum Power : 100W
Soundbar Transducer Size : 4 x 4.25" racetrack drivers / 2 x 0.75" tweeter
Soundbar Dimensions (W x H x D) : 965 x 58 x 69mm / 38" x 2.3" x 2.7"
Soundbar Weight : 2.3kg
Soundbar Power Consumption (standby) : <0.5W
Soundbar Power Consumption (max) : 60W
Subwoofer Maximum Power : 200W
Subwoofer Transducer Size 8" (200mm) : 6.5"
SJ01 Wireless Frequency Range : 5742MHz-5843MHz
Subwoofer Dimensions (W x H x D) : 225 x 370 x 235mm / 8.9" x 14.6" x 9.9
Subwoofer Weight : 5.5kg
Subwoofer Power Consumption (standby) : <0.5W
Subwoofer Power Consumption (max) : 60W
Packaging Dimensions (W x H x D) : 1070 x 378 x 363mm
Packaging Weight (Gross) : 9.85kg

NO Hurtigstartveiledning

Note: For complete information about using all of your JBL Bar 2.1, download the full Owner's Manual from www.jbl.com. For more product information, please visit www.jbl.com/bar21support

1 Innhold i esken
Soundbar, Sub-woofer, Remote Control, Power Cables*, Optical Cable, AUX cable, Wall-Mount Brackets, Product Information & Wall-mounted guide
* Antall strømledninger varierer etter region

2 Place your soundbar
2a. Plasser Soundbar på bordet
2b. Wall mount the Soundbar

3 Connect your soundbar
3a. Connect to your TV
3b. Connect to other devices

4 Power your system

5 Control your soundbar
5a. Top Panel
Power, Volume Down, Volume Up, Source
5b. Remote control
1) Power 2) Source 3) Play / Pause 4) Volume + 5) Volume - 6) Previous 7) Next 8) Audio Sync + 9) Audio Sync - 10) Mute 11) Bass + 12) Bass - 13) Sound mode 14) Soundshift On / off 15) Shuffle / Repeat 16) Surround On / off 17) Night mode On / off 18) Dim display 19) Bluetooth

6 Bluetooth connection
6a. Press RC Bluetooth button to enter Bluetooth source
6b.
Remark: Press and hold Remote control Bluetooth button for 3 seconds if you want to pair another mobile device

7 JBL SoundShift®
Trykk på Soundshift-knappen på fjernkontrollen for å aktivere Soundshift-funksjonen.
Når Soundshift er på, spiller og setter du på pause lydkilden for å nyte automatisk veksling mellom mobilenhetene dine (A) og TV-en (B).

8 TV Remote response
Use your own TV remote control to control your soundbar
8a. For most Samsung, LG, Sony and Vizio TVs
The soundbar responds to your TV remote control automatically. Press and hold soundbar remote control SHUFFLE button if you need to disable this feature.
8b. For other TVs
Programmer subwooferen manuelt for å svare på fjernkontrollen til TV-en trinn for trinn; Først trykker du på og holder inne VOLUME+ og SOURCE for å gå inn i læringsmodus.
Deretter trykker du på VOLUME+ og SOURCE på lydstangen igjen og holder dem inne for å aktivere lydstangen for å svare på fjernkontrollen til TV-en.
Trykk til slutt på POWER på lydstangen og trykk på POWER på fjernkontrollen til TV-en.

9 Product Specifications
Total Maximum Power : 300W
Max SPL : 99dB
Frequency Response : 40Hz to 20kHz
HDMI Video Inputs : 1
HDMI Video Output (with Audio Return Channel) : 1
Bluetooth Version : 5.0
Max Bluetooth Range : up to 10m
Bluetooth Frequency Range : 2402MHz-2480MHz
Max Transmitting power : 4dbm (EIRP)
Soundbar Maximum Power : 100W
Soundbar Transducer Size : 4 x 4.25" racetrack drivers / 2 x 0.75" tweeter
Soundbar Dimensions (W x H x D) : 965 x 58 x 69mm / 38" x 2.3" x 2.7"
Soundbar Weight : 2.3kg
Soundbar Power Consumption (standby) : <0.5W
Soundbar Power Consumption (max) : 60W
Subwoofer Maximum Power : 200W
Subwoofer Transducer Size 8" (200mm) : 6.5"
SJ01 Wireless Frequency Range : 5742MHz-5843MHz
Subwoofer Dimensions (W x H x D) : 225 x 370 x 235mm / 8.9" x 14.6" x 9.9
Subwoofer Weight : 5.5kg
Subwoofer Power Consumption (standby) : <0.5W
Subwoofer Power Consumption (max) : 60W
Packaging Dimensions (W x H x D) : 1070 x 378 x 363mm
Packaging Weight (Gross) : 9.85kg

FI Pikaopas

Note: For complete information about using all of your JBL Bar 2.1, download the full Owner's Manual from www.jbl.com. For more product information, please visit www.jbl.com/bar21support

1 Pakkauksen sisältö
Soundbar, Sub-woofer, Remote Control, Power Cables*, Optical Cable, AUX cable, Wall-Mount Brackets, Product Information & Wall-mounted guide
* Virtajohtojen määrä vaihtelee alueittain

2 Place your soundbar
2a. Aseta Soundbar pöydälle
2b. Wall mount the Soundbar

3 Connect your soundbar
3a. Connect to your TV
3b. Connect to other devices

4 Power your system

5 Control your soundbar
5a. Top Panel
Power, Volume Down, Volume Up, Source
5b. Remote control
1) Power 2) Source 3) Play / Pause 4) Volume + 5) Volume - 6) Previous 7) Next 8) Audio Sync + 9) Audio Sync - 10) Mute 11) Bass + 12) Bass - 13) Sound mode 14) Soundshift On / off 15) Shuffle / Repeat 16) Surround On / off 17) Night mode On / off 18) Dim display 19) Bluetooth

6 Bluetooth connection
6a. Press RC Bluetooth button to enter Bluetooth source
6b.
Remark: Press and hold Remote control Bluetooth button for 3 seconds if you want to pair another mobile device

7 JBL SoundShift®
Paina Soundshift-painiketta kaukosäätimessä ottaaksesi Soundshift-toiminnon käyttöön.
Kun Soundshift on päällä, toista ja keskeytä äänilähteesi, jotta voit nauttia automaattisesta vaihtamisesta mobiililaitteidesi (A) ja TV:n (B) välillä.

8 TV Remote response
Use your own TV remote control to control your soundbar
8a. For most Samsung, LG, Sony and Vizio TVs
The soundbar responds to your TV remote control automatically. Press and hold soundb