ES-J140715-1

物料号：1137499

Hisense

40"/50" H3 LED TV

QUICK START GUIDE

1 PACKAGE CONTENTS

- User Manual
- Quick Setup Guide
- Remote Control
- Batteries: AAA x 2
- 4 Phillips screws (M5 x 12 mm)
- 4 Phillips screws (ST 4 x 16 mm)

2 INSTALLING THE STAND

Follow the illustrations below to complete the installation steps.



Insert the stand cover into the base as shown in the picture.



Secure the stand cover to the base with 4 screws (ST4x16).



Secure the stand to the TV with the 4 Screws (M5×12).

NOTE

Product image is only for reference, actual product may vary in appearance. Carefully place your TV facedown on a soft, cushioned surface to prevent damage to the TV or scratching to the screen.

3 INSTALLING A WALL-MOUNT BRACKET

If you want to attach the TV to a wall-mount bracket (not provided), you should first remove the stand if it is pre-attached .

1 Carefully place your TV (face down) on a soft, cushioned surface to prevent damage to the screen.

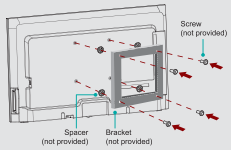

Place the spacers (not provided) in the corresponding bracket holes. Follow the instructions provided with the wall-mount bracket to attach the bracket on the TV.

2



Wall-Mount hole pattern VESA (mm)	200 × 200 (for 40H3) 400 × 400 (for 50H3)
Wall-Mount screw size (mm)	M6

Follow instructions provided with the Wall-Mount bracket.

- If you are not sure of your ability to complete the installation, contact a professional installer or service technician for assistance. The manufacturer is not responsible for any damages or injuries that occur due to mishandling or incorrect assembly.
- The selected screws are 9.5~11.5mm in length when measured from the attaching surface of the TV's rear cover. The diameter and length of the screws differ depending on the Wall-Mount Bracket model.

4 BUTTONS AND PORTS ON YOUR TV

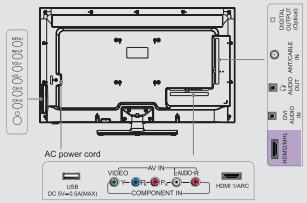

Item	Description
MENU	Display the on-screen menu to setup your TV's features.
INPUT	Select the different input signal sources.
VOL+/-	Adjust the volume.
CH ∧ / ∨	Select the channel.
⏻ (Power button)	Turn on the TV or put the TV in standby mode. **Caution:** The TV continues to receive power even in standby mode. Unplug the power cord to disconnect power.
ANT/CABLE	Connect an antenna or cable TV to this jack.
HDMI	HDMI (High-Definition Multimedia Interface) provides an uncompressed, all digital audio/video interface between this TV and any HDMI-device, such as a set-top box, Blu-ray disc player, or A/V receiver. All HDMI inputs can support DVI video in by using a DVI—HDMI Cable, the DVI audio should be connected to DVI AUDIO IN.
COMPONENT IN	Connect to a DVD player, Digital Set-Top-Box, or other A/V devices with component (YP_BP_R) video and audio output jacks.
AV IN	Connect to the composite video and audio (L/R) output jacks on external video devices.
DVI AUDIO IN	Connect to a PC or other devices with a 3.5mm TRS jack.
🎧/AUDIO OUT	Connect headphone or analog sound system using 3.5mm TRS jack. (1/8"-stereo mini to L/R phono-not provided).
DIGITAL OUTPUT	Connect an audio amplifier to this jack.
USB	Port for Digital Media Player and for software update.

5 USING THE REMOTE CONTROL

NOTES

The VGA button is not available for this model.

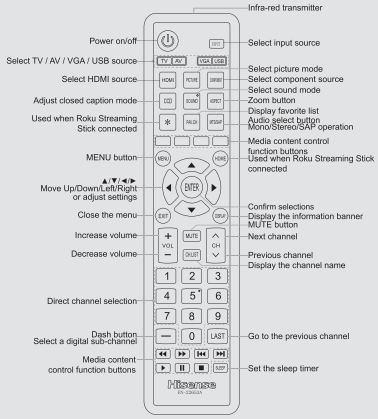

CHANGE THE BATTERIES

1. Slide the back cover to open the battery compartment of the remote control.
2. Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+)and (-) ends indicated in the battery compartment.
3. Close the battery compartment cover.

❶ Gently push and slide ❷ Insert the batteries ❸ Gently push and slide

6 TV CONNECTORS

Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.

ANT Connect an outdoor VHF/UHF antenna.



USB Connect a USB device for browsing photos and movies.

The unit recognizes only a USB Memory Stick.

HDMI / COMP / AV Connect an HDMI cable or Comp/AV Adapter from an external device.

Video Effect:

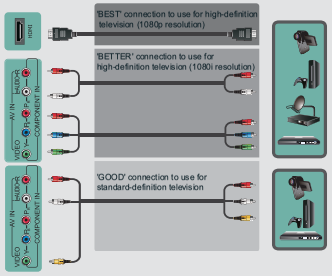

DIGITAL OUTPUT Connect an optical cable from an external digital audio system.



HEADPHONE Connect Headphone for audio out of the TV.

7 SPECIFICATIONS

Model Name		40H3	50H3
Dimension	Without Stand	36.39×21.46×3.33 inches (924.3×545×84.5 mm)	44.4×26.3×3.1 inches (1129×667×79.9 mm)
	With Stand	36.39×22.97×6.69 inches (924.3×583.5×170 mm)	44.4×27.1×7.7 inches (1129×689×195 mm)
Weight	Without Stand	22.05 lbs (10 kg)	33.1 lbs (15 kg)
	With Stand	25.35 lbs (11.5 kg)	37.5 lbs (17 kg)
Active Screen Size(Diagonal)		40 inches	49.5 inches
Screen resolution		1920 × 1080	1920 × 1080
Audio power		6W + 6W	8W + 8W
Power supply		120 V ~ 60 Hz	
Receiving systems	Analog	NTSC	
	Digital	ATSC / QAM	
Receiving channels		VHF: 2~13 UHF: 14~69 CATV: 1 ~ 125 Digital Terrestrial Broadcast (8VSB): 2 ~ 69 Digital cable (64/256 QAM): 1 ~ 135	
Tuner type		Frequency synthesized	
Environmental conditions		Temperature: 41°F ~ 95°F (5°C ~ 35°C) Humidity: 20% ~ 80% RH Atmospheric pressure: 86 kPa ~ 106 kPa	
Component Input		480 I / 60 Hz, 480 P / 60 Hz, 720 P / 60 Hz, 1080 I / 60 Hz, 1080P/60Hz	
HDMI Input		RGB / 60 Hz (640×480, 800×600, 1024×768) YUV / 60 Hz (480 I, 480 P, 720 P, 1080 I, 1080P)	

8 TURNING THE TV ON FOR THE FIRST TIME

Menu Language

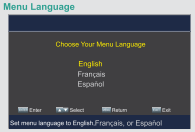

Connect your TV's power cord to a power outlet, then press power. The initial setup screen opens. Press [▲/▼] button to select your language, press [ENTER] button to confirm.

Time Setting

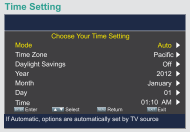

Setting Time Zone: Select the local time zone according to your region.

Setting the Time: Press [◀/▶] to select the number you want to set and press [▲/▼] to set.

Picture Mode

Press [▲/▼] to select your Picture Mode: Home Mode or Retail Mode, press [ENTER] button to confirm.

If you select Retail Mode, a message appears " Are you sure you want retail mode?" Select "Yes" to continue, or select "No" to change your selection.

For energy saving, we kindly suggest you select the Home Mode.

TV Source

Press [▲/▼] to select your TV Source: Antenna or Cable, press [ENTER] button to confirm.

If you press [EXIT] to exit the scanning, a message appears "Please Run Channel Auto Scan", you should scan channels from the menu of Channels

Note:

If you are using a cable or satellite box and you have connected it to the TV using a Coaxial cable, you should select the cable option. Be sure the cable or satellite box is turned on before starting the channel scan. If you use a cable or satellite box connected to A/V, Component or HDMI, you don't need to scan for channels.

9 TROUBLESHOOTING TIPS

When there is something wrong with your TV, you can try turning off the TV and restarting it. You can also refer to the following chart for problem and solution tips.

SYMPTOMS	POSSIBLE SOLUTIONS
No sound or picture	• Confirm power cord is plugged into the AC outlet and the AC outlet is getting electricity. • Attempt to power on unit using the power button on both the TV and the Remote.
Picture is normal, but no sound	• Check the volume settings. • Check if Mute mode is set "on" .
I have connected an external source to my TV and I get no picture and/or sound.	• Check for the correct output connection on the external source and for the correct input connection on the TV. • Make sure you have made the correct selection for the input mode for the incoming signal.
Sound but no picture or black and white picture.	• If black and white picture first unplug TV from AC outlet and replug after 60 seconds. • Check Color Setting if picture is black and white.
Sound and picture distorted or appear wavy.	• An electrical appliance may be affecting TV set. Turn off any appliances, if interference goes away, move appliance farther away from TV. • Insert the power plug of the TV set into another power outlet.
Sound and picture is blurry or cuts out momentarily.	• If using an external antenna, check the direction, position and connection of the antenna. • Adjust the direction of your antenna or reset or fine tune the channel.
[CHA/V] don't work when I set the Channel to Cable? They work with the Air setting?	• After switching to Cable, please auto program the channels. The TV will "remember" all the channels then the TV will allow you to surf the channels with [CH/V/V] buttons.
Remote control does not work.	• Confirm that TV still has power and is operational. • Change the batteries in the remote control. • Check if the batteries are correctly installed. • Clean the front of the remote control (LED window). • If using a universal remote, be sure to select the TV mode on the remote. • If the remote still does not work: -Remove and reinstall the batteries correctly to reset the remote or install new batteries. -Press the Power button to turn on the TV. With a universal remote if you have reset or changed the batteries you will need to reprogram the remote for the other units. • Check if there is obstruction between the remote control and the TV. **TIP:** If you have a digital camera / camera phone, you can aim the front of the remote at camera lenses (at this time, the camera should set on camera mode, not play mode). Observe the camera screen while pressing a button on the remote control; you should see flashing light on the screen. If there is no light observed, the remote control is not working. You need to repair or replace the remote control.

This Quick Setup Guide is intended as a general description of setting up and connecting your TV. Images may differ from the actual product.