Hisense

Hisense SMART LED

50H6SG
55H6SG

QUICK START GUIDE

1 PACKAGE CONTENTS

- User Manual
- Quick Start Guide
- Warranty Card
- Remote Control
- Battery x 2
- Screw (M4 x 12mm) x 4
- Power Cord

2 INSTALLING THE STAND

Follow the illustrations below to complete the installation steps.

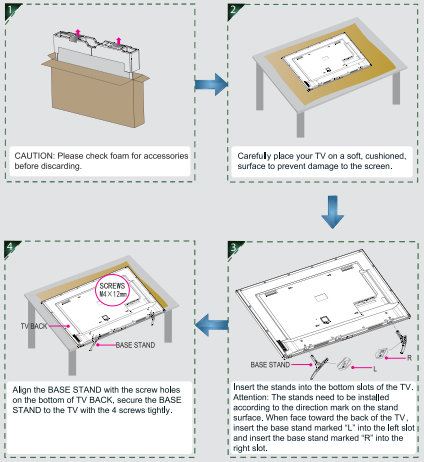

NOTE *Product image is only for reference, actual product may vary in appearance.*

3 INSTALLING A WALL-MOUNT BRACKE

If you want to attach the TV to a wall-mount bracket (not provided), you should first remove the stand if it is pre-attached (50" see Step 1).

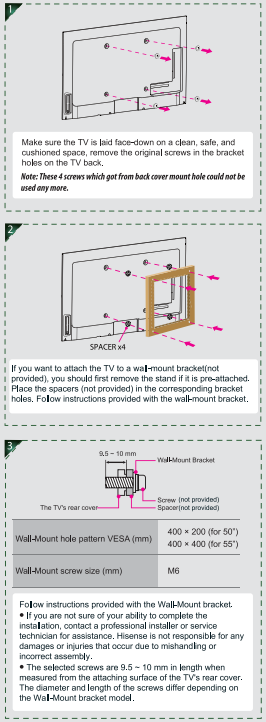

4 REMOTE CONTROL

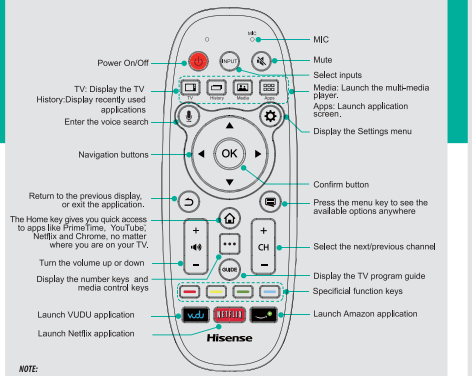

NOTE:
1. The LED on the remote control will blink with each key press.
2. In pairing mode, the red LED will stay light for ~60 seconds.
3.When pairing is complete, the blue LED will flash three times.
4.The LED light will blink continuously when the battery is low.
5.The remote control will automatically go into sleep mode thirty seconds after the last key press. Sleep Mode can conserve battery life. Any movement or key press will immediately wake up the remote.

5 MAKING CONNECTIONS

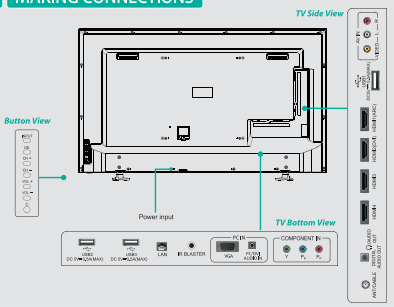

6 TV CONNECTORS

Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.

▶ **ANT** Connect an outdoor VHF/UHF antenna.



▶ **VGA & VGA AUDIO** Connect a VGA cable and an audio cable from the PC.



▶ **HDMI / COMP / AV** Connect an HDMI cable or component, composite cable from an external A/V equipment.

Video Effect:

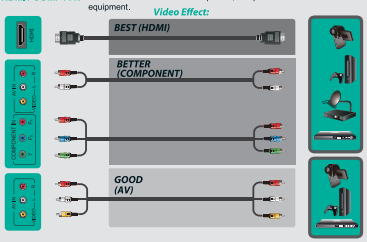

▶ **LAN** Connect an ethernet cable to access a network or the Internet. TV also features wireless connectivity.



▶ **DIGITAL AUDIO OUT** Connect an optical cable from an external digital audio system.



▶ **HEADPHONE** Connect Headphone for audio out of the TV.



▶ **USB** Connect a USB device for browsing photos, music and movies.



7 TURNING THE TV ON FOR THE FIRST TIME



Follow the on-screen instructions to customize your TV settings according to your preferences.

MENU	OPERATIONS
Language setting	• Please press [▲/▼] button to select your language: English, Spanish or French.
Bluetooth remote pairing	• Press and hold down [RED] and [OK] buttons simultaneously until the Red LED turns on. And wait for a while until the remote paired automatically.
Hisense legal notice	• Hisense legal information. If you do not accept the agreement, internet functions and services will not be available.
Connect to the Internet	• Connecting to the Internet via Ethernet cable or WiFi.
DLNA setting	• Connecting to the DLNA device. By checking this box, you will connect to the DLNA device and share your good time with family.
Select usage patterns	• Select your Mode Setting: Home Mode or Retail Mode. • Home Mode default settings are recommended for in-home use. ENERGY STAR qualified. Retail Mode is intended for in-store display and reset video settings at Power on.
Google account	• Signing in with your Google account.
Help make Google TV better	• Check the TV to send the usage statistics and crash reports to Google automatically.
Enter ZIP code	• Enter ZIP code so that you receive accurate programming information.
Set up TV service	• Select the video input you use to connect your TV service to your TV.
Set up AV Receiver control	• Select your Audio amplifier manufacturer. To control your receiver, connect the IR blaster.
That's it!	• The initial settings are completed.

8 SPECIFICATIONS

Model Name		50H6SG	55H6SG
Dimension (W × H × D)	Without Stand	44 × 25.7 × 2.4 inches (1118 × 652 × 60 mm)	48.7 × 28.2 × 2.4 inches (1236 × 716 × 62 mm)
	With Stand	44× 27 × 8.5 inches (1118 × 686 × 215 mm)	48.7× 29.7 × 9.7 inches (1236 × 754 × 247 mm)
Weight	Without Stand	35.3 lbs (16kg)	46.3 lbs (21kg)
	With Stand	36.4 lbs (16.5kg)	47.4 lbs (21.5kg)
LCD Panel Minimum size (diagonal)		50inches	55inches
Screen resolution		1920 × 1080	1920 × 1080
Audio power		10 W + 10 W	15 W + 15 W
Power supply		120 V ~ 60 Hz	
Receiving systems	Analog	NTSC	
	Digital	ATSC / QAM	
Receiving channels		VHF: 2~13 UHF: 14~69 CATV: 1 ~ 125 Digital Terrestrial Broadcast (8VSB): 2 ~ 69 Digital cable (64/256 QAM): 1 ~ 135	
Tuner type		Frequency synthesized	
Environmental conditions		Temperature: 41°F ~ 95°F (5°C ~ 35°C) Humidity: 20% ~ 80% RH Atmospheric pressure: 86 kPa ~ 106 kPa	
Component Input		480 I / 60 Hz, 480 P / 60 Hz, 720 P / 60 Hz, 1080 I / 60 Hz, 1080 P / 60 Hz	
VGA Input		VGA (640×480 / 60 Hz), SVGA (800×600 / 60 Hz), XGA (1024×768 / 60 Hz)	
HDMI Input		RGB / 60 Hz (640×480, 800×600, 1024×768) YUV / 60 Hz (480 I, 480 P, 720 P, 1080 I, 1080 P)	

9 TROUBLESHOOTING TIPS

SYMPTOMS	POSSIBLE SOLUTIONS
No sound or picture	• Check if the power cord is plugged into AC outlet and if it has electricity. • Check if you have pressed [POWER] button on the TV or [POWER] button on the remote control. • Check to see if LED on. If illuminated, power to TV is OK.
Picture is normal, but no sound	• Check the volume settings. • Check if Mute mode is set "on" . • Check if headphones are connected. • Check if the audio output is set to AV receiver (if so, be sure the AVR is powered on and set to the proper input). • If using a cable / satellite set top box, check if Mute is set to On.
I have connected an external source to my TV and I get no picture and/or sound.	• Check for the correct output connection on the external source and for the correct input connection on the TV. • Make sure you have made the correct selection for the input mode for the incoming signal.
Network connection fail.	• Check network physical connection, make sure connection is correct. • Make sure configuration is correct according to your network service provider.
Connect Netflix fail.	• Check network connection is correct, both physically and configuration. • Make sure that network connection test is successful.
How do I get the applications to work on my TV?	• You need a broadband (high speed) Internet service with a speed of no less than 1.5 Mbps. • Connect the TV to the Internet through your router by an ethernet cable or wireless connection. If the connection fails, check with your internet service provider or router manufacturer to determine if there is a firewall, content filter, or proxy settings that may block the TV from accessing the Internet. • After connecting the TV to the Internet, press the [Home] button on the remote to access the applications. • Caution: Do not try to repair the TV yourself. Refer all servicing to qualified repair personnel.

This Quick Start Guide is intended as a general description of setting up and connecting your TV. Images may differ from the actual product.