User Guide

Model Name: MID773-MTK27

smartab® | 7" Kids Tablet

User Guide

BC

Care & safety precautions

Charging the tablet & built-in rechargeable battery
The adaptor is not a toy and should be connected to the wall outlet by an adult. It should be periodically examined for conditions that may result in a risk of fire, electrical shock, or injury to persons, such as damage to the cord, plug, blades, housing, or other parts in the event of such conditions, the adaptor must not be used until the damage is repaired.
- Only use the included power adaptor to charge the tablet.
- The tablet's power adaptor may become warm during normal use.
- Allow adequate ventilation around the tablet's power adaptor.
- Do not connect or disconnect the tablet's power adaptor with wet hands.
- Do not charge/use the tablet in potentially explosive atmospheres.
- The built-in rechargeable battery in the tablet should be replaced only by an authorized service provider, call Customer Support for more info: 1-877-768-8481.

Care & Safety Precautions
- Keep out of reach of children under 3 years of age. Adult supervision is required during play.
- Cords could be a strangulation hazard.
- Children pulling on the cord could cause the computer monitor or other connected equipment to fall with possibility of property damage, serious injury, or death.
- Service should only be provided by an authorized service provider.
- Never attempt to disassemble, repair or modify the tablet yourself.
- Do not use the tablet in rain or other wet locations.
- Avoid spilling any liquid on the tablet.
- In case the tablet gets wet, unplug all cables and turn off the tablet.
- Do not attempt to dry the tablet with an external heat source.
- Unplug all cables and turn off the tablet before cleaning.
- Use a soft, lint-free cloth to clean the tablet and display.
- Avoid getting moisture in open ports.
- Do not use household cleaners, solvents, alcohol, or abrasives to clean the tablet.
- Routinely check the tablet for proper and safe conditions. If there is any damage or broken parts, remove the tablet from use.
- If for any reason the screen (display) is fractured or cracked, immediately remove this product from use and contact Customer Support for replacement.
- It is rare but possible for seizures to be triggered by light flashes or patterns such as those on computer or TV screens. To reduce exposure to this potential hazard, play/watch in a well-lit room, sit an appropriate distance from the screen and take 10 to 15 minute breaks every hour.
- Long-term exposure to loud sounds at high volume may result in permanent hearing loss.
- When using headphones or earbuds, it is recommended that the product is listened to at lower volumes for shorter periods of time.

CAUTION: NOT RECOMMENDED FOR CHILDREN UNDER 3 YEARS OF AGE, AS WITH ALL ELECTRICAL PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING THE HANDLING AND USE TO PREVENT ELECTRICAL SHOCK. ADAPTOR CORD COULD BE A STRANGULATION HAZARD.

	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN	
THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.	WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	THE EXCLAMATION POINT WITHIN THE EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE PRODUCT.

In the box

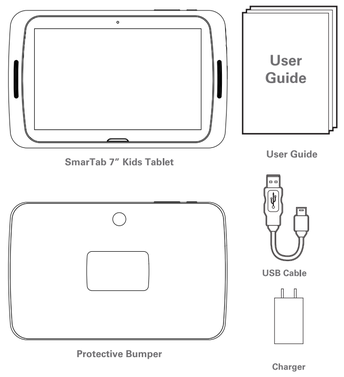

Buttons, ports & hardware

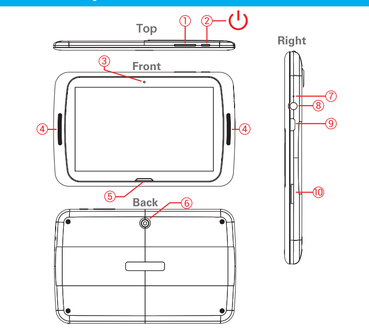

1. Volume Buttons
2. Power
3. Front Camera
4. Stereo Speakers
5. Home Button
6. Rear Camera
7. Microphone
8. Headphone Jack
9. Micro USB Port
10. Micro SD Card Slot

Charging the tablet

Connect the tablet to a wall outlet using the included charger & USB cable as shown below.

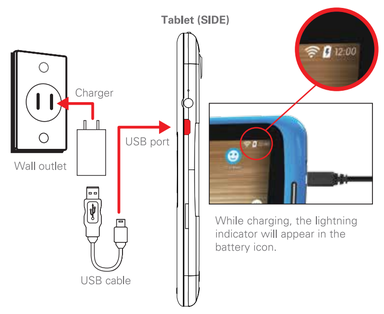

While charging, the lightning indicator will appear in the battery icon.

Power ON / OFF

Turning on the tablet
Press & hold the Power button until the startup screen appears.

Power off the tablet
Press & hold the Power button until the "Power off" option appears.

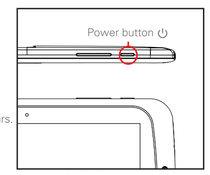

Lock the tablet (standby)
Briefly press the Power button (Lock the tablet to conserve the battery).

Unlock the tablet
Briefly press the Power button and slide the lock icon up.

Lock screen

Turning on

1. Press and hold the Power button to get started.
2. Follow the initial Setup Wizard prompts.
3. To use the Google Play store, sign into or create a Google account.

Startup screen

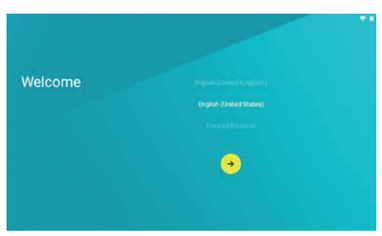

Setup Wizard

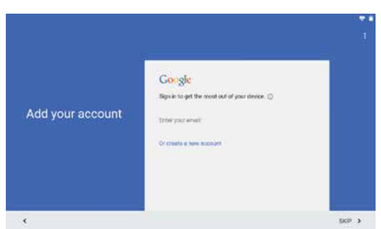

Google account

If you use Gmail™, you already have a Google account —if not, you can create an account now.

Standard Mode & Child Mode

About Standard Mode
After completing the Setup Wizard the Standard Mode home screen is displayed. All apps are available without restriction in Standard Mode.

Launching Child Mode
1. Select the Child Mode icon on the top right of the display.
2. Create and confirm the Child Mode password.
3. After the password is accepted, the Child Mode home screen is displayed.

About Child Mode
Child Mode is a safe environment for younger children that includes Parental Controls (app restrictions), games, books, videos, and more.

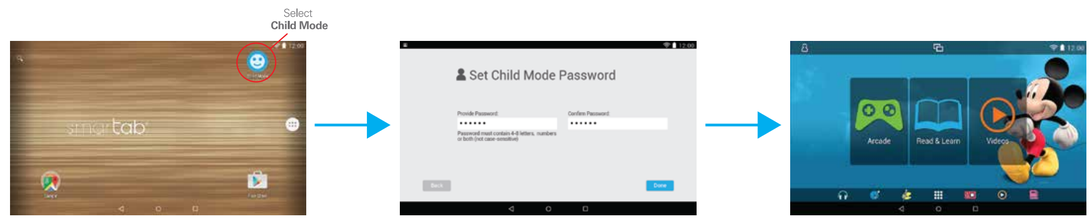

Standard Mode (home screen)

Child Mode (home screen)

Child Mode (home screen)

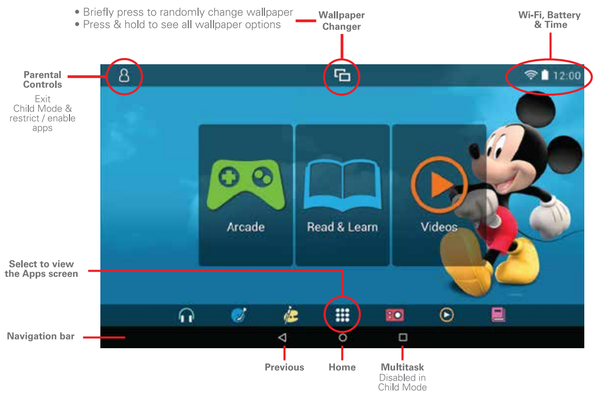

Parental Controls

Managing Apps
Not all the apps that are included on the tablet are available in Child Mode. You can use the Parental Controls feature to enable those apps or restrict new apps downloaded from Google Play.

To enable or disable the apps that are available in Child Mode:

1. Tap the Parental Controls icon.

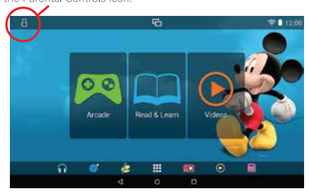

2. Enter the password you created earlier.

3. Select "Manage Apps."

4. Select the apps that you want to enable or disable.

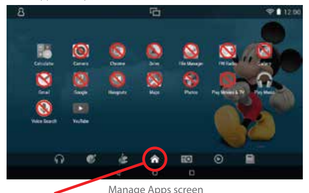

Manage Apps screen

5. Press the home or back button to save changes and exit. Disabled apps are not available on the Child Mode apps screen.

Google Play and Settings
Google Play and Settings are available on the Child Mode apps screen. However, they are password protected. Simply enter your password when prompted to access them.

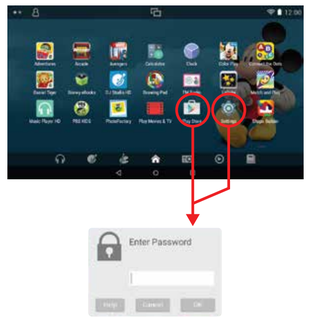

Exit Child Mode

1. Tap the Parental Controls icon.

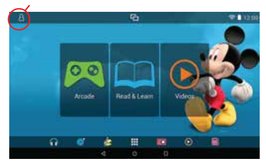

2. Enter the password.

3. Select "Exit Child Mode" and the tablet will launch Standard Mode.



Navigation Bar

On certain apps the Navigation Bar does not appear. To access the Navigation Bar, swipe up on the bottom of the screen as shown below.

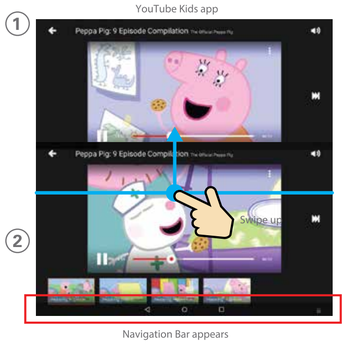

Navigation Bar appears

Connecting

Wi-Fi and Bluetooth®
If you did not set up Wi-Fi during the initial setup or would like to connect to a Bluetooth device, you can do so by selecting Settings on the Standard Mode and Child Mode Apps Screens.

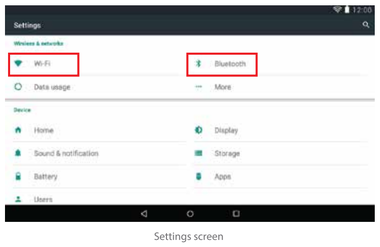

Settings screen

Expandable storage

Inserting a Micro SD card
The tablet supports Micro SD cards up to 64GB (not included).

To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.
To remove the Micro SD card, gently press it inward to eject.

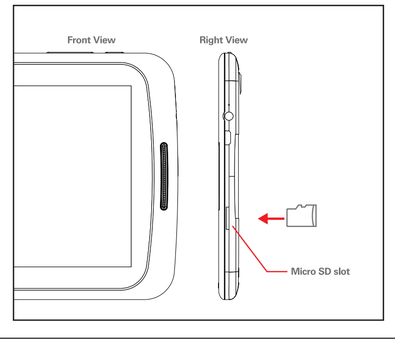

Connecting to a computer

Connect the tablet to the computer using the included USB cable as shown below.

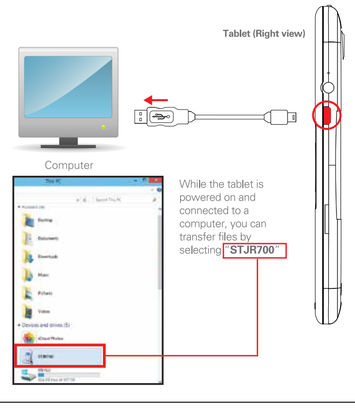

While the tablet is powered on and connected to a computer, you can transfer files by selecting "STJR700"

Legal information

FCC Regulatory Compliance

FCC Part 15:This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.
Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation."

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

Information Regarding Exposure to Radio Frequency Energy
Your Device is designed and manufactured not to exceed the emission limits for exposure to RF energy set by the Federal Communications Commission of the United States (FCC). Information on your Device is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/ea/ after searching on the FCC ID for your Device, which can be found on the back of the Device.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Designed by Southern Telecom/Made in China
Distributed by: Southern Telecom Inc, 14-C 53rd Street Brooklyn, NY 11232 © 2015 All Rights Reserved, SmarTab is a registered trademark of Southern Telecom Inc. Disney properties: © 2015 Disney Pixar elements © 2015 Disney/Pixar Marvel properties: © 2015 Marvel "Marvel" is a trademark of Marvel Characters, Inc. Used with permission. PBS & PBS Kids logo © 2015 Public Broadcasting Service.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. Google Play is a trademark of Google Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. All other trademarks and trade names are those of their respective owners.

Battery Disposal & Recycle
This device contains a Lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.
☎ 1-800-822-8837

Limited Warranty

This Product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc. to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Call the Customer Support number located below, or go to our website portal to receive an SRO number.
- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no RO, Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Customer Support:
☎ **1-877-768-8481 (Toll Free)**
Monday - Friday: 8AM – 10PM (EST)
www.southerntelecom.com
Click on "Product Support"

To receive Warranty service, the original consumer purchaser must contact Southern Telecom, or an authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to Distributor, or an authorized service provider of the Distributor, in order to obtain the requested service.
This Warranty covers manufacturing defects in materials and workmanship encountered in the normal, noncommercial use of the Product, and does not cover consumer instruction, delivery, installation, software issues, set-up, adjustments, cosmetic damage or damage due to acts of nature, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of the Product. In addition, this Warranty does not cover images "burnt" into the screen.
This Warranty applies to the original consumer only and does not cover products sold AS IS or WITH ALL FAULTS, sold as Reconditioned, Refurbished or Re-manufactured, or consumables (e.g., fuses, batteries, bulbs etc.). The Warranty is invalid if the factory-applied serial number has been altered or removed from the Product. This Warranty is valid only in the country where the consumer purchased the product, and only applies to products purchased and serviced in that country.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT OR REFUND OF THE ORIGINAL PURCHASE PRICE – AT DISTRIBUTOR'S SOLE DISCRETION – ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.
Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

FCC Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.