HUAWEI G7007

GSM Mobile Phone

User Guide

Trademarks and Permissions

, HUAWEI, and are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, products, services, and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Thus, the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Contents

ii

1 Getting to Know Your Phone

Your Phone

The following figure shows the appearance of your phone and it is for your reference only.
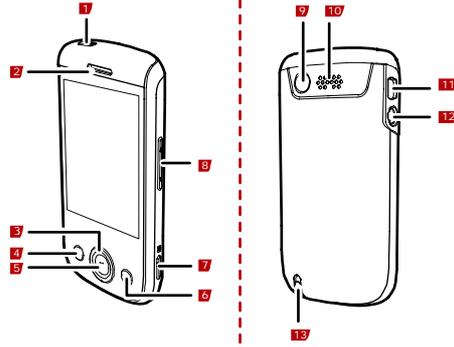
1	Power key	2	Earpiece
3	Navigation keys	4	Left soft key
5	Confirm key	6	Right soft key
7	Camera key	8	Volume/Scroll key
9	Camera	10	Speaker
11	Charger/USB interface	12	Headset jack

13 Stylus

📖 The headset is not delivered as an accessory in your packing box. It may be available as a giveaway or need to be purchased separately.

Keys and Functions

Press...	To...
⏻	Power on or power off the phone (by pressing and holding it for about 3s).
⌢	• Make a call. • Answer an incoming call. • View call logs in standby mode.
⌣	• End a call, or reject an incoming call. • Return to the previous menu or standby mode.
◯	• Display the main menu in standby mode. • Confirm a selection.
⊞	• Scroll through submenus on a menu screen or options on an option screen. • Access the functions assigned to the keys as shortcuts in standby mode.
▲▼	• Increase the volume (▲) or decrease the volume (▼) in standby mode, during a call or playing. • Move the cursor up and down in the menu list.

	Access the **Camera** screen.

3

2 Installing and Charging

Installing the SIM Card and Battery

Ensure that the golden contact area on the SIM card is facing downward, and the beveled corner is properly aligned with the SIM card slot.

Installing the microSD Card
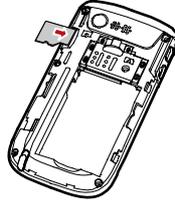
Charging the Battery

1. Connect the charger to an AC power socket.

1

2. Connect the charger to the charger jack on the phone.
3. Wait until the battery is completely charged. During the charging, the charging icon is displayed in animation. When the charging icon becomes static, the battery is fully charged.
4. Disconnect the charger from the phone.
5. Disconnect the charger from the AC power socket.

3 Getting Started

Using the Stylus

Your phone has a screen with tactility. You can use the stylus tip to touch the screen to select items or edit text.

- Tap: Use the stylus tip to touch the screen once to select an item or access a menu.
- Drag: Press the stylus tip onto the screen, and then move the stylus to scroll the menus or pages.

Calibrating the Screen

The touch of stylus tip on the screen can be responded accurately through screen calibration.

1. Press ⌐_⌐ in standby mode.
2. Select **Settings** > **Phone** > **Calibration**.
3. Tap the cross marks that appear on the screen in sequence according to the prompts to finish adjusting the phone display.

📖 When calibrating the screen, tap the cross marks

exactly. It will decide the definition of response to the tap and hand input.

USB

After connecting to the PC with USB data cable, you phone can be used as a USB mass storage device.

1. Press ⬬ in standby mode, and then select **Connectivity** > **USB mode** > **Udisk Mode**.

2. Connect your phone to the PC by using the USB cable.

3. The phone is recognized as a USB mass storage device.

4. Read the files saved in the phone memory and on microSD card directly.

📖 Save the files to the corresponding folders that are automatically created on the phone or the microSD card. Because contents in only the default folder can be read, do not create a folder by yourself.

Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock function is disabled. You can change the default phone lock code (**1234**) into any numeric string of four digits.

Do remember your phone lock code. If you forget it, contact the service center.

PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) can unlock the blocked PIN. Both PIN and PUK are delivered with the SIM card. For details, contact your service provider.

If you enter wrong PINs for a specified number of times consecutively, the phone asks you to enter the PUK.

If you enter wrong PUKs for a specified number of times consecutively, the SIM card is invalidated permanently. Contact your service provider for a new one.

Entertainment

- Camera: to shoot pictures or videos.
- Music: to play the audio files stored in the phone memory or on the microSD card.
- Videos: to play the video files stored in the phone memory or on the microSD card.
- FM Radio: to listen to the radio program.
- Recorder: to recorder audios.
- E-book: to read the e-books stored in the phone memory or on the microSD card.
- Java: you can download and install the java applications and games.
- Games: you can enjoy the funny games.

4 Voice Services

Making a Call

1. Open the number keypad in standby mode by touching the screen.
2. Enter the phone number.

- To make an international call, tap and hold 0 for about 3s to enter the plus sign (**+**). Then enter the international long distance code, country code or region code, area code, and phone number in sequence
- To call an extension, enter the phone number, tap and hold $\#$ for about 3s to insert **P**, and then enter the extension number.

3. Press ⌒ to dial the number.
4. Press ⌣ to end the call.

Answering a Call

When there is an incoming call, you can do as follows:

- Press ⌒ to answer it.
- Press ⌣ to reject it.

5 Text Entry

Text Input Modes

The text input panel is displayed on the bottom of screen. Tap the key with input modes to change the text input mode.

Multi-tap Input Mode

In multi-tap input mode, you can tap a key labeled with the desired letter once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

Entering Digits

1. Tap the key with input modes to change into **123** input mode.
2. Tap the number key you required.

Entering Symbols

1. Tap ⬇ to display or display the symbols panel.
2. Tap the symbol key you required.

6

6 Messaging

Creating and Sending a Text Message

1. Tap ⌂ to display the main menu, and then select **Messages** > **SMS** > **Create message**.

2. Edit the text message.

3. Press ◯ for the following options:

- **Send only**: to enter a phone number or add a recipient from the contact list.

- **Send and save**: to enter a phone number or add a recipient from the contact list, and save the message after sending it.

- **Save**: to save the message.

- **Send to Many**: to add several recipients at a time.

- **Send by Group**: to add all members of a group as recipients.

4. Press ◯ to send the message.

7

Creating and Sending a Multimedia Message

1. Tap [icon] to display the main menu, and then select **Messages** > **MMS** > **Create MMS**.

2. Tap **TO**, **Cc**, or **Bcc**. to add the recipient(s). You can add the phone number(s) or email address(es) of the recipient(s).

3. Tap **Subject** to edit the subject of the message.

4. Tap **Edit content** to access the screen for editing a multimedia message.

5. Tap **Option** to edit message text, insert a picture, video clip, audio clip, attachment, or message template, set the message layout, delete an attachment, preview the message, or create, clear, or delete a slide.

6. After editing the message, tap **Back**.

7. Select **Options** > **Send only** to send the message.

[icon]
- Contact your service provider for the availability of the Multimedia Messaging Service (MMS) and the method of subscribing to this service.
- Open multimedia messages with caution. Objects in multimedia messages may contain hazards that can damage your phone, such as malicious software.

7 Contacts

Creating a Contact

1. Tap ![home icon] to display the main menu, and then tap **Contacts** > **Add new contact**.
2. Tap **To Phone** or **To SIM** to save the contact.
3. Edit the contact.
4. After editing the contact, tap **Save** to save the contact.

Searching for a Contact

1. Tap ![home icon] to display the main menu, and then tap **Contacts** > **Search contact**.
2. Enter the name or the first letter of the name.
3. Press ◯ and select **Search**.

8 Camera

Taking a picture

1. Tap ![home icon] to display the main menu, and then tap **Camera** > **Camera**.
2. Press ◯ to take a picture.
   The picture is automatically saved in the **Photo** folder.

9 Music

Tap [icon] to display the main menu, tap **Music**, view the file list, and then tap the music that you want to play.

[book icon] When playing the music or the video, you can

press [volume icon] to adjust the volume.

10 FM Radio

Before using the FM radio, connect a compatible headset to your phone. The headset cable also functions as an antenna. To ensure good reception of radio programs and sound audio quality, during radio listening, do not disconnect the headset from your phone or bend the headset cable with force.

Searching for Channels

1. Tap [icon] to display the main menu, and then tap **FM**.
2. Tab **Tuning** and select **Automatic Tuning**. Complete the search as prompted.

[book icon] The phone supports multiple searching modes. You can select a mode as required.

10

Listening to the Radio

1. Press ⬚ to switch between channels.

2. Press ⬍ to adjust the volume.

Operations on the FM Screen

- Recording a program
  Press ◯ to start recording a program.
  During recording, press ◯ to pause or continue; tap **Stop** to stop.
- Playing the radio in the backgroundsdrf
  Tab **Back** to enter the standby mode.
  Performing operations not related to ringtones and voice services does not affect the playing of radio programs.
- Playing a program through the loudspeaker
  Tab **Options** and then select **Loudspeaker** to activate the speaker. To deactivate the speaker, tab **Options** again and then select **Headset**.
- Switching off the radio
  Tab **Options** and then select **Switch Off**.

11 WAP

You can access WAP sites and use WAP-based services on your phone. To access the WAP sites through your phone, you need to subscribe to the corresponding service from the service provider and set the relevant parameters on your phone.

For details about the service and the charges, contact your service provider.

Connecting to the Network

1. Tap to display the main menu, and then tap **WAP**.
2. Tap **Go to URL**.
3. Enter the WAP site that you want to access.
4. Press .
   The corresponding WAP page is displayed.

12 Bluetooth

Through Bluetooth, you can transfer data between your phone and other devices supporting Bluetooth, talk on the phone hands-free, and listen to music by using a Bluetooth headset.

Enabling or Disabling the Bluetooth Function

Tap [icon] to display the main menu, tap **Bluetooth**, and then set **Switch On/Off** to **On** to enable the Bluetooth function.

📖 You can perform Bluetooth-related settings only after enabling the Bluetooth function.

Transferring Data

Through Bluetooth, you can transfer data between your phone and other devices supporting Bluetooth.

1. Enable the Bluetooth function.

2. Select **Device list**.

3. Tap **Search new device** to search for other Bluetooth-supported devices within a valid range and pair a device with your phone.
   When a device is found for the first time, a password is required for authentication.

4. After a device is paired with your phone, you can transfer data between your phone and the device.

Viewing Phone Information

Tap to display the main menu, tap **Bluetooth** and select **My Device Information**. You can view the information, such as the device name, device address, and supported services.

13 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when it causes danger or interference with electronic devices.

Medical Device

- Power off your device and follow the rules and regulations set forth by the hospitals and health care facilities.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

- Some wireless devices may affect the performance of the hearing aids. For any such problems, consult your service provider.

Potentially Explosive Atmospheres

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or fire, resulting in bodily injuries or even deaths. Do not switch on the device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. Also, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmosphere that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. Also, if using the device while driving a vehicle, please comply with the following guidelines:
- Concentrate on driving. Your first responsibility is to drive safely.

- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Switch off your device before boarding an aircraft. Using wireless devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp or dirty places or places with magnetic fields. Otherwise, the circuit may not function properly.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a thunder and stormy day, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and

16

results in increase in power consumption. As a result, the talk time and standby time are reduced.

- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0℃ and 45℃ while the device is being charged. Keep the ambient temperature between -10℃ to 45℃ for using the device powered by battery.

Preventing Hearing Damage

Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Safety of Children

Please comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may prove dangerous, as it may present a choking hazard. Make sure that small children are kept away from the device and accessories.

Accessories

Use only the accessories delivered by manufacturer. Using accessories of other manufacturers or vendors with this device model might invalidate any approval or warranty applicable to the device, might result in the non-operation of the device, and might be dangerous.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.

- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and talk time are shorter than normal, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause fire or the charger may not function properly.
- Do not connect two poles of the battery with conductors such as metal materials, keys or jewelries. Otherwise, the battery may be short-circuiting and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, make sure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If the battery is damaged, or the color changes or gets abnormally heated while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the lead is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to electric shock, short-circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

Clearing and Maintenance

- The device, battery, and charger are not water-resistant Keep them dry. Protect the device, battery and charger from water or vapor. Do not touch the device and charger with a wet hand. Otherwise, it may lead to short-circuit or malfunction of the device and electric shock to the user.

- Do not place your device, battery, or charger in places where it can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion. When the temperature is lower than 0℃, performance of the battery is affected.

- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.

- Do not leave your device, battery, or charger in a very hot or cold place. Otherwise, they may not function properly and may lead to a fire or an explosion.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.

- Before you clean or maintain the device, power off the device and disconnect it from the charger.

- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may get damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.

19

- Do not dismantle the device or accessories. Otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the mobile device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization ICNIRP and include safety measures designed to ensure safety for all users, regardless of age and health.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

All models of Huawei's mobile phone are designed to meet radio frequency exposure guidelines. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed

the limit established by the government-adopted requirement for safe exposure.The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body with an accessory that contains no metal part. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.918 W/kg, and when properly worn on the body is 0.907 W/kg.

FCC Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by manufacturer name: Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

22