User Guide

10.1" Tablet

P1000
User Guide

In the box

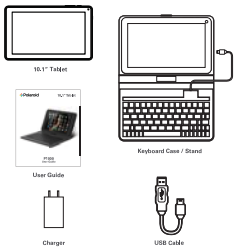

Care & safety precautions

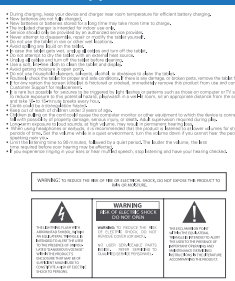

Buttons, ports & hardware

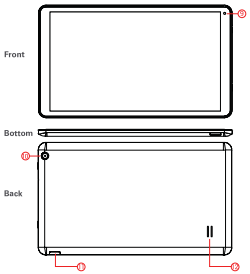



1. ⏻ Power Button
2. Reset
3. Headphone Jack
4. Micro USB port
5. Mini HDMI
6. DC Input
7. Back
8. Microphone
9. Front Camera
10. Rear Camera
11. Micro SD Card Slot
12. Speaker

Expanding the storage

Inserting a Micro SD card
The tablet supports Micro SD cards up to 64GB (not included).
To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.

To remove the Micro SD card, gently press it inward to eject.

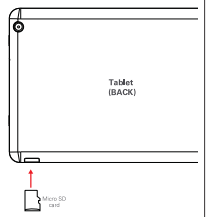

Charging

Connect the tablet to a wall outlet using the included charger & USB cable as shown below.

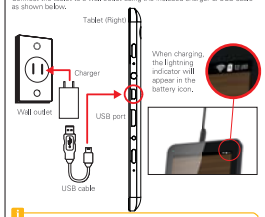

Battery Tips:
- *Turn off Wi-Fi when it's not in use.*
- *Lock the tablet (turn the display off) to shorten charging time.*
- *To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings panel.*

Power ON / OFF

Turning on the tablet
Press & hold the ⏻ button until the startup screen appears.

Power off the tablet
Press & hold the ⏻ button until the "Power off" option appears.



Lock the tablet (standby)
Briefly press the ⏻ button.
(Lock the tablet to conserve the battery).

Unlock the tablet
Briefly press the ⏻ button, and slide the "Lock icon" up.

Turning on

1. Press and hold the Power ⏻ button to get started.

2. Follow the initial setup wizard prompts.

3. To use the Google Play store, sign into or create a Google account.

If you use Gmail™, you already have a Google account — if not, you can create an account now.

Google Play™

Google Play

Google Play™ is a digital content experience from Google where you can find and enjoy your favorite music, movies, TV shows, books, and Android™ apps and games. It's your entertainment hub; you can access it from the web or from your Android device, and all your content is instantly available across your devices.

Home Screen

Notifications and Quick Settings

Notifications panel
Swipe down from the top edge of the screen to display the Notifications panel where you can browse and reply to your emails, check software updates, reminders and more.

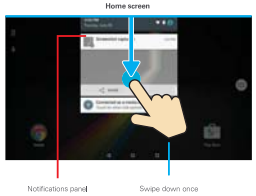

Quick Settings panel
Swipe down **twice** from the top edge of the screen to expand and access the Quick Settings panel, where you can easily enable/disable Wi-Fi, Bluetooth, Airplane mode and other settings.

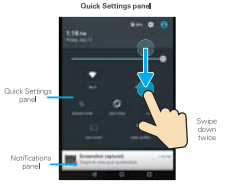

Connecting

Wi-Fi and Bluetooth®
To enable/disable Wi-Fi or Bluetooth®, simply tap the icons on the Quick Settings panel as shown below.

To access more settings options, select the ⚙ icon.

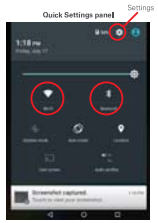

Keyboard Case

1. Insert the tablet into the case.

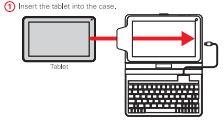

2. Tuck the belt in as shown below.

3. Connect the USB cable to the micro USB port



HDMI®

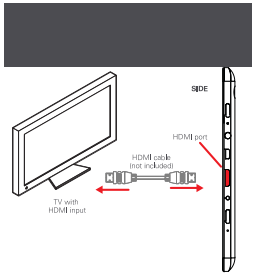

Legal information

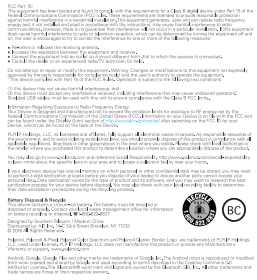
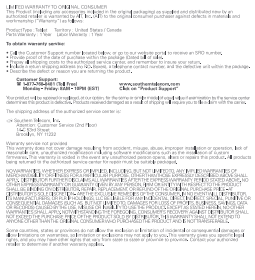
Limited Warranty