Appendix/Using External Devices/Troubleshooting

Interfacing to External Devices

Troubleshooting

Menu List

Functions with ▨ **indicated in "Default settings:" field are those initialized to default settings by "Master Reset".**

	Function names		Default settings:	Page
$★$ i-mode	i Menu			P148
	Bookmark			
		Main Folder	Unregistered	P151
		User created folder	No settings	
	Go to location	URL entry history	No history	P150
	Screen memo			
		Main Folder	Unregistered	P153
		User-created folder	None	
	Last URL			P150
	Message R		No message	P160
	Message F		No message	
	Check new message		—	P159
	i-mode Setting			
		Font Size	Standard	P157
		Scroll	1 line	P157
		Image Display	Display	P157
		Message Auto Display	MessageR preferred	P159
		Message Attached Melody	Auto play	P159
		i-motion Auto Play	Auto play	P164
		Use Registered Data	Use	P158
		Sound effects	Play	P158
		Check New Message	All checkmarked (Cheking the specifications)	P184
		Connection Timeout	60 seconds	P158
		Host Setting	i-mode	P158
		Certif. Center Host	DoCoMo	P158
		Certificate	All valid	P158
		Client Certificate	—	P158
		Check i mode Setting	—	P158
		Reset i mode	—	P158
	Select Application		—	P148
$★$ i-appli			Only pre-installed i-appli	P193

		Function names	Default settings:	Page
$★$ Mail	Inbox			P178
		Main folder	No message	
		User created folder	None	
		Folder for i-appli mail	None	
	Outbox			P179
		Main folder	No message	
		User-created folder	None	
		Folder for i-appli mail	None	
	Unsentbox	Main folder	No message	P179
	Compose message		—	P172
	Compose SMS message		—	P187
	Chat Mail			P186
	Deco-mail template		Only pre-installed data	P175
	Select Application		—	P172
	Check new message		—	P172
	Check SMS		—	P189
	Receive option		—	P176
	Mail setting			
		Check new message	All checkmarked (Checking the specifications)	P184
		Receive attachment	Image and Melody	P184
		Receive option	OFF	P184
		Melody auto play	Auto Playback	P184
		Receive preference	Prefer receive notice	P184
		Signature	OFF	P184
		Edit quotation mark	—	P184
		Font size	Standard	P184
		Scroll	1 Line	P184
		Reg. sending group	Unregistered	P184
		SMS report request	OFF	P184
		SMS message validity	For 3 days	P184
		SMS center	DoCoMo	P184
		Mail status request		P185
		Reset mail status		P185
$★$ Phonebook		View	(Checking the specifications)	P99
		Setup	View by: List Default Storage: Phone	P102

Appendix/Using External Devices/Troubleshooting

XXXXX

		Function names	Default settings:	Page
$★$ Databox	My Pictures			
		Pictures (All)	None	P204
		Camera	None	
		i-mode/Other	None	
		Pre-installed	Only pre-installed data	
		Picture Albums	Most Viewed folder No user-created folder	P211
	i-motion			
		i-motion (All)	None	P208
		Camera	None	
		i-mode/Other	None	
		Pre-installed	Only pre-installed data	
		i-motion Albums	Most Viewed folder User-created album: None	P211
	Melody			
		Melody (All)	None	P214
		i-mode/Other	None	
		Pre-installed	Only pre-installed data	
		Playlists	Most Played list User-created list: None	P216
		Artist	User-created list: None	P214
		Album		
		Genre		
		Composer		
	Chara-den			
		Chara-den (All)	None	P213
		i-mode/Other	None	
		Pre-installed	Only pre-installed data	
	Animations			
		Animations (All)	None	P204
		i-mode/Other	None	
		Pre-installed	Only pre-installed data	
	Voice Notes			
		Voice Notes (All)	None	P218
		My Notes	Unregistered	

	Function names		Default settings:	Page
$★$ Accessories	Alarm Clock		—	P227
	Datebook	Setup	Default View: Month View Daily Begin: 7:00am Reminder Time-Out: OFF Default Past Items: 1 week Power On Events: On	P228
	Record Message		Record Message: Off Response Time: 8Sec Response Greeting: Japanese Response Image: Japanese	P75
	Calculator	Currency Setup	From: Dollar $ To: Yen ¥ Exchange Rate: 110.000000	P236
	World Clock		City set "Time and Date", Chicago, Beijing from the top	P236
	Barcode Reader		—	P139
	Electronic Dictionary		—	P237
	Scanning Function			P323
	Recent Calls	Settings	Enable	
		Received Calls	—	P67
		Dialed Calls	—	P57
		Notepad	—	P57
		Call Times	—	P233
		Call Cost	—	P233
	Camera		—	P135
$★$ Connection	Infrared Link		—	P223
	Bluetooth Link	Setup	Power: Off Name: Motorola Phone (Checking the specifications)	P238
	USB Set		—	P222
$★$ Network Services	Voicemail		—	P246
	Call Waiting		—	P247
	Call Forwarding		—	P248
	Nuisance Call Barring		—	P249
	Caller ID Notification		—	P249
	Caller ID Display Request		—	P51
	Incoming Call Management		—	P251
	In-call Arrival Act		Answer Call	P251

		Function names		Default settings:	Page
$★$ Network Services	Additional Msg			—	P253
	Additional Services			—	P252
	Remote Control			—	P251
	Guidance Language			—	P250
	Dual Network			—	P250
	Multi Number			—	P251
	Call Barring - Roaming			—	P276
	Roaming Guidance			—	P276
	Service Dial			—	P250
$★$ Settings	Sound Profiles				
		Style		Loud	P106
		Detail		Ring Volume: 7 Calls: (Checking the specifications) Messages: (Checking the specifications) Voicemail: (Checking the specifications) Calendar Alarms: (Checking the specifications) Data Calls: (Checking the specifications) Ringer IDs: On Key Volume: 2 Reminders: Beep	P107
		Ring Lights		None	P114
		Event Lights		On	P115
	Personalize				
		Home Screen		Clock: Digital Date: On Layout: Centered	P115
		Main Menu		View: Icons	P113
		Skin		Moto	P113
		Greeting		—	P114
		Wallpaper		Picture: (Checking the specifications) Layout: Fit-to screen Calendar: Off	P112
		Screen Saver		Picture: (Checking the specifications) Delay: 1 minute	P114
		Manner Mode		Silent	P110

		Function names	Default settings:	Page
$★$ Settings	General Settings			
		Time and Date	hh:mm: 24 hr Time Zone: Tokyo (GMT+9:0) Date Format: 12/31/99 Auto Update: ON (Time & Time Zone)	P50
		Speed Dial	Phone Memory	P103
		Auto Redial	Off	P58
		Display Timeout	2 minutes	P116
		Backlight	10 seconds	P116
		Scroll	Wrap Around	P116
		Text Marquee	Slow	P117
		Language	Automatic	P49
		Text Entry	—	P261
		Power Setting	On	P69
		Brightness	3	P117
		DTMF	Long	P109
		Master Reset	—	P242
		Master Clear	—	P242
	Software Update		—	P318
	Security			
		Phone Lock	Automatic Lock: Off	P123
		Sidekey Lock	Off	P126
		Sidekey Shortcut	—	P126
		Lock Application	Off	P124
		Lock Application Setup	All uncheckmarked	P125
		Secret Data	Hide	P126
		Dialing Restriction	Off	P125
		UIM PIN	Off	P122
		New Passwords	Unlock Code: 0000 Security Code: 000000	P121
	In-Call Setup			
		Date and Time	Show Date: On Show Time: On	P115
		In-Call Timer	Display: Off Beep: Off	P64
		Call Cost Setup	Credit Limit: Off Currency Setup Currency: Off Cost Per Unit: 0.000	P234, P234
		Videocall Settings	Off Image: (Checking the specifications)) Handsfree: Speaker	P86, P88

		Function names	Default settings:	Page
$★$ Settings		Answer Function	Answer key: On Open To Answer: On	P67, P67
		Call Hold	Answer Hold Answer Hold Tone: Japanese Answer Hold Image: (Checking the specifications) Response Hold Tone: Japanese Videocall Hold Videocall Hold Tone: Japanese Videocall Hold Image: (Checking the specifications)	P70, P71, P87
		Call Rejection	Public Phones: Accept Private ID: Accept Unknown ID: Accept Not in Phonebook: Accept	P127
		International Dial Settings	Intl Access Code Auto Assist: Off Access Code :World Call Country Code Auto Assist: Off Country Code: Japan	P62, P272
		Sub Address	(Checking the specifications)	P63
		Ring Delay	Ring Delay: 0 seconds Show in Call Logs: Yes	P127
	Network			
		New Network	—	P275
		Network Setup	Band: Automatic Type: Automatic Speed: Medium	P274
		Available Networks	—	P275
		My Network List	—	P275
		Service Tone	ON	P276
	Headset			
		Auto Answer	OFF	P238
		Ringer Function	Headset & Speaker	P110
	Self Mode			
		Self Mode	OFF	P124
		Prompt At Power Up	OFF	P124
	i-appli Settings			
		Sort by	Name	P197
		App Auto Start	Off (Checking the specifications)	P195
		Softw. Info display	Off	P197

		Function names	Default settings:	Page
$★$ Settings		Light	Phone Settings (Checking the specifications)	P197
		Vibrate	Phone Settings (Checking the specifications)	P197
		Start failure history	—	P197
		Abnormal exit history	—	P197
		Security error history	—	P197
		Trace Output	—	P197
	Phone Status			
		My Personal Info	—	P232
		Battery Meter	—	P48
		User Accounts	—	P242
		Storage Devices	—	P242
		Other Information	—	P242

■ **The other settings**

Function		Default settings	Page
Video Call	Swap View	Main window: Other party's image Sub window: Your image	P86
	Setup	Lighting Conditions: (Checking the specifications)	P87
	Brightness	(Checking the specifications)	P87
Original Manner Detail		Ring Volume: 0 Calls: (Checking the specifications) ChatMail: (Checking the specifications) Messages: (Checking the specifications) Ans Mach: (Checking the specifications) Calendar Alarm: (Checking the specifications) Data Calls: (Checking the specifications) Ringer IDs: Off Key Volume: 0 Reminders: Beep Low Battery Alert: Off Mic Sensitivity: On	P111
Entry Setup	Japanese Prediction	Japanese matching: On Japanese next word: On	P263
	English Settings	Auto Space: On Auto Cap: On English matching: On English next word: On	P263
	Cursor timeout	Hiragana/Katakana: Off Alphabet: Off	P263
	Pitch mode	Half pitch	P263
	Default	Alphabet	P263

Default Settings

Stand-by Display

$★$ Batwing	$★$ Hellomoto	$★$ Abstract	$★$ Bamboo	$★$ Beats	$★$ Blue
$★$ Blue Tile	$★$ Catching Air	$★$ Desert	$★$ Fight Night	$★$ Flare	$★$ Flowers
$★$ Grooving	$★$ Higher Plane	$★$ Landmark	$★$ Liquid	$★$ Spiral	

Screen Saver

$★$ Moto	$★$ Blue Bliss	$★$ Essence	$★$ Grooving	$★$ Hip Hop
$★$ Metal	$★$ Rose	$★$ Shout Out	$★$ Velvet	$★$ Wild

i-motion

$★$ Hellomoto	$★$ Media Street Scene	$★$ Tech Move On Up

Deco-mail Templates

$★$ Chic	$★$ Cyber	$★$ Future	$★$ Global
$★$ Nature	$★$ ブンブン1 (Bunbun1)	$★$ ブンブン2 (Bunbun2)	$★$ ブンブン3 (Bunbun3)

Deco-mail Pictures

$★$ Sorry	$★$ Thanks	$★$ In a fume	$★$ Whimper	$★$ Cobweb
$★$ Flare up	$★$ Intoxicating	$★$ Love	$★$ Hate	$★$ Hello
$★$ Bye-bye	$★$ Come on!	$★$ Good night	$★$ Congratulations	$★$ 勉強
$★$ Eating	$★$ Bathing	$★$ Good night	$★$ Dinner	$★$ Party
$★$ Driving	$★$ Amazing	$★$ Discouraging	$★$ Lonely	$★$ Hot

$★$ Cold	$★$ SORRY...	$★$ THANK YOU !!	$★$ Dislike	$★$ What?
$★$ Phew	$★$ HELLO	$★$ BYE	$★$ Happy	$★$ Fight!
$★$ Happy Birthday	$★$ Line 1	$★$ Line 2	$★$ Line 3	$★$ Line 4
$★$ おどろき (Surprised)	$★$ ラブラブ (Love Love)	$★$ ごめんなさい (Sorry)	$★$ ねむる	$★$ 悲しい (Sad)
$★$ あっかんべー (Put out tongue)	$★$ YO!	$★$ ムンクの叫び (Munch's scream)	$★$ いただきます！ (Let's eat)	$★$ にっこり (Smile)

Frame

$★$ Aurora	$★$ Beach	$★$ Calypso	$★$ Clover	$★$ Elite	$★$ Equinox
$★$ Flash	$★$ Gizmo	$★$ Glow	$★$ Moon Lighting	$★$ Pumped	$★$ Rave
$★$ Release	$★$ Swoosh	$★$ Virtual			

Stamp

$★$ Star	$★$ Star2	$★$ UFO1	$★$ UFO2	$★$ Milk	$★$ Round and round
$★$ Annoyed	$★$ Grr!	$★$ Spider	$★$ Blue devil	$★$ Red devil	$★$ Tiara
$★$ Sunglasses	$★$ Hat	$★$ Skateboard	$★$ Fang	$★$ SUN	$★$ Beard
$★$ Cap	$★$ Glasses	$★$ Lip	$★$ Face	$★$ Wound	$★$ Dragon
$★$ Flower	$★$ Square	$★$ Light	$★$ V	$★$ Butterfly	

Dial Key Assignments to Characters

Entry Modes / Keys	Hiragana	Katakana	Alphabetic characters	Digits
1	あ い う え お ぁ ぃ ぅ ぇ ぉ 1	ア イ ウ エ オ ァ ィ ゥ ェ ォ 1	. @ - _ / ~ : 1	1
2	か き く け こ 2	カ キ ク ケ コ 2	A B C 2 *1 a b c 2 *2	2
3	さ し す せ そ 3	サ シ ス セ ソ 3	D E F 3 *1 d e f 3 *2	3
4	た ち つ て と っ 4	タ チ ツ テ ト ッ 4	G H I 4 *1 g h i 4 *2	4
5	な に ぬ ね の 5	ナ ニ ヌ ネ ノ 5	J K L 5 *1 j k l 5 *2	5
6	は ひ ふ へ ほ 6	ハ ヒ フ ヘ ホ 6	M N O 6 *1 m n o 6 *2	6
7	ま み む め も 7	マ ミ ム メ モ 7	P Q R S 7 *1 p q r s 7 *2	7
8	や ゆ よ ゃ ゅ ょ 8	ヤ ユ ヨ ャ ュ ョ 8	T U V 8 *1 t u v 8 *2	8
9	ら り る れ ろ 9	ラ リ ル レ ロ 9	W X Y Z 9 *1 w x y z 9 *2	9
0	わ を ん 0	ワ ヲ ン 0	0	0
*	゛ ゜	゛ ゜	.ne.jp .co.jp .com .ac.jp @docomo.ne.jp WWW. http:// https:// *3	*
#	ー 、 。 ! ？ （ ） &	- 、 。 ! ？ （ ） &	! ? ( ) & , ; : " '	#

*1: Available only in upper-case.
*2: Available only in lower-case.
*3: Available only in half-pitch.

List of Symbols and Special Characters

Symbol List

■ **Ful-pitch symbols**

■ **Half-pitch symbols**

Symbol Conversion List

On the character entry screen, enter "きごう" to convert to bring up symbol candidates. And, you can enter characters listed below to convert into respective symbols.

Entry	Symbol	Entry	Symbol
あっと、あっとまーく	@	だい、だいひょう	代
あるふぁ	A α	たす、ぷらす	＋
あんだーばー	_	でるた	△ δ
あんど	&	てん	、, .｀‥…
いこーる	=	でんわ、てる	TEL
いち	① I	どしー、ど	℃
うえ	↑	どる	$ ﾄﾞﾙ
えん	¥	とん	ﾄﾝ
おす	♂	なな、しち	⑦ VII
おんぷ	♪	なんばー	No. #
おんぷ、ふらっと	♭	いげた	#
かける、ばつ	×	に	② II
かぶ、かぶしきがいしゃ	株	ぱーせんと	% ﾊﾟｰｾﾝﾄ
がんま	Γ γ	ぱい	∏ π
きゅー、く、きゅう	⑨ IX	はいふん	– ―
きろ	ｷﾛ	ひく、まいなす	－
きろぐらむ	kg	はち	⑧ VIII
きろめーとる	km	ひだり	←
ぐらむ	ｸﾞﾗﾑ	へいほうめーとる	m²
ご	⑤ V	べーた	B в
こめ、こめじるし	※	ほし	☆ ★
さん	③ III	まる	◦ ○ ● ◎
さんかく	△ ▲ ▽ ▼	みぎ	→
しーしー	cc	みり、みりめーとる	ﾐﾘ mm
しかく	□ ■ ◇ ◆	めーとる	ﾒｰﾄﾙ
ひしがた	◇ ◆	めす	♀
しぐま	Σ σ	やじるし	→ ← ↑ ↓ ⇒ ⇔
した	↓	ゆう、ゆうげんがいしゃ	有
しめ	✄	ゆうびん、ゆうびんばんごう	〒
しゃーぷ、なんばー	♯	よん、し	④ IV
じゅう	⑩ X	りっとる	ﾘｯﾄﾙ
すらっしゅ	／ ＼	ろく	⑥ VI
せんち、せんちめーとる	ｾﾝﾁ cm	わる	÷
せんと	¢ ｾﾝﾄ		

Pictograph List

■ Pictograph 1

■ Pictograph 2
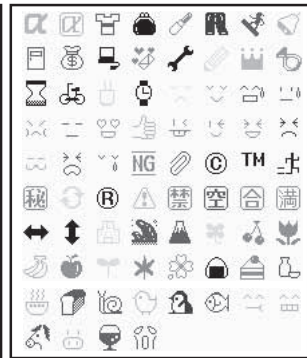
Smiley List

Smiley	Reading
(;°0°)＼	あ、かお
(ˆ0ˆ)	あーん、かお
(>_<)	あいた、かお
(;ˆ_ˆA	あせ、かお
(ˆ_ˆ;)	あせ、かお
('–'*)	あら、かお
m(_ _)m	ごめんね、かお
(~_~;)	あれー、かお
(ˆ–ˆ)v	いえーい、かお
(–_–#)	いらいら、かお
(+_+)	うーん、かお
＼(ˆ0ˆ)／	わーい、かお

Smiley	Reading
(°_°;)	おどろき、かお
(>o<″)	かお
(@_@)	かお
(`´)	かお
＼(ˆ–ˆ)／	かお
p(ˆˆ)q	がんば、かお
b(ˆ–ˆ)	ぐー、かお
((ˆˆ))	かお
(((((ˆ_ˆ;)	かお
(=_=)	てつやあけ、かお
(–_–)zzz	ねる、かお
(ˆ–ˆ)/	はい、かお

Smiley	Reading
(._.)_	かお
(;_;)	かお
(ˆ0_0ˆ)	かお
(ˆˆ)	かお
(~~ ﾟ	かお
(ˆ_–)	かお
(ˆ_ˆ)	かお
(ˆOˆ)	かお
(_)	かお
(~_~)	かお
(~_~;)	かお
(~0~)	かお

Smiley	Reading	Smiley	Reading	Smiley	Reading
(*´-`)	うっとり、かお	!(^^)!	ぴんぽーん、かお	)^0^(	かお
(T_T)	なく、かお	w(°o°)w	わおー、かお	>^_^<	かお
(^-^)	えがお、かお	(?_?)	かお	^/^	かお
(^.^)	えがお、かお	(-.-)	かお	^^;	かお
f(^_^)	えがお、かお	(-_-)	かお	^_^;	かお
(^0^)	かお	(-_-;)	かお	_(._.)_	かお
w(^o^)w	おー、かお	(..)	かお		
(*_*)	おどろき、かお	(._.)	かお		

• In a character entry screen, when you enter "Reading" listed above in the reading area, you can select the smiley from the conversion candidates.

List of Common Phrases

Folders	Template
Greeting	ありがとう
	ごめんね
	おはよう
	おやすみ
	よろしく
	元気？
	お疲れ様
	おめでとう！
Reply	今電車の中
	すぐ行きます
	もう少し待って
	了解
	OK
	ダメ
	おまかせします
	楽しみにしています
Waiting	少し遅れます
	もうすぐ着く
	今移動中
	先に行ってて
	もう着いたよ
	今どこにいる？
	いつもの所
	今日行けなくなりました

Folders	Template
Invitation	TELして
	今日、ヒマ？
	飲みに行かない？
	遊びに行こうよ
	週末空いてる？
	今何してるの？
	都合の良い日は？
	今日はダメです
Business	遅れます。
	会議中です。
	連絡下さい。
	電話下さい。
	後程ご連絡いたします。
	お世話になっております。
	ご連絡ありがとうございました。
	よろしくお願いします。
English	Thank you.
	I am not available right now.
	I'm late.
	Call me back!
	Where are you now?
	How are you?
	See you soon.
	Congratulation!
User Folder 1	(Up to 8 templates can be registered)
User Folder 2	(Up to 8 templates can be registered)

Kuten Code List

To enter a Kuten Code, enter the 3 digit number described in the "Kuten digit 1 - 3" and then enter the number in "Kuten digit 4" in succession.

Kuten code character table with columns "Kuten digit 1 to 3" and "Kuten digit 4" (columns 0–9), repeated in three panels across the page. Rows include codes 010–082, 083–206, and 207–266.

Japanese character code (Kuten) table. Each block lists "Kuten digit 1 to 3" (row label) against "Kuten digit 4" (columns 0–9). Kana headers (し, す, せ …) mark each reading section.

Block 1

1 to 3	0	1	2	3	4	5	6	7	8	9
267	堺	榊	肴	咲	崎	埼	碕	鷺	作	削
268	咋	搾	昨	朔	柵	窄	策	索	錯	桜
269	鮭	笹	匙	冊	刷	察	拶	撮	擦	札
270	殺	薩	雑	皐	鯖	捌	錆	鮫	皿	晒
271	三	傘	参	山	惨	撒	散	桟	燦	珊
272	産	算	纂	蚕	讃	賛	酸	餐	斬	暫
273	残							仕	仔	伺

し

1 to 3	0	1	2	3	4	5	6	7	8	9
274	使	刺	司	史	嗣	四	士	始	姉	姿
275	子	屍	市	師	志	思	指	支	孜	斯
276	施	旨	枝	止	死	氏	獅	祉	私	糸
277	紙	紫	肢	脂	至	視	詞	詩	試	誌
278	諮	資	賜	雌	飼	歯	事	似	侍	児
279	字	寺	慈	持	時	次	滋	治	爾	璽
280	痔	磁	示	而	耳	自	蒔	辞	汐	鹿
281	式	識	鴫	竺	軸	宍	雫	七	叱	執
282	失	嫉	室	悉	湿	漆	疾	質	実	蔀
283	篠	偲	柴	芝	屡	蕊	縞	舎	写	射
284	捨	赦	斜	煮	社	紗	者	謝	車	遮
285	蛇	邪	借	勺	尺	杓	灼	爵	酌	釈
286	錫	若	寂	弱	惹	主	取	守	手	朱
287	殊	狩	珠	種	腫	趣	酒	首	儒	受
288	呪	寿	授	樹	綬	需	囚	収	周	宗
289	就	州	修	愁	拾	洲	秀	秋	終	繍
290	習	臭	舟	蒐	衆	襲	讐	蹴	輯	週
291	酋	酬	集	醜	什	住	充	十	従	戎
292	柔	汁	渋	獣	縦	重	銃	叔	夙	宿
293	淑	祝	縮	粛	塾	熟	出	術	述	俊
294	峻	春	瞬	竣	舜	駿	准	循	旬	楯
295	殉	淳	準	潤	盾	純	巡	遵	醇	順
296	処	初	所	暑	曙	渚	庶	緒	署	書
297	薯	藷	諸	助	叙	女	序	徐	恕	鋤
298	除	傷	償	勝	匠	升	召	哨	商	唱
299	嘗	奨	妾	娼	宵	将	小	少	尚	庄
300	床	廠	彰	承	抄	招	掌	捷	昇	昌
301	昭	晶	松	梢	樟	樵	沼	消	渉	湘
302	焼	焦	照	症	省	硝	礁	祥	称	章
303	笑	粧	紹	肖	菖	蒋	蕉	衝	裳	訟
304	証	詔	詳	象	賞	醤	鉦	鍾	鐘	障
305	鞘	上	丈	丞	乗	冗	剰	城	場	壌
306	嬢	常	情	擾	条	杖	浄	状	畳	穣
307	蒸	譲	醸	錠	嘱	埴	飾	拭	植	殖
308	燭	織	職	色	触	食	蝕	辱	尻	伸
309	信	侵	唇	娠	寝	審	心	慎	振	新
310	晋	森	榛	浸	深	申	疹	真	神	秦
311	紳	臣	芯	薪	親	診	身	辛	進	針
312	震	人	仁	刃	塵	壬	尋	甚	尽	腎
313	訊	迅	陣	靭						

す

1 to 3	0	1	2	3	4	5	6	7	8	9
315							据	杉	椙	菅
316	頗	雀	裾	澄	摺	寸				

せ

1 to 3	0	1	2	3	4	5	6	7	8	9
316							世	瀬	畝	是
317	凄	制	勢	姓	征	性	成	政	整	星
318	晴	棲	栖	正	清	牲	生	盛	精	聖
319	声	製	西	誠	誓	請	逝	醒	青	静
320	斉	税	脆	隻	席	惜	戚	斥	昔	析

そ

1 to 3	0	1	2	3	4	5	6	7	8	9
332							噌	塑	岨	措
333	曾	曽	楚	狙	疏	疎	礎	祖	租	粗
334	素	組	蘇	訴	阻	遡	鼠	僧	創	双
335	叢	倉	喪	壮	奏	爽	宋	層	匝	惣

Block 2

1 to 3	0	1	2	3	4	5	6	7	8	9
336	搜	掃	挿	搔	操	早	曹	巣	槍	槽
337	漕	燥	争	痩	相	窓	糟	総	綜	聡
338	草	荘	葬	蒼	藻	装	走	送	遭	鎗
339	霜	騒	像	増	憎	臓	蔵	贈	造	促
340	側	則	即	息	捉	束	測	足	速	俗
341	属	賊	族	続	卒	袖	其	揃	存	孫
342	尊	損	村	遜						

た

1 to 3	0	1	2	3	4	5	6	7	8	9
343	他	多	太	汰	詑	唾	堕	妥	惰	打
344	柁	舵	楕	陀	駄	騨	体	堆	対	耐
345	岱	帯	待	怠	態	戴	替	泰	滞	胎
346	腿	苔	袋	貸	退	逮	隊	黛	鯛	代
347	台	大	第	醍	題	鷹	滝	瀧	卓	啄
348	宅	托	択	拓	沢	濯	琢	託	鐸	濁
349	諾	茸	凧	蛸	只	叩	但	達	辰	奪
350	脱	巽	竪	辿	棚	谷	狸	鱈	樽	誰
351	丹	単	嘆	坦	担	探	旦	歎	淡	湛
352	炭	短	端	箪	綻	耽	胆	蛋	誕	鍛
353	団	壇	弾	断	暖	檀	段	男	談	

ち

1 to 3	0	1	2	3	4	5	6	7	8	9
354					値	知	地	弛	恥	智
355	池	痴	稚	置	致	蜘	遅	馳	築	畜
356	竹	筑	蓄	逐	秩	窒	茶	嫡	着	中
357	仲	宙	忠	抽	昼	柱	注	虫	衷	註
358	酎	鋳	駐	樗	瀦	猪	苧	著	貯	丁
359	兆	凋	喋	寵	帖	帳	庁	弔	張	彫
360	徴	懲	挑	暢	朝	潮	牒	町	眺	聴
361	脹	腸	蝶	調	諜	超	跳	銚	長	頂
362	鳥	勅	捗	直	朕	沈	珍	賃	鎮	陳

つ

1 to 3	0	1	2	3	4	5	6	7	8	9
363								津	墜	椎
364	槌	追	鎚	痛	通	塚	栂	掴	槻	佃
365	漬	柘	辻	蔦	綴	鍔	椿	潰	坪	壷
366	嬬	紬	爪	吊	釣	鶴				

て

1 to 3	0	1	2	3	4	5	6	7	8	9
366							亭	低	停	偵
367	剃	貞	呈	堤	定	帝	底	庭	廷	弟
368	悌	抵	挺	提	梯	汀	碇	禎	程	締
369	艇	訂	諦	蹄	逓	邸	鄭	釘	鼎	泥
370	摘	擢	敵	滴	的	笛	適	鏑	溺	哲
371	徹	撤	轍	迭	鉄	典	填	天	展	店
372	添	纏	甜	貼	転	顛	点	伝	殿	澱
373	田	電								

と

1 to 3	0	1	2	3	4	5	6	7	8	9
373								兎	吐	堵
374	塗	妬	屠	徒	斗	杜	渡	登	菟	賭
375	途	都	鍍	砥	砺	努	度	土	奴	怒
376	倒	党	冬	凍	刀	唐	塔	塘	套	宕
377	島	嶋	悼	投	搭	東	桃	梼	棟	盗
378	淘	湯	涛	灯	燈	当	痘	祷	等	答
379	筒	糖	統	到	董	蕩	藤	討	謄	豆
380	踏	逃	透	鐙	陶	頭	騰	闘	働	動
381	同	堂	導	憧	撞	洞	瞳	童	胴	萄
382	道	銅	峠	鴇	匿	得	徳	涜	特	督
383	禿	篤	毒	独	読	栃	橡	凸	突	椴
384	届	鳶	苫	寅	酉	瀞	噸	屯	惇	敦
385	沌	豚	遁	頓	呑	曇	鈍			

な

1 to 3	0	1	2	3	4	5	6	7	8	9
386							奈	那	内	乍
386	凪	薙	謎	灘	捺	鍋	楢	馴	縄	畷
387	南	楠	軟	難	汝					

に

1 to 3	0	1	2	3	4	5	6	7	8	9
388					二	尼	弐	迩	匂	賑
388	肉	虹	廿	日	乳	入				
389	如	尿	韮	任	妊	忍	認			

ぬ

1 to 3	0	1	2	3	4	5	6	7	8	9
390									濡	

ね

1 to 3	0	1	2	3	4	5	6	7	8	9
390							禰	祢	寧	葱
391	猫	熱	年	念	捻	撚	燃	粘		

の

1 to 3	0	1	2	3	4	5	6	7	8	9
392					乃	迺	之	埜	嚢	悩
392	濃	納	能							
393	脳	膿	農	覗	蚤					

Block 3

は

1 to 3	0	1	2	3	4	5	6	7	8	9
393							巴	把	播	覇
394	杷	波	派	琶	破	婆	罵	芭	馬	俳
395	廃	拝	排	敗	杯	盃	牌	背	肺	輩
396	配	倍	培	媒	梅	楳	煤	狽	買	売
397	賠	陪	這	蠅	秤	矧	萩	伯	剥	博
398	拍	柏	泊	白	箔	粕	舶	薄	迫	曝
399	漠	爆	縛	莫	駁	麦				
400	函	箱	硲	箸	肇	筈	櫨	幡	肌	畑
401	畠	八	鉢	溌	発	醗	髪	伐	罰	抜
402	筏	閥	鳩	噺	塙	蛤	隼	伴	判	半
403	反	叛	帆	搬	斑	板	氾	汎	版	犯
404	班	畔	繁	般	藩	販	範	釆	煩	頒
405	飯	挽	晩	番	盤	磐	蕃	蛮		

ひ

1 to 3	0	1	2	3	4	5	6	7	8	9
405										匪
406	卑	否	妃	庇	彼	悲	扉	批	披	斐
407	比	泌	疲	皮	碑	秘	緋	罷	肥	被
408	誹	費	避	非	飛	樋	簸	備	尾	微
409	枇	毘	琵	眉	美					
410	鼻	柊	稗	匹	疋	髭	彦	膝	菱	
411	肘	弼	必	畢	筆	逼	桧	姫	媛	紐
412	百	謬	俵	彪	標	氷	漂	瓢	票	表
413	評	豹	廟	描	病	秒	苗	錨	鋲	蒜
414	蛭	鰭	品	彬	斌	浜	瀕	貧	賓	頻
415	敏	瓶								

ふ

1 to 3	0	1	2	3	4	5	6	7	8	9
415								不	付	埠
416	夫	婦	富	冨	布	府	怖	扶	敷	斧
417	普	浮	父	符	腐	膚	芙	譜	負	賦
418	赴	阜	附	侮	撫	武	舞	葡	蕪	部
419	封	楓	風	葺	蕗	伏	副	復	幅	服
420	福	腹	複	覆	淵	弗	払	沸	仏	
421	物	鮒	分	吻	噴	墳	憤	扮	焚	奮
422	粉	糞	紛	雰	文	聞				

へ

1 to 3	0	1	2	3	4	5	6	7	8	9
422							丙	併	兵	塀
423	幣	平	弊	柄	並	蔽	閉	陛	米	頁
424	僻	壁	癖	碧	別	瞥	蔑	箆	偏	変
425	片	篇	編	辺	返	遍	便	勉	娩	弁
426	鞭									

ほ

1 to 3	0	1	2	3	4	5	6	7	8	9
426							保	舗	鋪	圃
427	捕	歩	甫	補	輔	穂	募	墓	慕	戊
428	暮	母	簿	菩	倣	俸	包	呆	報	奉
429	宝	峰	峯	崩	庖	抱	捧	放	方	朋
430	法	泡	烹	砲	縫	胞	芳	萌	蓬	蜂
431	褒	訪	豊	邦	鋒	飽	鳳	鵬	乏	亡
432	傍	剖	坊	妨	帽	忘	忙	房	暴	望
433	某	棒	冒	紡	肪	膨	謀	貌	貿	鉾
434	防	吠	頬	北	僕	卜	墨	撲	朴	牧
435	睦	穆	釦	勃	没	殆	堀	幌	奔	本
436	翻	凡	盆							

ま

1 to 3	0	1	2	3	4	5	6	7	8	9
436							摩	磨	魔	麻
437	埋	妹	昧	枚	毎	哩	槙	幕	膜	枕
438	鮪	柾	鱒	桝	亦	俣	又	抹	末	沫
439	迄	侭	繭	麿	万	慢	満	漫	蔓	
440										

み

1 to 3	0	1	2	3	4	5	6	7	8	9
440					味	未	魅	巳	箕	岬
441	密	蜜	湊	蓑	稔	脈	妙	粍	民	眠

む

1 to 3	0	1	2	3	4	5	6	7	8	9
441										務
442	夢	無	牟	矛	霧	鵡	椋	婿	娘	

め

1 to 3	0	1	2	3	4	5	6	7	8	9
442										冥
443	名	命	明	盟	迷	銘	鳴	姪	牝	滅
444	免	棉	綿	緬	面	麺				

も

1 to 3	0	1	2	3	4	5	6	7	8	9
444							摸	摹	模	茂
445	妄	孟	毛	猛	盲	網	耗	蒙	儲	木
446	黙	目	杢	勿	餅	尤	戻	籾	貰	問
447	悶	紋	門	匁						

や

1 to 3	0	1	2	3	4	5	6	7	8	9
447							也	冶	夜	爺
448	耶	野	弥	矢	厄	役	約	薬	訳	靖
448	柳	薮								

This page is a JIS kuten (区点) character code chart. It consists of four side-by-side blocks, each headed "Kuten digit 1 to 3" and "Kuten digit 4" with columns numbered 0–9, listing CJK characters indexed by kuten rows 449–512, 513–589, and 590–666.

The row index numbers appearing in the leftmost column of each block include:

Block 1: 449, 449, 450, 451, 452, 452, 453, 454, 455, 456, 456, 457, 458, 458, 459, 460, 461, 462, 463, 464, 465, 466, 466, 467, 468, 469, 470, 470, 471, 472, 473, 473, 474, 475, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512

Block 2: 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589

Block 3: 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666

Kuten digit 1 to 3	Kuten digit 4										Kuten digit 1 to 3	Kuten digit 4										Kuten digit 1 to 3	Kuten digit 4									
	0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9

(This page is a JIS kuten character code chart. Row labels run 667–743 in the first section, 744–820 in the second section, and 821–840 in the third section, each listing Japanese kanji characters across Kuten digit 4 columns 0–9.)

Appendix/Using External Devices/Troubleshooting

XXXXX

• The characters listed on the Kuten Code list may appear differently from the characters displayed on the your handset.

Combination of Multiaccess Functions

New Communication / Current Status	Voice Call		Video Call		i-mode	i-mode Mail	
	Outgoing	Incoming	Outgoing	Incoming	Connecting	Sending	Receiving
Voice Call	◯*1	◯*1	✕	✕*2	◯	◯	◯
Video Call	✕	✕*2	✕	✕*2	✕	✕	✕
i-mode	◯	◯	◯*3	✕	✕	◯	◯
Packet Communication (Data Communication)	◯	◯	✕	✕	✕	✕	✕
64K Data Communication	✕	✕*2	✕	✕*2	✕	✕	✕

New Communication / Current Status	SMS		i-appli	Packet Communication (Data Communication)		64K Data Communication	
	Outgoing	Incoming	Outgoing	Sending	Receiving	Sending	Receiving
Voice Call	◯	◯	✕	◯	◯	✕	✕*2
Video Call	✕	◯	✕	✕	✕	✕	✕*2
i-mode	◯	◯	✕	✕	✕	✕	✕
Packet Communication (Data Communication)	◯	◯	◯*4	✕	✕	✕	✕
64K Data Communication	◯	◯	✕	✕	✕	✕	✕*2

◯: Available
✕: Not available

*1: If you subscribe to the Call Waiting service, you can place the active call on hold to make/answer the call. If you subscribe to the Voicemail service or Call Forwarding service, the incoming call can be treated in accord with the service.
*2: If you subscribe to the Voicemail service, Call Waiting service or Call Forwarding service, you can answer the incoming call after terminating the active call.
*3: To be dialed after the i-mode connection is terminated.
*4: i-appli communication is not available.

Combination of Multitask Functions

Multitasking is available by selecting/pressing "Select App" of the Function menu or a softkey from a specific screen. →P226(Checking the specifications)

New Application / Active Application	Voice Call	Video Call	Phonebook	i-channel	i-mode	Mail	Schedule/ Calendar	Answering Machine Notes	Databox/ Multi Media
Voice Call	—	◯	◯	◯	◯	◯	◯	✕	◯
Video Call	◯	—	◯	✕	✕	◯	◯	✕	◯
Mail	◯	◯	◯	✕	◯	—	◯	◯	◯
i-mode	◯	◯	◯	✕	—	◯	◯	◯	◯

◯: Available concurrently

✕: Not available concurrently

—: An item to be switched in "SWAP" while multitasking is displayed.

Services Available from FOMA Handset

Services		Phone number
Collect call (Calls charged to the receiver)		(No prefix) 106
Directory assistance of general phones and DoCoMo mobile phones (charged) (No assistance provided for subscribers not listed)		(No prefix) 104
Telegraph (charges apply: telegram fee)	8:00 a.m. to 10:00 p.m.	(No prefix) 115
Time check (charges apply)		(No prefix) 117
Weather forecast (charges apply)		Area code＋177
Police emergency		(No prefix) 110
Fire and ambulance		(No prefix) 119
Marine emergency call and accident reports		(No prefix) 118
Message Dial for disaster (charges apply)		(No prefix) 171

Note

- If you use collect call service (106), the receiver of a call is charged for the call cost and commission of \90 (\94.5 with tax included) per call (as of ● 2006).
- When you use directory assitance service (104), you are charged for a call cost and service charge of \100 (\105 with tax included). This service is provided free of charge for those visually impaired or physically disabled in the upper body. For details, contact at 116 (NTT sales contact) from a general phone (as of ● 2006).
- For a call to 110, 119 or 118 from FOMA handset, the originating location cannot be identified. Because the police or fire department may try to contact you, inform them that you are calling using a mobile phone and give your phone number and detailed information of the place you are. Do not move while you are talking over a call to prevent it from terminated unexpectedly. Do not turn the power OFF immediately after the call is over; keep FOMA handset ready to receive a call for approximately 10 minutes.
- Depending on the area you are calling from, you may not be connected to the local police or fire department. In such a case, use a public phone or general phone nearby.
- When you use "Call Forwarding" of general phone and have specified a mobile phone as its forwarding destination, the caller may hear a ring tone even when the mobile phone is busy, out of the service area or power OFF depending on the settings of the general phones and mobile phones.
- Services such as call to 116 (NTT sales center), Dial Q2, Message Service and credit card calls are unavailable. (Credit card calls can be made from a general phone or public phone to FOMA handset.)

Function and Related Devices

Using FOMA handset with various optional devices makes it applicable to diversified fields covering personal to business usages. Some of the products listed below may be unavailable in some areas.

For details, contact DoCoMo shop. For details of optional devices, see the related operation manuals.

- Battery pack M02
- Rear cover M02
- FOMA AC adapter 01
- FOMA AC adapter 01 available both in Japan and overseas
- FOMA DC adapter 01
- In-car handsfree kit 01[*1]
- FOMA in-car handsfree cable 01
- FOMA Dry Cell Battery Adapter 01

- FOMA USB cable
- FOMA miniUSB Conversion Adapter M01
- miniUSB stereo headset M01

- Bluetooth headset F01[*2]
- Bluetooth headset AC adapter F01
- In-car Holder 01

*1: FOMA in-car handsfree cable 01 is necessary.
*2: Bluetooth headset AC adapter F01 is necessary.

Data Link Software

You can transfer data such as Contacts, Schedule events/Tasks, mail, images or i-motion movies between the FOMA handset and a PC connected to the FOMA handset with a FOMA USB cable (optional) using the "FOMA M702iG Data Link Software".

You can download the "FOMA M702iG Data Link Software" from Motorola's Web page.

■ **URL for Downloading**

http://motorola.jp/hellomoto/●●●●●.htm

For details about download, transferable data, operating environments, operations, or limitations, visit the above web site.

■ **Supported Operation System**

Japanese version of Windows XP and Windows 2000

■ **Exclusion of Liability**

- Motorola Inc.(hereafter "we") does not bear any legal liability for defects including failure of this software to operate properly. Also, we do not guarantee the functionality of this software and its fitness for any particular purposes of the customer.
- You are responsible for solving any problems caused by this software or related materials at your own expense. We are not responsible.

Inquiry about "FOMA M702iG Data Link Software"

Motorola Inc. Customer Hot Line

0120-227-217

The above number is also available from a mobile phone or PHS.

Office Hours: 9:00 am - 6:00 pm on weekdays (excluding Saturdays, Sundays and Holidays)

> **Note**

- You need a PC connected to the Internet to download the software. Separate communication charges may apply for the download.

Video Play Software

You need Apple Computer Inc.'s QuickTime Player (free of charge) Version 6.4 or higher (or Version 6.3 + 3GPP) to play videos (in MP4 file format) captured with the FOMA handset on a PC.
You can download the QuickTime Player from the following web site:
http://www.apple.com/jp/quicktime/download/

Note

- You need a PC connected to the Internet to download the software. Separate communication charges may apply for the download.
- For details about operating environment, download or operations, visit the above web site.

Using FOMA Handset for Playing i-motion (Including Music Data) Created with PC

(Checking the specification)

Troubleshooting

Symptom	Check
The FOMA handset cannot be powered on (the FOMA handset cannot be used)	• Is the battery pack inserted correctly? →P43 • Is the battery pack charged? →P47 • If mova is enabled under the Dual Network service, some FOMA services are not available. Check whether FOMA is enabled. For details, refer to the "Network Service Operation Guide". →P250
A call cannot be made even when dial keys are pressed	• Are Dialing Restrictions set? →P125 • Is Phone Lock set? →P123 • Is Self Mode set? →P124
After a call is dialed, a busy tone sounds and the call cannot be connected	• Did you enter the city code? →P54 • Is the phone out of the service area? →P49
$★$ appears and "Emergency Call Only" or "Out of Service Area" is displayed	• Are you out of the service area, or in the location with weak signal reception? →P49
$★$ is displayed and the Unlock code entry screen is open	• Is Phone Lock set? →P123
Pressing the side key while the FOMA handset is folded does nothing	• Is Sidekey Lock set? →P126
The low battery alarm is sounding	• The battery level is low. Charge the battery pack. →P47

XXXXX

Symptom	Check
Charging is not available (the Charging Lamp does not light)	• Is the battery pack inserted correctly? →P43 • Is the adapter power plug correctly connected to the electric outlet? • Is the miniUSB conversion adapter M01(included) correctly connected to the FOMA handset? • Is the adapter correctly connected to the miniUSB conversion adapter M01? →P46
The display turns dark and nothing is displayed	• Is the Display Timeout set? →P116 • Is Power Setting set? →P69
A different ringtone sounds for incoming mail	• Is the sender saved in the Phonebook with a different ringtone? →P92 • Is the sender saved in the Phonebook under a category with a different ringtone assigned? →P95 • Has the Style changed? →P106
A different incoming call lamp flashes for incoming call or mail	• Is the sender saved in the Phonebook under a category with a different Light ID assigned? →P95 • Has the Style changed? →P106
Images or melodies set for function do not work and default settings are used	• Is the same UIM installed that was inserted when images or melodies were obtained? →P42
The accumulated call charges do not increase	• Have you exceeded the call charge maximum (about 16,770,000 yen)? Reset the accumulated call charge to restart counting. →P234

■ When Overseas

Symptom	Check
The icon indicating the network status remains as out of service, and the international roaming service is not available	• Are you out of the international roaming service area, or in a location with weak signal reception? • Check whether you are in an available service area and whether you are using a carrier listed with the "International Service Guide" or DoCoMo's International Service Web site. • Switch to an available network. →P275
Video calls, i-mode mail, SMS, and packet communication are not available	• Check whether you are in an available service area and whether you are using a carrier listed with the "International Service Guide" or DoCoMo's International Service Web site. • Switch to an available network. →P275
Calls or mail cannot be received	• Is Call Barring Roaming activated? →P276
After returning to Japan, the network status icon still shows out of service area	• Is "Communication Method" set to "GSM 900/1800" or "GSM1900"? →P274

Error Messages

Not enough room provided.

No more software can be saved due to a shortage of software storage space. Delete unnecessary software. →P196

Enter the access number

The international call detail settings cannot be saved because an international access code has not been entered. Enter the international access code.

Please input address.

An address for mail or SMS ($★$) has not been entered. Enter the address then send. →P172, P187

Alarm Clock Full

No new alarm can be set because five alarms have already been saved. Delete unnecessary alarms then save. →P228

Incorrect Passcode
UIM PIN2 login attempts remaining: X*
*: The remaining number for entry is displayed.

An incorrect UIM PIN2 has been entered. Enter the correct UIM PIN2.

Incorrect Passcode
UIM PIN login attempts remaining: X*
*: The remaining number for entry is displayed.

An incorrect UIM PIN has been entered. Enter the correct UIM PIN.

Incorrect Passcode
PUK1 login attempts remaining: X*
*: The remaining number for entry is displayed.

An incorrect PUK code has been entered. Enter the correct PUK code.

Invalid security code.

An incorrect security code has been entered. Enter the correct security code.

No match found

The electronic dictionary does not have a headword that matches with the entered word.

Full

The maximum number of Schedule events/tasks has been saved. Delete unnecessary Schedule events/tasks. →P229

Failed

The communication has been interrupted due to a time out -- too much time before completion of a communication. Try to operate again.

Failed Connection interrupted

The connected Bluetooth device terminated the communication. Try to operate again.

Error
Secret Code must be 4 digits 0001 - 9999.

An incorrect Secret Code has been entered. Enter a 4-digit number between 0001 and 9999.

Application Failed: Validation Error

The software update failed, and the downloaded software cannot be installed.

Application Failed: Out of Service Area

The software cannot be updated due to being out of the service area. Move to a place with stronger signal reception and try again.

Application Failed: Software Version Too Old

The software cannot be updated because the software version on the FOMA handset is too old. Contact a DoCoMo shop.

Application Failed: Server Is Busy

- The software cannot be updated because the server is busy. Try again later.
- The software update cannot be reserved because the server is busy. Press [Reserve] to reserve again.

Application Failed: Cannot Delete All messages are protected

The selected message cannot be deleted because it is protected. Unprotect the message and try again.

Application Failed: Battery is Too Low

The software cannot be updated because the battery level is low. Charge the battery pack fully and try again.

Application Failed: Set Date and Time

The software cannot be updated because Date and Time have not been set. Set the Date and Time and try again. →P50

Application Failed: Other Functions Are Running

The software cannot be updated because other functions are running. End the running functions and try again.

Remotely Controllable Services Denied

You attempted to activate the Voicemail service or Call Forwarding service using remote control without subscribing to these services.(Checking the specifications)

Appendix/Using External Devices/Troubleshooting

XXXXX

Remote Control Already Active

You attempted to activate Remote Control when it was already activated.

Remote Control Inactive

You attempted to deactivate Remote Control when it was already deactivated.

No response.

(Checking the specifications)

No response.

Connection cannot be established because the site does not respond. Try to connect again.

Card error

(Checking the specifications)

Receiving message F is disabled overseas. Reset message F setting from Enquiry set.

Some actions may not be allowed without a valid UIM card
The UIM has not been inserted. Insert a UIM.

MessageF cannot be received overseas. Cancel the MessageF setting from Check New Message of the phone (568)

MessageF cannot be checked overseas. Take out "MessageF" from items under "Check New Message". →P184

No mail message found

No mail matches with the selected search keys.

Rewriting is complete. Retry Software Update Later

After the software download to update the software, the notification to the server failed. Try again later.

Software Update Failed

Failed to update the software. Or the battery level became low during the software update. Contact a DoCoMo shop.

Error in image. Does not work correctly.

The image does not function correctly due to shortage of space or error.(Checking the specifications)

Not enough space. Overwrite?

The maximum number of screen memos has been saved. Press $★$ [Yes] to overwrite.(Checking the specifications)

100 Screen Memo already registered. Overwrite?

The maximum number of screen memos has been saved. Press $★$ [Yes] to overwrite.

The Clock cannot be changed to analog when the Calendar Wallpaper is turned on

"Clock" setting cannot be changed when "Calendar" for "Wallpaper" is set to "On".

No Devices Found
Try again Later

Bluetooth device search failed. Try to operate again.

Unable to view file. Access to URL is limited. (491)

Cannot display because the available number of access has been exceeded.(Checking the specifications)

Reservation not available for the chosen time-slot

The software update cannot be reserved because the reservation time is full. Try to change the reservation to another date and time.

Call Waiting Denied

You attempted to activate the Call Waiting service without being a subscriber to the service.

Number Required

The country code cannot be saved because it has not been entered. Enter a country code. →P272

Clipboard Full

Not all text can be copied/cut because the maximum number of characters which can be copied or cut has been exceeded.

Clipboard Full: Cut Now?

Characters in the selected range cannot be cut because the maximum number of characters which can be cut has been exceeded. Press ⟨ch⟩ [Yes] to reduce the number of characters to be cut.

Clipboard Full: Copy Now?

Characters in the selected range cannot be copied because the maximum number of characters which can be copied has been exceeded. Press ⟨ch⟩ [Yes] to reduce the number of characters to be copied.

Maximum Exceeded Maximum categories allowed: 10

A new category cannot be saved because ten categories have been already saved. Delete unnecessary categories and try again. →P96

Your terminal ID and FOMA card ID is requested. Send?

This message is displayed when the information provider needs to identify you with the "Serial Number of Mobile Phone/UIM". The "Serial Number of Mobile Phone/UIM" is sent via the Internet and it may be seen by a third party. This operation does not send your mobile phone number, postal address, age, or sex to the information provider. Select "Yes" to send the serial number.

Send your terminal and UIM ID?

This message is displayed when the information provider needs to identify you with the "Serial Number of Mobile Phone/UIM". The "Serial Number of Mobile Phone/UIM" is sent via the Internet and it may be seen by a third party. This operation does not send your mobile phone number, postal address, age, or sex to the information provider. Select ⌨ [Send] to establish a connection.

Out of Service area

The Scanning Function cannot start because the handset is out of the service area. Move to a place with stronger signal reception and try again.
• Signals are not received. Try again at a location with stronger signal reception.

Network Not Available

Network search failed when "Type" of "Network Setup" is set to "Auto". Press ⌨ [Search] to try again.

Voicemail Inactive

You attempted to deactivate Voicemail when it was already deactivated.

Call Forwarding Already Active

You attempted to activate Call Forwarding when it was already activated.

Caller ID Request Already Active

You attempted to activate Caller ID Display Request when it was already activated.

Dual Network Active

You attempted to switch to the FOMA network when the Dual Network service was already switched to FOMA.

Voicemail Already Active

You attempted to activate Voicemail when it was already activated.

No recent entry found.

The electronic dictionary does not have a search log entry.

Exceeded limit. Delete oldest entry and Register last caller?

Thirty phone numbers have been already registered. Press ⌨ [Yes] to delete the oldest entry and register the latest phone number to reject.

No Subject
This event needs a Subject in order to be stored.

The Schedule event cannot be saved due to having no subject. Enter a subject.

Unable to Update Pattern Definitions.

The pattern definitions cannot be updated. Try again later.

Personal User Information Not Available

The personal user information cannot be displayed because a UIM has not been inserted or the wrong type of UIM has been inserted. Insert the correct UIM.

Invalid UIM
Unable to start Software installed with different UIM

An i-appli with UIM Restrictions cannot start because a different UIM is inserted from when the i-appli was installed. Insert the original UIM and try again.

Invalid UIM
Requested file cannot be played

The file with UIM Restrictions cannot be played because a different UIM is inserted from when the file was saved. Insert the original UIM and try again.

Invalid UIM, requested service not available.

Operation cannot be executed due to UIM Restrictions. Insert the original UIM and try again.

Already downloaded by different UIM. Overwrite?

The same i-appli downloaded with a different UIM is saved. Press "Yes" to overwrite.

This UIM cannot be recognized

Connection (communication) cannot be established to the site due to UIM Restrictions.(Checking the specifications)

This function cannot be set now.

"i-mode setting" cannot be configured during communication. After the communication ends, try to configure again.(Checking the specifications)

Certificate is rejected. (tampered)

The connection cannot be established because an altered SSL certificate is received.

This site is not certified. Do you connect?

• The SSL certificate has expired. Press $★$ [Yes] to connect.
• The certificate saved on the FOMA handset does not match with the one sent from the server.(Checking the specifications)
• Invalid SSL certificate is received. Press $★$ [Yes] to connect.

Use folder for this software?

(Checking the specifications)

The application will use terminal and UIM ID. Download?

This message is displayed when the information provider needs to identify you with the "Serial Number of Mobile Phone/UIM". The "Serial Number of Mobile Phone/UIM" is sent via the Internet and it may be seen by a third party. This operation does not send your mobile phone number, postal address, age, or sex to the information provider. Press $★$ [Download] to connect.

The application will use saved data, terminal ID, and UIM ID. Download?

This message is displayed when the information provider needs to identify you with the "Serial Number of Mobile Phone/UIM". The "Serial Number of Mobile Phone/UIM" is sent via the Internet and it may be seen by a third party. This operation does not send your mobile phone number, postal address, age, or sex to the information provider. Press $★$ [Download] to connect.

The application may use saved?

The downloaded application will use data saved on your phone(Contacts, Bookmarks, or Schedule events, etc.). Select "Download" to download.

This i-motion type is not supported

This i-motion movie is not supported by the FOMA handset and cannot be played. →P208

Unable to save due to this data being incompletely downloaded

The i-motion data is not completely obtained and cannot be saved.

Set time to download data.

The data cannot be obtained because the clock has not been set. Set the clock then obtain the data. →P50

This i-motion cannot be saved. View next page?

The i-motion movie cannot be saved because it has been played the available number of times for playback. Press $★$ [Yes] to use Web To. (Checking the specifications)

Busy. Try Again Later.

The Schedule cannot start because the FOMA handset is processing data at power up. Try again later.

Unable to register any more

No more mail addresses can be saved because the maximum number has already been saved.(Checking the specifications)

Unable to protect any more messages.

No more items can be protected because the maximum number has already been protected. Unprotect some items and try again. →P154, P160, P181, P182, P183

Service is not registered.

i-mode service is not available because you have not subscribed to i-mode. A separate subscription is required to use i-mode. If you subscribe to i-mode while using the FOMA handset, turn the power off then back on.

Unable to download data due to play restriction data error

The data cannot be obtained because of invalid i-motion movie playback restriction data.

Unable to download. Data exceeds maximum size.

Because the data exceeds the maximum size, it cannot be received.

Maximum already entered!

A new item such as a word cannot be saved because XX items have been already saved. Delete unnecessary words, etc. and try again.

URL address changed.

URL has been changed because the site moved. If you have saved the URL in a Bookmark, save it again. →P153

Connection failed.

A connection cannot be made to the site. Try to connect again.

Please Try Again

An incorrect Unlock Code has been entered. Enter the correct Unlock Code.

Cannot Delete Number set Auto-Inserted Intl Access Code

- The number cannot be deleted because it is an international access code that is set to be automatically added.
- The number cannot be deleted because it is a country code that is set to be automatically added.

Cannot Create Phone memory and UIM card are full.

The Contact cannot be saved because the memory space on the FOMA handset and UIM are full. Delete unnecessary Contacts and try again. →P101

Cannot start dictionary

The electronic dictionary cannot start due to an error. Try to operate again.

Page is not found.

The site does not exist, or the wrong URL may have been used. Verify the URL and try to connect again.

No content is available.

The connected site does not have data for display.

No Requested Software

This i-appli is not supported by the FOMA handset and cannot launch.

Requested software unavailable

An error occurred in the i-appli. It cannot start.

Unable to retrieve the requested URL.

Connection cannot be established because the server does not respond. Try to connect again.

No Requested File.

The selected file does not exist on the FOMA handset.

Turn Auto Update Off? Cannot complete action while Auto Update is On (Time & Time Zone)

"Time", "Time Zone" and "Date" cannot be changed because "Auto Update" is set to "Time & Time Zone". Press [Yes], set "Auto Update" to "Off" and try again.

Turn Auto Update Off? Cannot complete action while Auto Update is ON (Time Only)

"Time", "Time Zone" and "Date" cannot be changed because "Auto Update" is set to "Time Only". Press [Yes], set "Auto Update" to "Off" and try again.

Turn Auto Update Off? Cannot change city name and time zone while Auto Update is On

The World Clock cities cannot be changed because "Auto Update" of "Date and Time" is set to "Time & Time Zone" or "Time Only". Press [Yes], set "Auto Update" to "Off" and try again.

Please wait.

Outgoing restrictions. Try to connect to i-mode later.

End Before Start An event cannot end before it begins.

The Schedule event/task cannot be saved because the End Time is set earlier than the Start Time. Change the Start or End Time.

Inbox is full.

The maximum number of mail has been saved in the Inbox. No more mail can be received. Delete unnecessary mail.(Checking the specifications) → P178, P179

Types Full

Five phone number types have been already saved on the UIM Phonebook. No new entry can be saved. Delete unnecessary types then save.

Attached Signature is disabled.

The signature cannot be added because with the signature, the number of characters in the message will exceed the maximum allowed. Delete some of the message text.

UIM Disabled Only Emergency Calls are allowed. Contact your carrier.

The UIM is locked. Contact a DoCoMo shop.

!Recording a new track will erase existing audio in this movie. Record new track?

Performing "Record New Track" deletes the existing audio of the i-motion movie being edited. Press [Yes] to perform "Record New Track".

Scanning Function not Available

Failed to start Scanning Function. Try to operate again.

An event cannot end before it begins

The Schedule event cannot be saved because the End Time is set earlier than the Start Time. Change the Start or End Time.

Already set 5 files!

Five downloaded dictionaries have been already enabled. The selected downloaded dictionary cannot be enabled. Disable unnecessary downloaded dictionaries and try again. → P266

No Duplicate Alarm Time Allowed

An alarm has been already set for the same time. Change the time.

Failed to download all data

Because an error occurred while i-motion movie was obtained, the movie is incomplete.(Checking the specifications)

No data was entered.

(Checking the specifications)

All protected. Unable to delete.

All files cannot be deleted because they are protected. Unprotect files before deleting them. → P154, P160, P181, P182, P183

All protected mail messages or SMS in UIM selected. Unable to delete.

"Delete All Messages" cannot be performed because all mails in Inbox/Outbox are either SMS on the UIM or protected SMS.(Checking the specifications)

All SMS messages in UIM selected. Unable to delete.

"Delete All Messages" cannot be performed because all mails in Inbox/Outbox are SMS on the UIM.(Checking the specifications)

Invalid data Connection cannot be established.

An error occurred at the destination and the connection cannot be established successfully.

Infrared Aborted

The Infrared communication was canceled due to the low battery level of the FOMA handset. Charge the FOMA handset. → P45

Some folder has security setting. Make this folder to be under delete all?

Some folders have security settings. Press [Yes] to perform "Delete All Messages". (Checking the specifications)

Security is now set

The folder has security set. It cannot be renamed or deleted.(Checking the specifications)

Connection interrupted.

The connection was terminated because of a busy line or communication error. Try to connect again later.

Connection failed.

• The destination address specified in "Host Setting" is wrong. Verify the setting and try to connect again. →P158
• Connection cannot be established due to weak signal reception. Try again at a location with stronger signal reception.

Connection failed

Connection could not be established due to a network problem. Try to connect again later.

Unable to Connect
XXXXX*
*: A Bluetooth device name is displayed.

The connection cannot be established due to a time out. Try to operate again.

Unable to Connect
Service not Supported

The found Bluetooth device does not support the service and cannot connect.

Unlock Code Incorrect. Try Again

An incorrect Unlock Code has been entered. Enter the correct Unlock Code.

Time out.

Connection could not be established within the time set in "Connection Timeout". Change the setting or try to connect again. →P158

System Time Error
This data cannot be replayed

The copyright protected file with expiration date cannot be played because the network does not provide time or the time information cannot be enabled. Try again later.(Checking the specifications)

Time is too close to another Auto-start

Auto start time is set too close to another auto start time. Check the auto start time set to an i-appli and change the time if time is set too close.

Unable to Set Configuration

Cannot enable because the Scanning Function could not be enabled. Try to operate again.

Not Available
Enter the date between XXXXX* and XXXXX*
*:(Checking the specifications)

An invalid date was entered when saving/copying a Schedule event or task. Enter the date again.

Self Mode is On
Action Not Allowed

The operation cannot be performed when Self Mode is set. Cancel Self Mode and try again. →P124

Self Mode is On
Unable To Send Message.
Saved to Outbox

Mail cannot be sent when Self Mode is set. Cancel Self Mode and try to send the mail again. →P124

Please close all applications before starting Self Mode

Self Mode cannot be set because communication is in progress. Terminate the communication and try again.

Self mode is set

Voice calls or video calls cannot be used when Self Mode is set. Cancel Self Mode and try again. →P124

All contacts will be deleted
Continue?

Receiving all Data via Infrared deletes Contacts saved on the FOMA handset. Press ⌨ [Yes] to continue receiving all data via Infrared.

Service Unavailable

Network services are not available due to an error. Try to operate again.

Error

Network service cannot be activated because of a wrong service code or phone number.

Cannot perform operation

(Checking the specifications)

Address is not valid.

The mail was not sent normally. Verify the address and try to send again. →P172

Server is full.

The mail could not be sent because the destination is full.

Transmission failed.

The mail was not sent normally. XXX represents 3-digit number.

Outbox is full.

The maximum number of mail messages has been saved in the Outbox. No more mail can be saved. Delete unnecessary mail or cancel the protection. →P181, P183, P184

Software Updated

(Checking the specifications)

Exceeds maximum number of allowed suites.

(Checking the specifications)

Software size (<X>K) exceeds available space.
Delete some applications?

Not enough free space. Delete some applications. →P196

This software contains an error.
Unable to download.

(Checking the specifications)

Invalid name!

The entered title for the downloaded dictionary is invalid.

Download size exceeded limit

The data cannot be obtained because it exceeds the maximum size.

Download failed.

- An error occurred during the download of update software. Try again later.
- Download failed because another application is running or an error occurred.

Unable to download Please set the clock to obtain data

A file with an expiration date cannot be downloaded because Date and Time have not been set. Set Date and Time, then download again. → P50

Connection is limited right now. Please use after a while.

- Packet communication such as i-mode mail, i-mode connection is not available because the usage of the FOMA handset is restricted. Try again later.
- If you use Pake Hodai, connection may not be established for a certain period after vast communication within a certain time. Try to connect again later.

i-mode mail service is busy. Please try again

The line is very busy. Try again later.

Illegal Character

(●) is pressed without entering any characters on the word entry screen. The word cannot be registered to the user dictionary. Enter a word.

Security Code Incorrect(6). Try Again

An incorrect security code has been entered. Enter the correct security code. → P120

Security Code Incorrect(6). Try Again

An incorrect security code has been entered. Enter the correct security code.

Receiving Data of i-Channel is failed.

i-channel information could not be obtained. Try again at a location with stronger signal reception.(Checking the specifications)

Already connected. Unable to receive.

The i-mode service is not available during communication. Terminate the communication and try again.

Already connected. Unable to send.

Cannot send during communication. Terminate the communication and try again.

Connection Failed

The software cannot be updated because the server is not connected. Try again later.

Mails could not be sent to following address (561)

Mail could not be sent normally to the displayed addresses.

Data protected unable to delete

Found data in Warning level 3 or level 4 cannot be deleted.

Dual Network Service Denied

You attempted to activate the Dual Network service without subscribing to the service.

Reservation activation was not possible because power was off

The FOMA handset was not turned on at the reserved date and time. The software could not be updated. Press [Update] and enter the security code to update the software.

Call Forwarding Inactive

You attempted to deactivate Call Forwarding when it was already deactivated.

Call Forwarding Denied

You attempted to activate Call Forwarding without subscribing to the service.

Register the Forwarding Number

The forwarding number cannot be changed because of the different service code or phone number.

Cannot execute because of Low Battery

The Scanning Function cannot start because the battery level is low. Charge the battery pack fully and try again.

File size or number of files exceeds limit. Unable to attach.

Files cannot be attached because the available number of attachments or maximum file size is exceeded per i-mode mail. Check the available number of attachments or maximum file size.

Unable to save as template.

(Checking the specifications)

Device List Empty No stored Bluetooth devices

There is no Bluetooth device saved in the device list.

Registration is in progress.

The operation is not available because the user is being registered. Try again later.

Registration Failed!

Because the phone number is unknown, the incoming number cannot be registered to the reject list.

Not Saved Bluetooth device list full

A new device cannot be saved because the device list is full. Delete unnecessary devices from the list and try again. → P241

Not Saved Bluetooth device list full

A new device cannot be saved because the device list is full. Delete unnecessary devices from the list and try again. → P241

Volume Label Invalid.

The name for "Storage Devices" cannot be changed because an invalid character is used. Use alphanumeric characters and symbols(/ ¥ * < > : " ?).

Duplicate Name
A Category with this name already exists. Please enter a different name

The entered Category name has already been saved. Enter a different name.

Name Required

- The international call detail settings cannot be saved because a name has not been entered. Enter a name.
- The country code cannot be saved because a name has not been entered. Enter a name.

Entry data or URL is too long

There are too many characters entered for a URL and it cannot be connected. Enter a URL within 256 half-pitch characters.(Checking the specifications)

Input error

There is a problem with the data entered. Check the entry and try again.

Unrecognized or unsupported field(s) will not be displayed.

A file that cannot be recognized with the FOMA handset is included in the data to be received via Infrared.(Checking the specifications)

Authentication failed

An incorrect security code was entered when attempting to send all Contacts. Enter the correct security code.

Authentication type is not supported.

A connection cannot be established because of an unsupported authentication type.

Authentication failed

An incorrect session key has been entered. Enter the correct session key.(Checking the specifications)

Enter Correct Network Security Code

An incorrect network security code was entered. Enter correct network security code.

Network Clock Not Set
Time-protected content not available until network sets clock

A copyright protected file with an expiration time cannot be played because the network time is not available. Try again later.(Checking the specifications)

Networks Not Available

Network search or registration failed when "Type" of "Network Setup" is set to "Manual". Press 🔍 [Search] to try again.

Network List Full

- Network search failed when "Available Networks" was selected. Try to operate again.
- Registration of the found network to My Network List/ Available Networks failed. Try to operate again.

Could not start the barcode reader

An incorrect password has been entered. Enter the correct password.

Unable to Display Version Information

Pattern data version failed to be displayed. Try to operate again.

Incorrect passkey
Enter 16-digit passkey

The entered passkey cannot be validated. Enter the correct passkey.

Password is not correct.

An incorrect password has been entered. Enter the correct password.

Pattern data is broken. Update pattern data.

(Checking the specifications)

Failed to get pattern info.

(Checking the specifications)

Pattern Definitions are Up-to-Date

The pattern definition is the latest and does not require update.

Caller ID Request Inactive

You attempted to deactivate the Caller ID Display Request service when it was already deactivated.

Incapable of Updating as Data is not Set

The scanning function cannot start because date and time have not been set. Set the date and time and try again. →P50

File is too large to mail. Save anyway?

(Checking the specifications)

Invalid File.

The obtained file is corrupted and cannot be opened.

Destroyed Dictionary!

The downloaded dictionary has corrupt or invalid data and cannot be enabled/disabled. Delete the downloaded dictionary. →P262

Update package is corrupt: Software Update Not Performed

The software update was canceled because the file is corrupted. Try again later.

File restricted image deleted.

A file with copyright protection was deleted. An image cannot be integrated into a template.

Filename already exists!

You attempted to save a file with an existing file name. Rename the file to save.

Filename already exists!

You attempted to save a file with an existing file name. Rename the file to save.

Additional Number 2 Denied

You attempted to register an Additional Number 2 without subscribing to an Additional Number 2.

Cannot execute because of other tasks.

The Scanning Function cannot start because other functions are running. End the running functions and try again.

Protected screen memo is included in folder. Unable to delete folder

The folder cannot be deleted because it contains protected screen memos. Unprotect screen memos before deleting the folder. →P154

Protected. Unable to select.

Items cannot be deleted because they are protected. Unprotect before deleting them. →P154, P160, P181, P182, P183

Protected. Unable to delete

Protected messages and Screen Memos cannot be deleted. Unprotect before deleting them. →P154, P160, P181, P182, P183

Protected mail in folder. Unable to delete.

(Checking the specifications)

Protected mail included in folder. Unable to delete.

The folder cannot be deleted because protected mail is in the folder. Unprotect before deleting the folder. →P181, P183, P184

Savable period has already expired. Unable to download data.

Data cannot be downloaded because it has expired.(Checking the specifications)

Cannot Store:
An application is required for [i-appli] Auto Start

Schedule events cannot be saved because "Type" is set to "[Java] Auto Start" but an "Application" has not been specified. Specify an i-appli in "Application".

Unable to Save
Data cannot be saved.

The attachment cannot be saved because it has expired or the available number of times for playback has been exhausted.

Cannot Save:
A number or at least one type of address is required.

A Contact cannot be saved on the FOMA handset (phone) because there is no entry of a phone number, mail address, URL or postal address. Enter any of a phone number, mail address, URL or postal address.

Cannot Save:
A number or email address is required

A Contact cannot be saved on the UIM because there is no entry of a phone number or mail address. Enter either of a phone number or mail address.

Cannot Save:
The last piece of information stored for a contact cannot be deleted.

At least one phone number, mail address, URL or postal address is required to save a Contact so the selected item cannot be deleted.

Cannot Save:
Name Required

- The Category cannot be saved because a name has not been entered. Enter the name.
- The Contact cannot be saved because a name has not been entered. Enter a name.

Too many SMS messages in Phone.

The maximum number of SMS has been saved on the FOMA handset. Delete unnecessary SMS then move or copy. →P178, P179, P180, P181

No memory space in Phone or UIM.
To receive SMS messages, delete messages no longer required

No more mail can be received because of the shortage of memory space on the phone or UIM. Delete unnecessary messages. →P181, P181, P183, P184

Phone memory is full.

The Contact cannot be saved because the memory space on the FOMA handset is full. Delete unnecessary Contacts and try again. →P100

Message entry size exceeds limit. Delete message.

The maximum number of characters which can be entered in the message text has been exceeded. Delete some of the message text.

Stand-by error Clear from stand-by?

(Checking the specifications)

Security error Stand-by

(Checking the specifications)

In manner mode. Do you output voice?

Manner Mode is set for the FOMA handset. Press [] [Yes] to play a video or melody with audio.

Multi Number Denied

You attempted to activate Multi Number without subscribing to Multi Number.

Field(s) Not Supported Unrecognized or unsupported field(s) will not be displayed.

A part of data received via Bluetooth is not displayed because the data contains an unrecognized or unsupported part.

Not Found

- Adding a network from My Network List to Priority Network ID failed. Try to operate again.
- Network search failed when available networks for the priority network ID screen were searched. Try to operate again.
- The number entered is not a service dial option.

Message not entered. Unable to save

Mail without $★$(Address), $★$(Subject) or $★$(Message) entered, or attachment cannot be saved.

Disabled Invalid Email @ Required

"@" has not been entered in the mail address. Enter "@".

Disabled Invalid Email

An incorrect mail address has been entered. Verify the entry such as the domain.

Invalid data is contained

The data scanned with the barcode reader contains data not supported by the FOMA handset. It cannot be recognized.

Data not applicable.

The site cannot be displayed because downloaded data contains an error.

Invalid File This file cannot be sent to another device

The file cannot be sent via Bluetooth or copied to the memory card because the file is invalid.(Checking the specifications)

Nuisance Call Barring Service Denied

You attempted to activate Nuisance Call Barring without subscribing to the service.

Mail in active (Checking the specifications) Receive option set to ON. Unable to start.

Chat Mail is not available when "Download Selected Mail" is set to "On". Set "Download Selected Mail" to "Off". →P184

Number of mail folders is full. Unable to download.

(Checking the specifications)

All folders are full.

The maximum number of incoming mail and messages has been saved. No more mail can be received. Delete unnecessary mail or messages.(Checking the specifications) → P160, P161, P181, P183, P184, P186

Folder is full.

The maximum number of messages has been saved. No more messages can be received. Delete unnecessary messages.(Checking the specifications) →P181, P183, P184, P186

Memory Full: Contacts cannot be copied to UIM Card.

The Contact cannot be copied because the memory space on the UIM is full. Delete unnecessary Contacts and try again. →P101

Memory Full: Contacts cannot be copied to Phone.

The Contact cannot be copied because the memory space on the FOMA handset is full. Delete unnecessary Contacts and try again. →P101

Memory Full:

The Contact cannot be copied because the memory space on the UIM is full. Delete unnecessary Contacts and try again. →P101

Chat mail member cannot register fully.

Five members have been already saved as chat members. No more members can be registered. Delete some chat members to register others. →P187

Set member

Chat mail cannot be sent to a party not registered as a chat member. Register as a chat member.(Checking the specifications) →P187

Pasting To Editor Limit

Not all text can be pasted because the size limit will be exceeded.

Text entry size exceeds limit Delete message

No more characters can be entered into the message text because the size limit has been reached. Delete some of the message text.

You have no certificate Do you connect?

The user certification has not been downloaded. Press $★$ [Yes] to continue. However, at some sites, continuation may not be possible.

Your certificate has expired. Do you want to connect?

The user certificate required by the site has expired. Press $★$ [Yes] to continue. However, at some sites, continuation may not be possible. It is recommended that you download a new user certificate.

Your certificate is requested. Send your certificate? Ok/Cancel

The user certificate required by the site has expired.(Checking the specifications)

Insufficient memory. Delete existing file(s) to save new i-motion?

The edited i-motion movie cannot be saved due to a shortage of free space. Delete unnecessary files. →P209, P210

Could Not Scan. Try Again

Scanning could not complete because 30 seconds elapsed. Try again.

Illegal Character

⊙ is pressed without entering any characters on the reading entry screen. The word cannot be registered to the user dictionary. Enter a reading.

Reservation Not Available

The software update cannot be reserved because the reservation time is full. Try to change the reservation to another date and time.

The reminder must be set to a future date/time.

The Schedule event/task cannot be saved because the Reminder is set earlier than the current date and time. Change the Reminder time.(Checking the specifications)

Some editing operations are not available.

"Image Border", "Crop", "Add Graphic" and "Add Text" are not available for an image of "XX x XX" or smaller.(Checking the specifications)

Not Available

You pressed ☺/▦/• with empty Received Calls/Dialed Calls.

Not Available
This UIM cannot be recognized.

The proper UIM has not been inserted. Insert the proper UIM.

Unable to Open
This data can no longer be replayed. Delete?

The file cannot be displayed/played because the available number of times for playback has been exhausted. Press ⬚ [Yes] to delete the file.

Unable to Open
Replay period has expired. Delete?

The file cannot be displayed/played because the playback period has expired. Press ⬚ [Yes] to delete the file.

Unable to Open
Replay period has not yet started.

You attempted to play a file with before its playback start date. Play the file after the playback start date.

Unable to Open
Requested file cannot be played.

The file cannot be played because the file expired or the available number of times for playback has been exhausted.

Voicemail or Call Forwarding Denied

You attempted to enable Set Arrival Act without subscribing to the Voicemail or Call Forwarding service.

Voicemail Denied

- You attempted to activate Voicemail without subscribing to the service.
- You attempted to activate Forwarding Party Busy Setting without subscribing to the service.

Roaming Guidance Activated

You attempted to activate Roaming Guidance when it was already activated.

Roaming Guidance Deactivated

You attempted to deactivate Roaming Guidance when it was already deactivated.

International Roaming Service Denied

You attempted to activate the Roaming Guidance without subscribing to the service.(Checking the specifications)

Unable in Roaming Mode

The software cannot be updated during roaming. Try to update within the FOMA network.

Bluetooth Power Failed
Try Again Later

Bluetooth failed to start. Try to operate again.

Bluetooth Not Available
Bluetooth Failed: Power Cycle Phone and Try again

Bluetooth cannot start due to an error. Turn the FOMA handset off and on, then try again.

Bookmark has already registered. Overwrite?

Bookmark with the same URL has already been saved. Press $★$ [Yes] to overwrite.

100 bookmarks already registered. Overwrite?

The maximum number of Bookmarks has been saved. Press $★$ [Yes] to overwrite.

UIM Card is full.

The Contact cannot be saved because the memory space on the UIM is full. Delete unnecessary Contacts and try again. →P101

Invalid UIM, requested service not available.

Operation cannot be executed due to UIM Restrictions.(Checking the specifications)

Unable to start. Software installed with different UIM.

The i-appli cannot start due to UIM Restrictions. Insert the original UIM and try again.

UIM not inserted. Requested service not available.

The UIM has not been inserted. Insert the UIM and try again.

Too many SMS messages in UIM.

The maximum number of SMS has been saved on the UIM. Delete unnecessary SMS then move or copy. →P181, P183, P184, P186

315

Insert UIM

The UIM has not been inserted. Insert the UIM and try again.

i-appliDX may use saved data and terminal and UIM ID. Download?

This message is displayed when the information provider needs to identify you with the "Serial Number of Mobile Phone/UIM". The "Serial Number of Mobile Phone/UIM" is sent via the Internet and it may be seen by a third party. This operation does not send your mobile phone number, postal address, age, or sex to the information provider. Select "Download" to connect.

i-appliDX may use saved data. Download?

The downloaded application will use data saved on your phone (Contacts, Bookmarks, or Schedule events, etc.). Select "Download" to download.

Content length exceeds replay able size for i-motion.

The data cannot be obtained because it exceeds the maximum size.

Receiving data exceeds replay able size for i-motion

The data could not be obtained because it exceeded the maximum size.

Out of i-mode service area.

Signals are not received. Try again at a location with stronger signal reception.

Check New message all invalid.

No items for "Check New Message" are checked. Checkmark the items to check and try again. →P184

i-mode mail service is busy. Please try again later.

The line is very busy. Try again later.

PIM is locked. Unable to upgrade.

Pin Lock is set.(Checking the specifications)

Incorrect PIN
Please Try Again

An incorrect UIM PIN has been entered. Enter the correct UIM PIN.

PUK is blocked

If an incorrect PUK code has been entered ten times, the PUK code is locked. Contact a DoCoMo shop. → See the back of the manual

PUK is blocked, requested service not available.

If an incorrect PUK code has been entered eleven times, the PUK code is locked. Contact a DoCoMo shop.

Login Attempts Exceeded Your UIM has been blocked. Contact your carrier.

Because an incorrect UIM PIN or UIM PIN2 has been entered three times in a row, UIM PIN/UIM PIN2 has been locked. Press 🔲 [Unblock] and enter the PUK code.

SSL session cannot be established.

The connection cannot be established because a modified SSL certificate was received or an SSL error occurred.

SSL session failed.

The connection cannot be established because of a server authentication error.

Root certificate is not valid.

The SSL certificate of the server is disabled under "Certificate". Enable the certificate and try to connect again. →P161

Completed Data Earlier than Start Date

The task cannot be saved because the End Time and Date is set earlier than the Start Time and Date. Change the Start or End Time and Date.

No task list name
Task name required to save the task

The task cannot be saved because a title has not been entered. Enter a title.

Enter address for To

To ($★$) has not been entered. Enter the address then send.

URL is too long to register.

The URL has too many characters to save as a bookmark or screen memo. Enter the URL within 256 half-pitch characters.

Copy failed, due to too long URL.

The URL has too many characters to copy. Enter a URL within 256 half-pitch characters.

URL was too long, so it could not be saved.

The URL has too many characters to copy. Enter a URL within 256 half-pitch characters.

XXXXX*:Not Found
*: The number of the pressed dial key and "Not Found" is displayed.(Checking the specifications)

There is no entry in Received Calls/Dialed Calls that corresponds to the pressed dial key.

Warranty and After-sales Service

Warranty

- Be sure to receive a warranty attached to FOMA handset you purchase. Read contents of the warranty and confirm items such as the shop name and the date of purchase and keep it in a safe place. If necessary items are not described, immediately contact the shop you purchased. The warranty for free repair is valid for one year from the date of purchase.

- This product and its accessories are subject to change, in part or whole, for improvement without prior notice.

- Saved contents of phonebook and other functions may be altered or lost by failure, repair or other handling of FOMA handset. You are recommended to note down the contents of phonebook and other functions as a precaution. Using dedicated data link software (P302) and FOMA USB cable (optional), you can transfer and store contents of phonebook and other functions to PC (Windows XP or Windows 2000), if available. In repair, etc. of FOMA handset, information downloaded with i-mode or i-appli is not transferred to new FOMA handset, with some exceptions, because of the Copyright Law.

After-sales Service

Malfunctioning

Before requesting for repair, check by yourself referring to "Troubleshooting" in this manual. If the problem still persists, contact "Customer Assistance" at the back cover of this manual.

When Repair Is Assumed Necessary by Contacting

Take your FOMA handset to a service center designated by DoCoMo. Be sure to check the opening hours of the service center. Note that you must bring the warranty.

■ **In Warranty period**
- The FOMA handset will be repaired at no charge subject to the conditions of the warranty.
- The warranty must be presented when requesting for repair. Even in the warranty period, you will be charged for repair if the warranty is not presented or the trouble or damage is caused by your inappropriate handling.
- The subscriber is charged even during the warranty period for repair of failures caused by the use of devices or consumables items that are not DoCoMo-specified.

■ **Repair may not be possible in the following cases:**
- Repair may not be possible when there is reaction of moisture seal, corrosion due to moisture, dew condensation, sweat, etc. is detected by test or the internal board is damaged or deformed. In the above cases, you will be charged for repair, if possible.

■ **After expiration of the warranty**
- All repairs that are requested are charged.

■ **Replacement parts**
- Replacement parts (parts required to maintain production function) will be kept in stock for at least six years in principle after termination of production. However, repair may still not be possible due to a lack of replacement parts depending on the failure. Even after the parts holding period, some failures may be repairable. Contact "Customer Assistance" at the back cover of this manual.

Notes

- Do not modify FOMA handset or its accessories.
  - Fire, injury or damage may result.
  - In order to prevent interference of radio waves or network troubles, technical standards are defined for FOMA handset and UIM by law. FOMA handset or UIM that do not meet these technical standards may not be used.
  - If the FOMA handset modified (in a way such as parts replacement, remodeling or painting) will be repaired only after the handset has been restored to the original conditions (containing DoCoMo genuine parts only). Note that, depending on the details of modification, repair may be refused.
  - Repair of failure or damage caused by modification is charged even in the warranty period.

- Do not remove rating stickers put on FOMA handset. Rating stickers function to certify that the FOMA handset meets the technical standards. If the stickers are removed intentionally or replaced disabling to confirm their contents, repair may be refused because compliance to the technical standards cannot be confirmed.

- Various function settings and information including total call time may be cleared (reset) by failure, repair or other handling of FOMA handset. In such a case, you have to make function settings again.

- FOMA handset contains magnetic components given below. Keep cash cards and other objects vulnerable to magnetism off such components or they may become unusable.

  Magnetic components: Speaker and earpiece

- When FOMA handset has got wet or moistened, immediately turn the power OFF, remove the battery pack and bring FOMA handset to repair shop. Note that, depending on the conditions of FOMA handset, it may not be reparable.

Phonebook and Downloaded Data

- Note down and keep separately the data you registered in your FOMA handset. DoCoMo will not accept any liability whatsoever for changes of information or loss of information.

- The Data you created or imported or downloaded from external sources may be altered or lost as a result of changing the handset model or repairing the handset. DoCoMo is not responsible for data alteration or loss under these circumstances. Also, at DoCoMo's convenience, your handset may be replaced with a substitute product instead of repaired. In this case, only a part of the data on the product can be transferred to the substitute.

For this FOMA handset, images and melody downloaded from i-mode official site are transferred at repair. (Some contents may not be transferable. Moreover, depending on severity of the failure, transfer of contents may be disabled.)

Software Update

Updating Software

This function checks whether FOMA handset software requires update and, if required, updates the software by downloading a part of it using packet communication. When software update is necessary, you will be informed of it with DoCoMo web site and "お知らせ＆ヘルプ (News & Help)" of i Menu.

- You are not charged for packet communication for software update.

- There are 2 ways available for software update:

  Update Now : You update immediately when you want.

  Scheduled Update : When you set a schedule to update, software is automatically updated on the scheduled day.

- Software update is available even when you have changed connection destination from i-mode.
- Fully charge the battery pack before updating software.
- Software update is disabled in the following cases:
  - Power is OFF
  - Low battery level
  - Clock not set
  - During a call
  - Phone Lock
  - Connected to external device such as PC
  - UIM Locked
  - UIM not installed
  - Out of the service area
  - Other functions are active
  - Airplane Mode
  - Lock Application
  - UIM PIN being entered
- Software update (downloading and rewriting) may take a long time.
- When software update is carried out with PIN Code set to "ON", UIM PIN entry screen appears at automatic restarting after software rewriting. Unless correct UIM PIN is entered, communication functions including making and receiving calls are disabled.
- During software update, other functions are disabled. Though, you can receive voice calls during downloading.
- During software update, FOMA handset makes SSL communications with the server(software update server managed by DoCoMo).
  Validate SSL Certificate by "User Certificate Operation". →P161
- You are recommended to carry out software update without moving under conditions with strong wave signal and 5 antenna icons displayed.
  * If signal conditions go worse during software download or download is suspended, retry software update under good wave conditions.
- If you check software update after software update, message "No Update Required: You may continue using your current version." appears.
- After software update, an icon indicating the i-mode center storage status disappears. When mail is delivered during software update with "Receive Option" set to "ON", screen indicating that there is mail may not appear after software update. →P176
- During software update, information (handset model, serial No., etc.) specific to your mobile phone is automatically sent to the server (software update server managed by DoCoMo). DoCoMo does not use the sent information for other purposes than software update.

Note

- Never remove the battery pack during software update. Doing so may cause update to fail.
- Software update can be carried out with data such as phonebook, camera images, downloaded data maintained. Note that, however, such data may not be protected depending on the conditions of FOMA handset (failure, damage, wetting, etc.). You are recommended to back up important data. Note that some data including downloaded data cannot be backed up.
- When software update has failed, "Rewriting Failed (Checking the specifications)" appears, disabling any kind of operations. In that case, you have to bring FOMA handset to repair center specified by DoCoMo.

Checking If Software Update Is Required

1 ⊙ ▶ $★$ (Settings) ▶ "Software Update" ▶ Enter the security code

2 Check the notes ▶ ⌴ [OK]

| Screen to be inserted | ▶ | Screen to be inserted |

3 [ch] **[OK]** ▶ [ch] **[OK]**

Screen to be inserted	➡	Screen to be inserted	➡	Screen to be inserted

Screen to be inserted
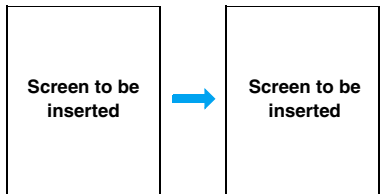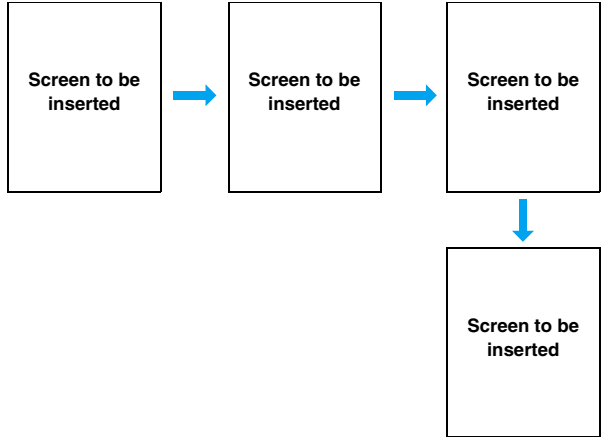
Result Confirmation Screen

■ **If update is required**
A message notifying that update is required will be displayed on the Confirmation Result screen. You can update immediately (P320) or by reserving the date and time to update (P321).

■ **If no update is required**
The following screen is displayed.

Screen to be inserted
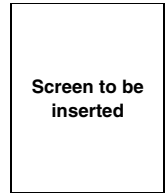
Update Now

Immediately Updating Software

1 **Confirmation Result screen (P320)** ▶ **"Update Now"** ▶ **When "Download will start." is displayed,** [ch] **[OK]**

Screen to be inserted	➡	Screen to be inserted	➡	Screen to be inserted
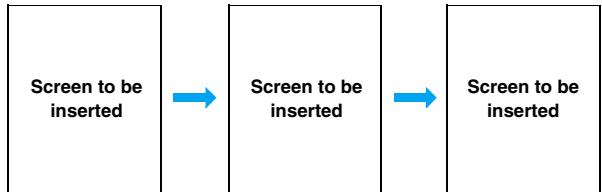
Download starts, and when the download is completed, the confirmation screen for software rewriting is displayed.

2 [ch] [OK]

| Screen to be inserted | → | Screen to be inserted | → | Screen to be inserted | → | Screen to be inserted |
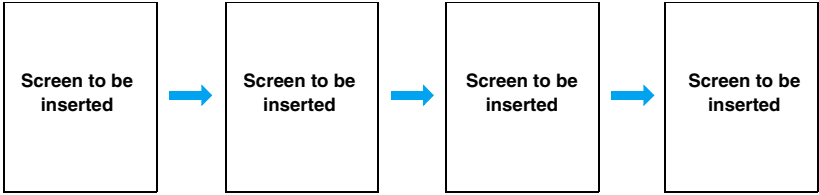
The rewriting status is displayed in "%" (Step 1/2), and when rewriting is completed, the rewriting completion screen (Step 2/2) is displayed. The FOMA handset is automatically restarted and connected to the server to carry out update completion checking. If the update is successfully completed, the update completion notification screen is displayed.

- It may take some time before rewriting is started.
- All the operations will be disabled during rewriting.

3 [ch] [OK]

Reserve

Updating Software on Scheduled Date

Updating the software by reserving the date and time
If it takes time to download or the server is congested, you can set to automatically update the software by reserving the date and time to update the software.

1 Confirmation Result display (P320) ▶ "Reserve"

Communicated with the server, and available dates and times for reservation will be displayed.

■ **If the desired date and time are not displayed**
You can specify a desired date, etc. to redisplay available dates and times for reservation on the server. →P322

| Screen to be inserted |
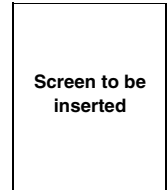
Date and Time Selection screen

2 Select the reserved date and time ▶ (●) ▶ [ch] [Yes]

| Screen to be inserted | → | Screen to be inserted |
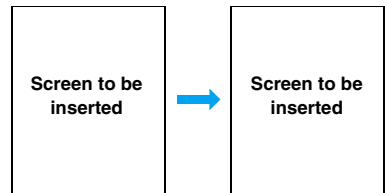
Note

- If the reserved date/time for software update comes while starting a schedule alarm, while receiving mail and a message, while using other functions or during international roaming, software update may not be started. (Checking the specifications)
- If "Master Clear" is complete, the software update does not start at the reserved date/time. (Checking the specifications)
- The server time is displayed on the desired date and time selection screen.

Checking If a Reservation Can Be Made by Specifying the Date and Time

You can redisplay the available dates and times on the server by specifying a date and a period of time you want to reserve.

1 **Desired date and time selection screen (P321) ▶ 🔲 [Others]**

The desired date selection screen is displayed.

- Availability for reservation is displayed as follows; (Checking the specifications)
  ○ : Available
  △ : Limited dates available

2 **Select a date by 🔘 ▶ 🔲 [Select]**

The time zone screen is displayed.

- 🔲 [Details]: You can check the meanings of the symbols. The symbols denote as follows;
  ○ : Available
  △ : Limited periods of time available
  × : Not available

3 **"am"/"pm"**

The desired date and time selection screen returns.

■ **When the reserved date/time comes**

The screen shown on the right is displayed, and software update automatically starts.
- Before the reserved date/time, fully charge the battery pack, move to a place where radio waves are strong and the icon of 5 antennas is displayed and keep the stand-by display displayed.

> **Screen to be inserted**

Checking the Reservation

If you start software update again after setting up a reservation, you can check the reservation. You can also cancel the reservation.

1 **● ▶ \$★\$ (Settings) ▶ "Software Update" ▶ Enter the Security Code**

The reserved date/time is displayed.

■ **To cancel the reservation**
Press 🔲 [Cancel], and then press 🔲 [Yes].

> **Screen to be inserted**
>
> **Reservation Confirmation screen**

1 Reservation Confirmation screen (P322) ▶ [ch] [Function] ▶ Perform the following operations

Confirm
The setting menu returns.

Change
Change the reservation date and time. Go to Step 3 in "Checking If Software Update is Required" (P320).

Scanning Function

Protecting Mobile Phone from Dangerous Data

First, update the pattern data to the latest one.

As for data and programs downloaded to FOMA handset from site or via i-mode mail, etc., you can detect and delete data or disable applications that may cause troubles.

• Pattern data is used for checking. Update pattern data, which is upgraded as needed when new problems are detected. →P324

• Scanning Function provides a means to protect FOMA handset from data that may invade when viewing web site or receiving mail, etc., causing troubles of FOMA handset. Note that this function cannot avoid occurrence of troubles unless pattern data specific to individual troubles has not been downloaded to FOMA handset or such pattern data does not exist.

• Pattern data has different contents depending on mobile phone models. Note that, therefore, DoCoMo may stop distributing pattern data for models that have been on the marker for 3 years or more.

Setting Scanning Function

Default	Enable

When Scanning Function is "Enable", data and programs to be executed are automatically checked. When data that may cause troubles is detected, it is alerted in 5 levels. →P324

1 (●) ▶ $★$ (Accessories) ▶ "Scanning Function"

Scanning Function
Update
Settings
Version

Scanning Function screen

2 "Settings" ▶ "Scan" ▶ "Enable"/"Disable"

Appendix/Using External Devices/Troubleshooting

XXXXX

323

Updating Pattern Data

1 **Scanning Function screen (P323) ▶ "Update" ▶ ⌐ch⌐ [Yes] ▶ ⌐ch⌐ [Yes]**

Updating starts. Upon completion of update, Scanning Function screen is redisplayed.

• When the pattern data is the latest one, a message to that effect appears.

• During pattern data update, information (handset model, serial No., etc.) specific to your mobile phone is automatically sent to the server (software update server managed by DoCoMo). DoCoMo does not use the sent information for other purposes than Scanning Function.
• Correctly set the clock of FOMA handset in advance.
• Pattern data update is disabled in the following cases:
  - Clock not set   - Low battery level
  - UIM not inserted   - Out of the service area
  - During a call   - Other functions are active
  - Self Mode   - Phone Lock
  - Lock Application   - Connected to external device such as PC

Scan Result Display

■ Display of problem elements scanned

Alert screen appears when problem elements are detected. Press ⌐ch⌐ [Next] to display up to 5 problem elements on a screen. When 6 or more problem elements have been detected, the sixth and subsequent elements are not displayed. (Checking the specifications)

Screen to be inserted

■ Scan result display

Alert level 0	Alert level 1	Alert level 2	Alert level 3	Alert level 4
【Screen】	【Screen】	【Screen】	【Screen】	【Screen】
⌐ch⌐ [OK]: Continue operation.	⌐ch⌐ [Yes]: Stop operation and return to stand-by display. ⌐ch⌐ [No]: Continue operation.	⌐ch⌐ [OK]: Stop operation and return to stand-by display.	⌐ch⌐ [Yes]: Delete data and return to stand-by display. ⌐ch⌐ [No]: Stop operation and return to stand-by display.	⌐ch⌐ [OK]: Delete data and return to stand-by display.

Confirming Pattern Data Version

1 **Scanning Function screen (P323) ▶ "Version"**

Pattern Definition
Version v1.1

Major Specifications

Model name		FOMA M702iG
Dimensions (H×W×D)		Approximately ●●●×●●×●●● mm
Weight		Approximately ●●●g (with battery pack installed)
Memory		ROM ●●MB (Flash memory) RAM ●●MB (SRAM)
Continuous standby time	FOMA/3G	Stationary: Approximately ●●● hours Moving: Approximately ●●● hours
	GSM	Approximately ●●● hours
Continuous call time	FOMA/3G	Voice Call: Approximately ●●● minutes Video Call: Approximately ●●● minutes
	GSM	900MHz: Approximately ●●● minutes 1800/1900MHz: Approximately ●●● minutes
Battery pack type		Lithium-ion battery
Battery capacity		●●● mAh
Charging time with FOMA AC adapter 01 (optional)		Approximately ●●● minutes
Charging time with FOMA AC adapter available both in Japan and overseas 01 (optional)		Approximately ●●● minutes
Charging time with FOMA DC adapter 01 (optional)		Approximately ●●● minutes
Number of camera pixels		Internal camera: Approximately 100,000 effective pixels (100,000 pixels) External camera: Approximately 1,920,000 effective pixels (1,920,000 pixels)
Digital zooming		External camera: Maximum of 8 times
Bluetooth	Applicable Bluetooth version	Compliance with Bluetooth standard Ver.●.●*1
	Output	Bluetooth standard Power Class2
	Line-of-sight distance*2	Approximately 10m or less
	Applicable Bluetooth Profiles*3	Generic Access Profile Generic Object Exchange Profile Object Push Profile Serial Port Profile Dial-Up Networking Profile Headset Profile Service Discovery Application Profile Hands-free Profile Basic Imaging Profile File Transfer Profile Advanced Audio Distribution Profile Audio/Video Remote Control Profile
	Frequency Band to use	2400MHz frequency band used (2400MHz to 2483.5MHz)

*1: All devices equipped with Bluetooth function including FOMA handset have been confirmed to comply with Bluetooth standard defined by Bluetooth SIG and thereby certified. Note that, depending on the characteristics and/or specifications of devices connected, operations may be different or data may not be exchanged even after connection has been established.

*2: This varies depending on obstacles, if any, between communicating devices and/or wave conditions.

*3: Specification conforming to usage of Bluetooth compatible devices and is a part of Bluetooth standard.

325

- The continuous call time is an estimate of time available for calls under conditions allowing normal radio wave transmission and reception.

- The continuous standby time is an estimate of time available for moving under conditions allowing normal radio wave reception. The continuous standby time may reduced by half depending on the battery level, function settings, operating conditions such as temperature and signal wave conditions (unreachable or weak signal wave) in the place of use. Performing i-mode communication will reduce the call (communication) and standby times. Even when you do not make calls or i-mode communication, creating i-mode mail, activating downloaded i-appli or i-appli standby display, performing data communication or multiaccess function, using camera or playing video and/or melody may cause the call (communication) and standby times to be shortened.

- The continuous standby time in stationary state is a mean time available to normally receive signal waves with FOMA handset folded in stationary state.

- The continuous standby time in moving state is a mean time available to normally receive signal waves with FOMA handset folded in combination of stationary, moving and out-of-the-service-area states.

- The charging time an estimate for charging an empty battery pack with FOMA handset turned OFF. Charging with FOMA handset turned ON will require longer time.

Specific Absorption Rate (SAR) of Mobile Phone

Mobile phone FOMA M702iG meets the technical regulation defined by the government for absorption of radio waved to human body. This technical regulation has been established based on scientific studies so that radio waves emitted from radio devices such as mobile phones used near a human head give no bad influence to the human health. It defines that Specific Absorption Rate (SAR), representing the average amount of energy of radio waves absorbed to a temporal part of human body, should not exceed a permissible value of 2W/kg*. This permissible value includes a substantial safety margin designed to assure the safety of users, regardless of the age, body size and other conditions of individuals and is equal to the international guideline recommended by International Commission of Non-Ionizing Radiation Protection (ICNIRP) which has cooperative relationships with World Health Organization (WHO).

All mobile phones should be confirmed to comply with the governmental regulation according to Radio Law before they are released. The SAR value of FOMA M702iG is ●.●●● W/kg. This value has been acquired by Telecom Engineering Center (TELEC) and is the maximum value of those measured under the maximum transmission power of the mobile phone in the procedure defined by the government. Though there may be some differences in SAR value among individual products, they all meet the technical regulation. In addition, mobile phones are designed to have the lowest transmission power required for communication with base stations; therefore, the SAR value during actual phone operation becomes smaller. SAR value of this mobile phone meets the regulations of individual countries it is available.

For further information about SAR, see the following web sites:

Ministry of Internal Affairs and Communications http://www.tele.soumu.go.jp/j/ele/index.htm
Association of Radio Industries Businesses http://www.arib-emf.org/index.html
DoCoMo http://www.nttdocomo.co.jp/product/
Motorola, Inc. http://www.motorola.com/rfhealth

*: The technical regulation is defined in Article 1-2 of the Ministry Ordinance Regulating Radio Equipment.

Radio Frequency (RF) Signals

THIS MODEL PHONE MEETS THE U.S. GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.
Your wireless phone contains a radio transmitter and receiver. Your phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic

and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure. The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 0.47●.●W/kg, and when worn on the body, is 0.61●.●●W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section at http://www.fcc.gov/oet/fccid after search on FCC ID IHDT56GX1●●●●●●●●.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

| ∗ | In the United States, the SAR limit for wireless mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band. |

Declaration of Conformity

The product "FOMA M702iG" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a),3.1(b) and 3.2. The Declaration of Conformity can be found on www.motorola.com

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR* limits** for exposure to radio-frequency (RF) energy, which SAR* value, when tested for compliance against the standard was ●.●●W/kg. While there may be differences between the SAR* levels of various phones and at various positions, they all meet*** the EU requirements for RF exposure.

∗	The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.
∗∗	The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
∗∗∗	Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

Important Safety Information

AIRCRAFT
Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers a 'flight mode' or similar feature consult airline staff as to whether it can be used on board.

DRIVING
Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

HOSPITALS
Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

PETROL STATIONS
Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

INTERFERENCE
Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers
Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids
Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

For other Medical Devices:
Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Export Administration of This Product and Its Accessories

This product and its accessories are under coverage of the export administration regulations of Japan ("Foreign Exchange and Foreign Trade Control Laws" and the related laws and regulations) and the U.S.A. (Export Administration Regulations). When exporting or reexporting this product and its accessories, take necessary procedures on your responsibility and expense. For details, contact Ministry of Economy, Trade and Industry or U.S. Department of Commerce.

Index/Quick Manual

Index

Index will be created by the 2nd draft.

Using the Quick Manual

Detach the Quick Manual from this manual.

- You can find a quick manual for "Overseas Use" that is convenient for overseas trips after the regular quick manual.

- If using scissors, be careful not to hurt yourself.

1 Detach the Quick Manual by cutting along the cutoff line
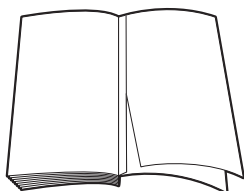
2 Fold lengthwise

3 Fold crosswise twice

FOMA® M702iG

Quick Manual

If you have any questions regarding the Operation Manual, contact the following:

DoCoMo Information Center

From a DoCoMo handset or PHS:
151 (no area code) (toll free)
* The above number is not available from a fixed line phone.

From a fixed line phone:
0120-005-250 (toll free) (in English)
* The above number is also available from a DoCoMo handset or PHS.

If you encounter a problem with the handset, contact the following:

Customer Assistance

From a DoCoMo handset or PHS:
113 (no area code) (toll free)
* The above number is not available from a fixed line phone.

From a fixed line phone:
0120-800-000
* The above number is also available from a DoCoMo handset or PHS.

- Verify the number before making a call.

Saving Contacts on the UIM

電話帳登録

名前：
数字：
メールアドレス：
保存先：「UIM」「FOMA」「UIM」
グループ：General

To be replaced
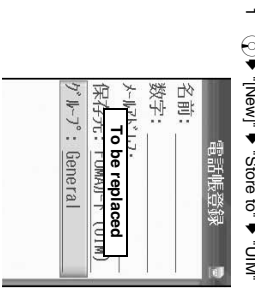
1 🔽 ▶ "[New]" ▶ "Store to" ▶ "UIM"

2 "Name" ▶ Enter a name

3 " フリガナ " (Reading)" ▶ Enter a reading

4 "Primary Number" ▶ Enter a phone number ▶ [OK] (Checking the specifications)

5 "Name" ▶ Enter a name

6 "Number" ▶ Enter a phone number ▶ [OK]

7 "Type" ▶ Select a type ▶ [Select] (Checking the specifications)

8 "Email" ▶ Enter the mail address

9 "Category" ▶ Select a category ▶ [Select]

10 "Secret" ▶ "Yes"/"No"

11 [Complete]

Saving Contacts from Dialed Calls/Received Calls

1 ⚫ ▶ \$ ★ \$ (Accessories) ▶ "Recent Calls" ▶ "Received Calls"/"Dialed Calls" ▶ Select Dialed Calls/Received Calls ▶ [Function] ▶ "Save"

2 Select a saving method

- "Create New Contact": Go to Step 5

Saving Contacts

Saving Contacts on the FOMA handset (Phone)

1 🔽 ▶ "[New]" ▶ "Store to" ▶ "Phone"

電話帳登録

名前：
ニックネーム：
数字：
デコピ電話対応： しない
メール アドレス：
タイプ： 携帯電話

To be replaced
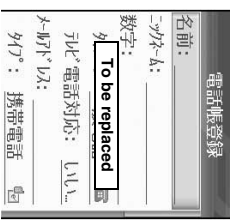
2 "Name" ▶ Enter a name

3 " フリガナ " (Reading)" ▶ Enter a reading

4 "Nickname" ▶ Enter a nickname

5 "Number" ▶ Enter a phone number ▶ [OK] ▶ "Type" ▶ Select a type ▶ [Select] ▶ "Yes"/"No"

6 "Email" ▶ Enter the email address ▶ "Type" ▶ Select a type ▶ [Select]

7 "URL" ▶ Enter the URL

8 "Postal Address" ▶ Enter "Zip Code"/ "State"/"City"/"Street 1"/"Street 2"/ "Country" ▶ "Type" ▶ Select a type ▶ [Select]

9 "Category" ▶ Select a category ▶ [Select]

10 "Picture ID" ▶ "Take Picture"/"Select Picture" ▶ Capture/select an image

11 "Ringer ID" ▶ Select a ringtone/melody

12 "Chara-den" ▶ Select Chara-den

13 "Birthday" ▶ Use 🔽 to enter the date ▶ [OK]

14 "Secret" ▶ "Yes"/"No"

15 "Reject" ▶ "Yes"/"No"

16 "Notes" ▶ Enter a note

17 [Complete]

Editing Contacts

🔽 Select Phonebook ▶ [Function] ▶ Save/Edit Contact ▶ 🔽 [Complete]
"Edit Contact" ▶ Save/Edit Contact ▶ 🔽 [Complete]

- "Add to Contact"/"Replace Number", Go to Step 3

3 Select a Contact to save ▶ ⚫

- "Add to Contact"

4 Select a phone number to overwrite ▶ [Select]

5 Save/Edit the Contact ▶ 🔽 [Complete]

- Go to Step 5 if you select "Add to Contact"

Entering Characters

Main Operations on the Character Entry Screen

大：

A About All Also
An And Any Are As
A^ 漢 予

Entry Mode
Full-/Half-pitch
Entry Mode
Number of Characters/
Bytes that can be Entered
Cursor

Conversion
Options

■ **Switching Entry Modes**
🔽 [Function] ▶ "Entry Mode" ▶ Select an entry mode ▶ 🔽 [Select]

■ **Switching Full-/Half-pitch Entry Mode**
🔽 (for 1+ seconds)

■ **Switching Upper-/Lower-case Entry Mode**
Enter a character ▶ 🔽

■ **Operations on the i-motion Playback Screen**
- ●:Pause/Play
- ◎:Fast Forward/Rewind

Playing Melodys

1 ●▶ $ ★ $ (Databox) ▶ "Melody"
2 Select a folder ▶●▶ Select a file ▶●

■ **Operations on the Melody Playback Screen**
- ●:Pause/Play
- ◎:Play the previous/next file
- ⊡/⊡:Adjust the volume

■ **Entering Message Text**
Select $ ★ $ (Message) ▶●▶ Enter the message text ▶●

■ **Sending i-mode Mail**
⊡ [Send]

Attaching Files

■ **Attaching an Image**
On the Compose message screen (PXX), select $ ★ $ (Attachment) field ▶●▶ "Attach image" ▶ Select a folder ▶●▶ Select an image ▶●

■ **Attaching an i-motion Movie**
On the Compose message screen (PXX), select $ ★ $ (Attachment) field ▶●▶ "Attach i-motion" ▶ Select a folder ▶●▶ Select a video ▶●

■ **Attaching a Melody**
On the Compose message screen (PXX), select $ ★ $ (Attachment) field ▶●▶ "Attach melody" ▶ Select a folder ▶●▶ Select a melody ▶●

Playing an Image/Video/Melody

Displaying Images

1 ●▶ $ ★ $ (Databox) ▶ "My Pictures"
2 Select a folder ▶●▶ Select a file ▶●

■ **Operations on the Image Display Screen**
- ◎:Display the previous/next file
- ⊡/⊡:View Full-screen
- ⊡:Display a slide show of files in the folder

■ **Operations on the Flash Image Display Screen**
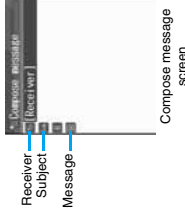- ◎:Display the previous/next file
- ⊡:Adjust the volume

Playing Videos

1 ●▶ $ ★ $ (Databox) ▶ "i-motion"
2 Select a folder ▶●▶ Select a file ▶●

i-mode Mail

Creating/Sending i-mode Mail

■ **Opening the Compose message Screen**
⊡ "Compose message"

Receiver
Subject
Message

Compose message screen

■ **Entering Receiver**
Select $ ★ $ (To) ▶●▶ Enter the receiver ▶●

■ **Entering Subject**
Select $ ★ $ (Subject) ▶●▶ Enter the subject ▶●

---

2 Press ⊙ to move the cursor to conversion options ▶ Use ⊕ to select "ドコモ (DoCoMo)" ▶ ⊡ [Confirm]

Using the Camera

Capturing Still Images

1 ●▶ $ ★ $ (Accessories) ▶ "Camera"
2 Frame the shot then ●/⊡
3 ●/⊡

Capturing Videos

1 ●▶ $ ★ $ (Databox) ▶ "i-motion"
2 Frame the shot then ●/⊡
3 ●/⊡

■ **Setting/Canceling Handsfree Call**
Use ⊙ to select $ ★ $ (Speaker) ▶ ⊡ [Speaker On]/ [Speaker Off]

■ **Switching between Camera Image/Alternate Image**
Use ⊙ to select $ ★ $ (Image) ▶ ⊡ [Alternate Image]/ [Camera Image]

■ **Switching between In/Out View**
Use ⊙ to select $ ★ $ (Camera) ▶ ⊡ [In View]/ [Out View]

■ **Entering Voiced/Semivoiced Sound Symbol**
Enter a character ▶ ⊡

■ **Entering Punctuation**
⊡ (Press more than once)

■ **Entering Line Feed**
⊡

■ **Entering Full-/Half-pitch Space**
⊡ (for 1+ seconds)

■ **Entering E-moji/Emoticon/Symbol**
⊡ (Press more than once) ▶ Select Pictograph/Emoticon/Symbol ▶ ⊡ [Confirm]

Example of Character Entry

■ **Entering "ドコモ (DoCoMo)"**

1 Enter "どこも (DoCoMo)"

"ど (Do)": Press ⊡ five times ▶ ⊡ once
"こ (Co)": Press ⊡ five times
"も (Mo)": Press ⊡ once

Making/Receiving a Video Call

Making Video Calls

1 Enter a phone number ▶ ⊡▶ Start talking when the other party answers
2 ⊡ to terminate the call

Receiving Video Calls

1 A video call arrives
2 Answer a video call
- ⊡▶ ⊚:Send camera image
- ⊡ [Alternate Image]:Send alternate image/Chara-den
3 ⊡ to terminate the call

Main Operations during Video Calls

■ **Placing a Call on Hold/Canceling Hold**
Use ⊙ to select $ ★ $ (Hold) ▶ ⊡ [Hold/ Resume]

■ Capturing and Attaching a Still Image/Video

On the Compose message screen (PXX), select $★$ (Attachment) field ▶ ◉ ▶ "Snap photo"/"Shoot movie" ▶ "Capture a still image/video ▶ "Apply"

Receiving i-mode Mails

1 i-mode mail arrives ▶ "Mail" ▶ Select an i-mode mail ▶ ◉

Checking new messages

1 🖂 ▶ "Check new message"

Other Mail Functions

■ Replying to Mail

Select or display the mail to be replied to ▶ [Function] ▶ "Reply"/"Reply with quotation" ▶ Enter message text ▶ ◉ ▶ 🖂 [Send]

Icon	Function Name
$★$ Connection	Infrared Link
	Bluetooth Link
	USB Mode Setting
$★$ Network Services	Voicemail
	Call Waiting
	Call Forwarding
	Nuisance Call Barring
	Caller ID Notification
	Caller ID Display Request
	Incoming Call Setting
	In-call Arrival Act
	Additional Message
	Additional Service
	Remote Control
	Guidance Language
	Dual Network
	Multi Number
	Call Barring - Roaming
	Roaming Guidance
	Service Dial
	Sound Profiles
$★$ Settings	Style
	Detail
	Ring Lights
	Event Lights

■ Forwarding Mail

Select or display the mail to be forwarded ▶ [Function] ▶ "Forward" ▶ Enter the address ▶ ◉ ▶ 🖂 [Send]

Icon	Function Name
$★$ Personalize	Home Screen
	Main Menu
	Skin
	Greeting
	Wallpaper
	Screen Saver
	Manner Mode
$★$ General Settings	Time and Date
	Speed Dial
	Auto Redial
	Display Timeout
	Backlight
	Scroll
	Text Marquee
	Language
	Text Entry
	Power Setting
	Brightness
	DTMF
	Master Reset
	Master Clear
	Software Update

Menu List

Icon	Function Name
$★$ i-mode	iMenu
	Bookmark
	Go to location
	Screen Memo
	Last URL
	Message R
	Message F
	Check new message
	i-mode setting
	SWAP
$★$ i-appli	SWAP
$★$ Mail	Inbox
	Message Outbox
	Unsentbox
	Compose message
	Compose SMS message
	Chat Mail
	Deco-mail template
	SWAP
	Check new message
	Check SMS
	Receive option

Icon	Function Name
$★$ Security	Phone Lock
	Sidekey Lock
	Sidekey Shortcut
	Lock Application
	Lock Application Setup
	Secret Data
	Dialing Restriction
	UIM PIN
	New Passwords
In-Call Setup	Date and Time
	In-Call Timer
	Call Cost Setup
	Video Call Settings
	Answer Options
	Call Hold
	Call Rejection
	International Dial Settings
	Sub Address
	Ring Delay
Network	New Network
	Network Setup
	Available Networks
	My Network List

Icon	Function Name
$★$ Mail	Mail setting
$★$ Phonebook	
$★$ Datebox	My Pictures
	i-motion
	Melody
	Chara-den
	Animations
	Voice Notes
$★$ Accessories	Record Message
	Datebook
	Alarm Clock
	Calculator
	World Clock
	Barcode Reader
	Electronic Dictionary
	Scanning Function
	Recent Calls
	Received Calls
	Dialed Calls
	Call Times
	Call Cost
Camera	

Icon	Function Name
$★$ Settings	Network
	Service Tone
	Headset
	Auto Answer
	Ringer Options
	Self Mode
	i-appli Settings
	Phone Status
	My Personal Info
	Battery Meter
	User Accounts
	Storage Devices
	Other Information

Manner Mode

🔅#︎ (for 1+ seconds) on the Standby screen

Drive Mode

★ (for 1+ seconds) on the Standby screen

Network Services

Voicemail

Playing Messages

⊙▶ $★$ (Network Services) ▶ "Voicemail" ▶
"Play Messages" ▶ [ch] [Yes] ▶ Follow the
instructions of the voice prompt

Activating Voicemail

⊙▶ $★$ (Network Services) ▶ "Voicemail" ▶
"Activate" ▶ [ch] [Yes] ▶ [Yes] ▶ Use ◇
to enter Ringing Time ▶ [ch] [OK]

Deactivating Voicemail

⊙▶ $★$ (Network Services) ▶ "Voicemail" ▶
"Deactivate" ▶ [ch] [Yes]

24

$★$	i-mode communication in progress
⑤ $★$	Connected to a FOMA network
$★$	During a Voice Call
$★$	During a Video Call
$★$	Schedule event or task for the day exists
$★$	There is a set alarm
$★$	Dialing restrictions are set
$★$	Lock Application is set
⑥ $★$	Secret Data is set to Hide
$★$	There is a message
$★$(Blue)	Answering Machine is activated
$★$(Blue)	There is a new message
⑦ $★$(Yellow)	There is an unread i-mode mail
$★$(Yellow)	There is an i-mode mail at the i-mode center
$★$(Yellow)	There is an unread SMS
$★$(Yellow)	There is an unread Message R

28

Call Waiting

Activating Call Waiting

⊙▶ $★$ (Network Services) ▶ "Call Waiting"
▶ "Activate" ▶ [ch] [Yes]

Deactivating Call Waiting

⊙▶ $★$ (Network Services) ▶ "Call Waiting"
▶ "Deactivate" ▶ [ch] [Yes]

Call Forwarding

Activating Call Forwarding

⊙▶ $★$ (Network Services) ▶ "Call
Forwarding" ▶ "Activate" ▶ "Phone Number" ▶
Enter the forwarding number ▶ [i-mode] [OK] ▶
"Ringing Time" ▶ Use ◇ to enter the ringing
time ▶ [ch] [OK] ▶ [Start] ▶ [ch] [Yes]

25

|	
$★$(Yellow)	There is a Message R at the i-mode center
$★$(Yellow)	There is an unread Message F
$★$(Yellow)	There is a Message F at the i-mode center
⑧ $★$	An i-appli is running
⑨ $★$	Manner Mode is set
$★$	Silent is set
$★$	Vibrate is set
⑩ $★$	Battery level

29

Deactivating Call Forwarding

⊙▶ $★$ (Network Services) ▶ "Call
Forwarding" ▶ "Deactivate" ▶ [ch] [Yes]

Services Available from the FOMA Handset

Service	Phone Number
Collect Call	(No prefix) 106
Directory assistance for fixed line phones and DoCoMo handsets(charges apply) (Unlisted phone numbers cannot be given.)	(No prefix) 104
Telegraph(charges apply) 8:00 am to 10:00 pm	(No prefix) 115
Time(charges apply)	(No prefix) 117
Weather report(charges apply)	Area code + 177
Police emergencies	(No prefix) 110
Fire and ambulance emergencies	(No prefix) 119
Marine emergencies	(No prefix) 118
Message Dial in a disaster(charges apply)	(No prefix) 171

26

If you have any questions regarding the Operation
Manual, contact the following:

DoCoMo Information Center

From a DoCoMo handset or
PHS: **151** (no area code) (toll free)
* The above number is not available
from a fixed line phone.

From a fixed line phone:
0120-005-250
(toll free) (in English)
* The above number is also
available from a DoCoMo
handset or PHS.

If you encounter a problem with the handset, contact the
following:

Customer Assistance

From a DoCoMo handset or
PHS:**113** (no area code) (toll free)
* The above number is not available
from a fixed line phone.

From a fixed line phone:
0120-800-000
* The above number is
also available from a
DoCoMo handset or
PHS.

• Verify the number before making a call.

30

Main Icons

① $★$	Signal strength level
$★$	Out of the service area or where no signals are received
$★$	Self Mode is set
② $★$	Packet communication in progress
$★$	Drive Mode is set
③ $★$	Infrared communication in progress
$★$	Bluetooth communication in progress
④ $★$	During i-mode

27

31

Cutoff line

DoCoMo Information Center (For loss or theft of the handset or charges while overseas) (24 hours)

● Universal Number

International Phone Code for a Universal Number (Table 1)
-800-0120-0151
* Domestic phone call charges for the country of usage may apply.

● If the universal number on the left is not available:

Major Access Code for the Country of Usage (Table 2)
-81-3-5366-3114*
* International phone call charges to Japan apply.

* From the M702iG handset, dial + 81-3-5366-3144 (to enter "+", press [0] for 1+ seconds).
* For the International Phone Code for a Universal Number (Table 1)/ International Access Code for Major Countries (Table 2), see Page 12 and 13 of the Quick Manual.

Communication System and Available Services

Service	3G	GSM	GPRS
Voice Call	$★$	$★$	$★$
Video Call	○	×*	×*
i-mode	○	×	×
i-mode Mail	○	×	×
SMS	○	○	○
Data Communications	①		②

○ : Available
× : Not available
① : Separate settings are required for data communications using dial-up connection.
② : Available only for data communication using packets.
* : No arrival call acts are performed for incoming calls. When a number is dialed, a confirmation to reconnect is displayed. Selecting "Reconnect as Voice Call" makes a voice call.(Checking the specifications)

Handset Failure while Overseas (Network Technical Operation Center) (Open 24 hours)

● Universal Number

International Phone Code for a Universal Number(Table 1)
-800-5931-8600
* Codes in Table 1 or Table 2 are subject to change.

● If the universal number on the left is not available:

International Access Codes of Major Countries(Table 2)
-81-3-6718-1414
* Domestic phone call charges for the country of usage may apply.
* International phone call charges to Japan apply.

* From the M702iG handset, dial A(81-3-6718-1414(to enter "+", press [0] for 1+ seconds).
* For International Phone Code for a Universal Number(Table 1) and International Access Codes of Major Countries(Table 2), see PXX and PXX in Quick Manual "Overseas Use" respectively.

Making a Call

Making a Call to Japan or Countries Other than the Country of Usage

1 [0*] (1+ seconds) ▶ Enter "Country Code - City Code - Phone Number"
• Exclude the leading "0" (zero) from the city code or from a phone number of Japanese mobile phone of PHS (in some countries or regions such as Italy, the leading "0" may be required).
• Country Codes → PXX

2 Call
• :Make a voice call
• :Make a video

3 to terminate the call

Icons

You can verify the network communication system currently connected using the icon.

Icon	Description
$★$	Connected to a 3G network
$★$	Connected to a GSM network
$★$	Connected to a GPRS network

Making a Call within the Country of Usage

1 Enter the phone number in the same way as in Japan

2 Call
• :Make a voice call
• :Make a video call

3 to terminate the call

Switching Networks

The handset is set to automatically find and switch to an available network in the country of stay as a default.

Setting the Network Manually

1 ● ▶ $★$ $ (Settings) ▶ "Network" ▶ "Network Setup"

2 "Band" ▶ "3G"/"GSM 900/1800"/"GSM 1900"

3 "Type" ▶ "Manual"

4 [Complete]

Receiving Calls

1 A call arrives

2 Answer the call
• [Answer];Answer a voice call
• :Answer a video call with Camera image)
• : [Alternate Image];Answer a video call (with the alternate image or Chara-den)

3 to terminate the call

Setting Preferred Networks

1 ⊙▶ $★$ (Settings) ▶ "Network" ▶ "My Network List"

Networks with higher priority appear at the top of the list.

2 "[Add Network]" ▶ Enter the network code ▶ [i▫] [OK]

Network Services

Remote Control

• Setting must be done while in Japan.

⊙▶ $★$ (Network Services) ▶ "Remote Control" ▶ "Activate"/"Deactivate"

Roaming Guidance

• Setting must be done while in Japan.

⊙▶ $★$ (Network Services) ▶ "Roaming Guidance" ▶ "Activate"/"Deactivate"

Call Barring - Roaming

• Setting must be done while in Japan.

⊙▶ $★$ (Network Services) ▶ "Call Barring - Roaming" ▶ "Activate - All Calls"/"Activate - Data Only"/"Deactivate" ▶ [ch] [Yes] ▶ Enter the network security code

Voicemail (Overseas)

⊙▶ $★$ (Network Services) ▶ "Voicemail" ▶ "Voicemail International" ▶ "Play Messages"/ "Activate"/"Deactivate" ▶ Follow the instructions of the voice prompt

Call Forwarding (Overseas)

⊙▶ $★$ (Network Services) ▶ "Call Forwarding" ▶ "Call Forwarding International" ▶ "Activate"/"Deactivate" ▶ Follow the instructions of the voice prompt

Roaming Guidance (Overseas)

⊙▶ $★$ (Network Services) ▶ "Roaming Guidance" ▶ "Roaming Guidance International" ▶ Follow the instructions of the voice prompt

After Coming Back to Japan

After coming back to Japan, the FOMA network will be connected automatically and $★$ $ will appear.

• If the FOMA network is not connected, verify that "Band" is set to "Automatic" and "Type" is set to "Automatic" in "Network Setup".

Contact Information

For loss or theft of the handset, settlement of charges, or handset failure while overseas, contact the DoCoMo Information Center on the front page of "Overseas Use" or the Network Technical Operation Center on Page 1.

• The contact numbers must be prefixed with the code assigned to the country of stay as shown in the "International Phone Code for a Universal Numbers (Table 1)" or "International Access Codes of Major Countries (Table 2)".

Country Codes of Major Countries

Area	Number	Area	Number
U.S.A.	1	Germany	49
U.K.	44	Turkey	90
Italy	39	Japan	81
India	91	New Caledonia	687
Indonesia	62	New Zealand	64
Egypt	20	Norway	47
Australia	61	Hungary	36
Austria	43	Fiji	679
Netherlands	31	Philippines	63
Canada	1	Finland	358
South Korea	82	France	33
Greece	30	Brazil	55
Singapore	65	Vietnam	84
Switzerland	41	Peru	51
Sweden	46	Belgium	32
Spain	34	Hong Kong	852
Thailand	66	Macao	853
Taiwan	886	Malaysia	60
Tahiti	689	Maldives	960
Czech	420	Russia	7
China	86		

International Phone Codes for Universal Numbers (Table 1)

Area	Number	Area	Number
Ireland	00	Thailand	001
U.S.A.	011	Taiwan	00
Argentina	00	China	00
U.K.	00	Denmark	00
Israel	014	Germany	00
Italy	00	New Zealand	00
Australia	0011	Norway	00
Austria	00	Philippines	00
Netherlands	00	Finland	990
Canada	011	France	00
South Korea	001	Brazil	0021
Colombia	009	Belgium	00
Singapore	001	Hong Kong	001
Switzerland	00	Malaysia	00
Sweden	00	Luxemburg	00
Spain	00		

International Access Codes of Major Countries (Table 2)

Area	Number	Area	Number
Ireland	00	Turkey	00
U.S.A.	011	New Zealand	00
U.A.E.	00	Norway	00
U.K.	00	Hungary	00
Italy	00	Philippines	00
India	00	Finland	00
Indonesia	001	France	990
Australia	0011	Brazil	00
Netherlands	00		0041
Canada	011		0021
South Korea	001		0023
Greece	00	Vietnam	00
Singapore	001	Belgium	00
Switzerland	00	Poland	00
Sweden	00	Portugal	00
Spain	00	Hong Kong	001
Thailand	001	Macao	00
Taiwan	002	Malaysia	00
Czech	00	Monaco	00
China	00	Luxemburg	00
Denmark	00	Russia	810
Germany	00		

Don't forget your FOMA handset ... or your manners!

When using the FOMA handset, be considerate and do not disturb people around you.

Always turn OFF your FOMA handset in the following situations:

■Where use is prohibited

Be sure to turn off your FOMA handset in airplanes and in hospitals.

* Persons with electronic medical equipment are in places other than the actual wards. Make sure you have the power switched off even if you are in a lobby or waiting room.

■When in crowded places such as packed trains, where you could be near a person with an implanted cardiac pacemaker or implanted defibrillator.

The implanted cardiac pacemaker or implanted defibrillator operation can be affected by radio emissions from the FOMA handset.

In the following cases, be certain to set Public Mode.

■While driving

Using the FOMA handset interferes with safe driving and could cause danger.

* Park the car in a safe place before using the FOMA handset, or switch to Public Mode.

■When in theaters, movie theaters, museums, and similar venues

If you use your FOMA handset where you are supposed to be quiet, you will disturb those around you.

Pay attention to your surroundings
and the loudness of your voice and ringer.

■Do not raise your voice when using the FOMA handset in quiet places such as in restaurants or hotel lobbies.

■Use the handset so as not to disturb pedestrian traffic.

Consider privacy

Give consideration to privacy before capturing or sending images with a mobile phone with a built-in camera.

These functions help you keep your manners in public

Handy functions are available such as for setting the response to incoming calls and setting the tones to silent.

●**Public Mode (Drive Mode/Power Off)**

The guidance is played announcing that you are in such a place as train, bus or movie theater where you have to turn off the handset, and the call is disconnected. →P72, P73

●**Record Message**

Callers can record a message when you cannot come to the phone. →P75

●**Incoming Vibrator**

When the vibrator is set, it vibrates for incoming calls. →P108

●**Manner Mode/Original Manner Mode**

In Manner Mode, the keypad sound, ring tone or every other sound generated by the FOMA handset are silenced. →P110
You can change the operation of the FOMA handset in Manner Mode (Original Manner Mode). →P110

This manual was produced in such a way as to allow easy recycling. Please recycle this manual when it is no longer needed.