Cisco Digital Transport Adapter HDA-RF2.3 Remote Control

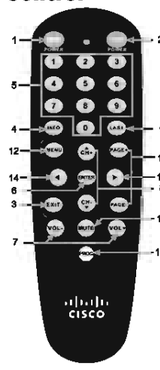

The Keys Including:

1.DTA Power
2.TV Power
3.Exit
4.Info
5.0-9 Digits
6.Enter
7.Volume +/-
8.Channel +/-
9.Last
10.Mute
11.Page+/-
12.Menu
13.Right Arrow
14.Left Arrow
15.PROG

Welcome

The Cisco Digital Transport Adapter(DTA)remote controls your Cisco DTA and the volume and power on many connected TVs.Use the Instructions In this guide to set up and use your Cisco DTA remote.

Important Information About Your Remote

The remote control is initially programmed for DTA only. If you want to program a TV into the remote, you need to go to Program The Remote to control your TV.

Batteries

Use two AAA batteries. Check the diagram inside the battery compartment to ensure the batteries are inserted in the correct direction.

Note: Batteries must be replaced within two minutes of removal to retain programmed TV code.

⚠ Caution: This remote control should be kept out of reach of the children under the age of 6.

Program the Remote to Control YourTV

Program the remote control for TV following these steps:

1.Turn on your TV.

2.Press and hold "PROG" key for three seconds or until the LED turns on then press "TV" key(the LED) will blink once and stay on).

3.Find the four digit device code for your TV brand. Press and release the four numeric keys.

4.If the device is valid, the LED will blink two times and the device code will be retained. If the device code is invalid, the LED will blink three times, either input another code or cancel the remote programming by pressing the "TV"key.

Automatic Code Search

If the device code for your TV brand can't be found in the list, please try to search the device code database following these steps:

1.Turn on TV device manually.

2.Press and hold "PROG"key for three seconds or until the LED turns on.

3.Press "CH+"key to enter the automatic code search mode. The remote will transmit the TV power code every 1.5 seconds and the LED will blink at the same time. When you see the TV device is powered off, the remote has found a valid group device code.

4.Press "TV"key to store the code and to exit the search mode.

Pairing between Remote Control and Target Device (DTA)

Your remote control can be paired with the DTA, allowing you to place the DTA out of the line of sight (behind your TV, for example)

1.Turn on the target (DTA) device.

2.Press and hold "PROG" key for three seconds or until the LED turns on, then press "INFO" key.

3.The LED on the remote control blinks slowly to indicate the device is in pairing mode.

4.The DTA will prompt the user, via a message on the TV to enter a unique four digit number.

5.If the three digits entered are correct, the target(DTA) will prompt the user that pairing is successful.

6.If the three digits enterd are incorrect, the target (DTA) will prompt the user that pairing fails and to try again until the correct code is entered.

Unpairing Scenario

Once paired with the target (DTA), the remote can be unpaired using the following sequence:

1.Press and hold "PROG" key for three seconds or until the LED turns on.

2.Press <9> <8> <7>, the LED will blink two times quickly to show the procedure is successful.

Switching between DTA and TV mode for Volume/ Mute Control

To control DTA Volume and Mute, use the following steps:

1.Press and hold "PROG" key for three seconds or until the LED turns on.

2.Press "VOL-" key.

To control TV Volume and Mute, use the following steps:

1.Press and hold "PROG" key for three seconds or until the LED turns on.

2.Press "VOL+" key.

Default state: the remote is initially assigned to control DTA Volume and Mute.

Trouble Shooting

If there is no response when you press any key on the remote control, please check the following items before calling for service.

Check the Batteries

Are the batteries inserted correctly? Are the batteries drained? You may try to replace the batteries with the new ones.

Check the DTA

Is the DTA connected to the input of the TV? Is the DTA connected to the cable wall outlet? Is the DTA power cord connected to the power outlet?

Check the TV

Is the TV power cord connected to the power outlet? Is the TV tuned to the correct channel to work with the DTA?

Check the TV Code List

Is your TV's brand included in the code list? Sometimes there is more than one code for a TV's brand, please try to use different codes.

If you can't find your TV's brand in the list or you can't program your remote manually, you should perform the following steps:
-Run Automatic code Search.

TV Brand and Code List

3M	2051
888	0471 0701
A. R. Systems	0061 0601 0861 0661 0751
Abex	4161
Accent	0021 0061 0861
Accurian	2861
Acer	2961 3281
Acoustic arch	2911
Action	2391
Acura	0021
Adcom	1061
Addison	0931 0201
ADL	4771
Admiral	0171 0231 0821 0471 4071 4661 4241 4281 4201
Advent	1901 2191 0061 3101
Adventura	2251
Adyson	0081
AEA	0061 0861
AEG	0861 1031 1951
Affinity	4071 0881
Aftron	1631
Agashi	0471 0081
AGB	1611
Alko	0021 0061 0861 0641 0041 0711 0121 0231 0011 0471 0081 2151
Aim	0061 0121 0701 0861 1521 0341 1701 1301
Airis	3221
Aiwa	0981 2341 1981 4161 0511
Akai	0021 0231 0341 0861 0061 0641 2431 0711 1481 0011 0041 0351 1241 2641 0121 1521 0701 1421 1351 1611 1341 0991 0771 0081 1091 0471 0281 0651 1031 2341 0761 1151 2271 2351 0411 5101 3121 2511 4021
Akashi	1631 0021
Akiba	0351 0481 0751 0061 0861
Akio	2151
Akira	0821
Akito	0061 0861
Akura	0061 0351 0471 0861 1271 0701 0021 0481 1351
Alaron	0081 4661
Alba	0021 0061 0861 0051 1351 0351 0821 1371 0641 1271 0621 0081 0431 0231 0811 2341 0731 2351 0021 2331
Albatron	1241
Alfide	0041
Alkos	0081
Allorgan	0061 0861
Allstar	1881
All-Tel	0021 4161
A-Mark	0271
Ambassador	4731
America Action	0081 1371 0531
Amplivision	2041
Ampro	0021 0271 0061 1611 0471 0671 0641 0351 0701 0711 0861 1151 0061 0861 0021 0501 1871 4731 2121
Amstrad	0061 0861 0501 1971
Anam	1951 0021 0471 0021 0471 0061 0861 0481 0191 1371 0061 0861 0021 1271 0661 0231 0191 0891 0461 0431 1621 0021 0101 0171 0201 0281 5101 4941 2981 0061 3401 4021
Anam National	2051 0471 0701 2771 3501 1631 4771 0791 0041 1961 0881 0761
Andersson	0061
Anglo	0211
Anitech	0081 0021 0061 0861 0481 0191 1371 0061 0861 0021 1271 0661 0231 0191 0891 0461 0431 1621 0021 0101 0171 0201 0281 5101 4941 2981 0061 3401 4021
Ansonic	0231 0191 0281 4401 0861
AOC	0021 0061 0861 0641 0041 0711 0121 0231 0011 0471 0081 2151 0411 0431 0751 0501 0101 4071 4661 3921 4241 1911 1651 0511 3751 0561 0121 0021 0001 0061 0021 1301 0471 0861 2641 0231 1061 0861 0681 0741 1511 0631 1951 0011 0061 0861 1281 1271 3321 3811 3101 4021 0281 0061 0861 0331 1621 5101 2131 0061 0861 1271 0891 1821 1821 1721 4201 4251 4261 4161 3241 1951 0061 0861 0111 0811 0011 1611 0201 0701 0061 0861 2731 3941 2211 2521 0301 0201 0171 0061 0281 0051 0301 0011 0861 0341 3121 3101 1271 1611 1371 1141 0081 0231 1611 0021 2333 0061 0861 0171 4401 0101 1371 0061 0231 0081 5101 3091 4941 3341 3391 2801 4021 3561 0511 3811 1351 0861 0471 0701 0861 1271 0231 0061 0861 0061 1271 1351 0061 0861 0061 1271 0231 0061 0861 0061 1271 0231 0061 0861 0061 1271 0231