User Manual

Copyright ⓒ 2015, Lab-T, Inc.

User Manual for COX, URC-4220-RF Remote Control

Welcome

The URC-4220-RF Remote controls your COX DTA and the Volume, Mute, Power on many connected TVs. Use the instructions in this guide to set up and use your COX URC-4220-RF remote.

Important Information About Your Remote

This remote control is initially programmed for the COX DTA only. Use the instructions below if you also want to use the remote to control your TV.

Batteries

Use two AA alkaline batteries. Check the diagram inside the battery compartment to ensure the batteries are inserted in the correct direction.

⚠ Caution: This remote control should be kept out of reach of the children under the age of 6.

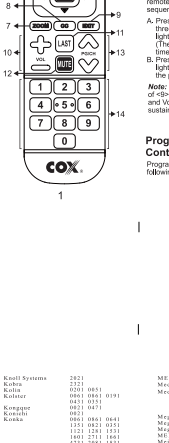

Understanding Your Remote Control Keys

1. POWER:
   Will turn the TV on and off once you have programmed the remote to control your TV.
2. SETUP:
   Press and hold the "SETUP" button for three seconds or until the red indicator light turns on, then release to enter programming.
3. GUIDE:
   Will display program GUIDE
4. COX MENU:
   Will display main cable MENU
5. INFO:
   Will display INFO for currently selected program
6. Directional Pad:
   Up, Down, Right, Left, and SELECT keys
7. ZOOM:
   Press to stretch or shrink screen size horizontally and vertically
8. CC:
   Shortcut to turn closed captioning on and off
9. EXIT:
   Will exit current menu and returns to current program
10. VOL:
    Controls the volume once you have programmed the remote to control your TV
11. LAST:
    Quick access to the most recently watched channels
12. MUTE:
    Will turn off volume
13. PG/CH:
    Use to tune channel up or down, also used for page navigation in the guide
14. Number Keys:
    Used to tune to a channel and enter PIN.

Program the remote to Automatic Code Search

If the device code for your TV brand can't be found in the list, please try the search the device code database following these steps:

A. Turn on the TV.
B. Press and hold the "SETUP" button for three seconds or until the red indicator light turns on, then release.
(The programming mode expiration time is 30 seconds)
C. Press and release the (TV) "POWER" button.
D. Press and release the Up (▲) button to start the automatic code search. (The remote will transmit the TV power code every 1-2 seconds and the red indicator light will blink at the same time. When you see the TV device is powered off, the remote has found a valid power code.)
E. When the TV turns off, press and release the "SELECT" button (to store the code and to exit the search mode) and then make sure the red indicator light blinks twice.

Switching between DTA and TV mode for Volume/Mute Control

To control DTA Volume and Mute use the following steps:

A. Press and hold the "SETUP" button for three seconds or until the red indicator light turns on, then release.
B. Press the "VOL+" button.

To control TV Volume and Mute use the following steps:

A. Turn on the target (DTA) device.
B. Go to the "Settings" menu by using the RCU in the IR mode.
C. Press and hold "SETUP" button for three seconds or until the red indicator light turns on, then press "COX MENU" button.
D. The red indicator light on the remote control blinks slowly to indicate the device is in the pairing mode.
E. The DTA will prompt the user, via a message on the TV to enter a unique three (3) digit number within 5 seconds.
F. If the three (3) digits entered are correct, the target (DTA) will prompt the user that pairing is successful.
G. If the three (3) digits entered are incorrect, the target (DTA) will prompt the user that pairing fails and to try again until the correct code is entered.

RF Pairing between Remote Control and DTA

Your remote control can be paired with the DTA, allowing you to place the DTA out of the line of sight (behind your TV, for example).

A. Turn on the target (DTA) device.
B. Go to the "Settings" menu by using the RCU in the IR mode.
C. Press and hold "SETUP" button for three seconds or until the red indicator light turns on, then press "COX MENU" button.
D. The red indicator light on the remote control blinks slowly to indicate the device is in the pairing mode.
E. The DTA will prompt the user, via a message on the TV to enter a unique three (3) digit number within 5 seconds.
F. If the three (3) digits entered are correct, the target (DTA) will prompt the user that pairing is successful.
G. If the three (3) digits entered are incorrect, the target (DTA) will prompt the user that pairing fails and to try again until the correct code is entered.

RF Unpairing Scenario

Once paired with the target (DTA), the remote can be unpaired using the following sequence:

A. Press and hold "SETUP" button for three seconds or until the red indicator light turns on, then release.
(The programming mode expiration time is 30 seconds)
B. Press <9> <9> <7>, the red indicator light will blink two times quickly to show the procedure is successful.

Note: If you press <9> <8> <6> instead of <9> <8> <7>, your TV programming and Volume/Mute setting values will be sustained.

Program the remote to Control Your TV

Program the remote control for TV following these steps:

TV Brand and Code List

3M	2051
888	0471 0701
A. R. Systems	0661 0751
Abex	4161
Accent	0021 0061 0161
Accentra	2861
Acer	2961 3281
Acoustic arch	2911
Action	2391
Acura	0021
Adcom	1061
Addison	0931 0201
ADS	4771
Admiral	0171 0231 0821 0471 0471 4661 4241 4281 4201
Advent	1901 3191 1061 3101
Adventura	2251
Adyson	0081
AEA	0061 0861
AEG	0861 1031 1951
Affinity	4071 0881
Affinon	1631
Agashi	0471 0081
AGB	1611
Aiko	0021 0061 0861 0641 0841 0711 0121 0231 0001 0471 0881 2351
Aim	0861 0221 0701 0861 1521 0341
Airis	1701 1301 3221
Aiwa	0891 2341 1981 4161 0311
Akai	0021 0231 0341 0861 0061 0641 2431 0711 1401 0311 0881 0311 0041 0351 1241 2641 1521 0701 1421 1351 1631 1641 1321 0991 0471 0881 0691 0471 0281 0651 1031 2341 0351 0441 0101 2351 0441 0021 1631 0021 0351 0481 0751 0481 0481 0061 0861 0061 0861 0061 0861 0055 0351 0471 0861 0271 0701 0821 0481 1351 0481 0661 0861 0861 0861