Ferrari

OFFICIAL LICENSED PRODUCT

Produced under license of Ferrari Brand S.p.A.
Ferrari, Maranello and related trademarks, logos, car shapes, all associated logos and distinctive designs are property of Ferrari S.p.A. The body designs of the Ferrari cars are protected as Ferrari S.p.A. property under design, trademark and trade dress regulations.

Silverlit® Silverlit SAS, Espace Green Parc, Route de Villepacle. 91280 Saint Pierre du Perray / France. ©2012 Silverlit. All rights reserved.

Become our fan on facebook
facebook.com/SilverliToys

Visit us @
www.Silverlit.com

Bluetooth®

Ref.# 86069

Silverlit

Interactive Bluetooth R/C
connect, control, drive like never before

Instruction Manual

LaFerrari

Use Your iPod touch®, iPhone® or iPad® as your Bluetooth Remote Control

Made for ☑iPod ☑iPhone ☐iPad

Apple, iPod, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

The product has imbedded the Bluetooth module with QDID B017511

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Silverlit is under license. Other trademarks and trade names are those of their respective owners.

Silverlit

Interactive Bluetooth R/C
connect, control, drive like never before

For Ages 3+
Pour âges 3+
Para 3 años en plus
Voor leeftijd 3+
Para 3+ anos
Età 3 anni di più

⚠ WARNING:
CHOKING HAZARD – Small Parts.
Not for children under 3 years.

CE This product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

1. Delivery contents

Instruction Manual | 4 x AA Batteries | Vehicle

Safety precautions

Parents: Please read the operating instructions carefully with your children prior to the first use.
- Stop the vehicle through the transmitter before picking it up.
- Keep away from fire, heat sources, water, liquids, small parts, e.g. tires and the wheel hubs, when toy is switched on.
- Do not operate the remote controlled vehicle on streets. Avoid hitting people, pets or home furnishings.

Warning: Conversion or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

The crossed-out dustbin symbol indicates that batteries, rechargeable batteries, button cells, battery packs, etc. must not be put in the household waste. Batteries are harmful to health and the environment. Please help to protect the environment and dispose of them. Ask children to dispose of batteries properly by taking them to the local collecting points. The way batteries are recycled safely.

Waste Electrical and Electronic Equipment (WEEE)

When this appliance is out of use, please remove all batteries and dispose of them properly. Do not dispose of this appliance via the local collecting points for waste electrical and electronic equipment. Other components can be disposed of in domestic refuse.

FCC Statements

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
1)This device may not cause harmful interference, and
2)This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Battery warnings:
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed before being recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not throw batteries in fire.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

Care and Maintenance:
- Always remove batteries from the toy when it is not being used for a long period of time.
- Keep the toy dry. Precipitation can damage it.
- Keep the toy away from direct heat.
- Do not submerge the toy into water that can damage the electronic assemblies.

Battery requirement for (Vehicle):

⊞	Power Supply	>>>
⊞	Voltage	4.8 V - 7.8 W
⊞	Batteries	4 x 1.5 V "AA"(LR6/AM2) (included)
⊞	Capacity	2800 mAh

TIPS

For the vehicle, best & maximum performance can be only obtained by new and alkaline batteries.

Notes:
- Adult assistance is recommended when installing or replacing batteries.
- Keep this instruction manual for future reference.
- Please be aware that the product comes with the interactive manual while operation the product.
- Under the environment with electrostatic discharge, the toy may not function properly and need to be reset.
- Use new alkaline batteries in the toy to obtain best performance.

2. Part Identification

2.1 Parts included:

Vehicle



3. Getting Started:

Battery installation

3.1 - The vehicle is powered by 4 x 1.5V "AA" size batteries (included).
3.2 - Make sure the power switch is on "OFF" position.
3.3 - Press down the button (1) on battery compartment cover, and then follow the direction of the arrow to pull out the battery compartment cover.(Fig.1)
3.4 - Insert 5us " AA" batteries with correct polarity as indicated inside battery compartment.(Fig. 2)
3.5 - Close the battery compartment cover.



Fig.1

Fig.2

4. Operation Steps

4.1 Prepare your iPod touch, iPhone or iPad to set up the operation procedure followed the below steps

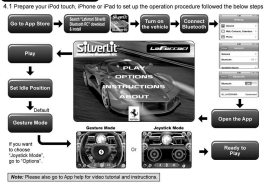

Note: Please also go to App help for video tutorial and instructions

5. Interface Control Function Description: Gesture Mode

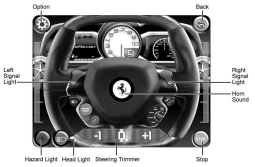

6. Interface Control Function Description: Joystick Mode

7. Drive Your Vehicle

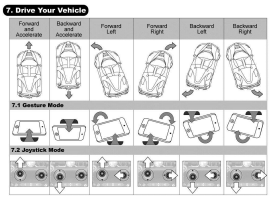

8. Interface Indicator Description

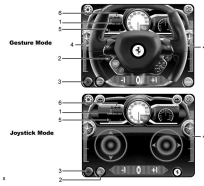

1. Low Battery Indicator
2. Head Light
3. Hazard Light
4. Forward & Backward Indicator
5. Battery Level Indicator
6. Left & Right Signal Light

9. Interface Option Screen Setting

9.1 Sensitivity Setting

9.2 Acceleration Curve Setting



1. Default
- Factory setting for beginners
2. Customize
- Drag to select on different curves (from top to bottom)
i. FASTEST acceleration at the beginning. (more suitable for fast driving)
ii. FASTER acceleration at the beginning THAN the ending of gas pedal range.
iii. REGULAR acceleration all along the gas pedal range.
iv. LOWER acceleration at the beginning THAN the ending of gas pedal range.
v. LOWEST acceleration at the beginning. (more suitable for precise driving)

9.3 Trim the vehicle
Turn the steering trimmer at the bottom towards Left side when the vehicle drives to the right involuntarily. If it turns left involuntarily, turn the trimmer towards Right side

10. Driving Tips:

1. Only operate the vehicle on flat, smooth (but not slippery) and dry surfaces or low pile carpets. Hair, carpet or dirt can affect the operation of the vehicle.
2. Do not drive the vehicle on sand or through water or snow. If your vehicle gets wet, wipe it with a towel and allow it to dry completely.
3. Do not operate the toy near walls which may disturb bluetooth transmission.

11. Troubleshooting

Symptom	Cause	Solution
Vehicle does not react, or react poorly to the iPod touch, iPhone or iPad.	- High-frequency interference occurred near to high-voltage lines, transformers and some types of building. - The toy is in stand-by mode. - Vehicle batteries are weak. - Bluetooth may not be in connection with your vehicle. - The toy is in stand-by mode	- Avoid these if possible, or choose another place to operate the vehicle. - Switch off the toy and turn it on again. - Switch off the toy and turn it on again. - Change all batteries in vehicle with new alkaline batteries. - Recheck if your iPod touch, iPhone or iPad connects with your vehicle in Bluetooth.
Loss of control.	- Out of the transmission range. - Bluetooth signal of iPod touch, iPhone or iPad was obstructed by finger.	- The vehicle has a transmission range of 8 meters (26 feet) in open area. - Take away finger the end of iPod touch, iPhone or iPad.
Vehicle runs slowly, erratically or does not run.	- Power switch is not in "ON" position. - Batteries are not installed correctly. - Batteries are weak. - Hair, carpet or dirt might be trapped between wheels.	- Switch on the power. - Check if the batteries polarity and connection. - Change batteries with new ones. - Carefully remove the foreign materials.
Bluetooth connection unsuccessful	- Other bluetooth device connected.	- Disconnect other bluetooth device and try again.
Too sensitive while controlling	- Sensitivity setting is not in the correct setting.	- Decrease sensitivity setting inside option screen.