Sapphire 7

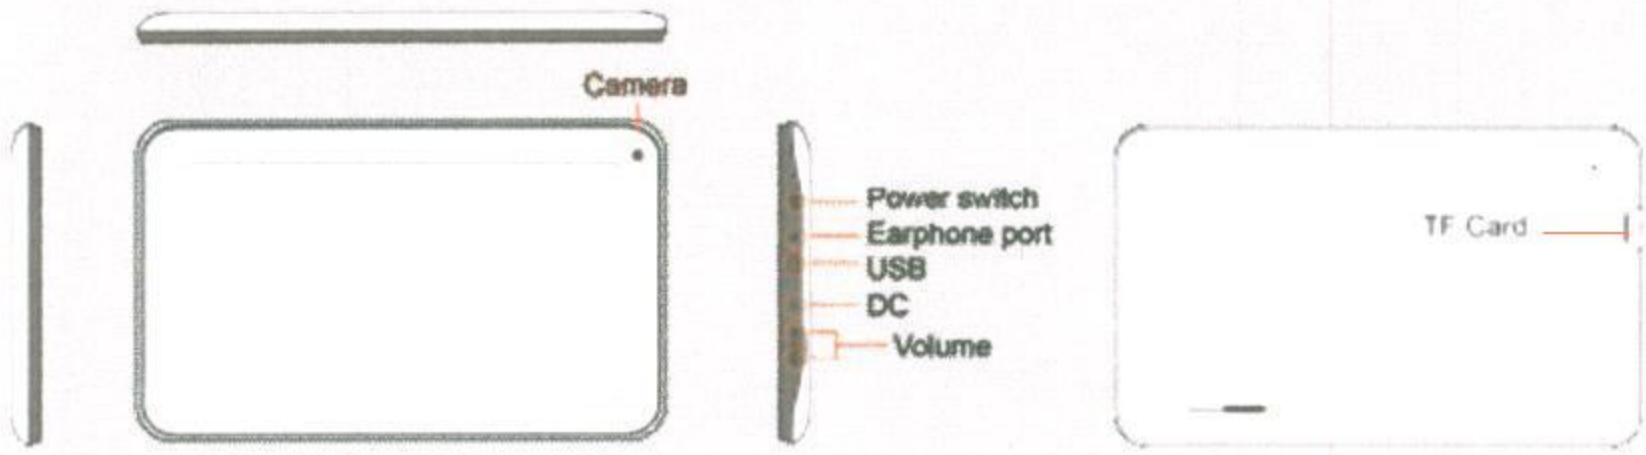

Turn on/off

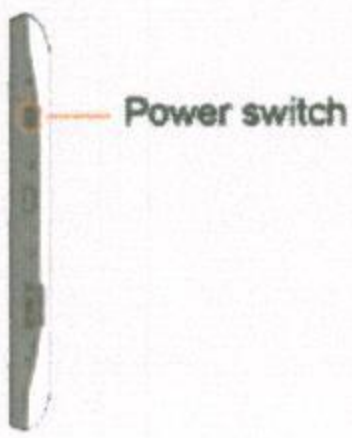

• Power up the device: Hold down the right power button of the device, which is located at the upper right corner.

• To turn off the device, hold down the button which is located at the top upper right corner until the monitor shows the "OFF" option. Click on the OFF option and click on the "OK" button. The monitor will turn off after a few seconds. To restart the monitor, press the power switch again.

Main menu

2

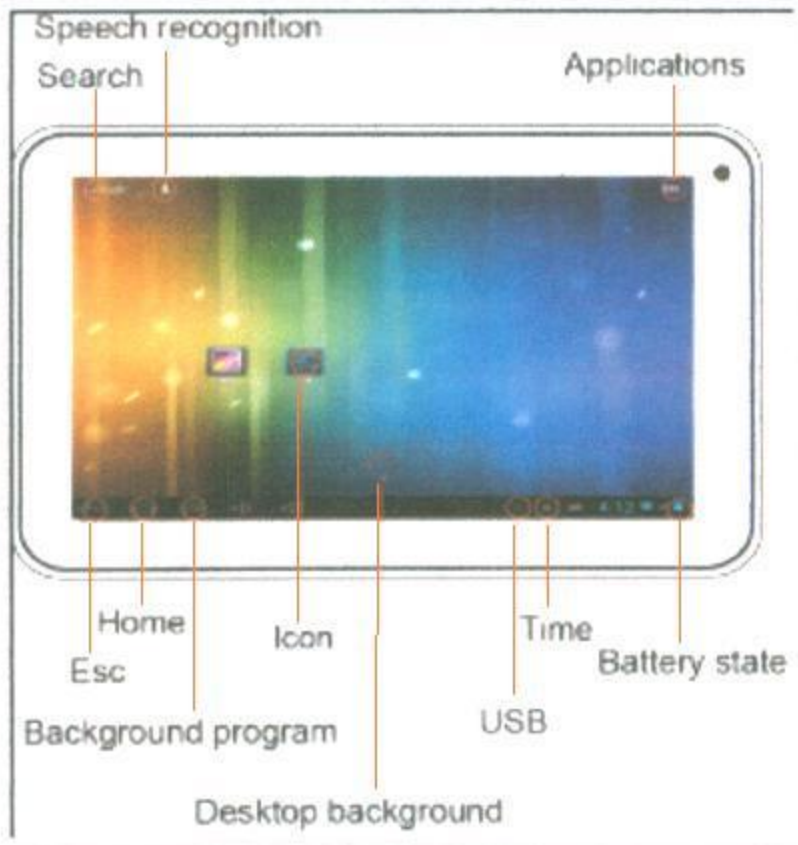

Wi-Fi settings

1

• Open the Applications tab In the main interface, then click "Settings"

• After Choose: "Wireless network" click "Wi-Fi", click on "Wi-Fi settings"

• Click connect to network, that will be can connected, if the network requires a password, enter the correct password in the password bar, WALN shows "Connected."

• Network settings after completion, return to the main interface, then, you can use the network, and can be in the browser's address bar, enter the desired website address..

•Open the webpage, click or sliding webpage, click the link to open the linked page.

Browse the file or folder

3

• In Desktop state, click the application bar icon, enter into the application field, click into the" resource manager."
• In the file list can be clickable sliding, rolling.
• Click on the required file or folder, can open the file or folder.
•Click the status bar of the back button to return to the level folder.
• Click the Home button on the status bar, you can return to the home page.
• Long press a file or folder, can popup a menu, for example: "Copy, delete, move, paste, rename" and other additional options. If you do not execute the operation, click on the Cancel button. directly

USB connection

4

• Connect USB line interface, plug in the machine of right side USB interface, the other point is inserted in the computer USB interface connection, drag down the status bar, and then show USB connection status, that will be appear ”USB connection”, prompting USB connection.
• If successful, your computer will be appear a new removable disk.
• On the computer desktop to open "My Computer", double-click the new removable disk, where the data can be copied, deleted by machine
• Disconnect: Click the bottom left of the screen arrow to the removable disk icon, pop up a small window safe deletion mobile disk.

Install / uninstall software

5

• Sapphire 7 operating system default for Android 4.1 version, install the software required to process the format is*. Apk format.
• Sapphire 7 supports many popular third-party application software formats
• Sapphire 7 can be installed or uninstalled you need software.
• To install an application, the need to*. Apk format copied to your Sapphire 7, then open” resource manager", click to install*. Apk file.
• Installed application, will appear in the application bar.
• If want to installed software, click ”setting” enter into “application process” bar, then Clck :”application”, click on the software you want to ininstall. then click unstall.

Other application

6

Multimedia

• Sapphire 7 can support HD video playback, photo viewing, and music.
• Firstly. need to play music, video, photos copy to the Sapphire 7.
• Click the application icon, after enter, click on the corresponding icon, such as "video" "picture" "music" into the corresponding interface.
• Click the file of play, it can be play file.

Filming

• Sapphire 7 have camera equipment, can photograph and taking pictures.
• Click the application bar, click on the "camera" icon, you can practice taking pictures and filming video, and in the corresponding function menu set the video clarity and screen size.

Hardware configuration	
Main Frenquency	Cortex-A9，Up to 1.2GHZ
CPU	RK2926
Inner memory	512M DDR3
Screen	7 inch 480×800
	Capacitive multi point touch
Memory	4GB
Camera	30W camera
WiFi	Wi-Fi 8188
Volumn	D class built-in speakers
Expansion card	TF card，Support maximum 32GB TF card
Battery	100*70.2*3.5(mm) Polymer battery 3.7V 2500mA/h
External I / O ports	USB 2.0 OTG:support U disk、Mouse、keyboard、USB HUB
	TF card:support up to 32GB capacity
	3.5mm Stereo headset
	DC 5V

Operating system	
Operating system	Google Android 4.1
Outlook specification	
Product Dimension L×W×H(mm)	187*117.2*12(mm)

Function feature	
Mobile memory	It can be used as movable hardware Disk
Input	Android keyboard、Google Pinyin input method
Direction sensor	Automatic four directions of the 3 axis gravity sensor
Audio	MP3、WMA、OGG、APE、FLAC、AAC、WAV
Video	Max support 1080P of H.264、VP8、RV、WMV、AVS、H.263、MPEG4 etc and live video of Youtube、720P、HTNL5、Flash10.3 etc
Picture	Support for JPG, BMP, PNG and other image formats browsing and support the rotating / slide / picture zoom function
Other applications	2D/3D graphics processor，Support OpenGL ES 2.0 and Open VG
	Webpage browsing、Chat online、E-mail、E-book、Explorer
	Clock、Alarm clock、Calculator、Recording
Audio mode	Normal、Pop、Rock、Classical、Jazz、Heavy bass、User-defined
Language	Multi—language support (optional)
Repeat mode	Single song once、single repeated、all once、all repeated、demo
Recording	microphone support; support MP3/WAV format recording

* Note: Use MicroTF (SD) card, if you want to pull out the TF card, safe operation is the select Settings -> memory - > unload TF card.

Connected to the computer, please do not use online video and games.

* Disclaimer Note: product appearance, technical parameter, function, price, please take the actual product and the product specification, nameplate shall prevail, as a result of technology to update the changes, without notice.

1

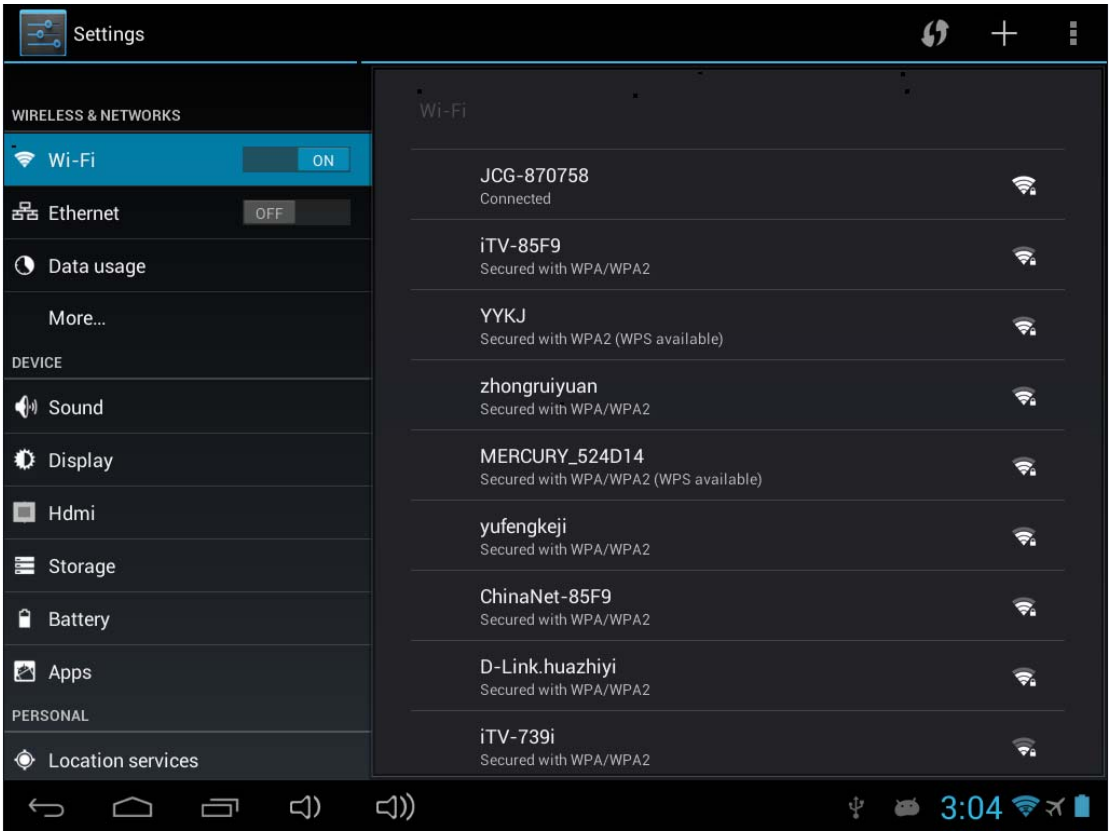

2

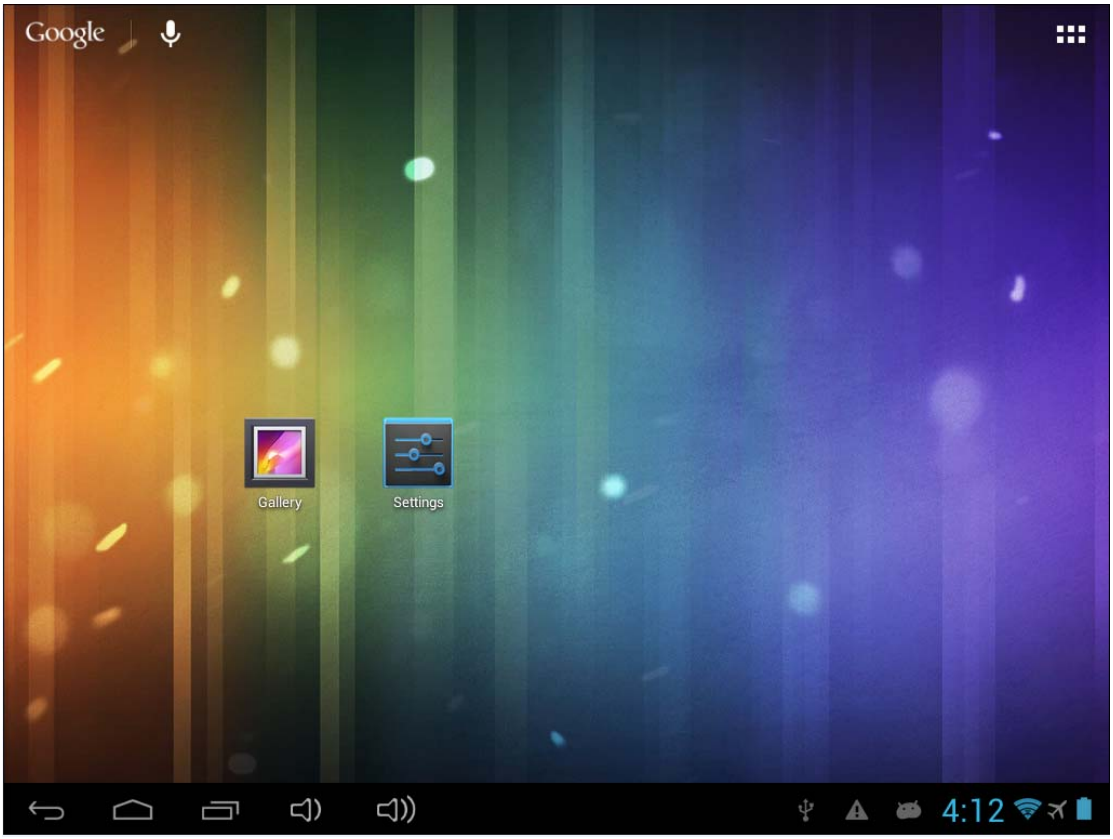
Google
Gallery
Settings
4:12

3

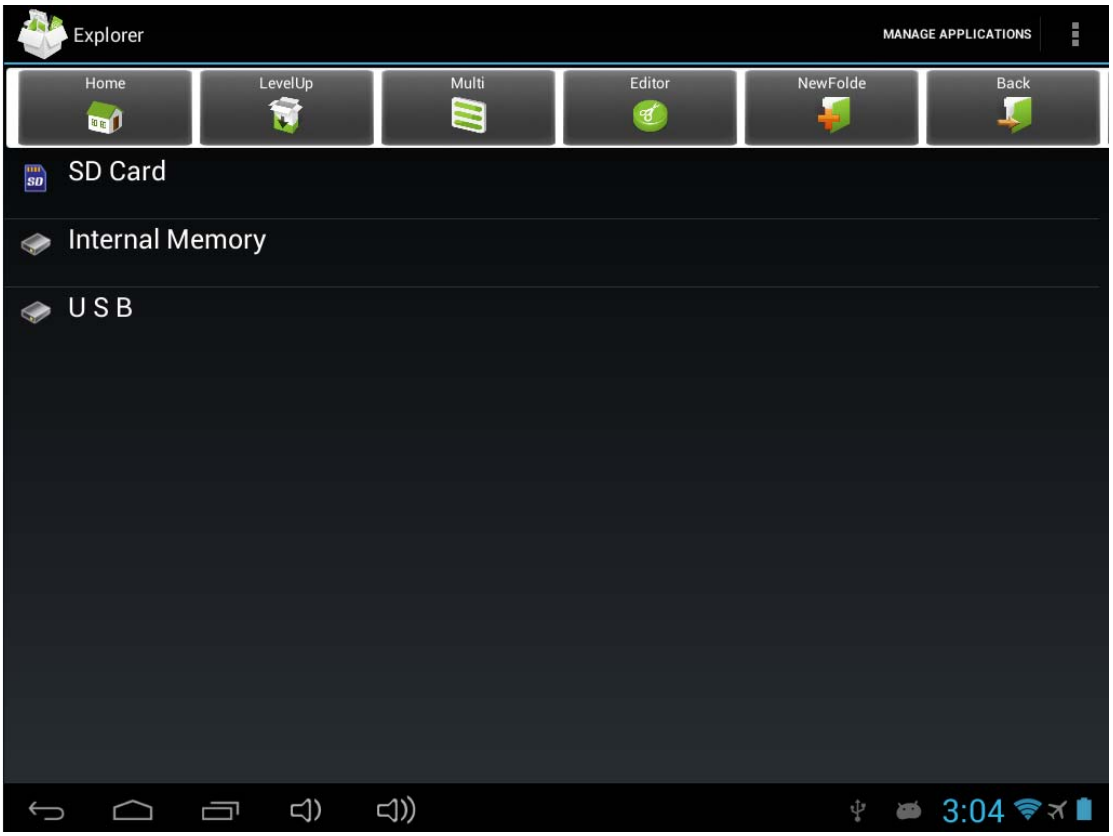
Explorer
MANAGE APPLICATIONS
Home
LevelUp
Multi
Editor
NewFolde
Back
SD Card
Internal Memory
U S B
3:04

4

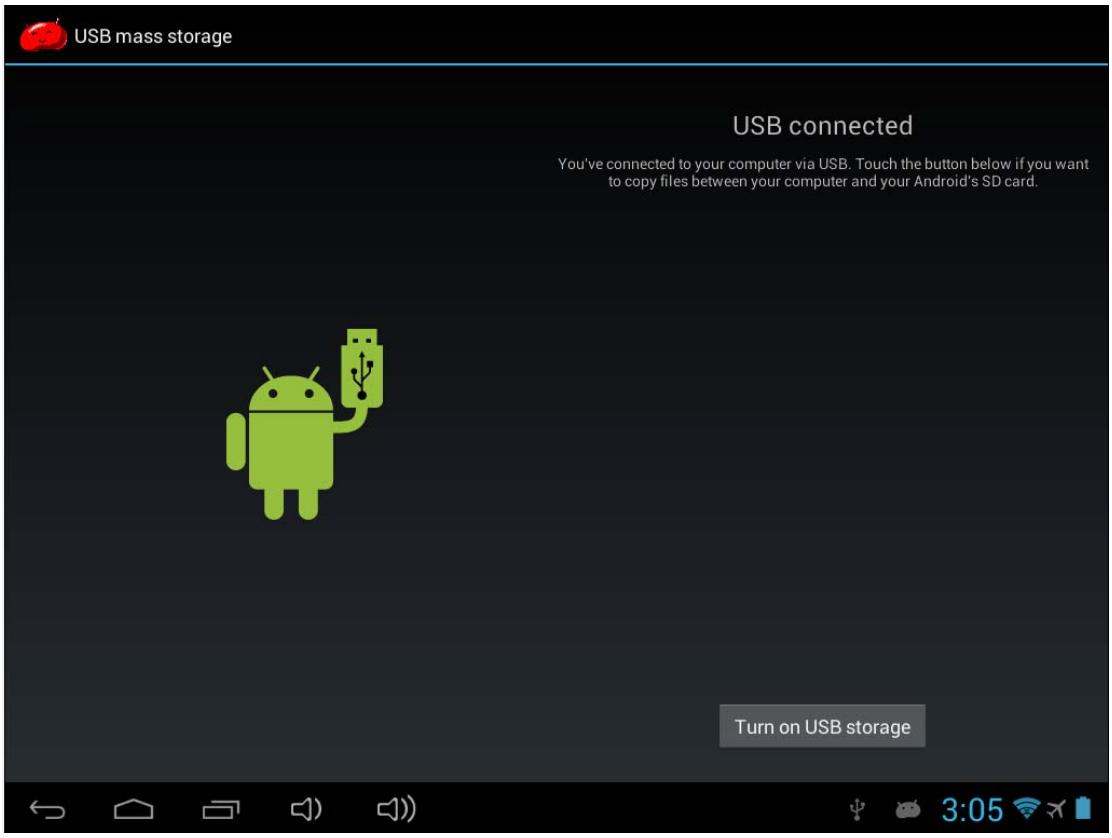
USB mass storage
USB connected
You've connected to your computer via USB. Touch the button below if you want to copy files between your computer and your Android's SD card.
Turn on USB storage
3:05

5

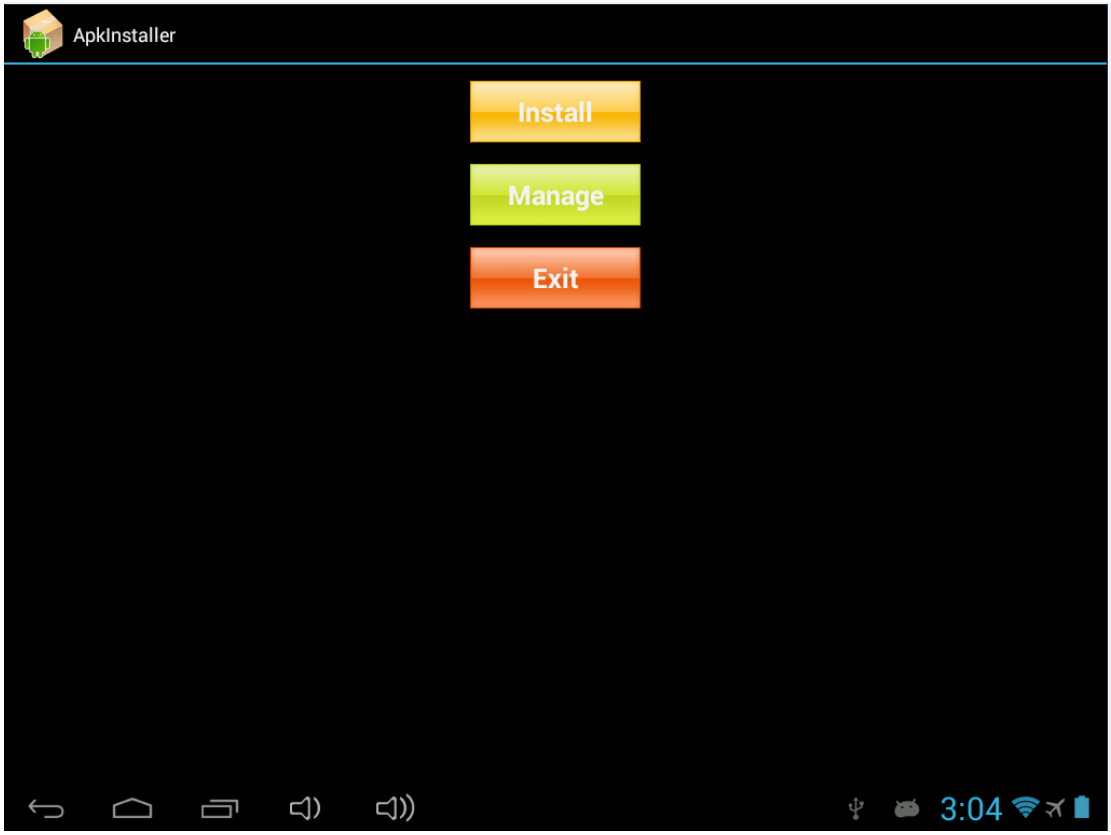
ApkInstaller
Install
Manage
Exit
3:04

6

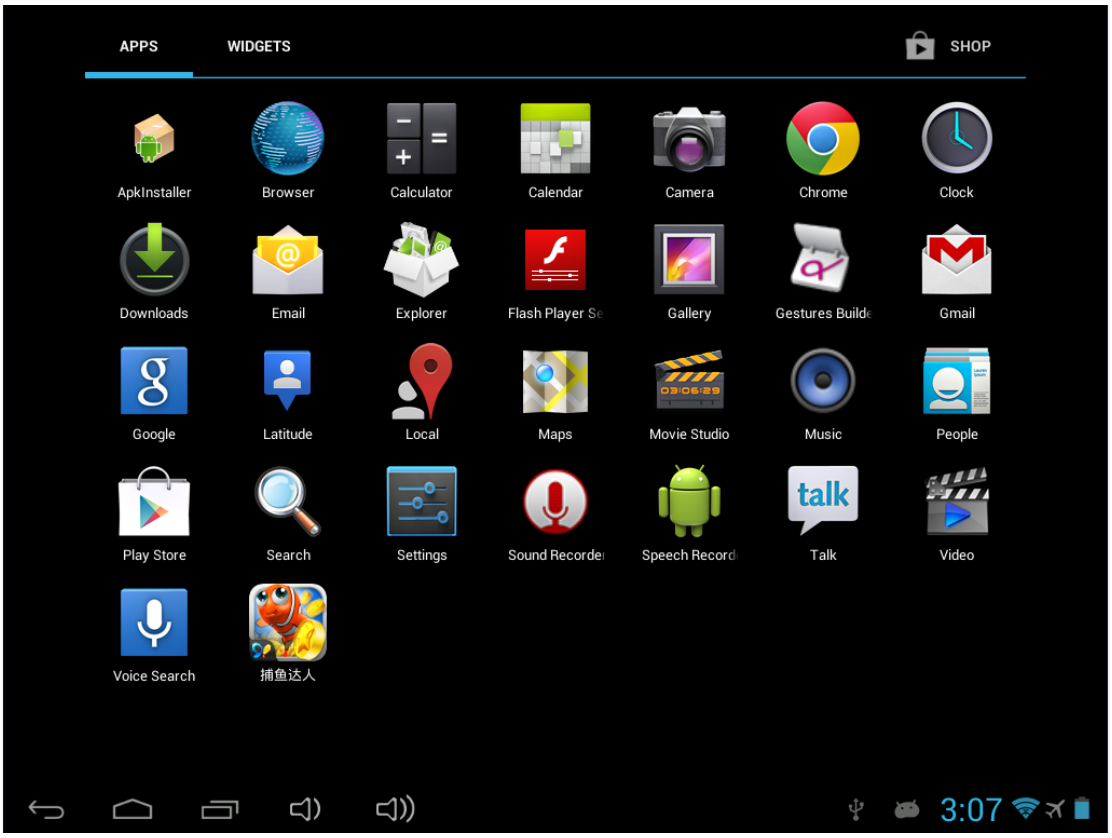
APPS
WIDGETS
SHOP
ApkInstaller
Browser
Calculator
Calendar
Camera
Chrome
Clock
Downloads
Email
Explorer
Flash Player Se
Gallery
Gestures Builde
Gmail
Google
Latitude
Local
Maps
Movie Studio
Music
People
Play Store
Search
Settings
Sound Recorder
Speech Record
Talk
Video
Voice Search
捕鱼达人
3:07

Company: **VISION INVESTMENT GROUP O/A FILLA TABLET**
Name: **Tablet Personal Computer**
Model Number: **Sapphire 7**

FCC ID: SKN-SAPPHIRE

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types Sapphire (FCC ID: SKN-SAPPHIRE) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the body is 1.431W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment。

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does
cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.