kami

2018-12-26
V1.4

2018-12-17
1. 产品名称修改
2. 版本号升级
3. 外观去掉支架
4. 印刷区去掉CMYK色彩

2018-12-19
1.颜色调整

2018-12-25
1. Felix 12月22日邮件意见更新
2. Reset Pin（取卡针）外观更新

SIDE-A:

What's in the box

Kami Secure Home Motion Sensor x1

Envelope x1

3Mstickerx1

reset pin x1

battery x1

Getting started

You will need to setup the Kami Hub before using your Kami Motion Sensor. Please see the Installation Guide for your Kami Hub for instructions on how to get started. Once your Kami Hub is set up you can continue with your Motion Sensor installation.

Step 1
Please make sure the Hub is setup and connected to your router. You can read the User Guide of Kami Hub for details.

Step 2
After logging into your Kami Home App, tap the "+" sign to select your device or scan the QR code on sensors.

Step 3
Insert the battery into your Kami Motion Sensor.

Step 4
Power on the Hub and put the Kami Motion Sensor close to it (within 12 inches), the sensor will pair with the Hub automatically.

***note:** If it is not flashing, please use the reset pin to reset the sensor and try again.

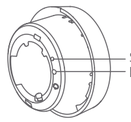

US V1.4

SIDE-B:

Mounting Instructions

Choose and appropriate location and attach your Kami Motion Sensor to the wall or furniture with the supplied double sided tape.



***Notice:**



Effective deteive area-side view



Effective detection area-top view

Specifications

Operating Range: 0 - 45°C
Wireless Connections: Support
Supported Platforms: Android / iOS
Battery: CR2450-600mAh

Website: www.kamihome.com
Support: 888-878-1584
E-mail: support@kamihome.com
https://kamihome.com/legal/fcc

kami
Secure Home

Motion Sensor
Installation Guide

切刀
压线
齿刀
开槽
半穿
粘合

审核人员

项目经理 ▶	XXXX
产品经理 ▶	XXXX
质量工程 ▶	XXXX
认证工程 ▶	XXXX
软件测试 ▶	XXXX
采购经理 ▶	XXXX

项目号 ▶ N30	项目名称 ▶ Kami Secure Home Motion Sensor	印刷颜色 ▶ PANTONE 331 U PANTONE Cool Gray 11 C	物料材质 ▶ 100g晨鸣云镜双胶	▶ N30A6099AAAP
设计于 ▶ 王伟	物料名称 ▶ 说明书	成品尺寸 ▶ 85×85mm	特种工艺 ▶	▶ 6099N30A00AR1A