au

Introduction

GRATINA

Setting Guide

Thank you for buying the "GRATINA" (simply called the "product" from here on).
This manual describes the settings and precautions for using the product. For explanations of basic functions, refer to "Basic Manual".

Company names and product names referred to in this manual are registered trademarks or trademarks of the respective companies. TM or ® may be omitted in this manual.
The illustrations and screenshots in this manual may look different from the actual product or screens. Also, please note that the contents of the screen may be partially omitted.
In this manual, "au Nano IC Card 04 LE" is abbreviated as "au IC card".
In this manual, "microSD™ memory card (sold separately)" and "microSDHC™ memory card (sold separately)" are abbreviated as "microSD memory card" or "microSD".

April 2019, 1st Edition

Sold by: KDDI CORPORATION,
            OKINAWA CELLULAR TELEPHONE COMPANY
Manufactured by: KYOCERA Corporation

When Using the Product

Note the following when using the product.
- The battery isn't charged adequately at the time of purchase. Charge the battery sufficiently before use.
- To maintain water and dust resistance, attach the back cover firmly.
- If the confirmation screen such as terms and conditions, etc. appears when you use applications and functions of the product, follow the on-screen instructions.
- If the confirmation screen for communication charges appears when you use applications and functions of the product, follow the on-screen instructions.

Initial Settings

At the first time of power-up, a screen for making initial settings is displayed, and you can set your au ID. "au ID" identifies the customer who uses au services. Register your au phone number as your au ID. By setting an au ID, you can use various services provided by au such as "au スマートパス (au Smart Pass)", "My au", and "au WALLET".
- From the standby screen, press ■ → [Settings] → [au ID Setting] to set.

1
初期設定を行います
OK
■

2
ペア機能
よく連絡する相手の方(最大3件)を電話帳から選択してペア相手に登録しておくと、簡単な操作で電話をかけたり、メールを送信したりできます。
OK
Confirm the contents → ■

3
お知らせ
時刻など端末動作に必要な情報はデータ通信を定期的に行い取得しています。
(データ通信料以外の料金は発生しません)
OK
Confirm the contents → ■

4
au IDの設定
次にauの便利な機能やサービスをご利用いただくための設定をします。
OK
■

5
au ID設定
ます。
接続しますか？
auケータイ用電波を使用した通信を行うため、パケット通信料定額サービスへのご加入を強くお奨めします。
☑ 今後表示しない
OK
キャンセル
Confirm the contents → [OK]

6
au ID設定
au IDはMy auやau WALLETなど、auのサービスをご利用いただく際に、お客さまを識別するIDです。
au ID利用規約をご確認の上、[同意して次へ]を押してください。
規約
同意して次へ
The confirmation screen for "au ID利用規約" (au ID Terms of Use) appears → [同意して次へ (Agree and Next)]
* At the first time of registering au ID, follow the on-screen instructions.

7
au ID設定
au ID設定完了
au ID
080█████████
auスマートパスへ
パソコンなどでご利用の場合は、パスワードの設定が必要です。
規約
au ID setting is complete
* Continue by following the on-screen instructions.
To exit the setting, � → [はい (Yes)]

To Enter Numbers (Switching Character Type)
When a security code input screen such as ID confirmation, etc. appears, select the security code entry field and press ⊠ (Char.) to change the character type to numbers.

Number input
AB 12
Char. Done Symbol
Press ⊠ to switch the character type

Switching to English Display

You can switch the display from Japanese to English.

1
From the standby screen, press ■ → [設定 (Settings)]

2
設定
1 au ID設定
2 よく利用する設定
3 ディスプレイ
4 サウンド・通知
5 ロック
6 無線・ネットワーク
7 エコ・電池
8 その他の設定
[その他の設定 (More settings)]

3
その他の設定
フェイク着信
発信キーを長押しした場合の動作を設定します ☑
ポインター
セキュリティ
ストレージ
アプリ
位置情報
アカウント
言語と入力
[言語と入力 (Language & input)]

4
言語と入力
言語（Language）
日本語
すぐ文字 ☐
キーボードと入力方法
現在のキーボード
日本語 - iWnn IME
iWnn IME
日本語
[言語 (Language)]

5
言語（Language）
日本語
English
[English] → ■

* The message "起動中のアプリ、メール送信、ダウンロードなどが終了される場合があります。変更しますか？" (Applications, mail transmission/reception, and downloads may be terminated. Change the language?) appears, confirm the content and then [はい (Yes)].

Setting Wi-Fi®

You can use a household wireless LAN (Wi-Fi®) environment or a public wireless LAN environment when outside to connect to the Internet.
* The battery is consumed faster when the wireless LAN (Wi-Fi®) function is ON. You are recommended to turn wireless LAN (Wi-Fi®) function OFF when not using wireless LAN (Wi-Fi®) function.

1
au Smart Pass | Security Safety | au WALLET
Camera | Data Folder | Browser
App Service | Tool | LINE
Phone Mail | Profile | Settings
Menu | Custom
From the standby screen, press ■ → [Settings]

2
Settings
1 au ID Setting
2 Frequently used
3 Display
4 Sound/Notification
5 Lock
6 Wireless/Network
7 Eco/Battery
8 More settings
[Frequently used]

3
Frequently used
Wi-Fi
Bluetooth
Phone ringtone
メロディ 02 (Digital Phone 1)
Wallpaper
Font size
[Wi-Fi]

4
Wi-Fi
Wi-Fi ■
To see available networks, turn Wi-Fi on.
Menu | Check
[Wi-Fi]
* To turn wireless LAN (Wi-Fi®) function ON, mark the checkbox.

Available Wi-Fi® networks are listed.
- Select a Wi-Fi® network to connect → ■ → Enter a password as required → ⊠ (Connect) to connect the Wi-Fi® network.
- If the Wi-Fi® network you want to connect is not detected, press ⊡ (Menu) → [Add network] and connect to the Wi-Fi® network manually.

E-mail

To use e-mail (@au.com/@ezweb.ne.jp), subscription to LTE NET is required.
If you did not subscribe when you purchased the product, contact an au shop or Customer Service Center.
Your e-mail address is determined automatically after initial setting. You can change the e-mail address later.

■ Initial Settings

1
12
9 ─ 3
11/11MON
6
From the standby screen, press ⊠

2
Eメール設定
Eメールアドレスの初期設定を行います。
パケット通信料が発生します。
接続しますか？
接続する
パケット通信を行うため、パケット通信料定額サービスへのご加入をお奨めします。
キャンセル
Confirm the contents → [接続する (Connect)]

3
アドレス設定完了しました。
お客様のEメールアドレスは
@au.com
です。
-ヒント-
Eメールアドレスの変更はEメールメニュー→Eメール設定にて行ってください。
閉じる
Confirm the contents → [閉じる (Close)]

You cannot make initial settings in Wi-Fi® communication only, and an error message is displayed. You can set Wi-Fi® settings to off in the following operations.
From the standby screen, press ■ → [Settings] → [Frequently used] → [Wi-Fi] → Unmark "Wi-Fi".

■ Checking E-mail Address

1
Ver
Create new
Menu
Search/Filter
Edit folder
Delete folder
Apply filtering rules
Sync settings
E-mail settings
Help
Close
From the standby screen, press ⊠ → ⊡ (Menu) → [E-mail settings]

2
E-mail settings
Privacy setting
Password settings
Other settings
change address, filtering settings
Update settings
Initialization
Backup/Restore
Restore mails.
E-mail information
E-mail address, Capacity and Software version
[E-mail information]

3
E-mail information
E-mail address
@au.com
Number of saved mails
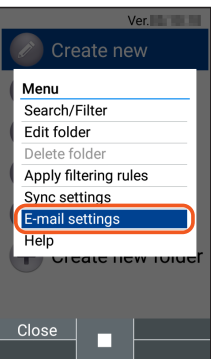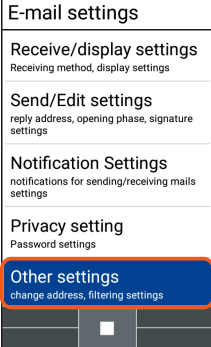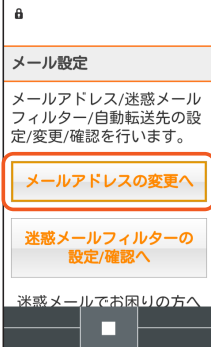Inbox mails
0 of 3500 mails
Sent and Unsent mails
0 of 1500 mails
Usage 0.0MB
Menu OK
Your E-mail address is displayed.
* From the standby screen, you can also check your E-mail address by pressing ■ → ⊡

■ Changing E-mail Address

1 From the standby screen, press ✉ → ⊞ (Menu) → [E-mail settings]

```
Ver.□□□□
Create new
Menu
  Search/Filter
  Edit folder
  Delete folder
  Apply filtering rules
  Sync settings
  E-mail settings
  Help
  Create new folder
Close    ■
```

2 [Other settings]

```
E-mail settings
  Receive/display settings
    Receiving method, display settings
  Send/Edit settings
    reply address, opening phase, signature settings
  Notification Settings
    notifications for sending/receiving mails settings
  Privacy setting
    Password settings
  Other settings
    change address, filtering settings
         ■
```

3 Confirm the contents → [接続する (Connect)] → [メールアドレスの変更へ (To change e-mail address)]

```
メール設定
メールアドレス/迷惑メール
フィルター/自動転送の設
定/変更/確認を行います。
  メールアドレスの変更へ
  迷惑メールフィルターの
  設定/確認へ
  迷惑メールでお困りの方へ
         ■
```

4 Enter the security code* → [送信 (Send)]

```
au電話のご契約時に設定さ
れた4桁の暗証番号を入力し
て下さい。
  [____]
*暗証番号とはau電話のご契
約時にご記入いただいた4桁
の数字です。「お申込書の控
え」にてご確認ください。
  送信    クリア
         ■
```

5 Confirm the contents → [承諾する (Accept)]

```
ご字と数字を組み合わせた/
ドレスに変更することをお
すすめします。
2.メールアドレスの変更は1
日3回まで可能です。
あらかじめご承認いたしま
す。
  承諾する
  戻る
         ■
```

6 Mark the checkbox for "ご希望のメールアドレスに変更する (Change to your desired e-mail address)" → Enter an e-mail address → [送信 (Send)]

```
☑ご希望のメールアドレス
に変更する
  [_____]@au.com
※以前利用していたメール
アドレスに戻す
  送信
  戻る
         ■
```

7 [OK]

```
メールアドレスの変更
新しいメールアドレスは
[_____]@au.com
  OK
  キャンセル
         ■
```

8 [閉じる (Close)]

```
メールアドレスの変更
正常に変更されました。
メールアドレスは、
[_____]@au.com
です。
  閉じる
         ■
```

* The security code is a 4-digit number set at subscription.
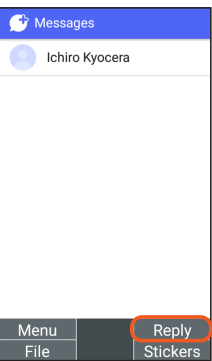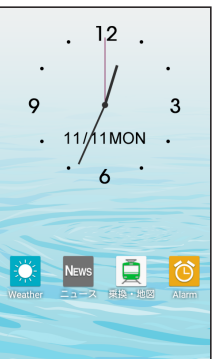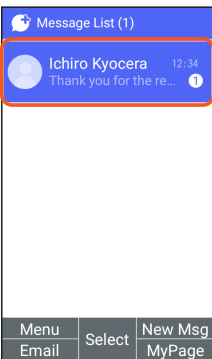
+Message (SMS)

You can find many joys and conveniences in this messaging application.
+Message can exchange messages, photos, and movies with a phone number. Not only au phone number destinations, but also available for sending messages to smartphone users.
* To use +Message, subscription to LTE NET is required.
* Data transfers of +Message service incur data communication charges. Subscription to a flat-rate service is recommended.
* If the other party does not use "+Message", you can only send messages as SMS. Communication charges are incurred at one time for use in sending SMS.
* You can also use the SMS (C-Mail) service you have used. If you want to use the SMS service you have used, select "only use SMS".

■ Initial Settings

1 From the standby screen, hold down ✉ for at least 1 second

2 ■ (Next)

```
+Message
SMS has been renewed!If
you use
+Message,Recommende
d choosing 'Flat-rate
Data'.
         Next
```
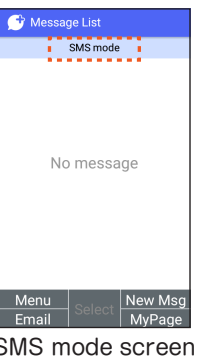
3 Confirm the contents of 利用規約 (terms of use), press ⊡ (Accept) → Follow the on-screen instructions

```
+Message
Terms of Use
利用規約
ご注意
　＋メッセージのご利用には、
送受信以外にもデータ通信が発
生します。文字送信のみご利用
希望の場合は、SMS利用のボ
タンを押してください。
第1条（総則）
1. KDDI株式会社及び沖縄セル
ラー電話株式会社（以下、当社
を併せて、「当社」といいます）
は、+ ………
  only use SMS    Accept
```

4 +Message setting is complete

```
Message List



No message



Menu         New Msg
Email   Select   MyPage
```

In the above-mentioned step **3**, press ⊡ (only use SMS) → [OK] to use the SMS (C-Mail) service you have used.

```
Message List
        SMS mode


No message



Menu         New Msg
Email   Select   MyPage
```
SMS mode screen

■ How to Use +Message

You can check "Frequently asked questions" and "Use guide" using the browser.
● We recommend you to use other devices such as a PC or tablet when you watch the browser because this product's screen is small.

1 From the standby screen, hold down ✉ for at least 1 second*

2 ⊡(MyPage) → [How to use]

```
MyPage
  My number:
  QR code
  Invite friends
  Settings
  Sticker store
  How to use
         Select
```

3 [Frequently asked questions]/ [Use guide]

```
How to use
  Display tutorial
  Frequently asked questions
  Use guide

         Select
```

* After the step 1, the message list screen may not be displayed depending on the closing operation of "+Message". When it happens, press ⌫ several times and return to the message list screen.

■ Sending a Message

1 From the standby screen, hold down ✉ for at least 1 second

2 ⊡(New Msg) → [New message]

```
Message List
  New
  New message
  New group message


Close    Select
```

3 Select a recipient → ■

```
Select contacts
K
Search by name, number...
  Hanako Kyocera
    Mobile 070XXXXXXXX
  Ichiro Kyocera
    Mobile 080XXXXXXXX
  Jiro Kyocera
    Mobile 070XXXXXXXX
  Saburo Kyocera
Menu         Select
```

4 ⊡ (Reply) → Enter text → ■ (Done)
* Press ✉ (File)/⊡ (Stickers) to send files or stickers.

```
Messages
  Ichiro Kyocera



Menu         Reply
File         Stickers
```

5 ⊡ (Send)

```
Ichiro Kyocera
As for the matter next week, I
made a reservation for a
restaurant.


         Select   Send
```

■ Checking a Received Message

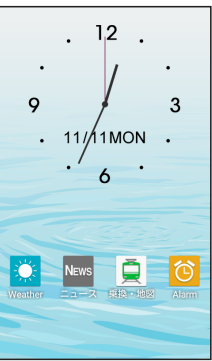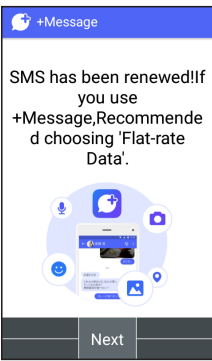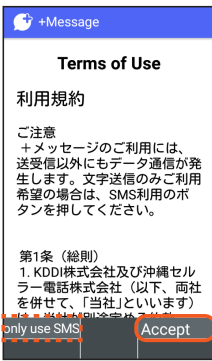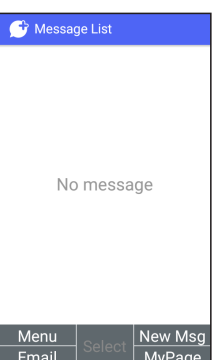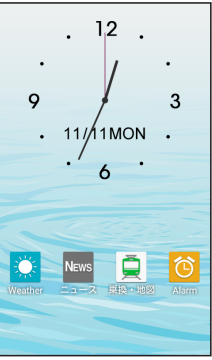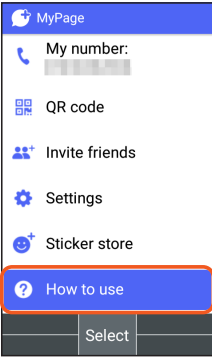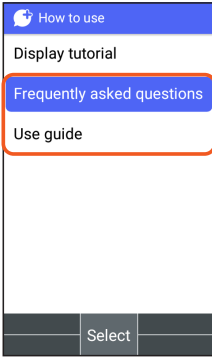**1** From the standby screen, hold down ✉ for at least 1 second

2 Select a sender → ■

```
Message List (1)
  Ichiro Kyocera   12:34
  Thank you for the re...  ①


Menu         New Msg
Email   Select   MyPage
```

3 Displaying a received message

```
Messages
  Ichiro Kyocera
    next week,I made
    a reservation for a
    restaurant.   11:48
  Thank you for the
  reservation. I'm
  looking forward to
  meeting you.   12:34
         12:35
Menu         Reply
File         Stickers
```

How to Transfer Data

You can import/export data (phone book, photo, movie) from your old au phone to the product.

■ Using the microSD Memory Card
● Save the data from the old au phone to the microSD memory card beforehand.
① Insert the microSD memory card you used into the product.
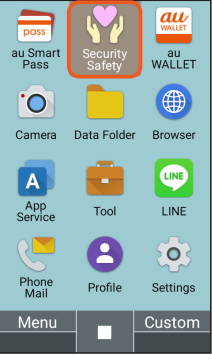② You can transfer data from the data list screen in Data Folder.*
  Example: Transferring the phone book in the microSD memory card to the product
  From the standby screen, press ■ → [Data Folder] → [PIM] → select the phone book → ■ → ⊡ (Set) → select a data to register → ■ → ⊡ (Done) → [Yes] → [OK]

■ Using "Data Storage App"
● To import data using au server, store the data from the old au phone to au server beforehand. Setting au ID is required for using au server.
● To import data using a microSD memory card, save the data from the old au phone to the microSD memory card beforehand.
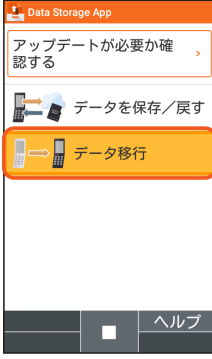
1 From the standby screen, press ■ → [Security Safety]

```
au Smart   Security   au
Pass       Safety    WALLET
Camera   Data Folder  Browser
App        Tool       LINE
Service
Phone      Profile   Settings
Mail
Menu                 Custom
```

2 [Data Storage App]

```
Security/Safety
1 My au
2 au災害対策
3 Data Storage App
4 遠隔操作サポート
5 AnshinFilter for au
6 安心ナビ(探される)
7 mamorino Watchナビ
8 ウイルスバスター for ..
9 トビ ラフォンモバ イル for au
  ▲         ▼
```

3 Select "データ移行 (Data transfer)" and transfer data according to the guidance on the screen

```
Data Storage App
アップデートが必要か確
認する
  データを保存/戻す
  データ移行

         ヘルプ
```

To use "Data Storage App" to back up the phone book to au server automatically, set as follows.
From the standby screen, press ■ → [Security Safety] → [Data Storage App] → [データを保存／戻す (Save/Return data)] → [auサーバーを使う (Use au server)] → [アドレス帳の自動お預かり設定 (Contacts auto backup setting)]

■ Using Bluetooth® Function
You can transfer data using Bluetooth® functions.*

Example: Transferring the phone book to the product
① From the standby screen, press ■ → [Settings] → [Frequently used] → [Bluetooth] → mark the checkbox "Bluetooth" → ⊞ (Menu) → [Receive Phonebook] → select a Bluetooth® device → ■ → [Yes] → [Connect]
  ・The product will be paired with a Bluetooth® device and you can receive phone book data.
② After receiving files, press → ⊞ (Menu) → [Show received files] → select a phone book → ■ → ⊡ (Set) → select the data to register → ■ → ⊡ (Done) → [Yes] → [OK]
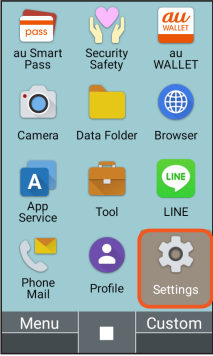● Connections between the product and all other Bluetooth® devices have not been confirmed. All connections with Bluetooth® devices cannot be guaranteed.

* For details, refer to the "取扱説明書 詳細版 (Full Instruction Manual)" (Japanese).
  "取扱説明書 詳細版 (Full Instruction Manual)" (Japanese) is available on the au homepage.
  https://www.au.com/support/service/mobile/guide/manual/

Adjusting the Brightness of the Screen

You can adjust the brightness level of the screen.

1

au Smart Pass | Security Safety | au WALLET
Camera | Data Folder | Browser
App Service | Tool | LINE
Phone Mail | Profile | **Settings**

Menu | | Custom

From the standby screen, press ◼ → [Settings]

2

Settings
1 au ID Setting
2 Frequently used
3 **Display**
4 Sound/Notification
5 Lock
6 Wireless/Network
7 Eco/Battery
8 More settings

[Display]

3

Display
Brightness level
Backlight time
Screen is turned off after 30 seconds of inactivity
Key backlight ✓
Sub display

[Brightness level]

4
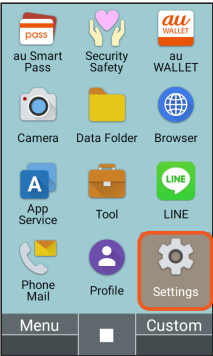
Brightness level

Level : 3
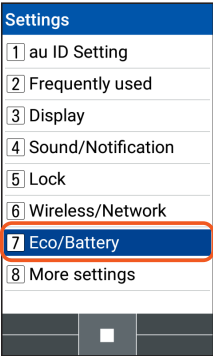
Done
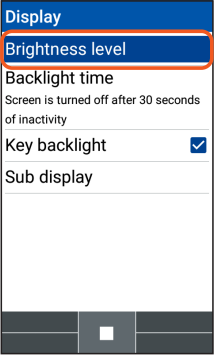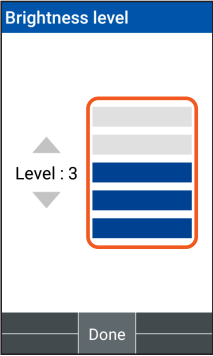
Select a level → ◼

Using Battery Care Mode

You can extend the battery life by not charging fully the battery.
● Charging stops at 85% when the battery care mode is turned ON. And the heart mark "❤" is attached to the battery icon.
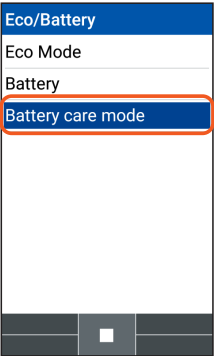
1

au Smart Pass | Security Safety | au WALLET
Camera | Data Folder | Browser
App Service | Tool | LINE
Phone Mail | Profile | **Settings**

Menu | | Custom

From the standby screen, press ◼ → [Settings]

2

Settings
1 au ID Setting
2 Frequently used
3 Display
4 Sound/Notification
5 Lock
6 Wireless/Network
7 **Eco/Battery**
8 More settings

[Eco/Battery]

3

Eco/Battery
Eco Mode
Battery
Battery care mode

[Battery care mode]

4

Battery care mode

Battery life is extended by not fully charged.
Charging stops at 85% when battery care mode is turned on.
*The use time in one charge becomes short.

Heart mark is attached to the battery icon during battery care mode.

ON ◉
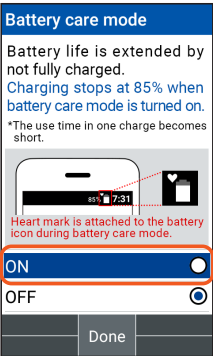OFF ◎

Done

[ON]

Changing Font Size (Character Size)

Set the font size to five levels such as Small/Normal/Large/Huge/Extra large.

1

au Smart Pass | Security Safety | au WALLET
Camera | Data Folder | Browser
App Service | Tool | LINE
Phone Mail | Profile | **Settings**

Menu | | Custom

From the standby screen, press ◼ → [Settings]

2

Settings
1 au ID Setting
2 **Frequently used**
3 Display
4 Sound/Notification
5 Lock
6 Wireless/Network
7 Eco/Battery
8 More settings

[Frequently used]

3

Frequently used
Wi-Fi
Bluetooth
Phone ringtone
メロディ02 (Digital Phone 1)
Wallpaper
Font size

[Font size]

4

Font size
Font size (General)
Normal
Font size (LINE)
Small

[Font size (General)]

5

Font size (General)

Sample
ABCDabcd
012345

Small ◎
Normal ◉
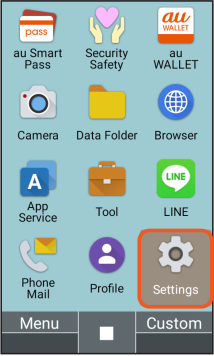Large ◎
Huge ◎
Extra large ◎

Select a font size → ◼

Changing Volume
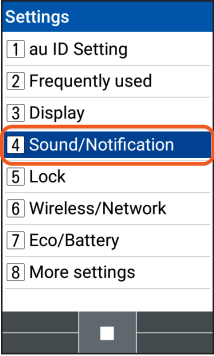
Set the volume of ringtones, alarms, music and movies playback, etc.

1

au Smart Pass | Security Safety | au WALLET
Camera | Data Folder | Browser
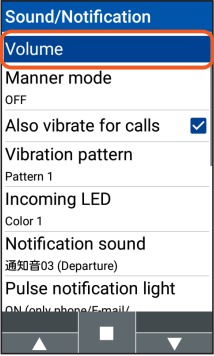App Service | Tool | LINE
Phone Mail | Profile | **Settings**

Menu | | Custom

From the standby screen, press ◼ → [Settings]

2

Settings
1 au ID Setting
2 Frequently used
3 Display
4 **Sound/Notification**
5 Lock
6 Wireless/Network
7 Eco/Battery
8 More settings

[Sound/Notification]

3

Sound/Notification
Volume
Manner mode
OFF
Also vibrate for calls ✓
Vibration pattern
Pattern 1
Incoming LED
Color 1
Notification sound
通知音03 (Departure)
Pulse notification light
ON (only phone/E-mail)

[Volume]

4

Volume
Ring volume
Volume:4
Mail/Notification volume
Volume:4
In-call volume
Volume:5
Alarm volume
Volume:4
Media volume
Volume:7
System volume
Volume:4

Set each item