



Installation procedure


1. Take out tape and stick wireless charger on the top of chassis

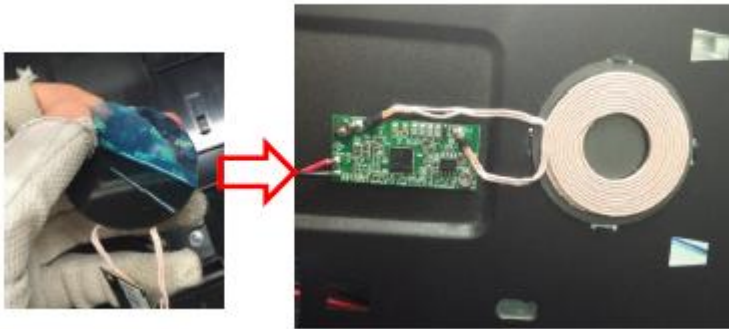

2. Lock screw on the chassis(1 & 2)

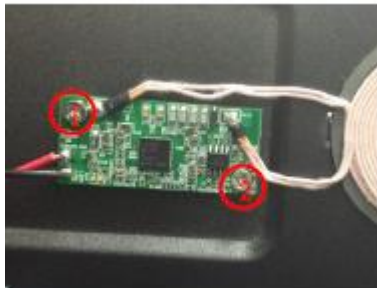

3. Cross over cable of wireless charger in cable clamp and then into chassis.

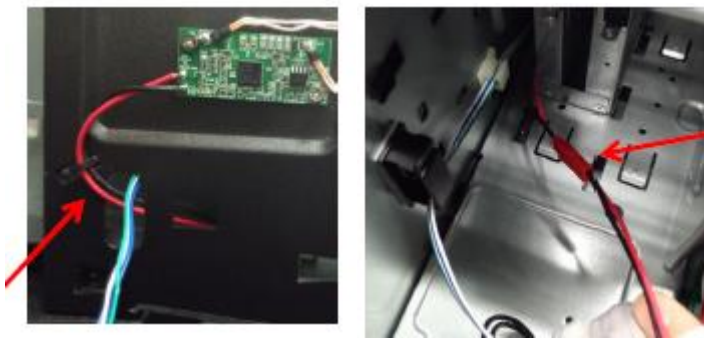

4. Closed by Front cover.

