

WiMAX Outdoor CPE (AirStram 4000) Installation Guide

1) Check the package content.



- | | |
|---------------------|-----------------------------|
| ① Clamp x 1 | ⑤ Ethernet Cable x 2 (1.5m) |
| ② Bracket x 1 | ⑥ PoE Adapter x 1 |
| ③ Hexagon Screw x 8 | ⑦ Power cord x 1 |
| ④ Serial Cable x 1 | ⑧ CPE x 1 |

If anything is missing, please contact your local dealer.

2) Quick Installation

- a) Fix the Bracket (②) on the CPE using 4 Hexagon Screws (③). Then fix the Clamp (①) on the CPE (⑧).




- b) Find a suitable position to locate your CPE, and then install your CPE on a fixed pole.



- c) Put the Ethernet cable through the waterproof joint. Install a crystal plug on the cable.



- d) Plug Ethernet cable into your CPE and then plug the waterproof joint into it. Then plug the waterproof joint into your CPE and turn the knob until it is tight.

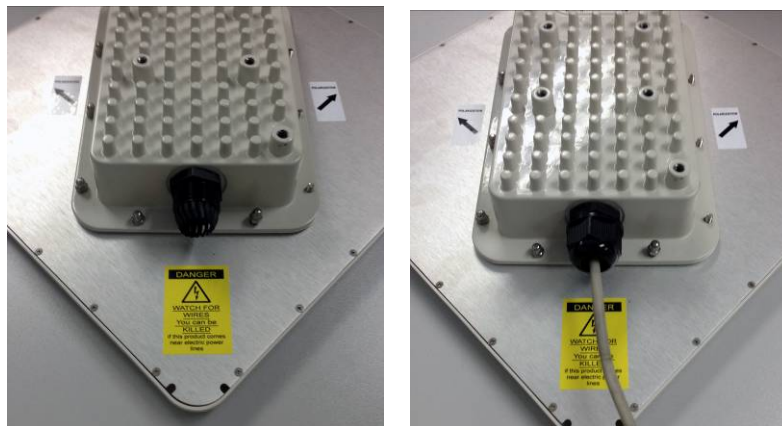

- e) Connect another end of the Ethernet cable to the PoE Adapter (⑥). Connect the PoE Adapter to power source by Power cord (⑦). Connect the PoE Adapter to your computer through an Ethernet cable.

