


Before you start, ensure the following equipment is included in the package:

- Panel Replacement Module (PRM)
- Battery
- Power Supply
- Hardware Kit: (3) #8 screws, (3) wall anchors, and (2) #4 cover screws

Quick Setup

- 1 TEST AND REMOVE LEGACY SYSTEM**
 - Test and label existing/legacy set-up
 - Power down and remove legacy battery
 - Remove legacy system to make room for the PRM
- 2 MOUNT THE PRM**
- 3 WIRE ZONES & SIRENS**
 - Wire non-powered sensors
 - Wire powered sensors
 - When wiring 2-Wire smoke detectors, connect to zone 1 only
 - When wiring 4-Wire smoke detectors, connect to zones 2-8
 - If using a siren, connect to siren power terminals
- 4 CONNECT THE BATTERY AND POWER SUPPLY, THEN POWER UP THE PRM**
- 5 PAIR THE PRM AND ZONES TO THE TOUCHSCREEN**
- 6 TEST AND COMPLETE THE INSTALLATION**
 - Test and verify proper operation of the system
 - Close the cover and secure the cover with screws

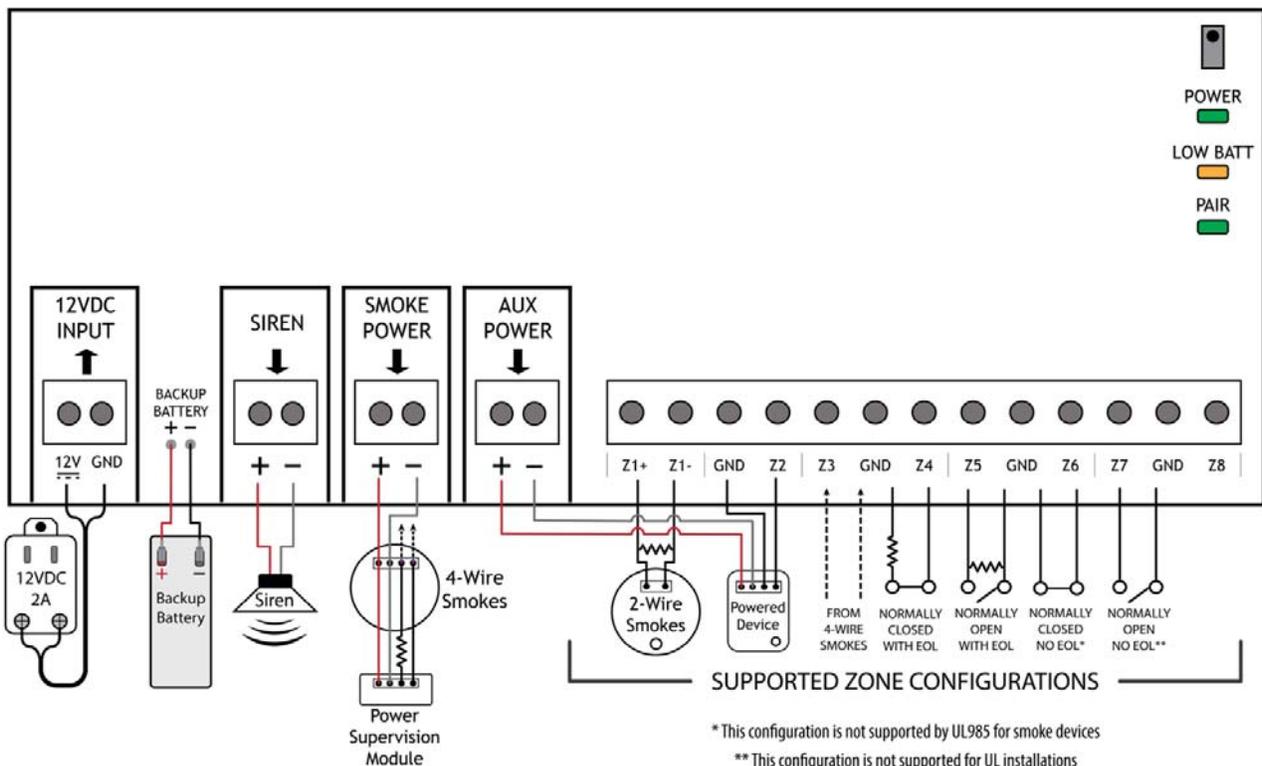

TRADEMARKS

ZIGBEE IS A REGISTERED TRADEMARK OWNED BY THE ZIGBEE ALLIANCE. HONEYWELL AND SYSTEM SENSOR ARE REGISTERED TRADEMARKS OWNED BY HONEYWELL INTERNATIONAL INC.

FCC NOTICE

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- 1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- 2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE THAT MAY BE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY RESOLUTION PRODUCTS, INC. COULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.