

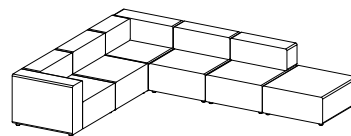
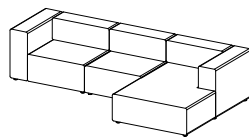
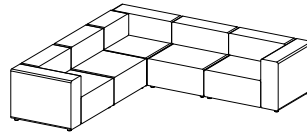





# Carmo

Design by BoConcept


Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje




0220




0225




0020




0320




0325



0610



0605



0120

Beslag - Beschläge - Fittings - Set de montage

932000138



A

Ø50x30mm



B

Ø6/12x1,0mm



C

1978103535  
3,5x35mm

932000136




D



E


M8x20mm











F



5mm

Værktøj - Werkzeuge - Tools - Outils



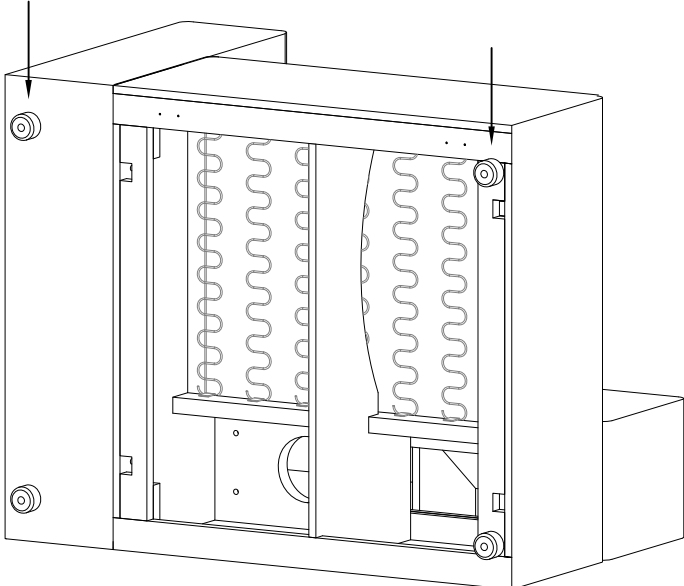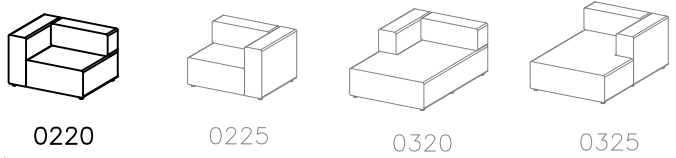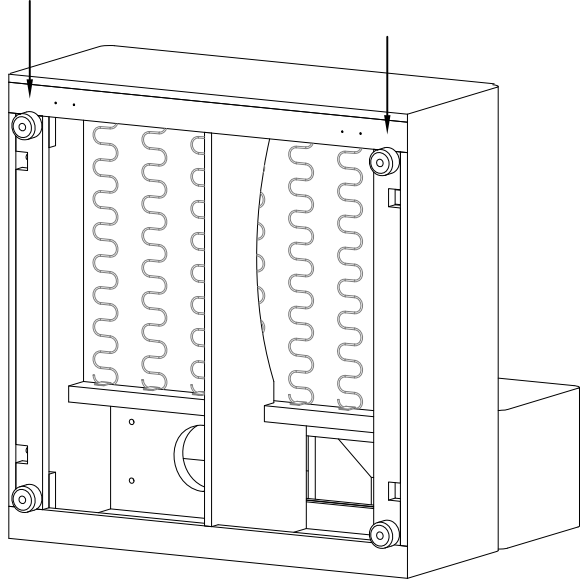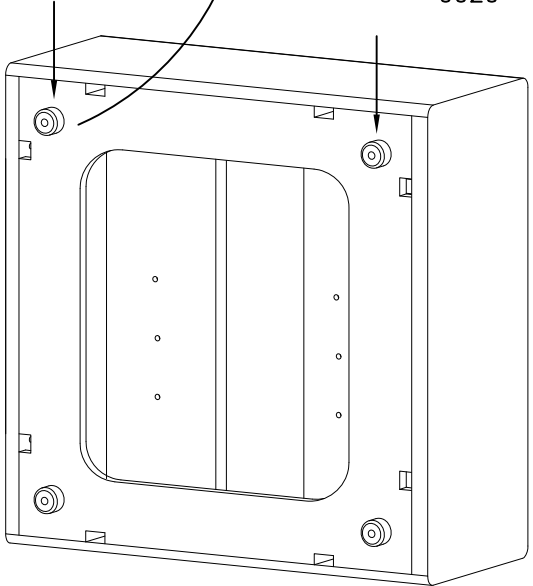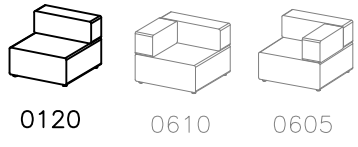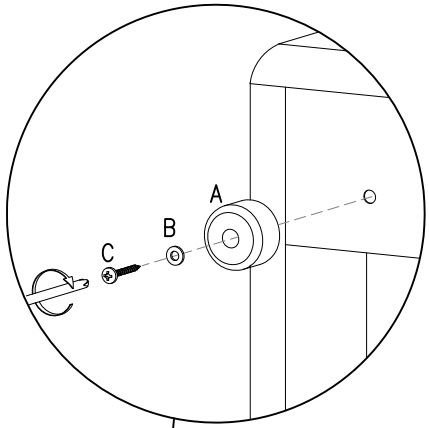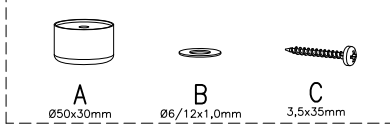

# Example

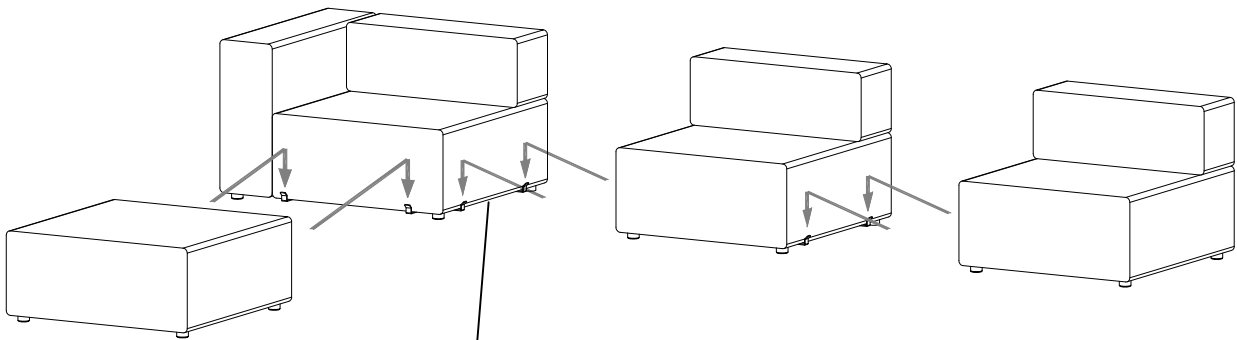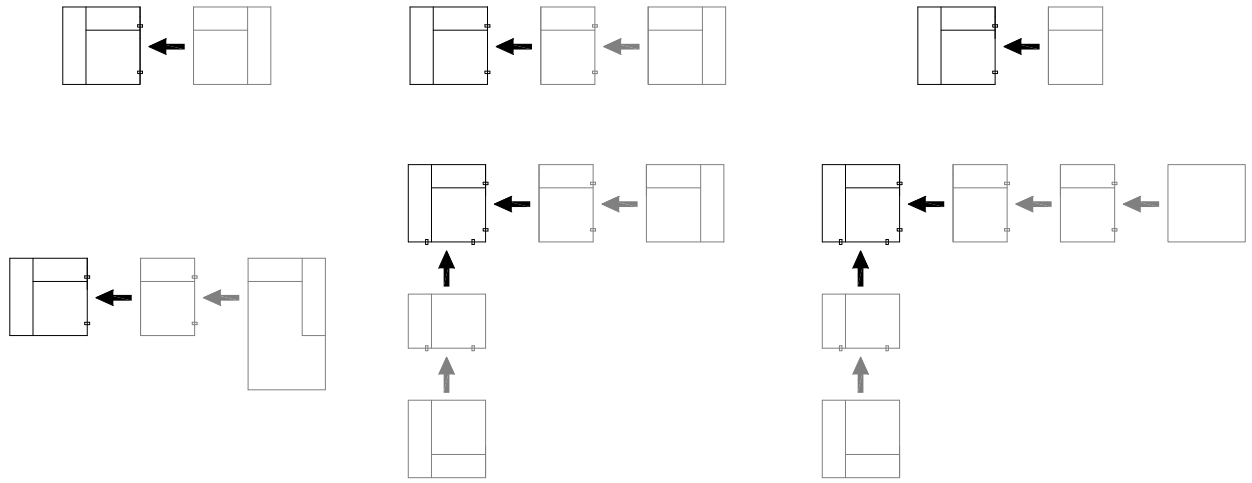

## Example

