



smartville

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

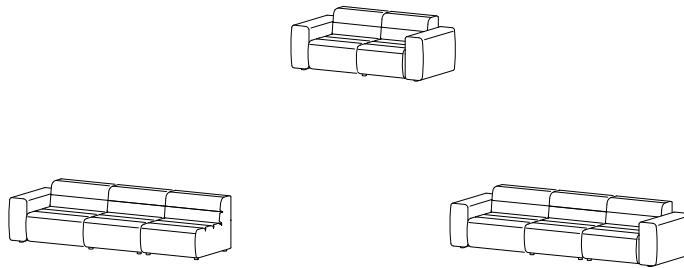

1000



1002



1003



1500



1502



1503



0100



0200



6500

Beslag - Beschläge - Fittings - Set de montage

932000138



A

Ø50x30mm



B

Ø6/12x1,0mm




C


1978103535
3,5x35mm



D



E



F

4,5x35mm

932000136




G



H


M8x20mm



J

5mm

Værktøj - Werkzeuge
- Tools - Outils



944260000 - 06.03.13/2

1/3

FIG. 1

- A $\varnothing 50 \times 30 \text{mm}$
- B $\varnothing 6 / 12 \times 1,0 \text{mm}$
- C $3,5 \times 35 \text{mm}$







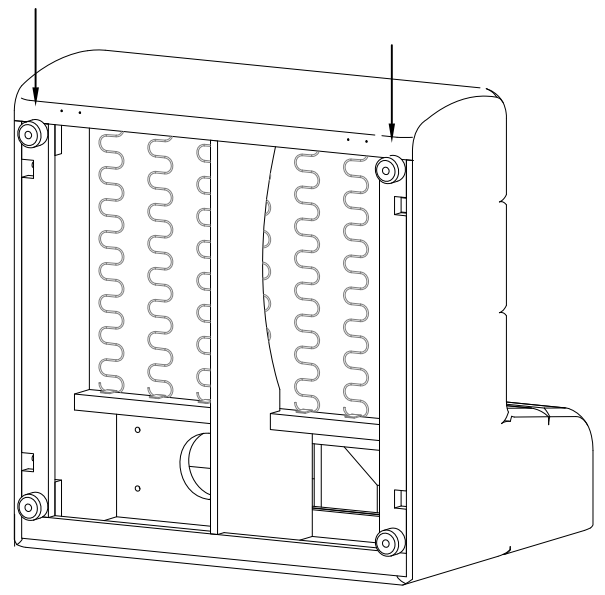


FIG. 2

- D
- E
- F $4,5 \times 35 \text{mm}$

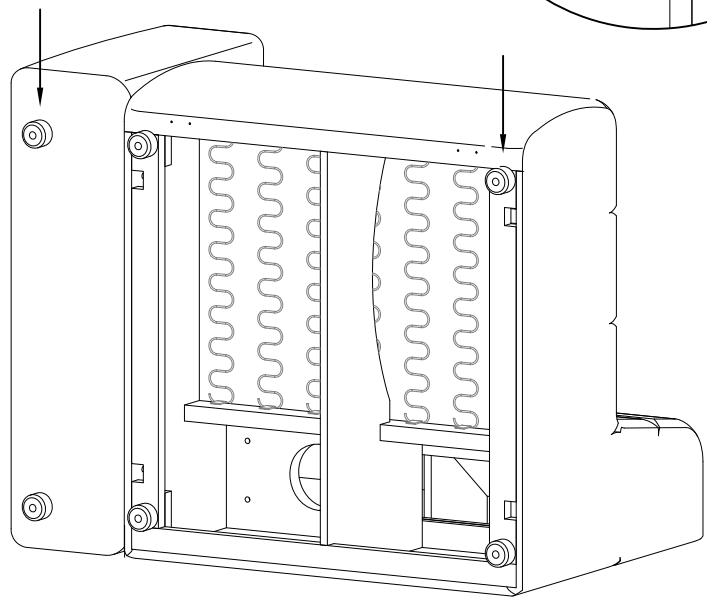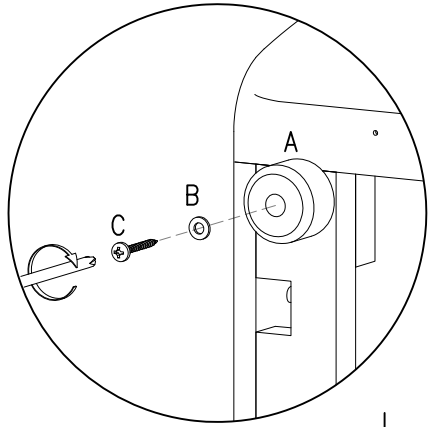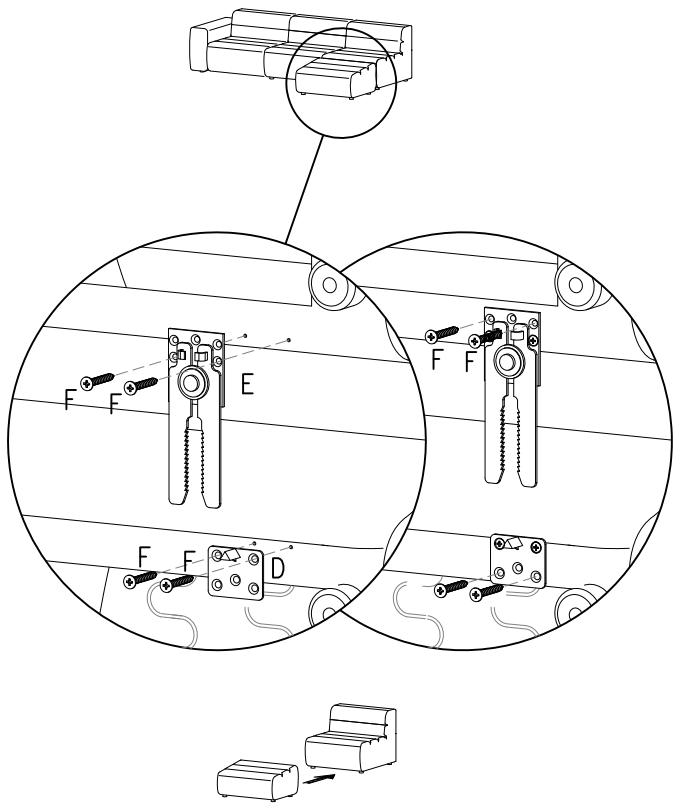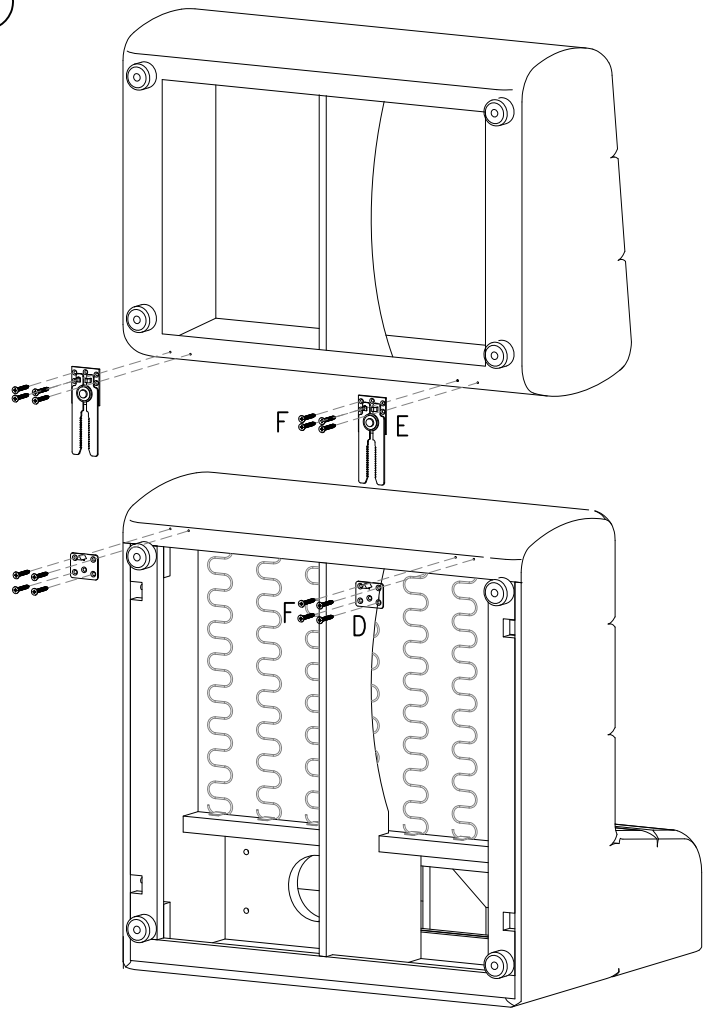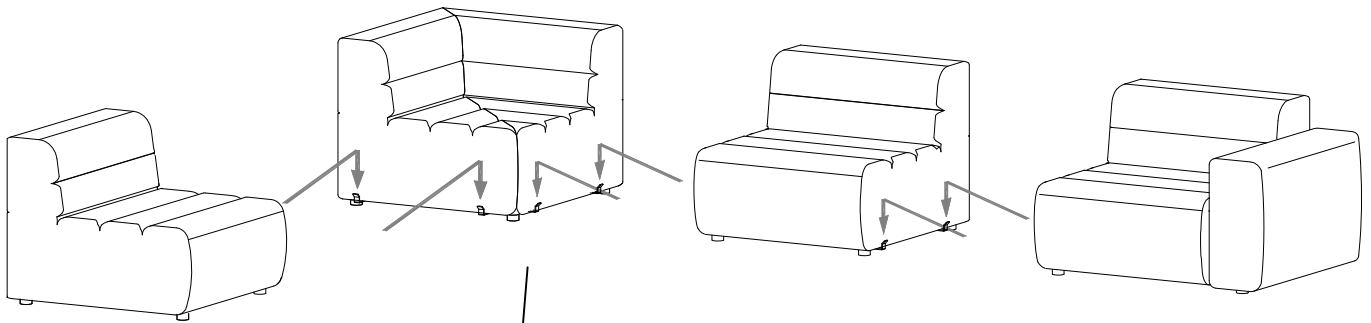

Example

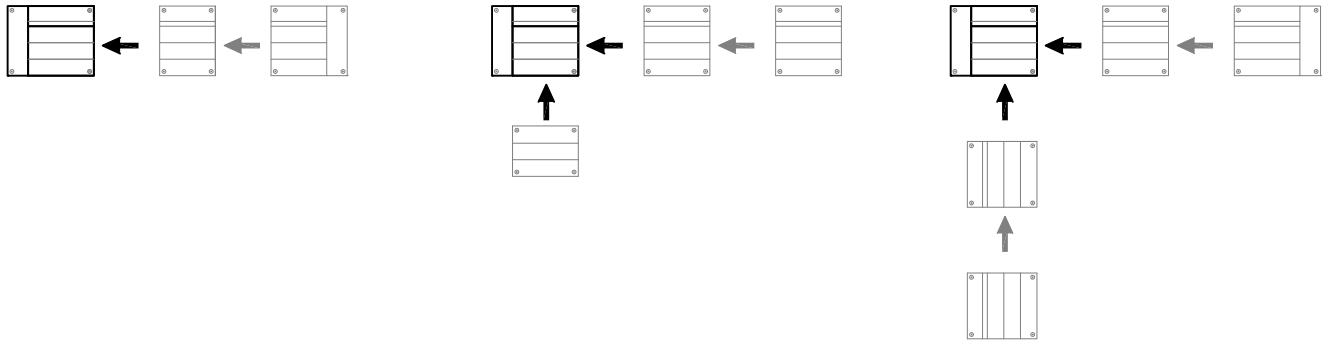

Example

